



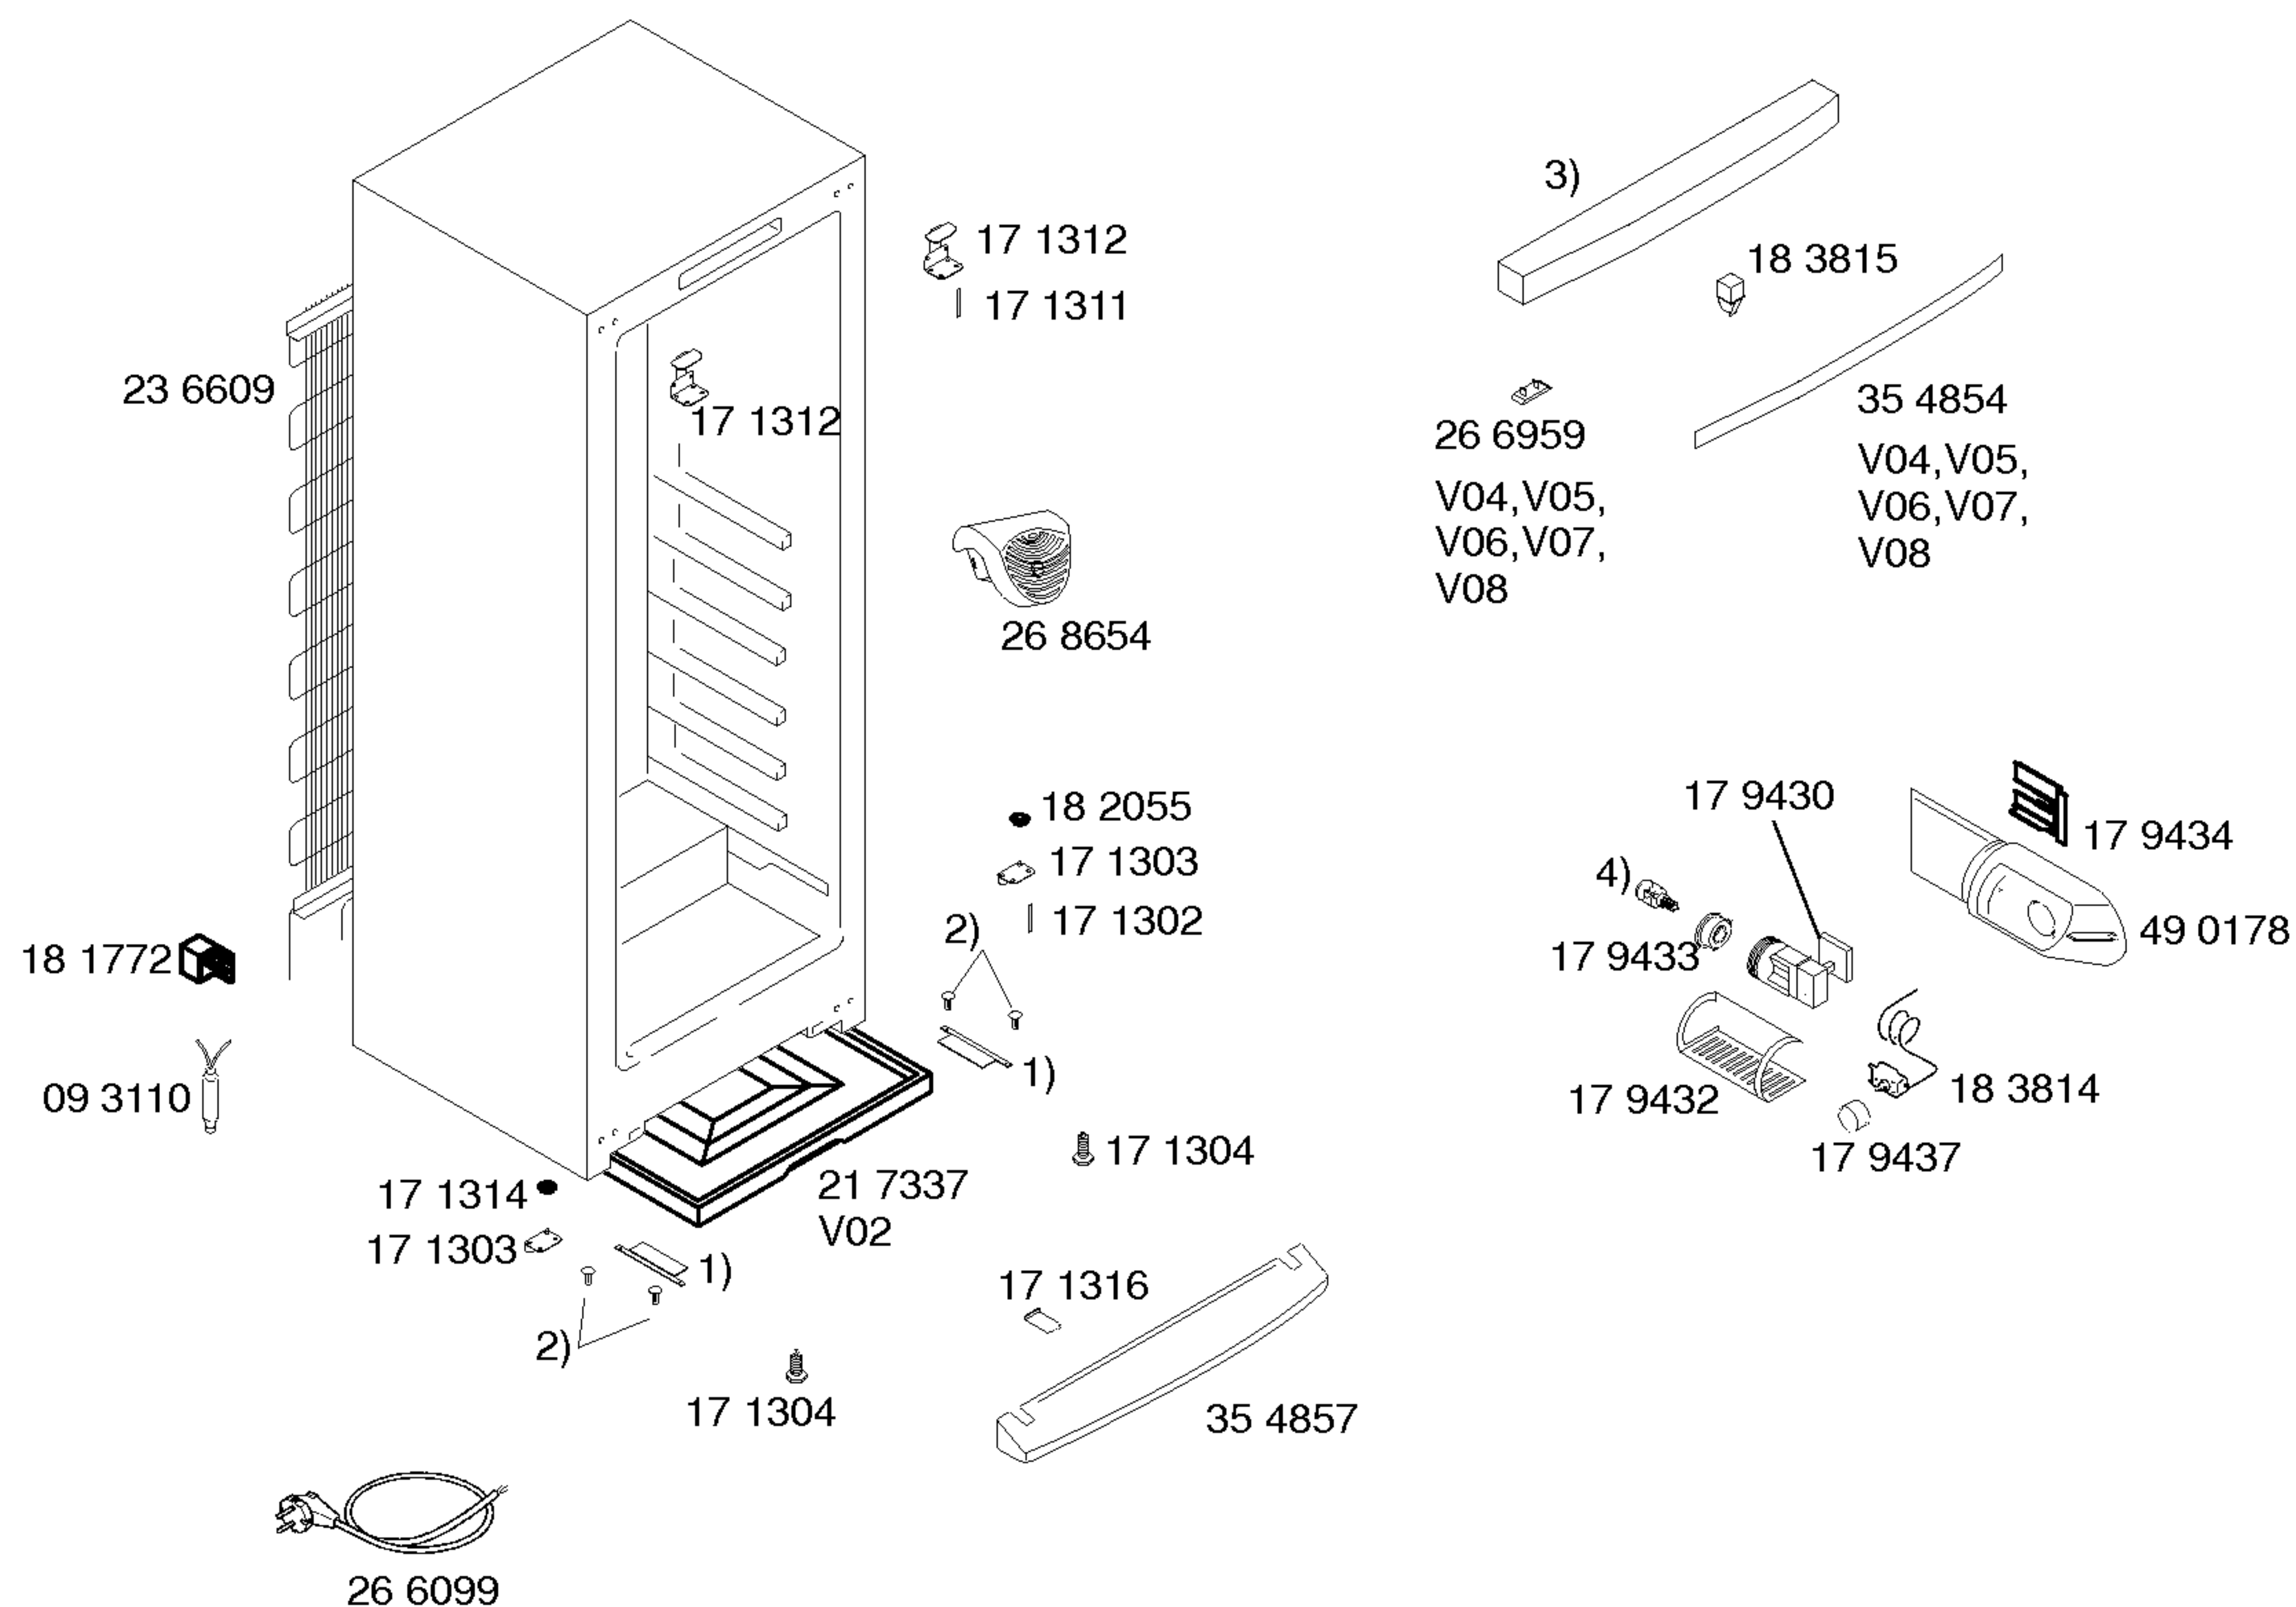


Gebrauchsanweisung
52 8868
V01,V02,V03
58 2075
V04,V05,V06,V07,V08

- 1) 48 1783
V02,V03,V04,V05
V06,V07,V08
- 2) 16 3505
V02,V03,V04,V05
V06,V07,V08
- 3) 36 2458
V01,V02
36 6620
V03
36 7440
V04,V04,V05,V06
V07,V08
- 4) 16 3390
V01,V02,V03,V04
V05,V06,V07
41 9942
V08

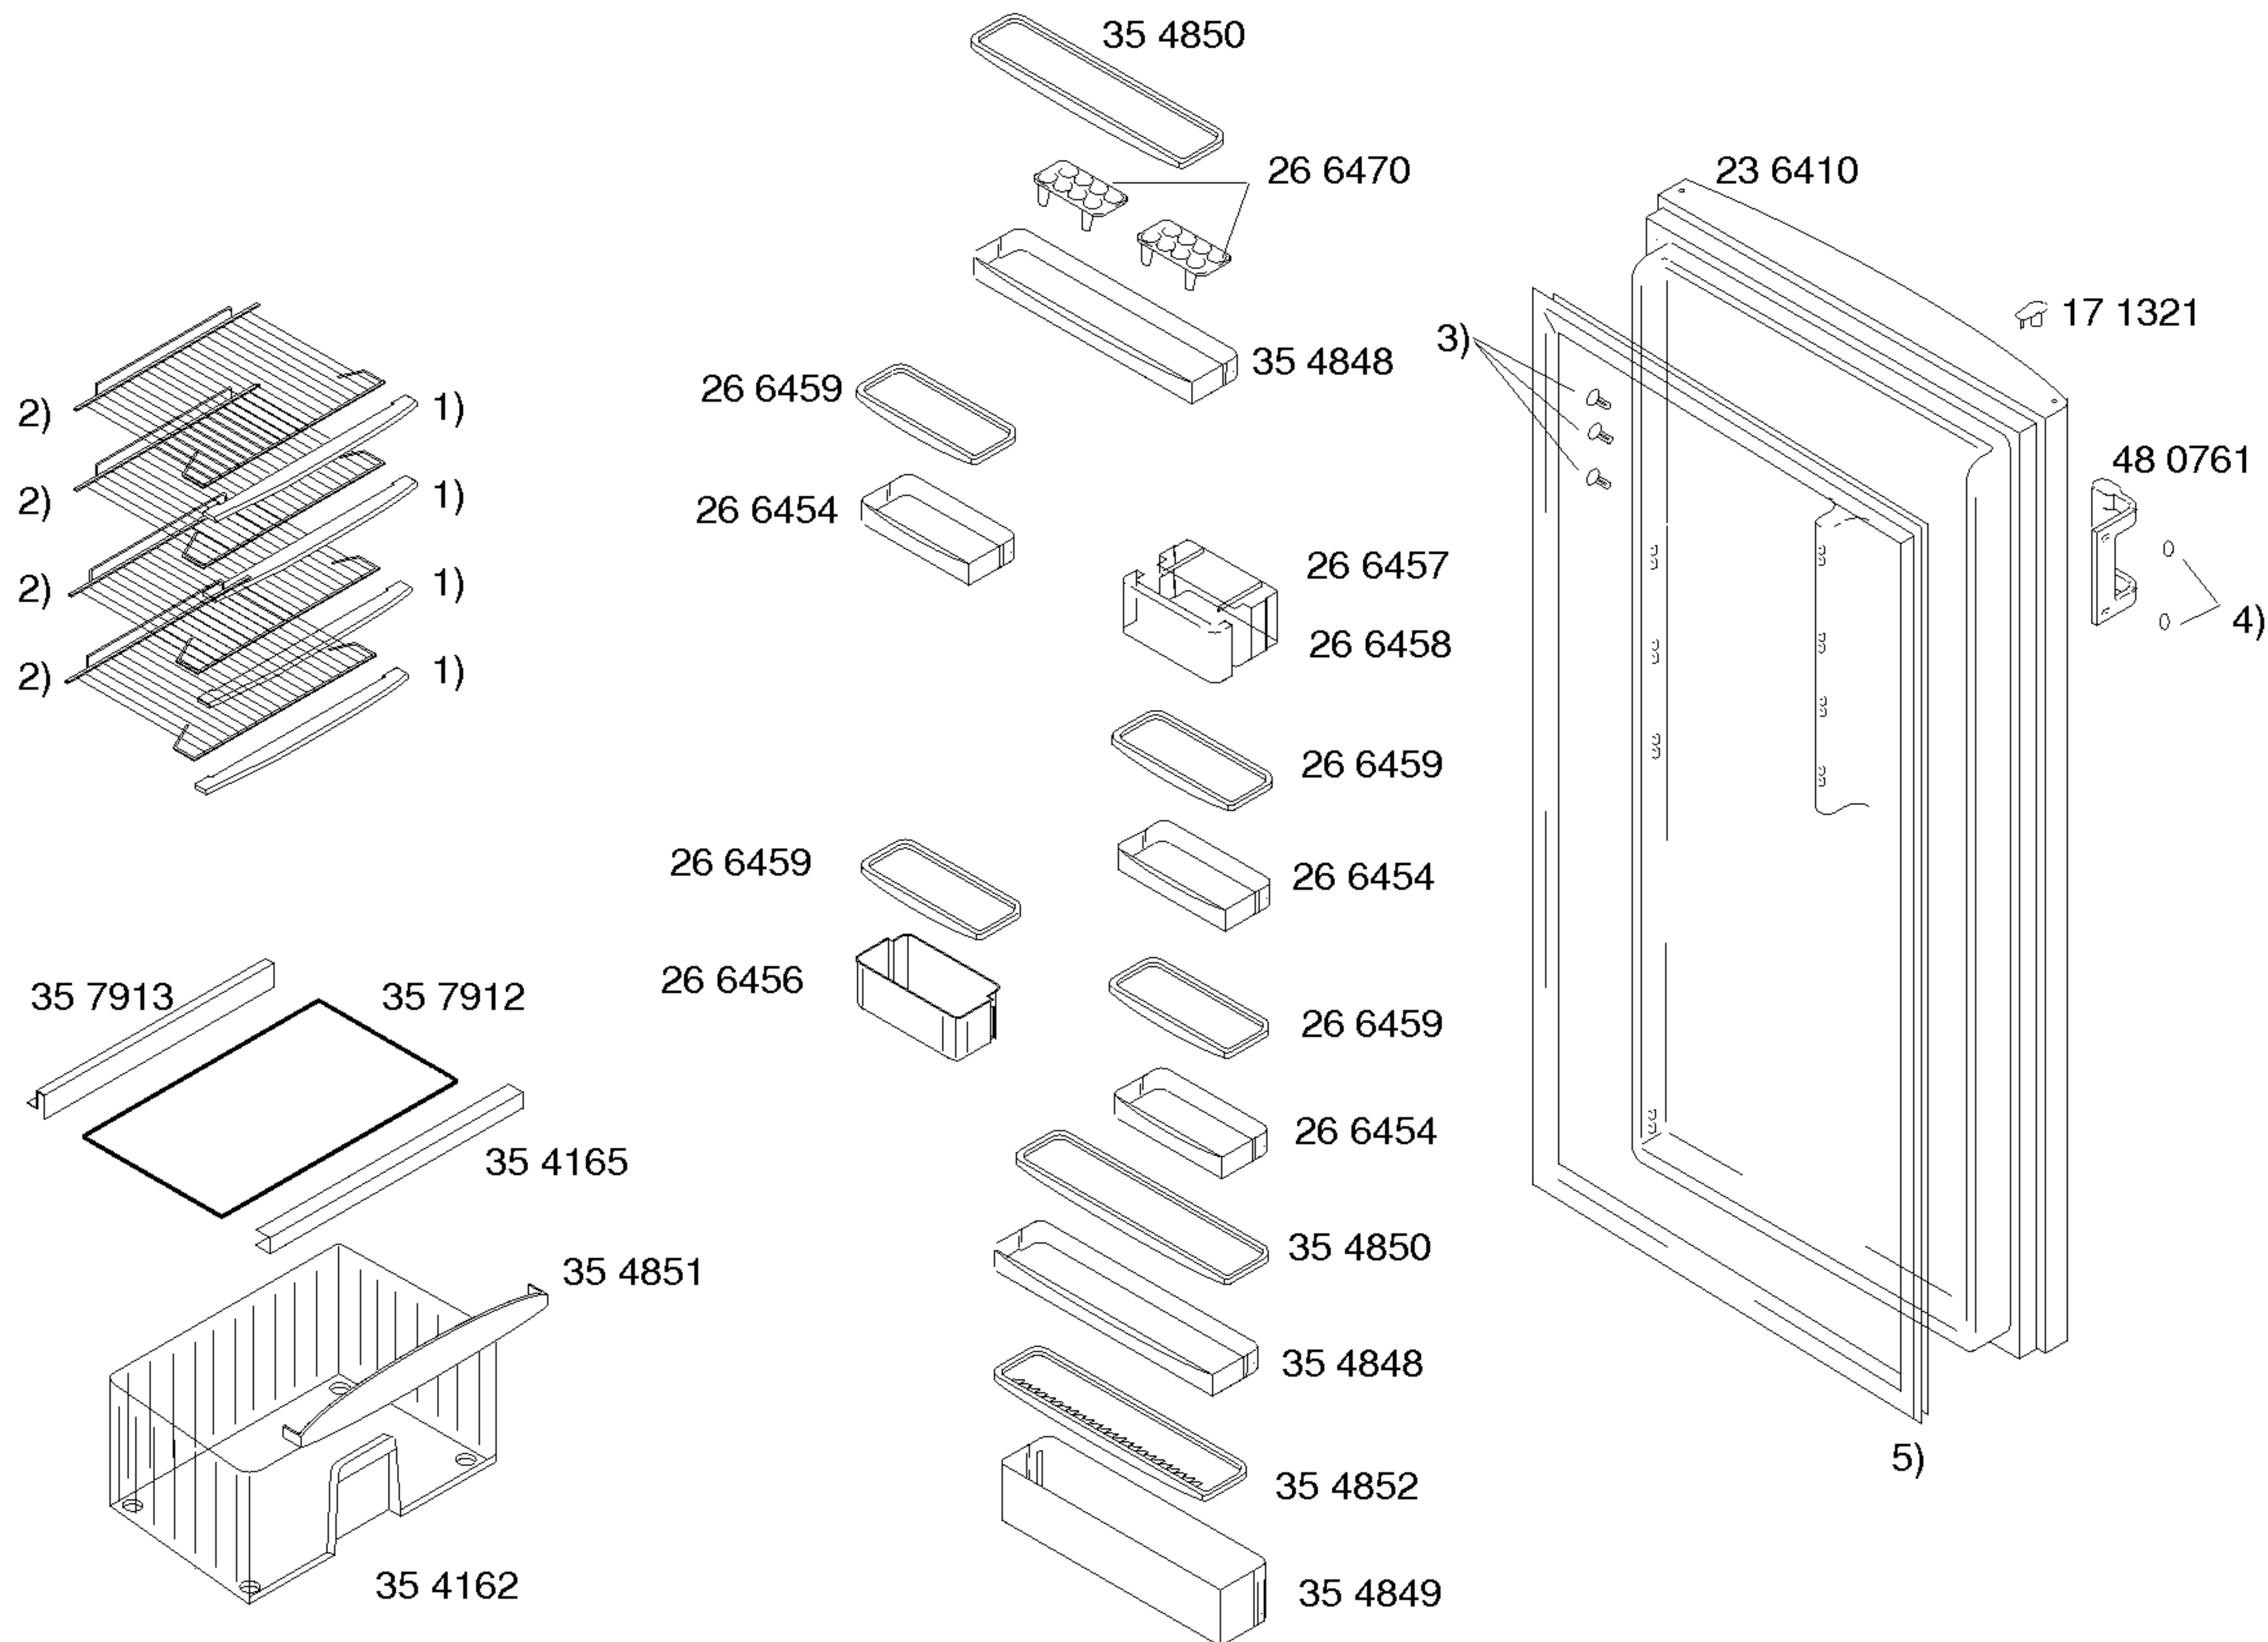

- 1) 35 4855
 2) 35 4166
 3) 16 6484
 4) 16 5557
 5) 23 6408
 V01,V02,V03,V04
 23 8414
 V05,V06,V07,V08

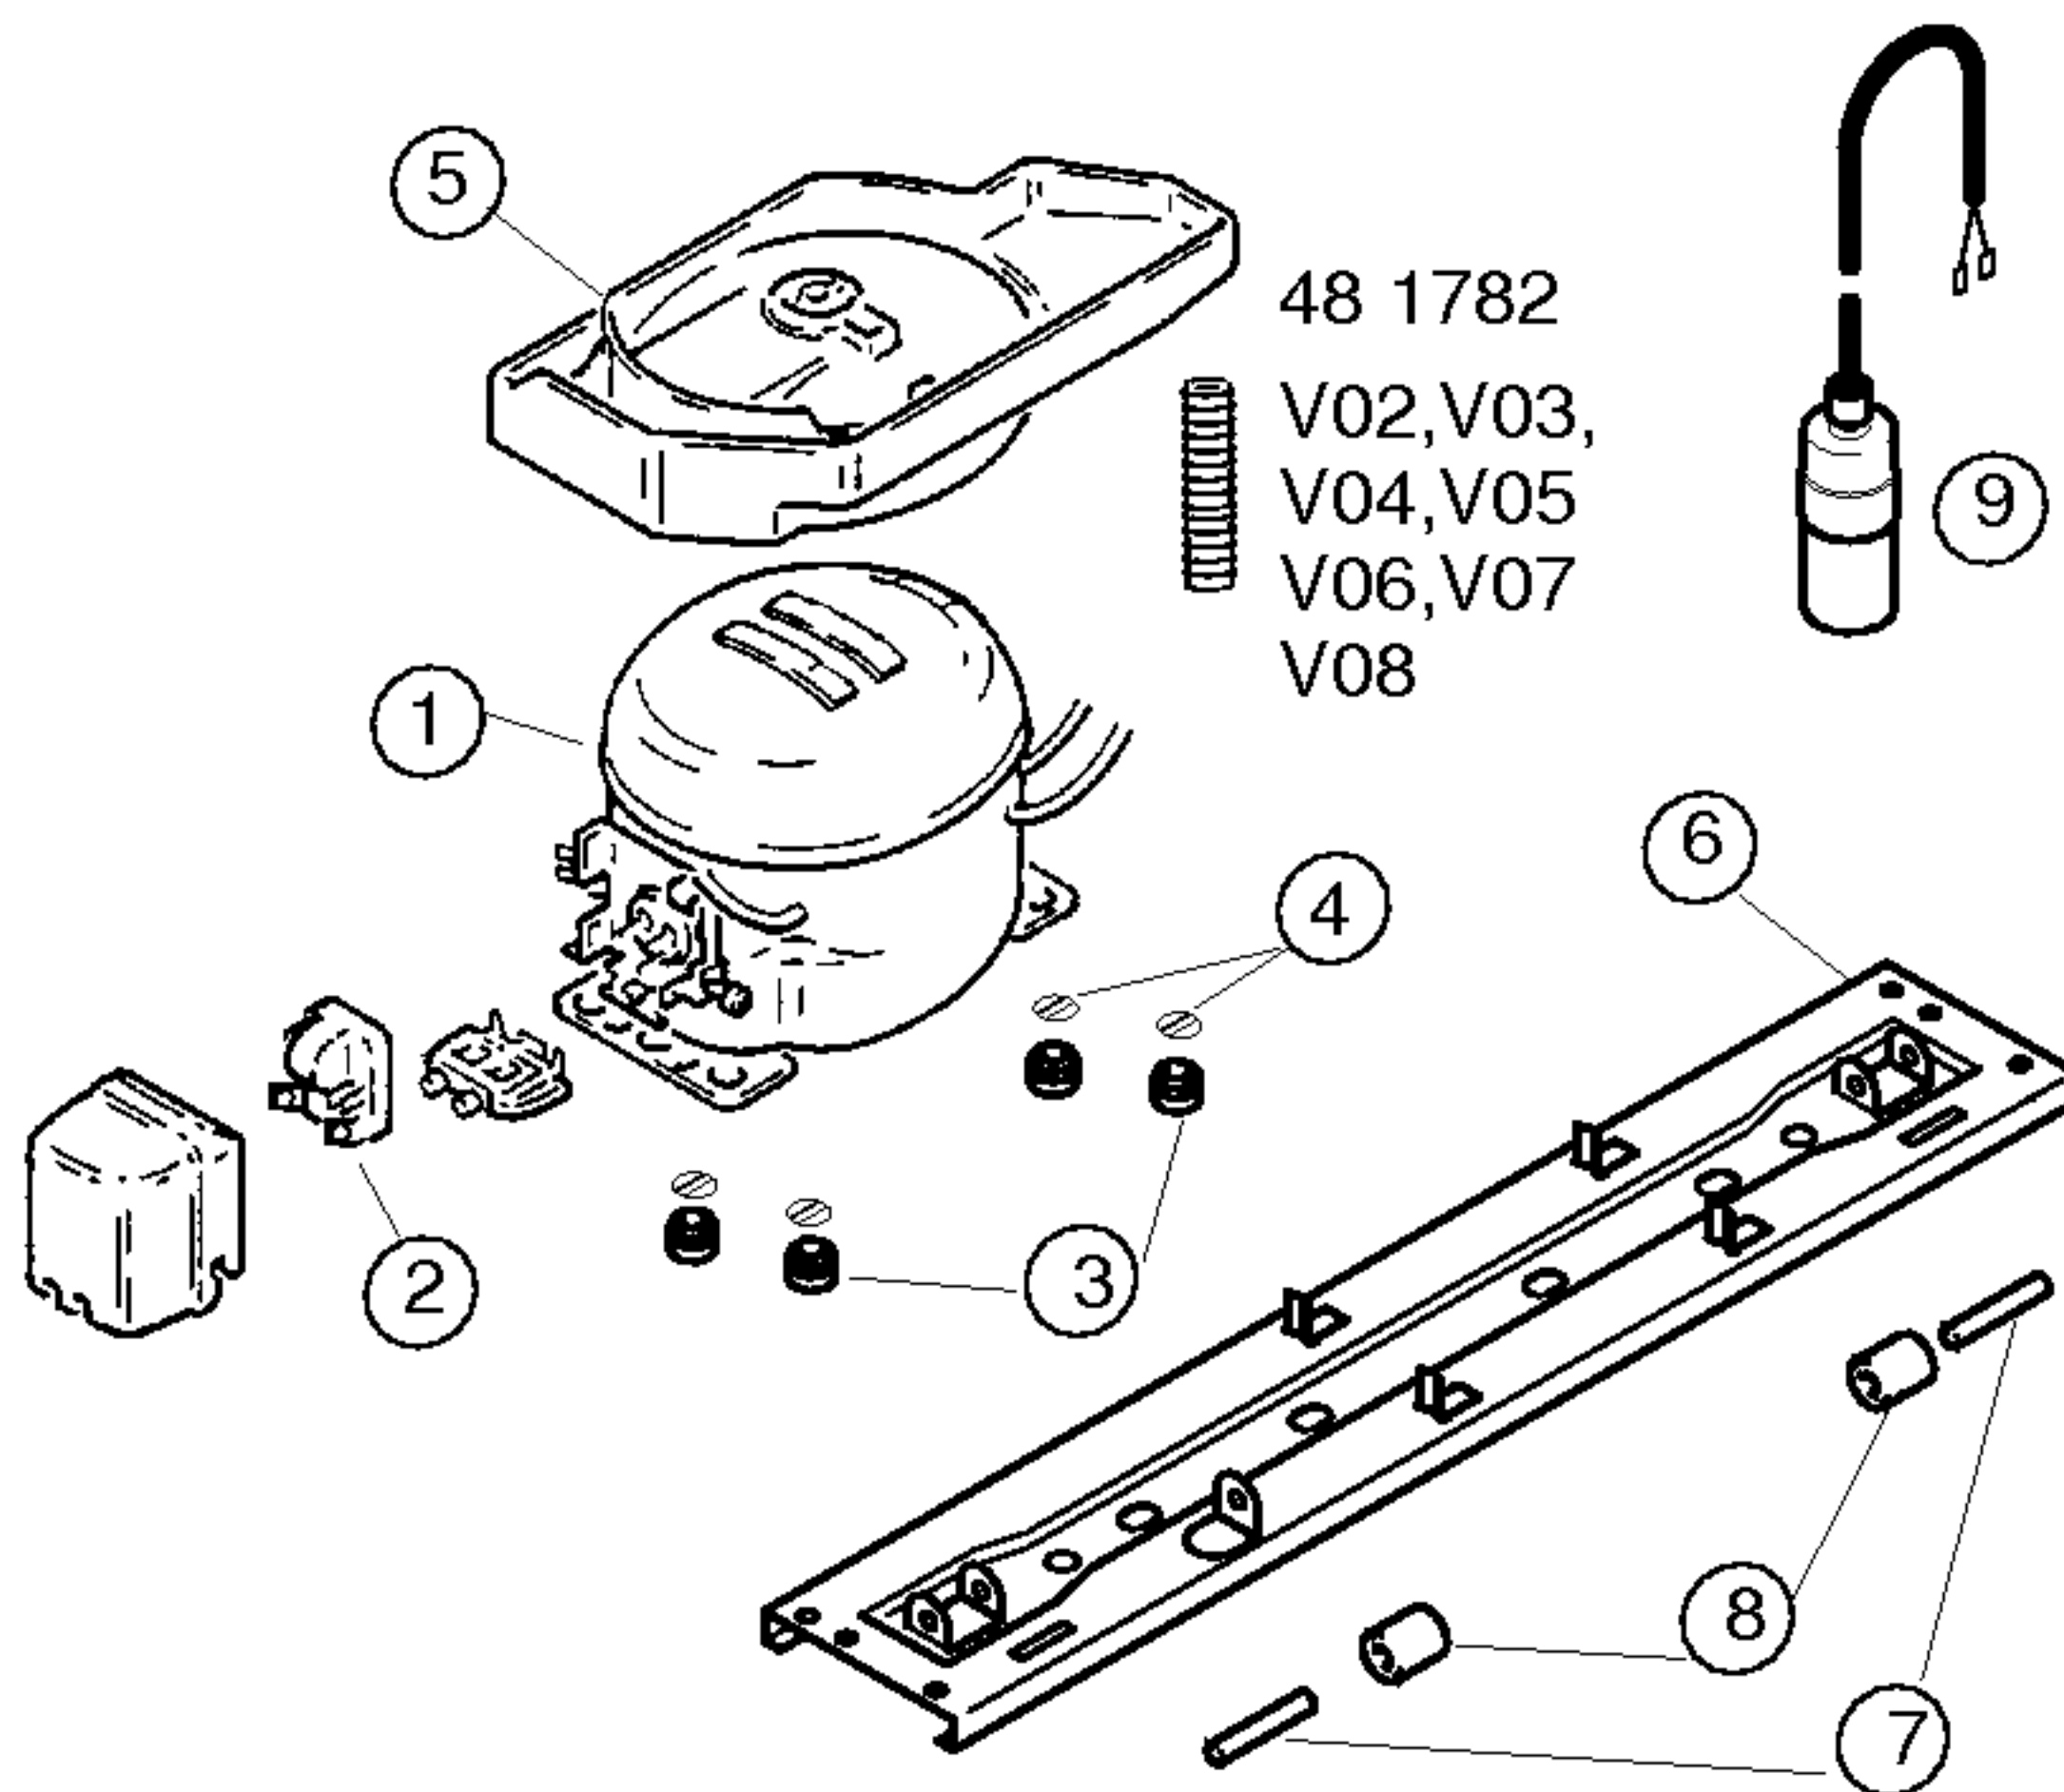

	V01,V05	V06	V07
Pos.	Danfoss	Matsushita	Danfoss
	TLES7KK2	ESS60E	TLY7KK2
1	14 2167	14 3383	14 3519
2	16 5570	—	
3	16 3427		
4	17 1519		
5	48 1658		
6	35 4158	48 9208	
7	18 1014		
8	17 1318		
9			17 4093
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01-V05	V06	V07
Verdichter/Compressor/Kompresör	Danfoss	Matsushita	Danfoss
Typ/Type/Tip	TLES7KK2	ESS60E	TLES7KK2
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	4	5.5	2.3
Widerstand/Resistance/Rezistans Ha/Hi/aux.	18.9		
	15.3		
Temp.Reyler/Thermostat/Termostat	Danfoss		
Typ/Type/Tip	077B52		
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	+4 +10.5		
Valeurs de commutation/Termostat degeri	-21 -10.7		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R600a		
	g		
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız