
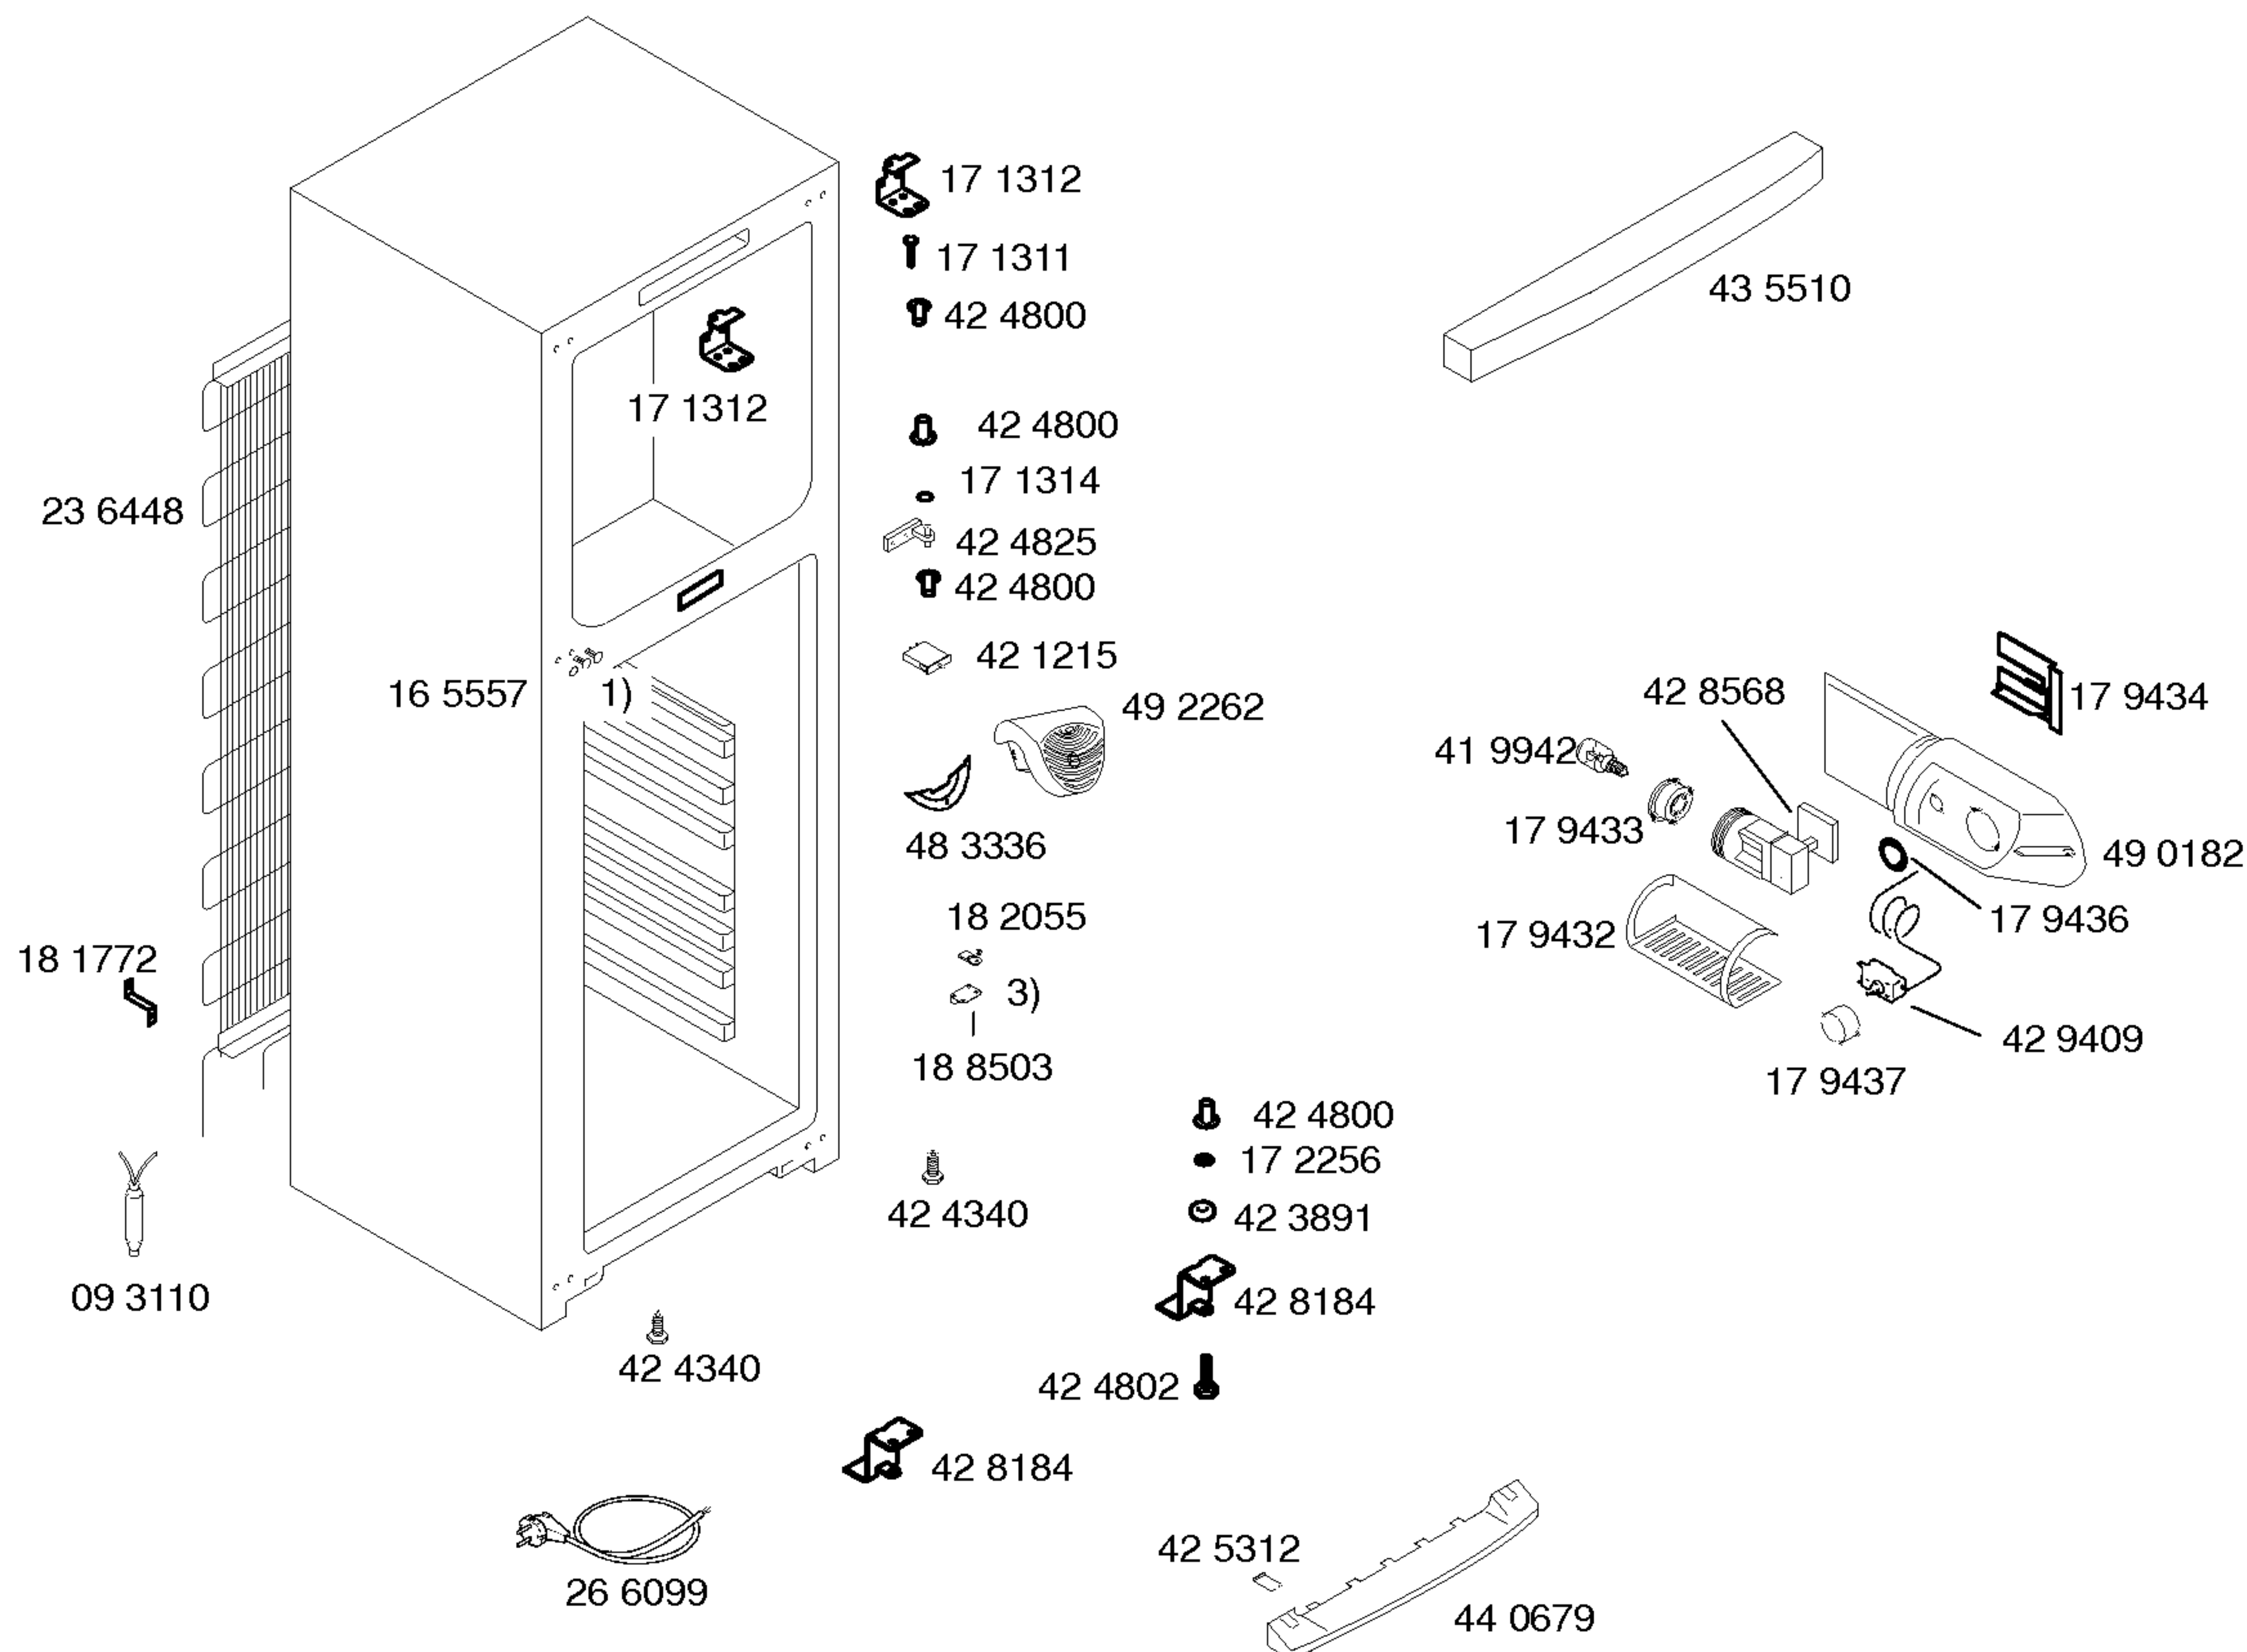
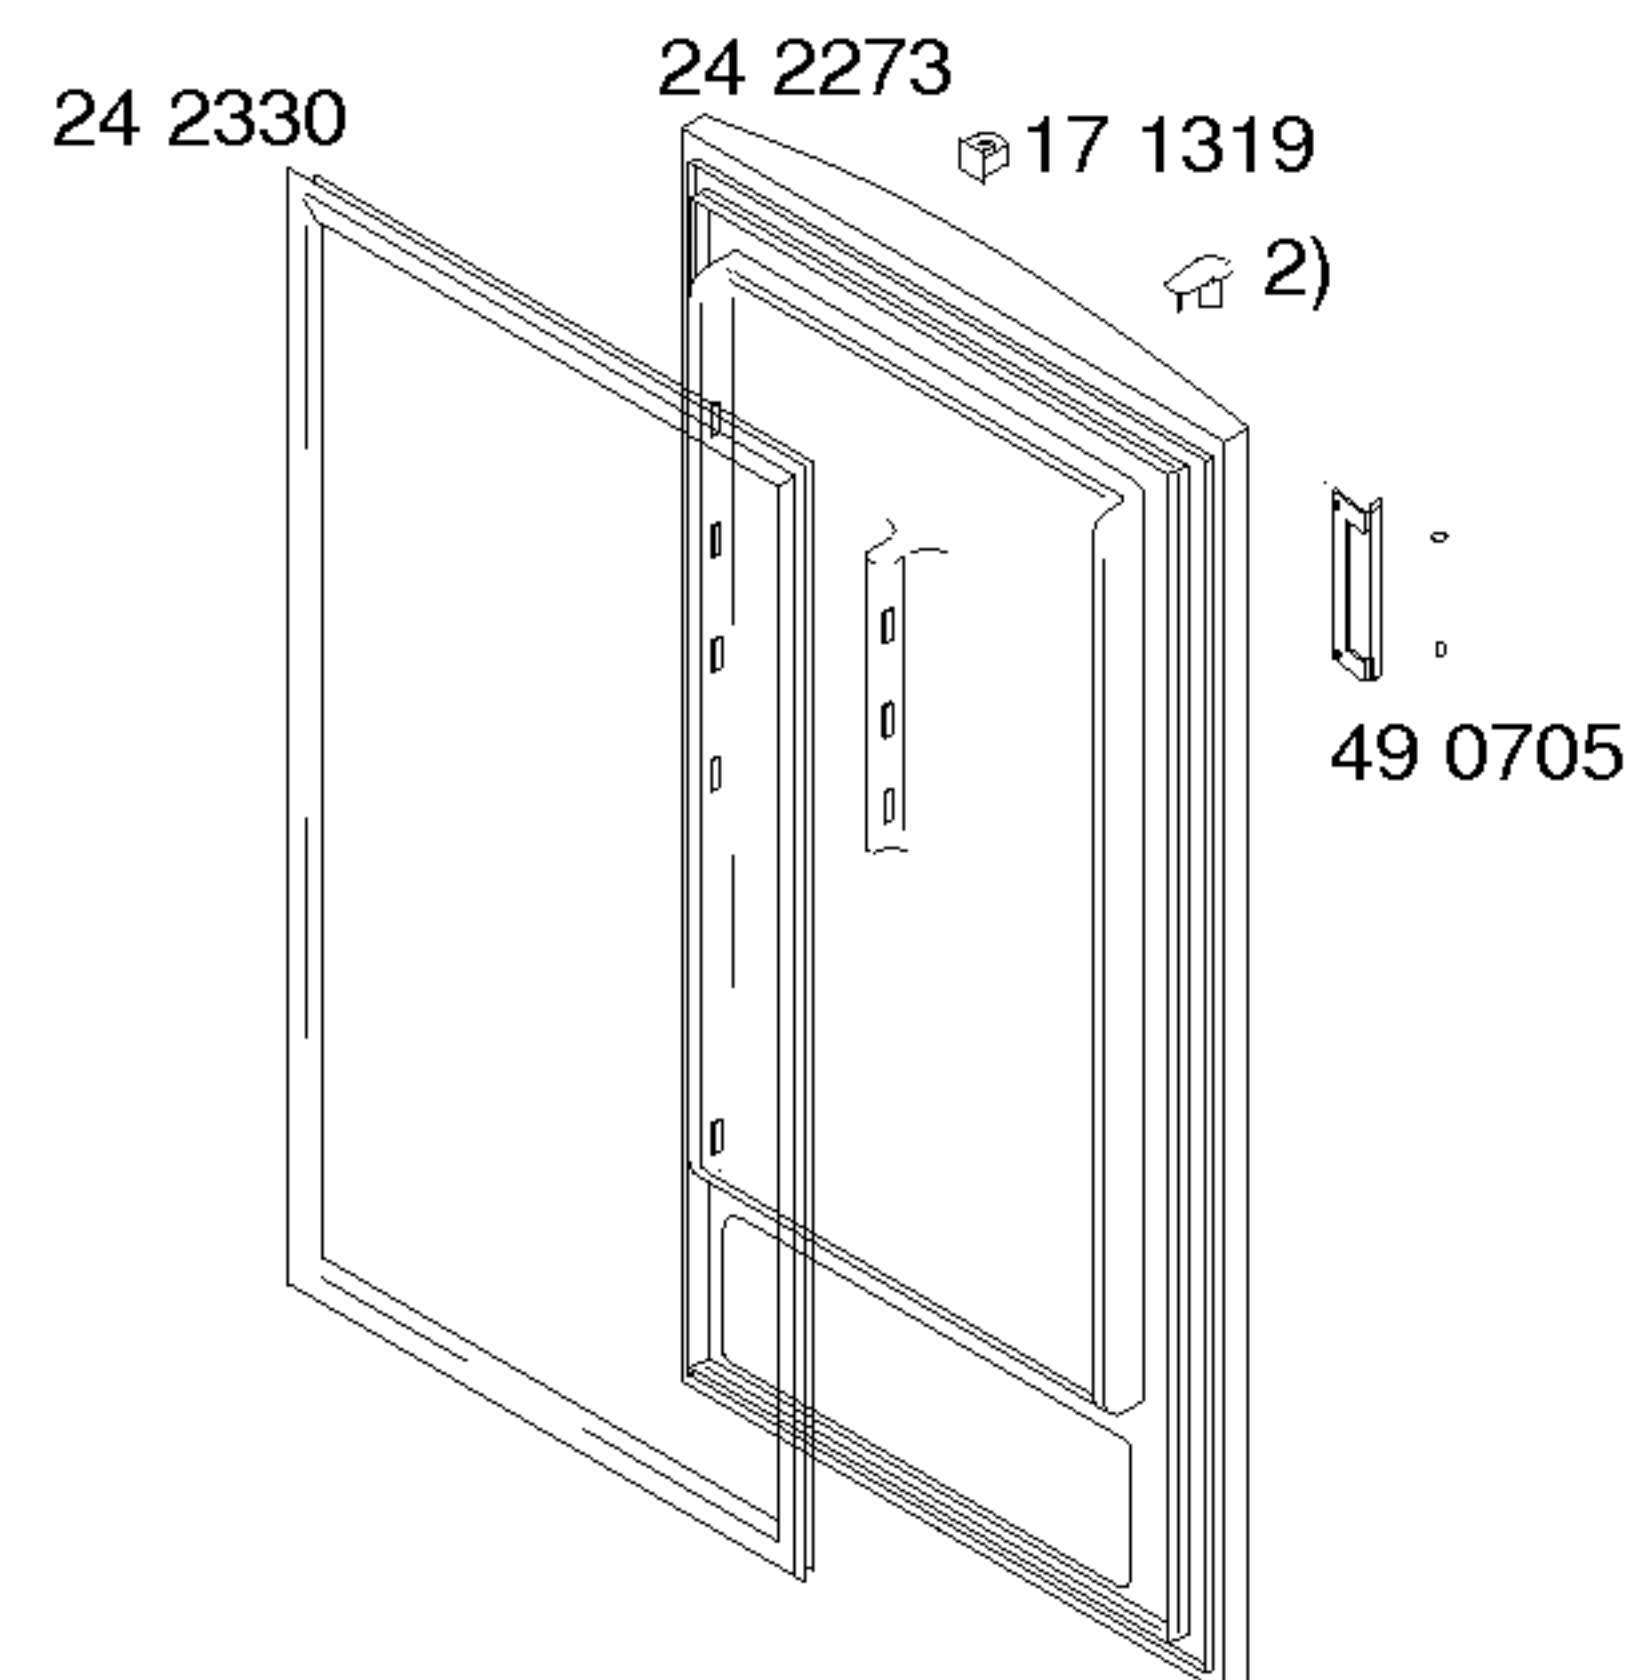
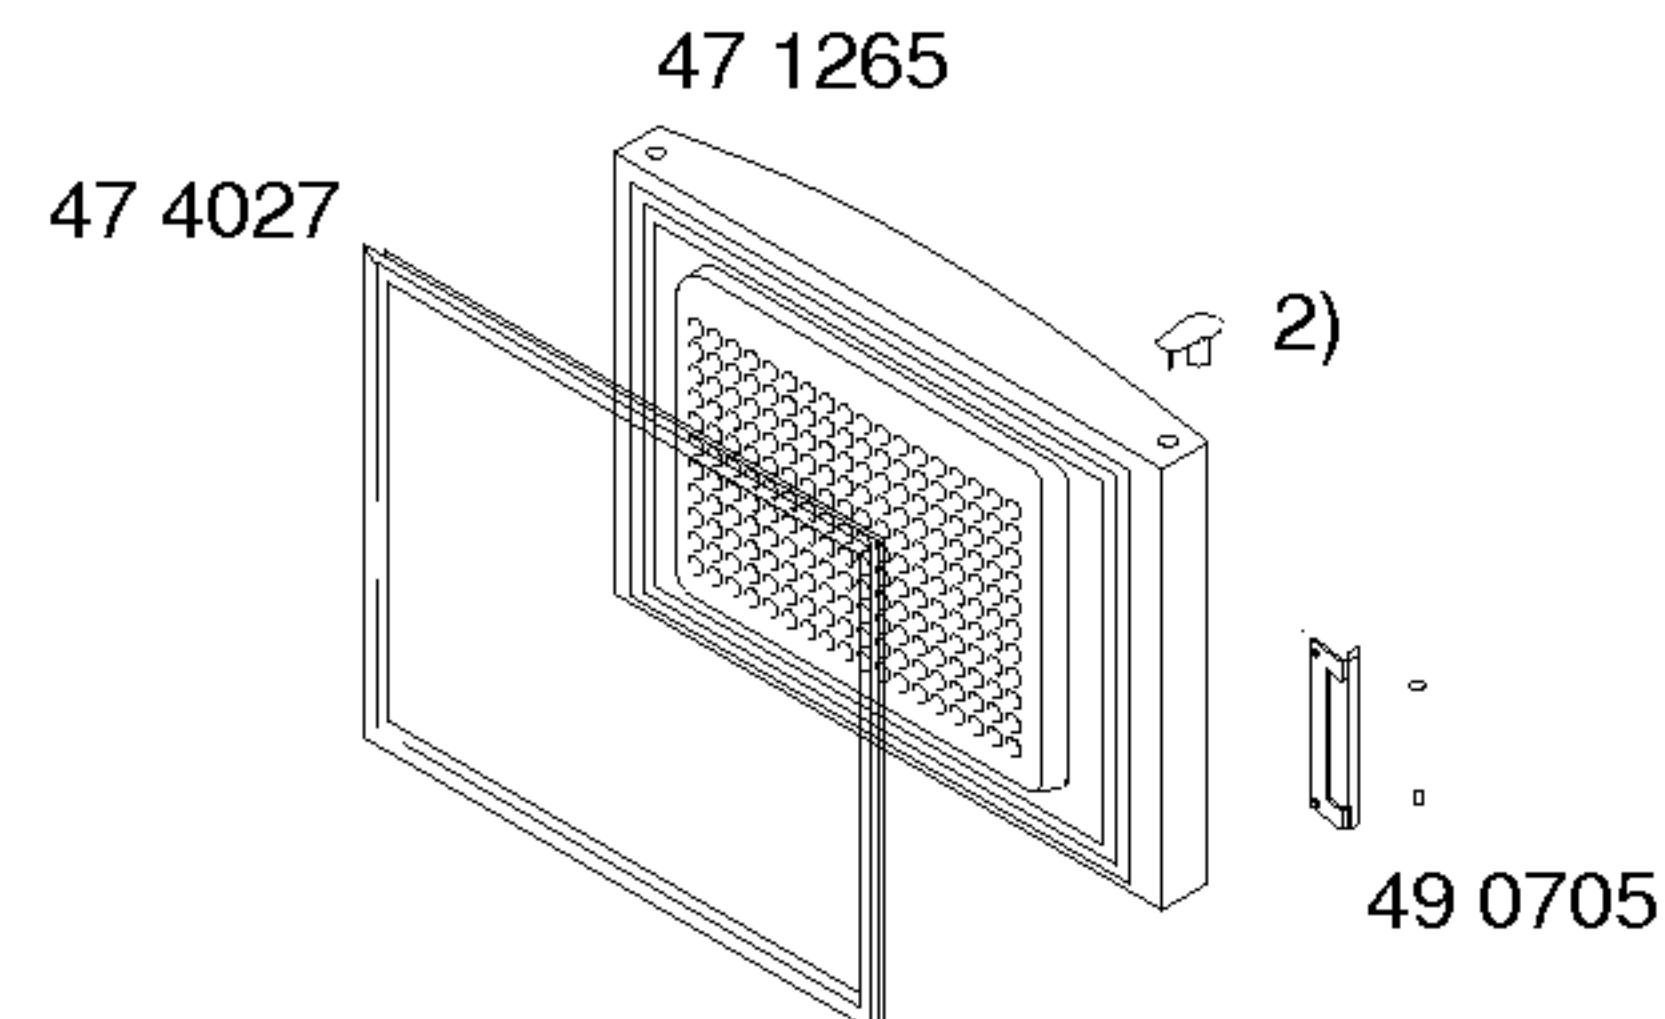
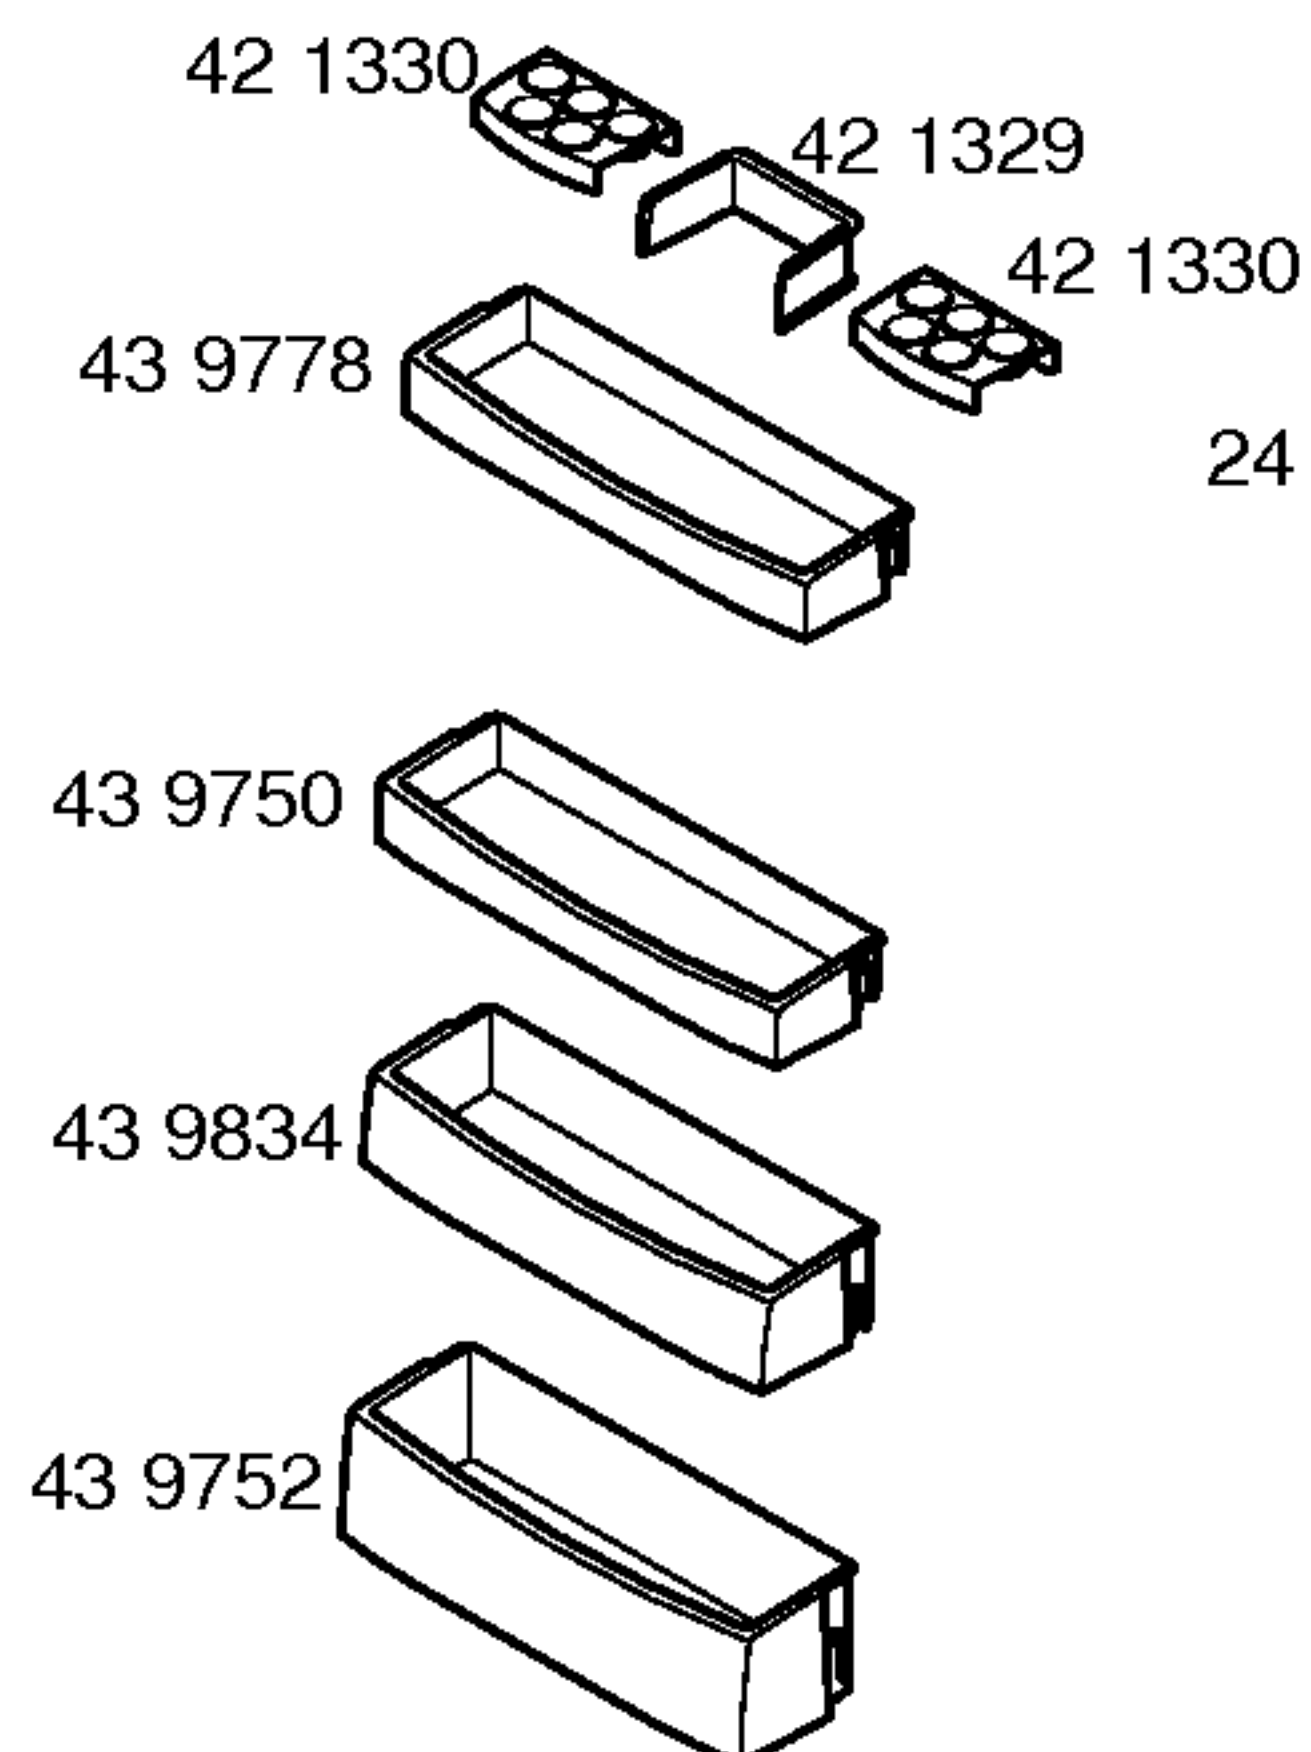
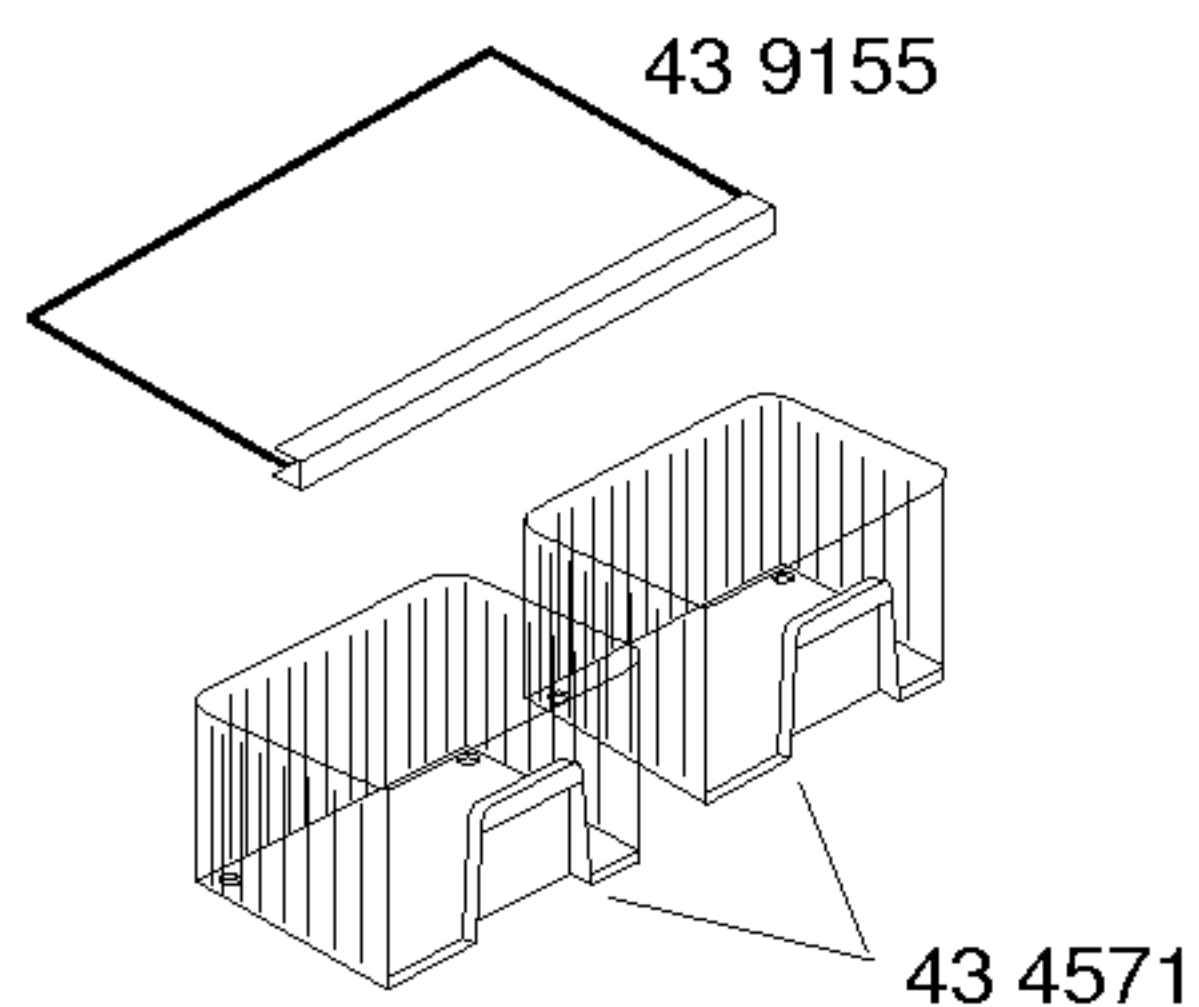
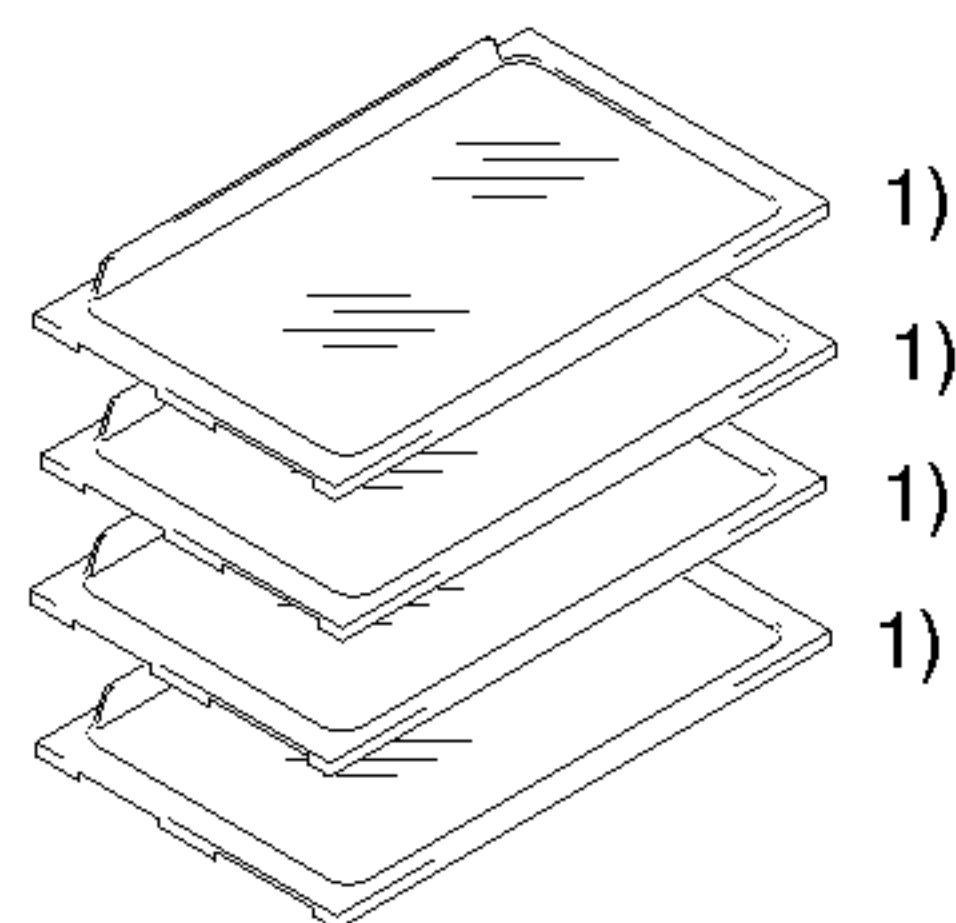


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
59 1076
(EN,FR,ES,PT)

1) 16 5552

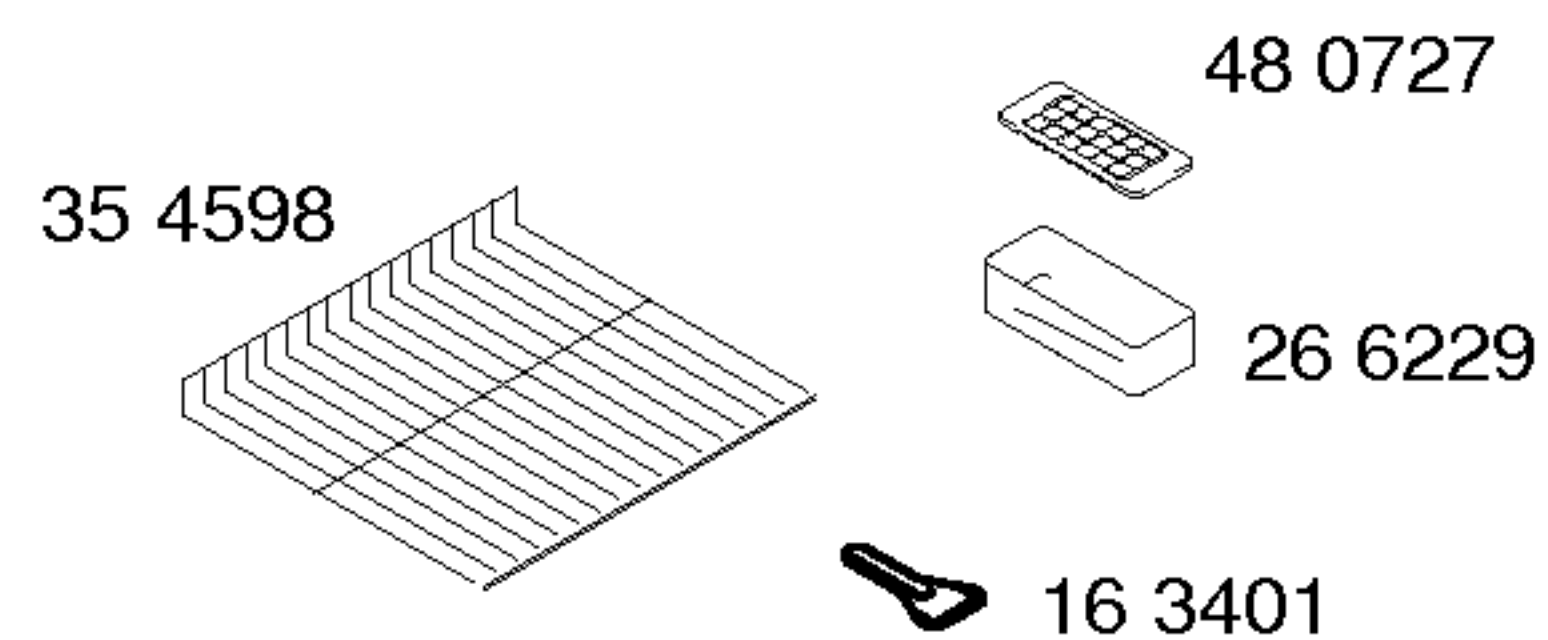


Mat. – Nr. – Konstante
3740

1) 43 5525
2) 17 1321

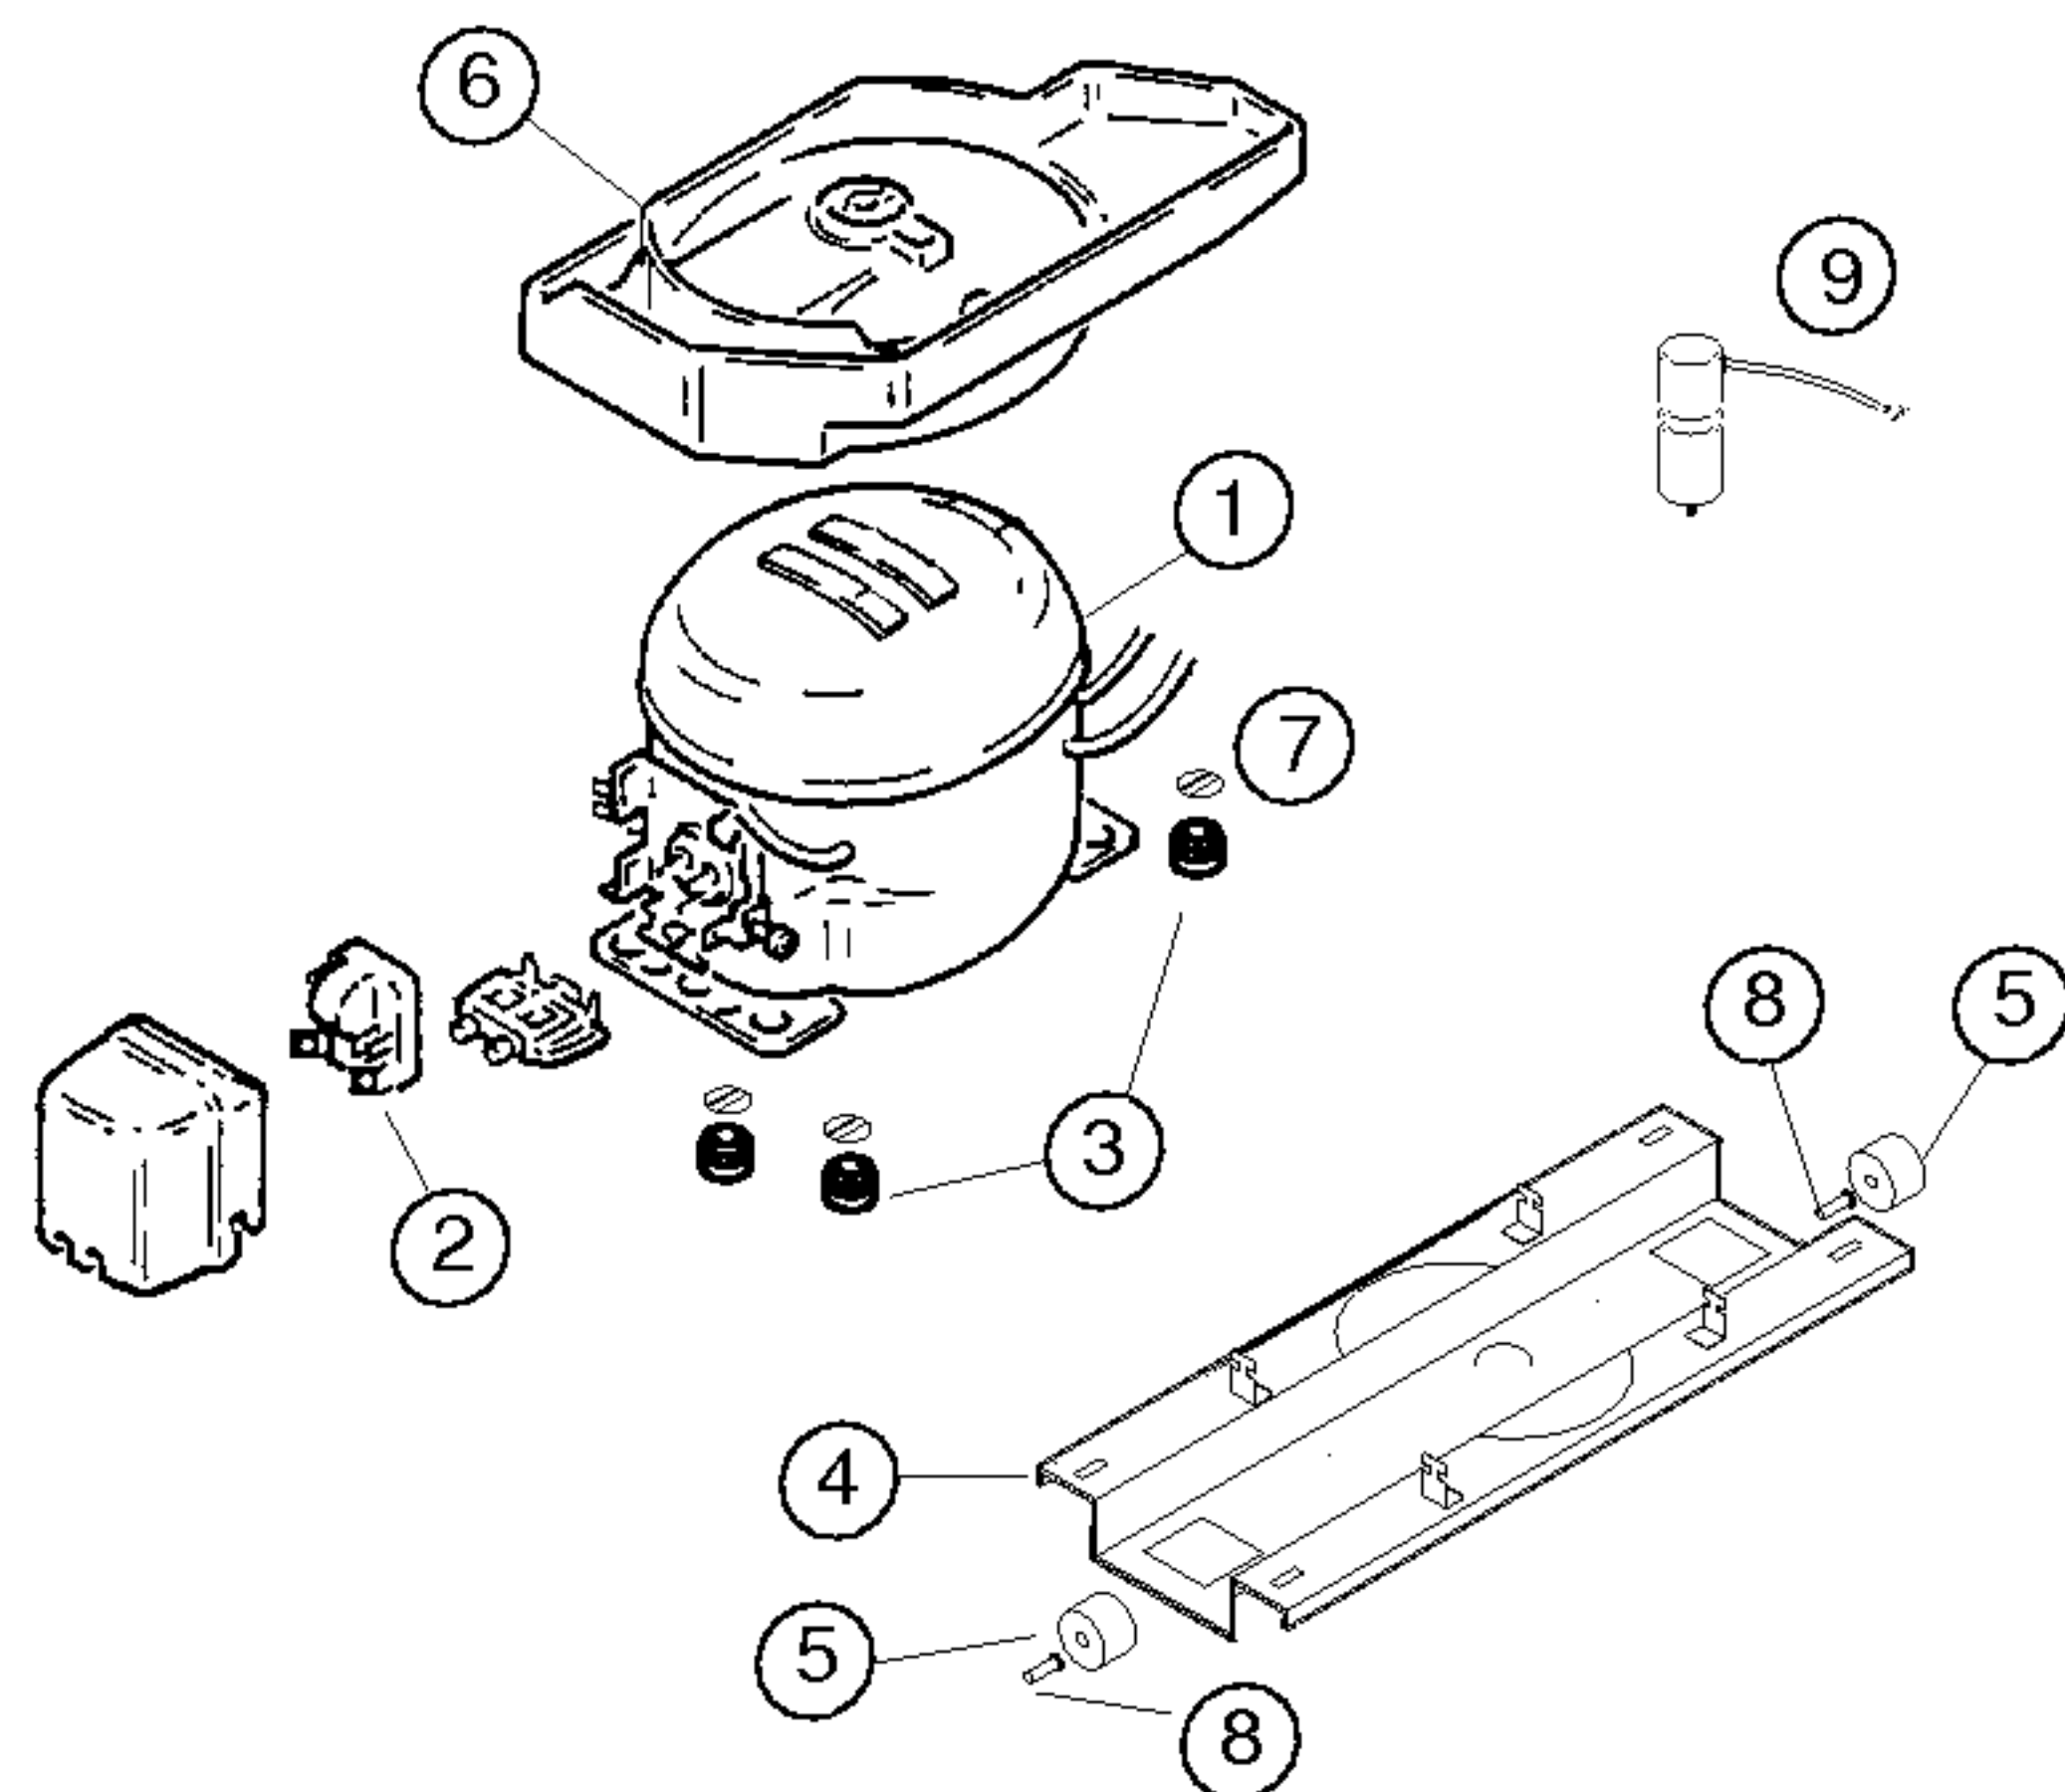

Pos.			
1	Matsushita DG125E		
2	14 3614		
3	16 3427		
4	35 4583		
5	17 1318		
6	49 4670		
7	17 1519		
8	18 1014		
9	17 4093		
10			
11			
12			

Mat. – Nr. – Konstante

3740

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör	Matsushita		
Typ/Type/Tip	DG125E		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A		
Widerstand/Resistance/Rezistans Ha/Hi/aux.	Ohm		

Temp.Reyler/Thermostat/Termostat	Danfoss		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	..ein/acma °C	+4.5 +4.5	
Valeurs de commutation/Termostat degeri	..aus"/kapama	-28 -18	
(..abtaven' od)	..alarm'		

Füllmenge/Fill. quantily/ Dolum miktarı	R600a	g	*
---	-------	---	---

Anschlusswert/Comm. load/Giris gucu	W		
-------------------------------------	---	--	--

Heizung/Heater/Rezistans	Ohm		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			

Ventilador/Blower/Vantilatör	Ohm		
Widerstand/Resistance/Rezistans			

Magnetventil/Magnetic valve/Manyetik valf	Ohm		
Widerstand/Resistance/Rezistans	V		
Spannung/Voltage/Gerilim			

Temp.Reyler/Thermostat/Termostat			
----------------------------------	--	--	--

* Siehe Typenschild/Mamul etiketine bakiniz