


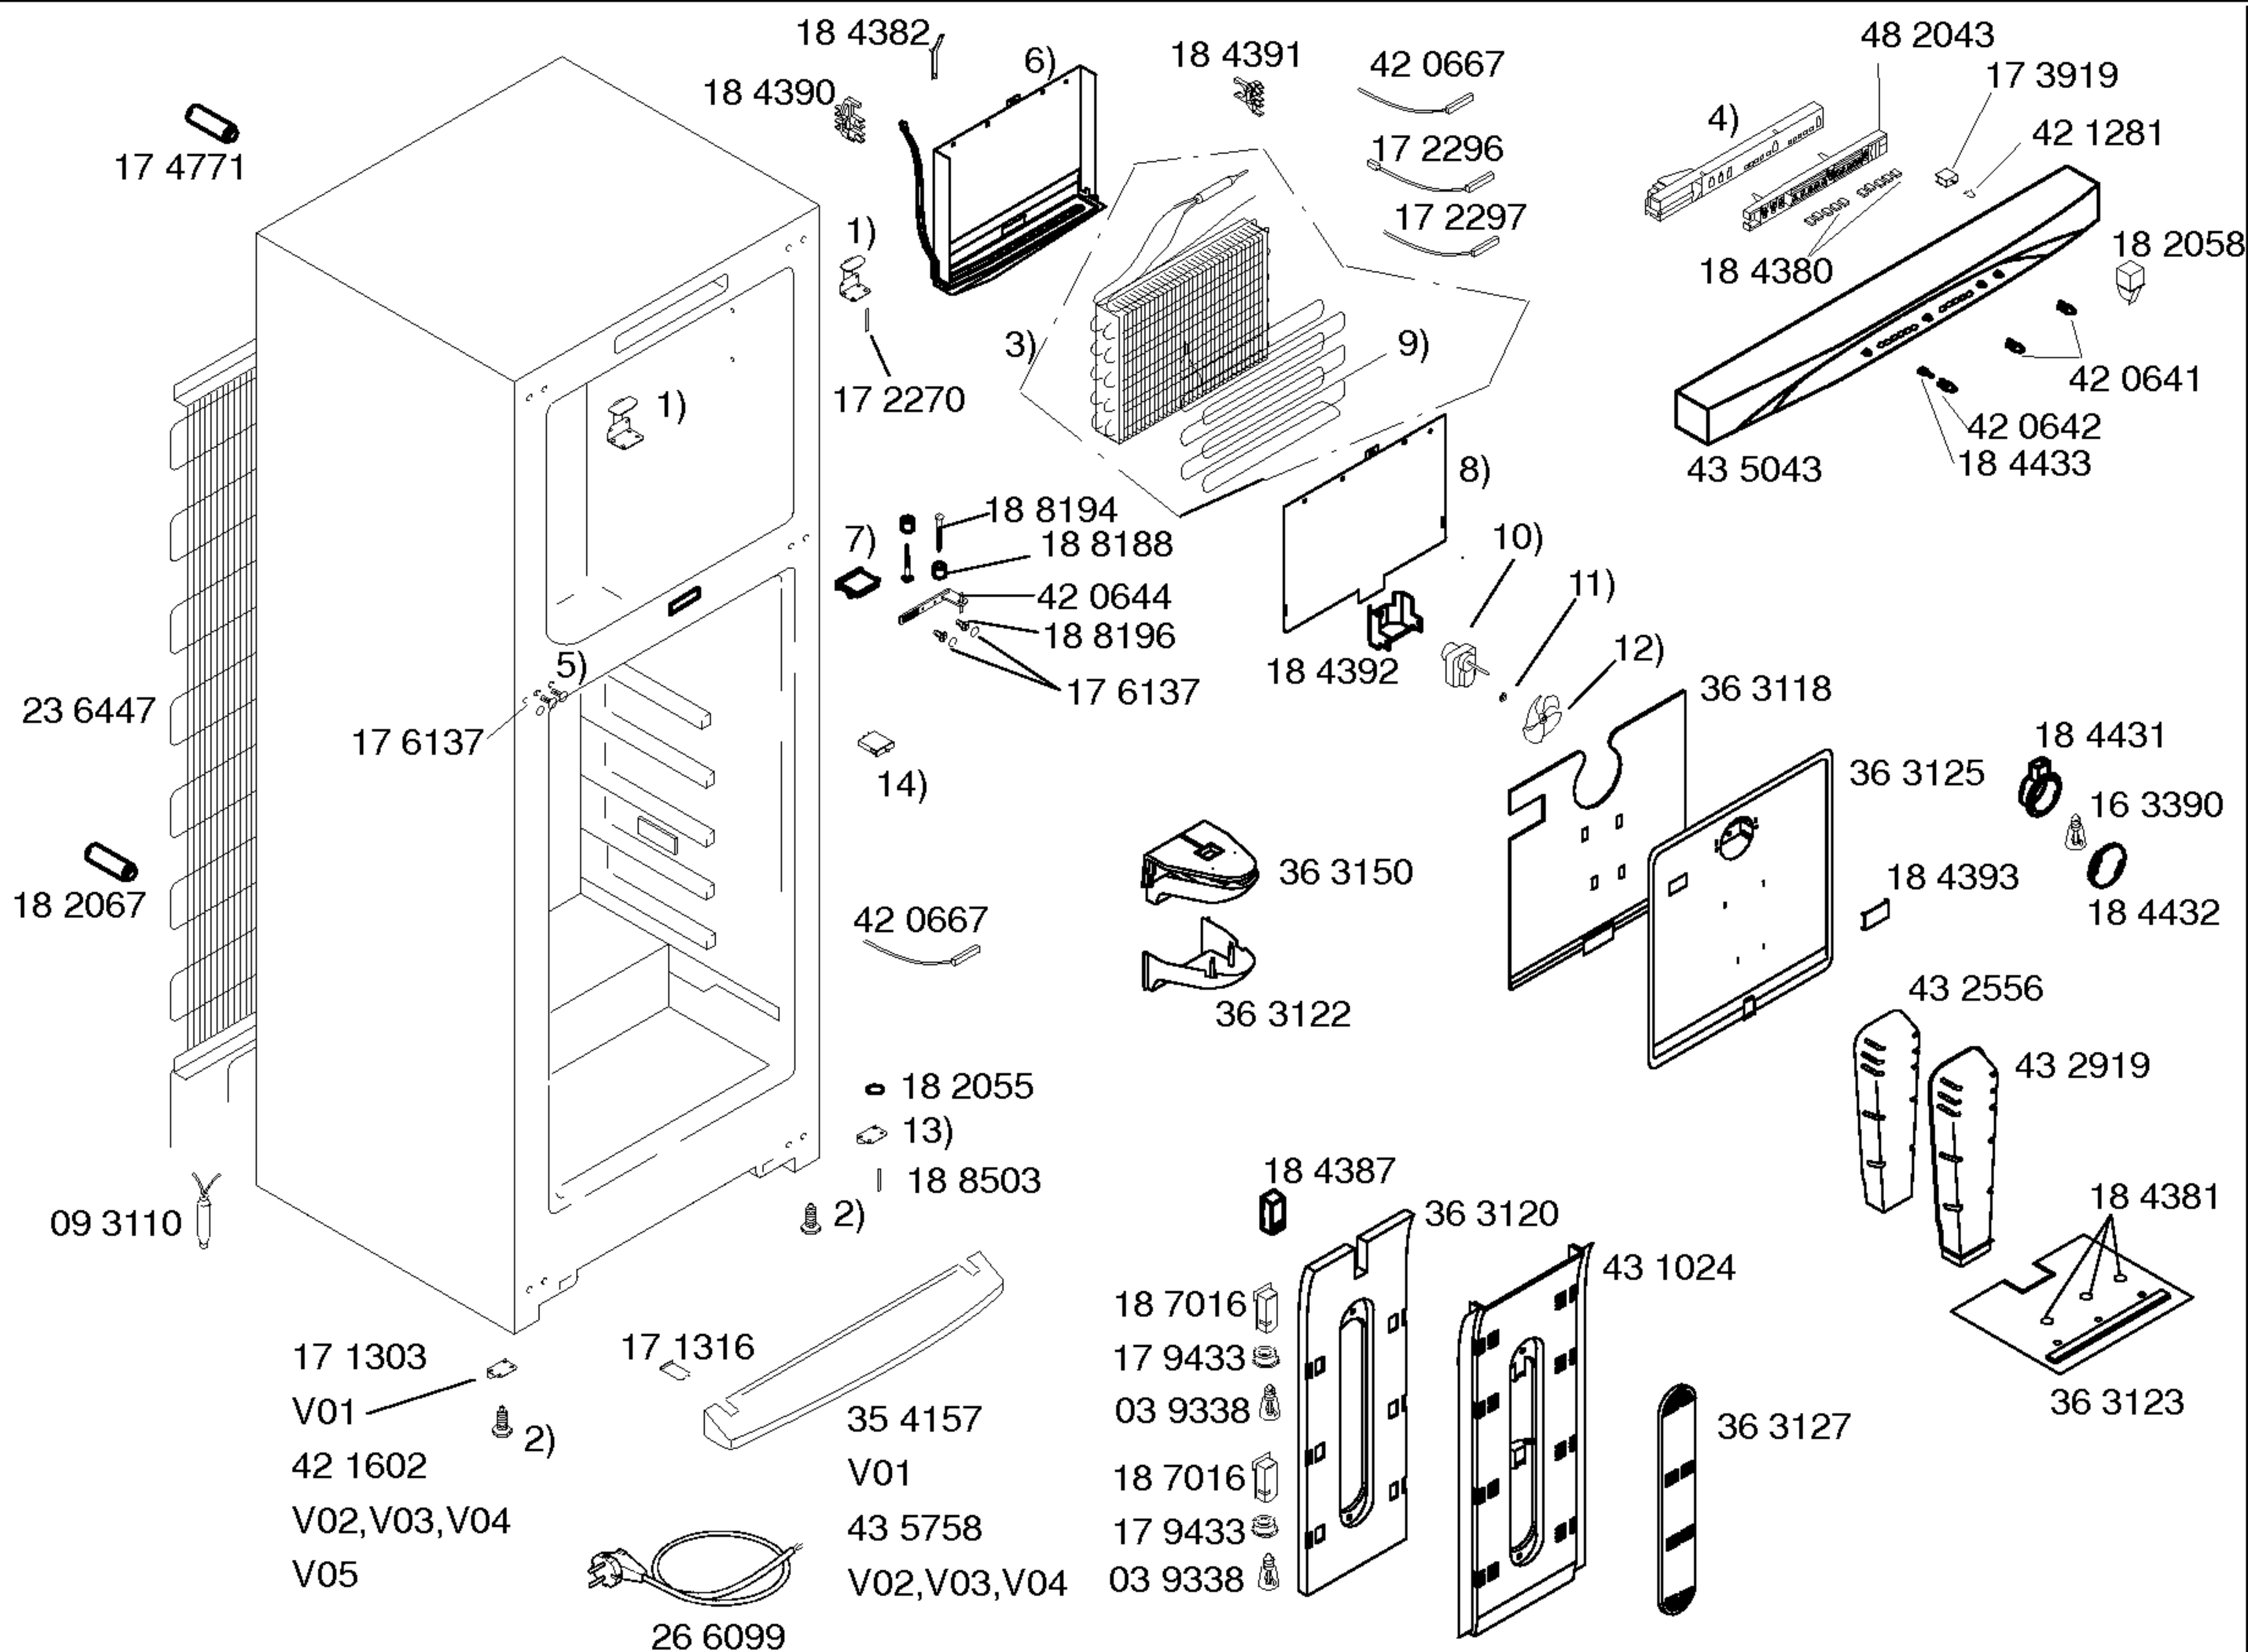


Mat. – Nr. – Konstante	
3740	

Gebrauchsanweisung
58 7174

1) 17 1312
2) 18 9089
V01
42 1516
V02,V03,V04,V05

3) 36 9817
4) 48 9131
5) 16 5552
6) 36 9906
7) 41 8128
8) 36 6905
9) 36 9820
10) 48 8433
V01,V02,V03,V04

49 1665
V05
11)17 1508
12)17 1565
13)17 1303
V01
42 1601
V02,V03,V04,V05
14)17 1307
V01,V02,V03
42 2142
V04,V05

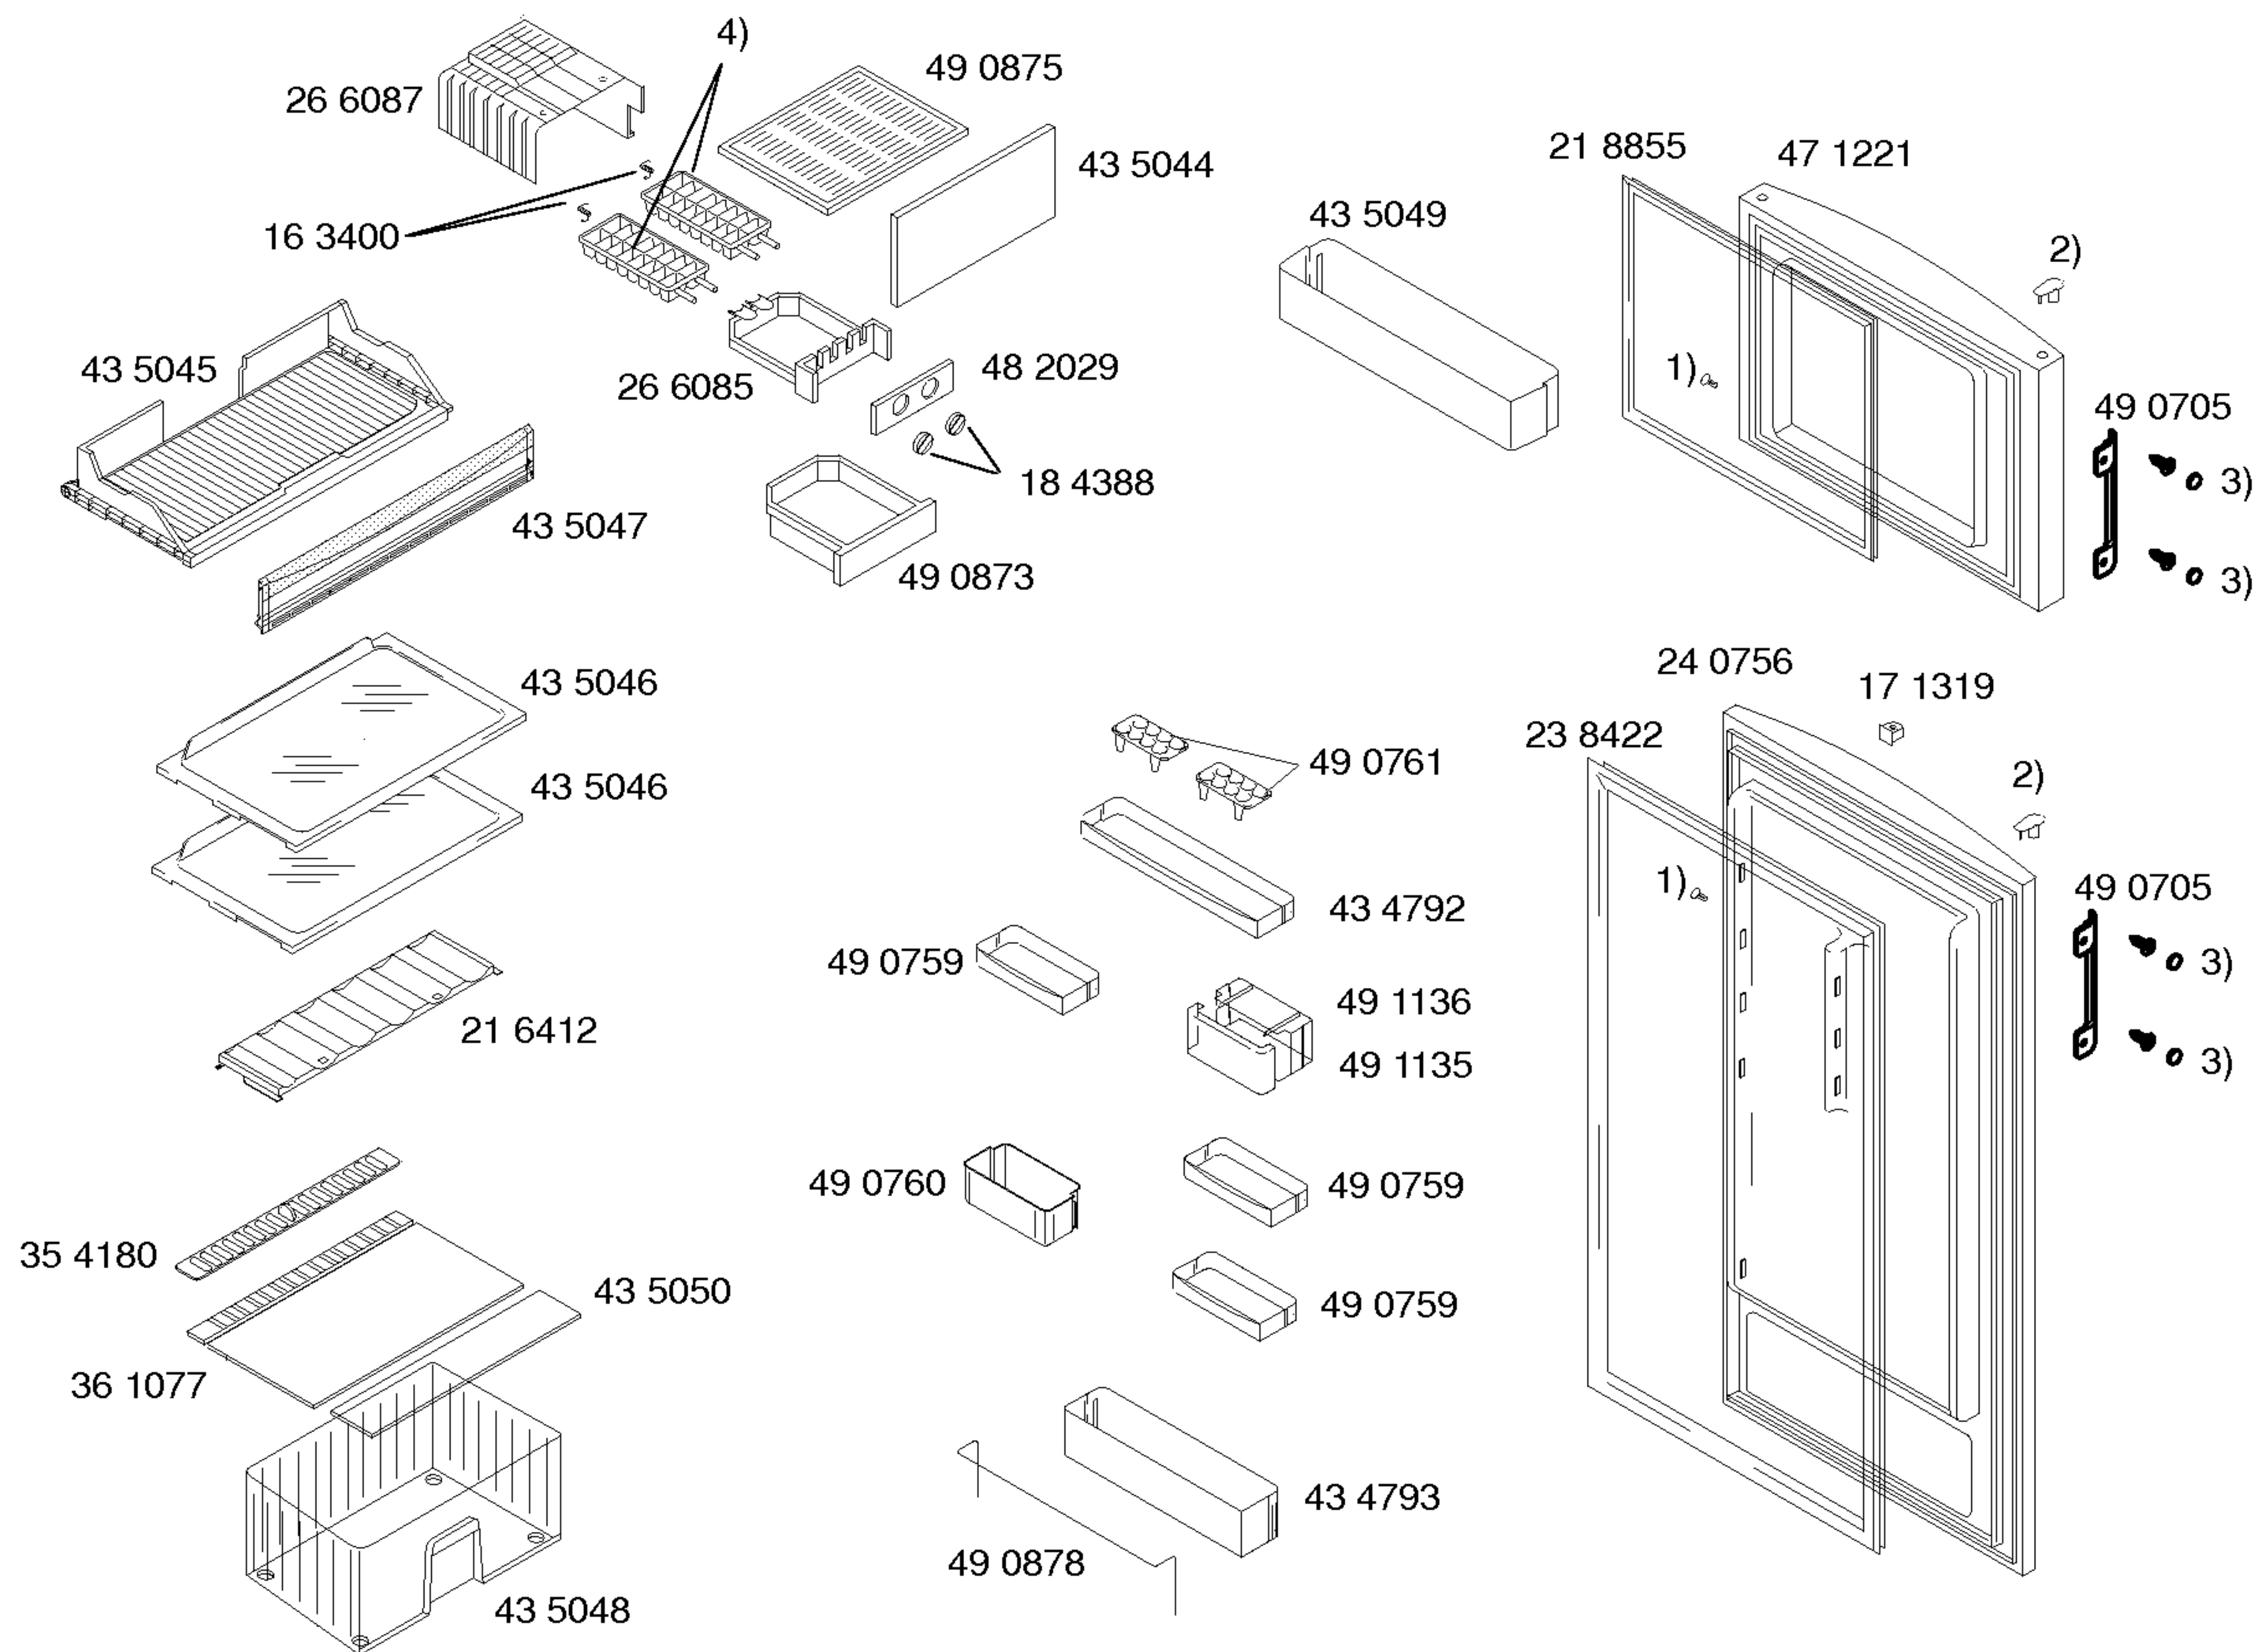


Mat. – Nr. – Konstante
3740

1) 06 0083

2) 17 1321

3) 16 5557

4) 26 9013

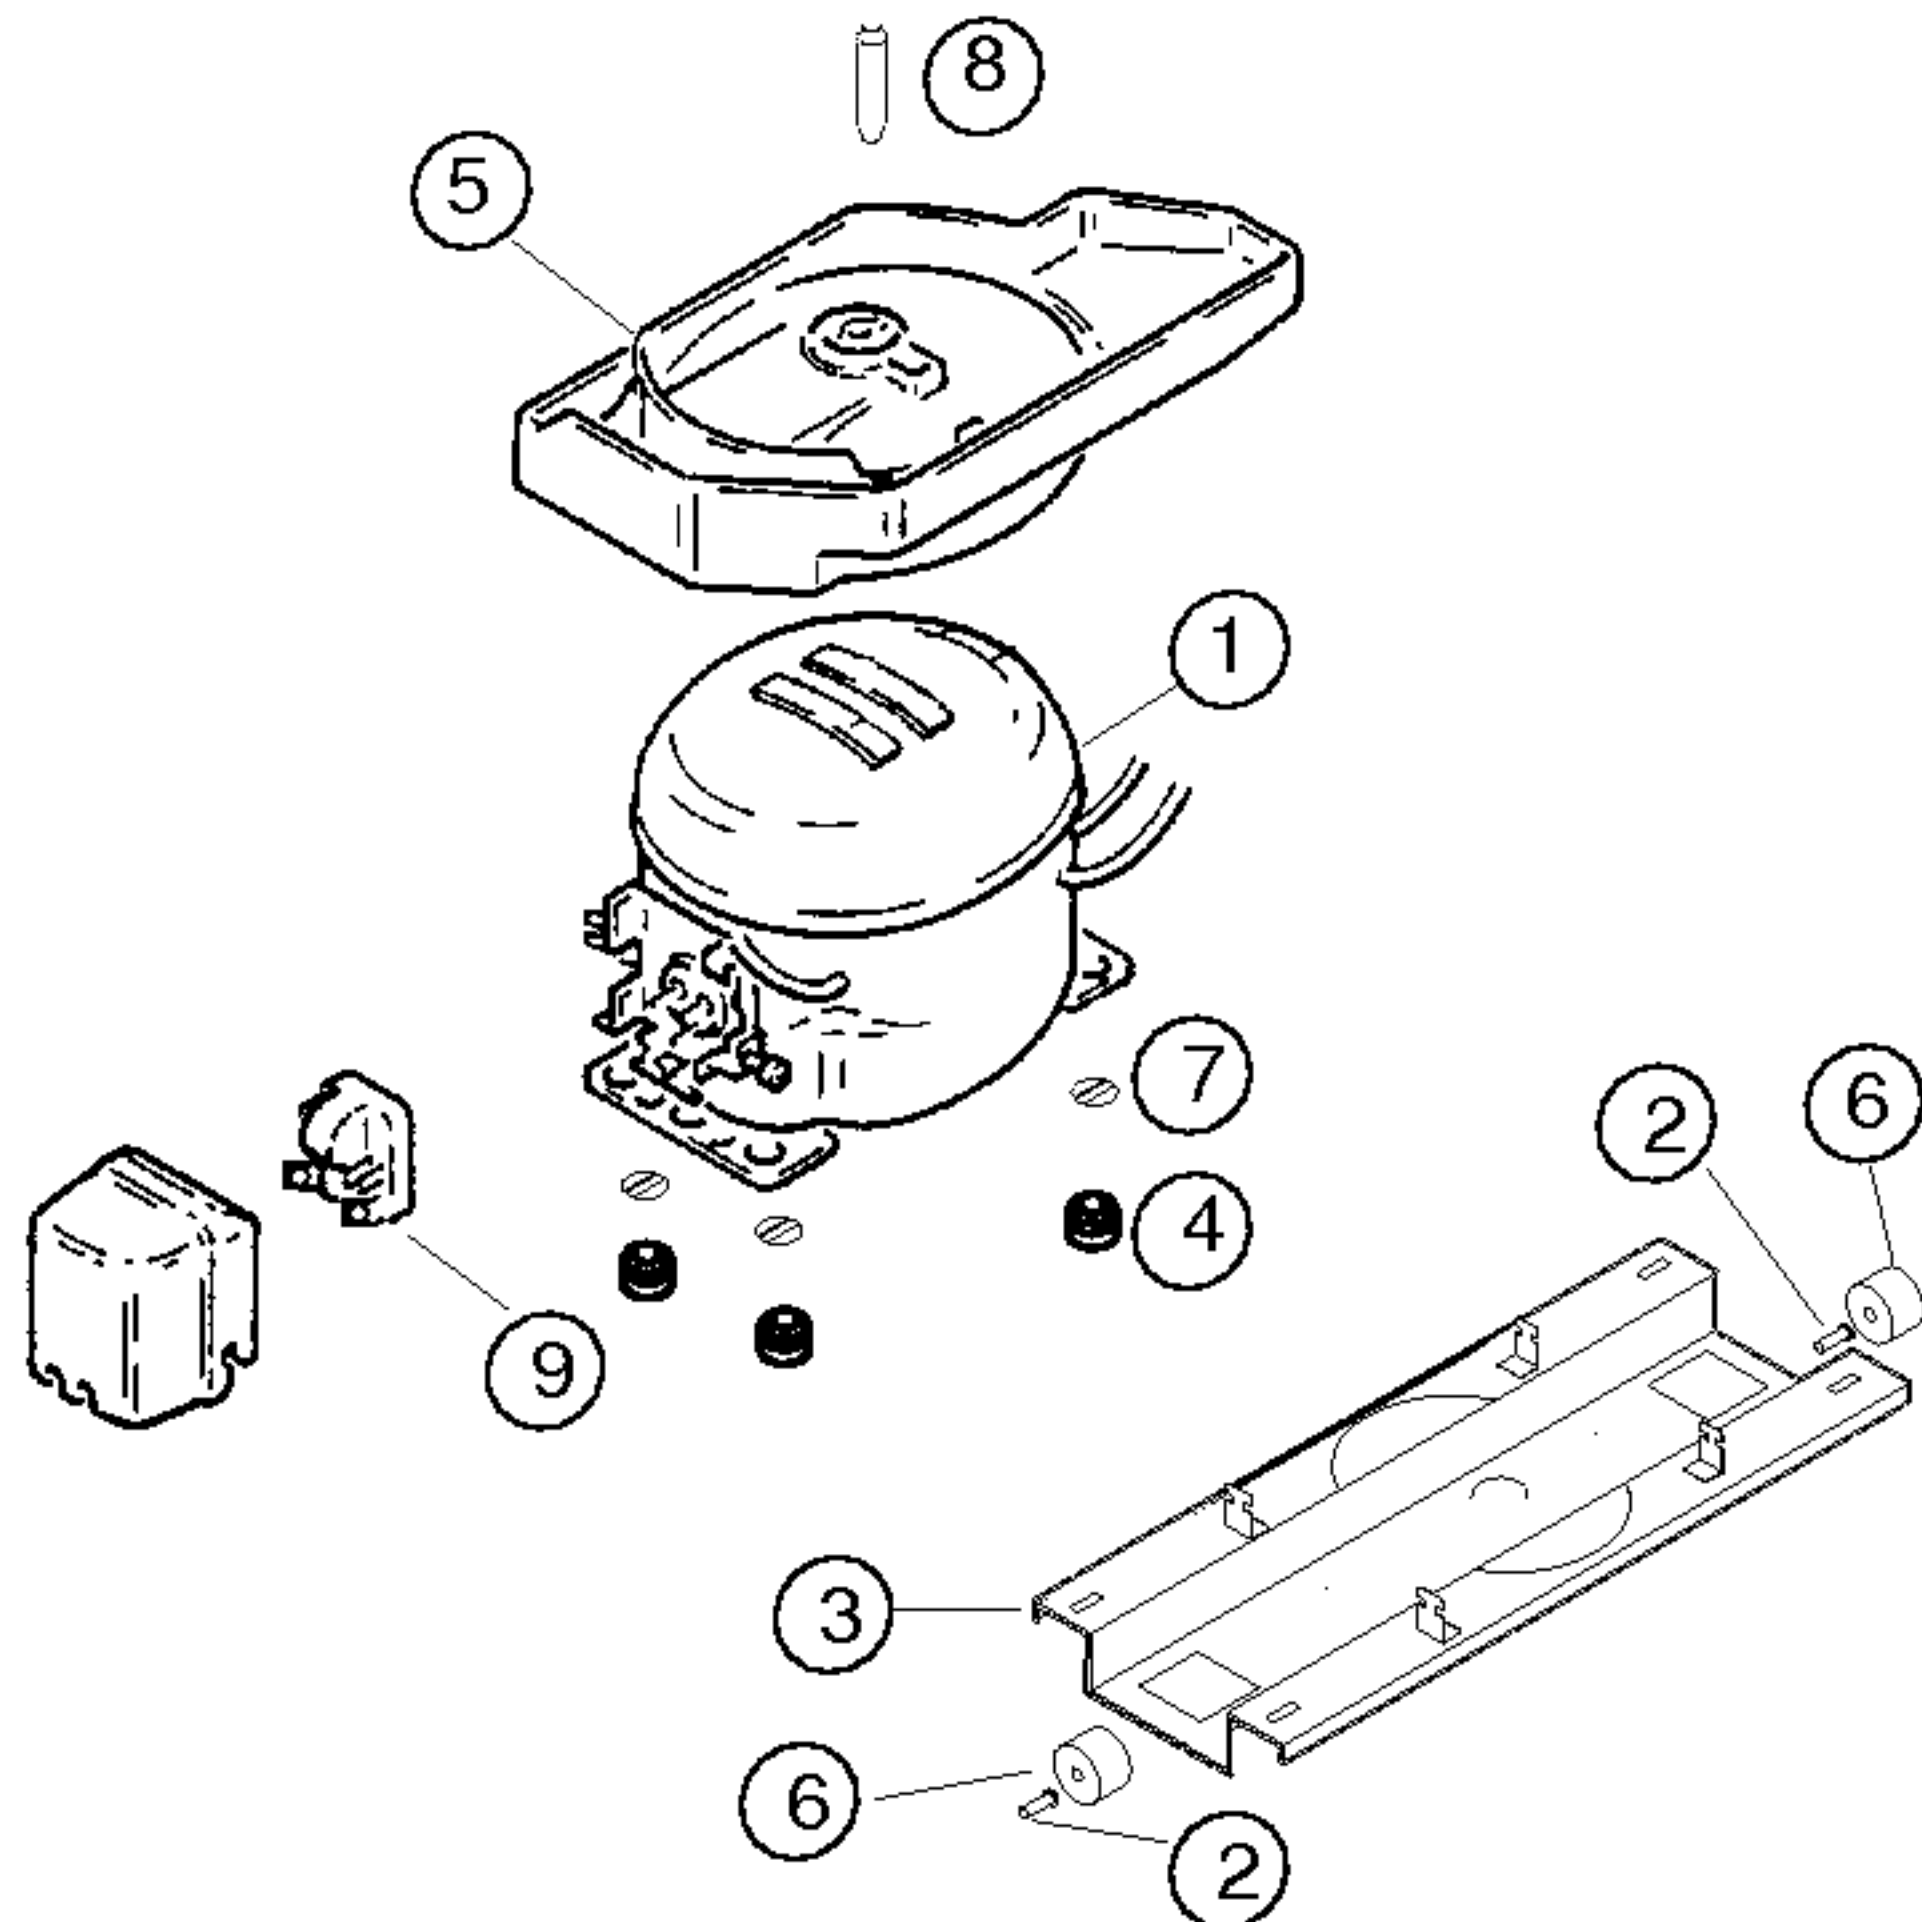

	V01,V02	V03	
Pos.	Aspera		
	NBT1116Y		
1	14 2193		
2	18 1014		
3	35 4158		
4	16 3427		
5	36 3166	49 1138	
6	17 1318		
7	17 1519		
8	42 0376		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.		Aspera NBT1116Y 6.4 12.9 18	
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)		Elektronisch ..ein/acma °C ..aus"/kapama ..alarm'	
Füllmenge/Fill. quantily/ Dolum miktarı R134a		g	*
Anschlusswert/Comm. load/Giris gucu		W	*
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc		Ohm W	Verdampfer 160 Ablaufrinne 20
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans		Ohm	Verdampfer
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim		Ohm V	
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz