



Libro de instrucciones 52 2191 (E,P,GB,F,NL,GR)

- 1) 06 7746
- 2) 03 3058
- 3) 05 8382

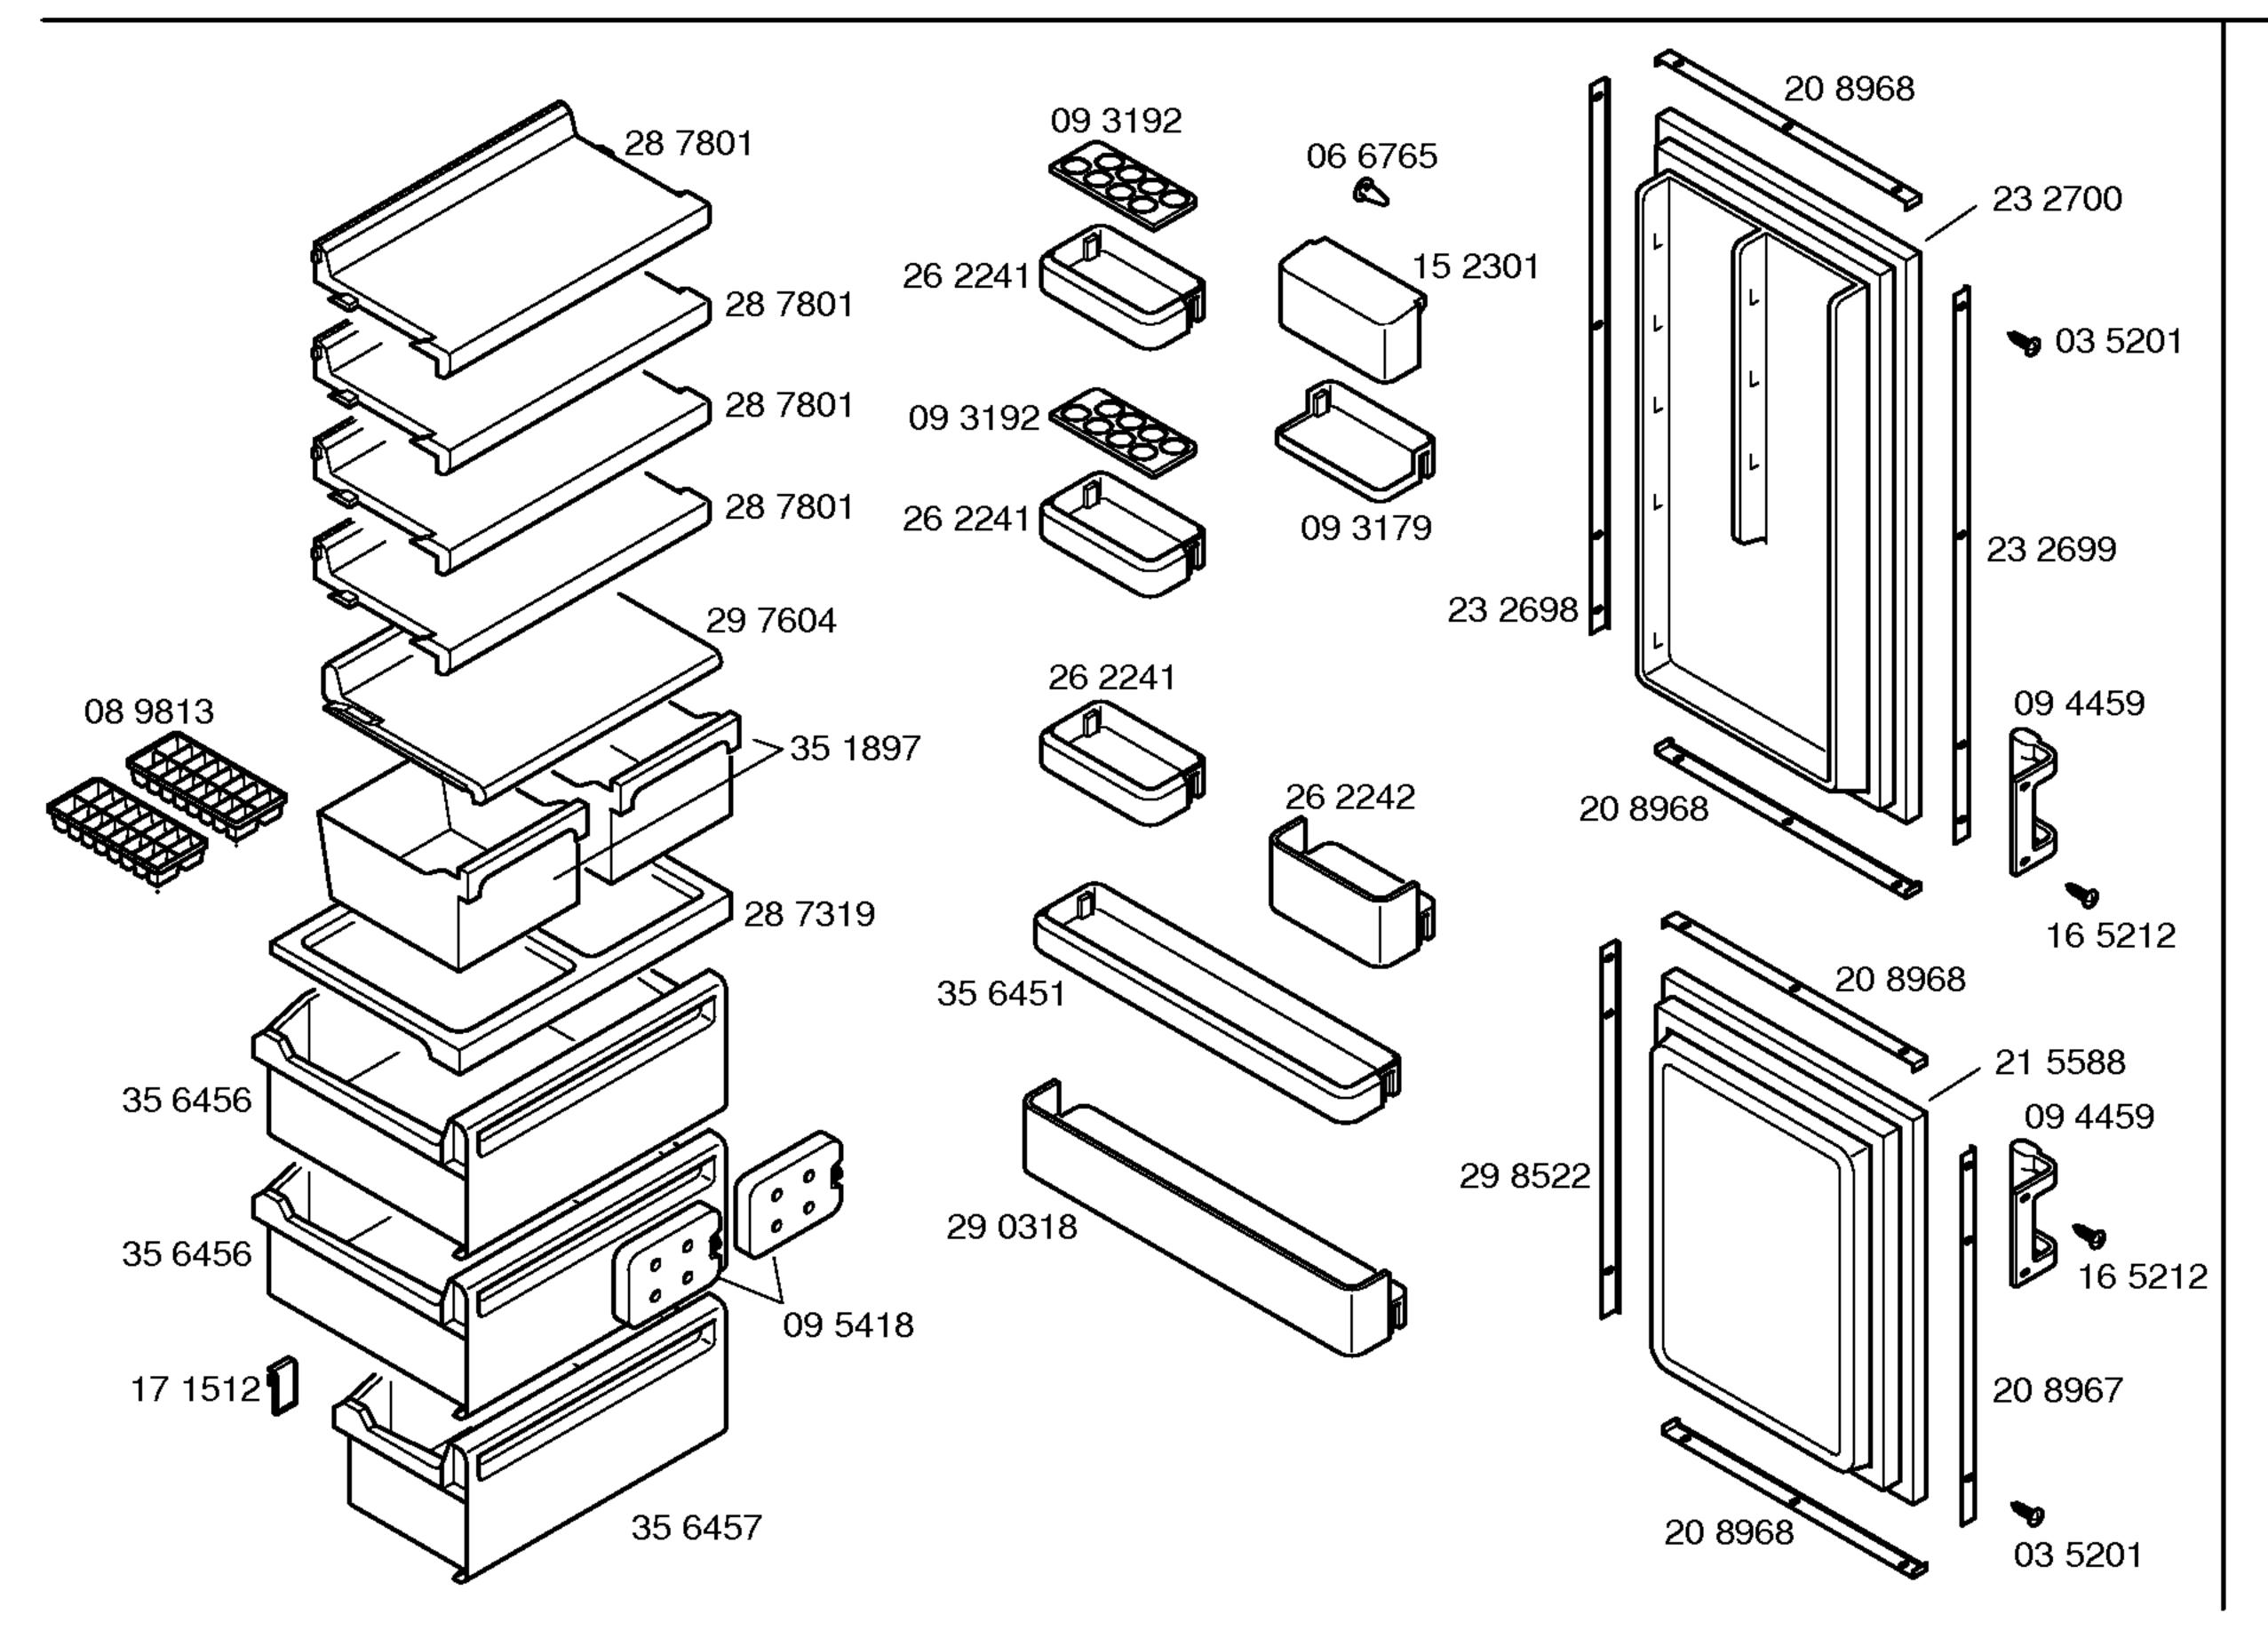





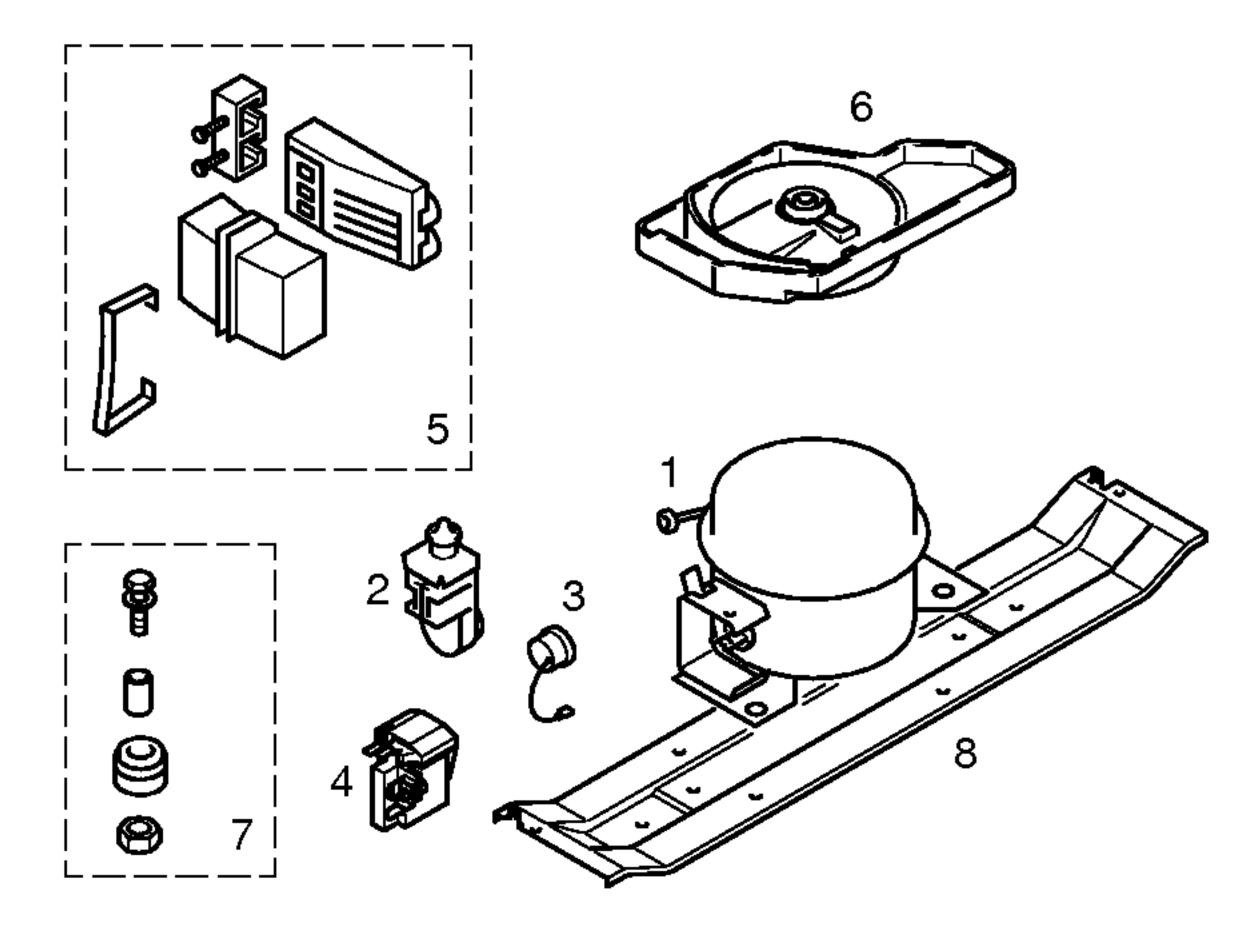

Pos.	Aspera	Aspera	
	BPK1072Y	BPK1084Y	
1	14 2000	14 2001	
2	15 4315	15 4315	
3	17 3748	16 7769	
4			
5			
6	26 4123		
7	05 0166	05 0166	
8	28 8253	28 8253	
9			
10			
11			
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECH	NICUES/DATO	S TECNICOS	

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h	Aspera BPK1072Y	Aspera BPK1084Y	
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	0,47 33,10 38,20	0,52 29,35 41,25	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ein/conex.ºC Valeurs de commutation/Desconexaus"/descon. (abtaven' od)alarm'	Ranco K59-L6050 MIN. MAX. +6º -11º -28º	Ranco K54–L2006 MIN. MAX. –14° –22° –20° –28° –10° –18°	
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	79,5	87,5	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			

^{*} Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características