


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 5561

- 1) 17 2579
- 2) 06 0086
- 3) 17 3845
- 4) 41 8169

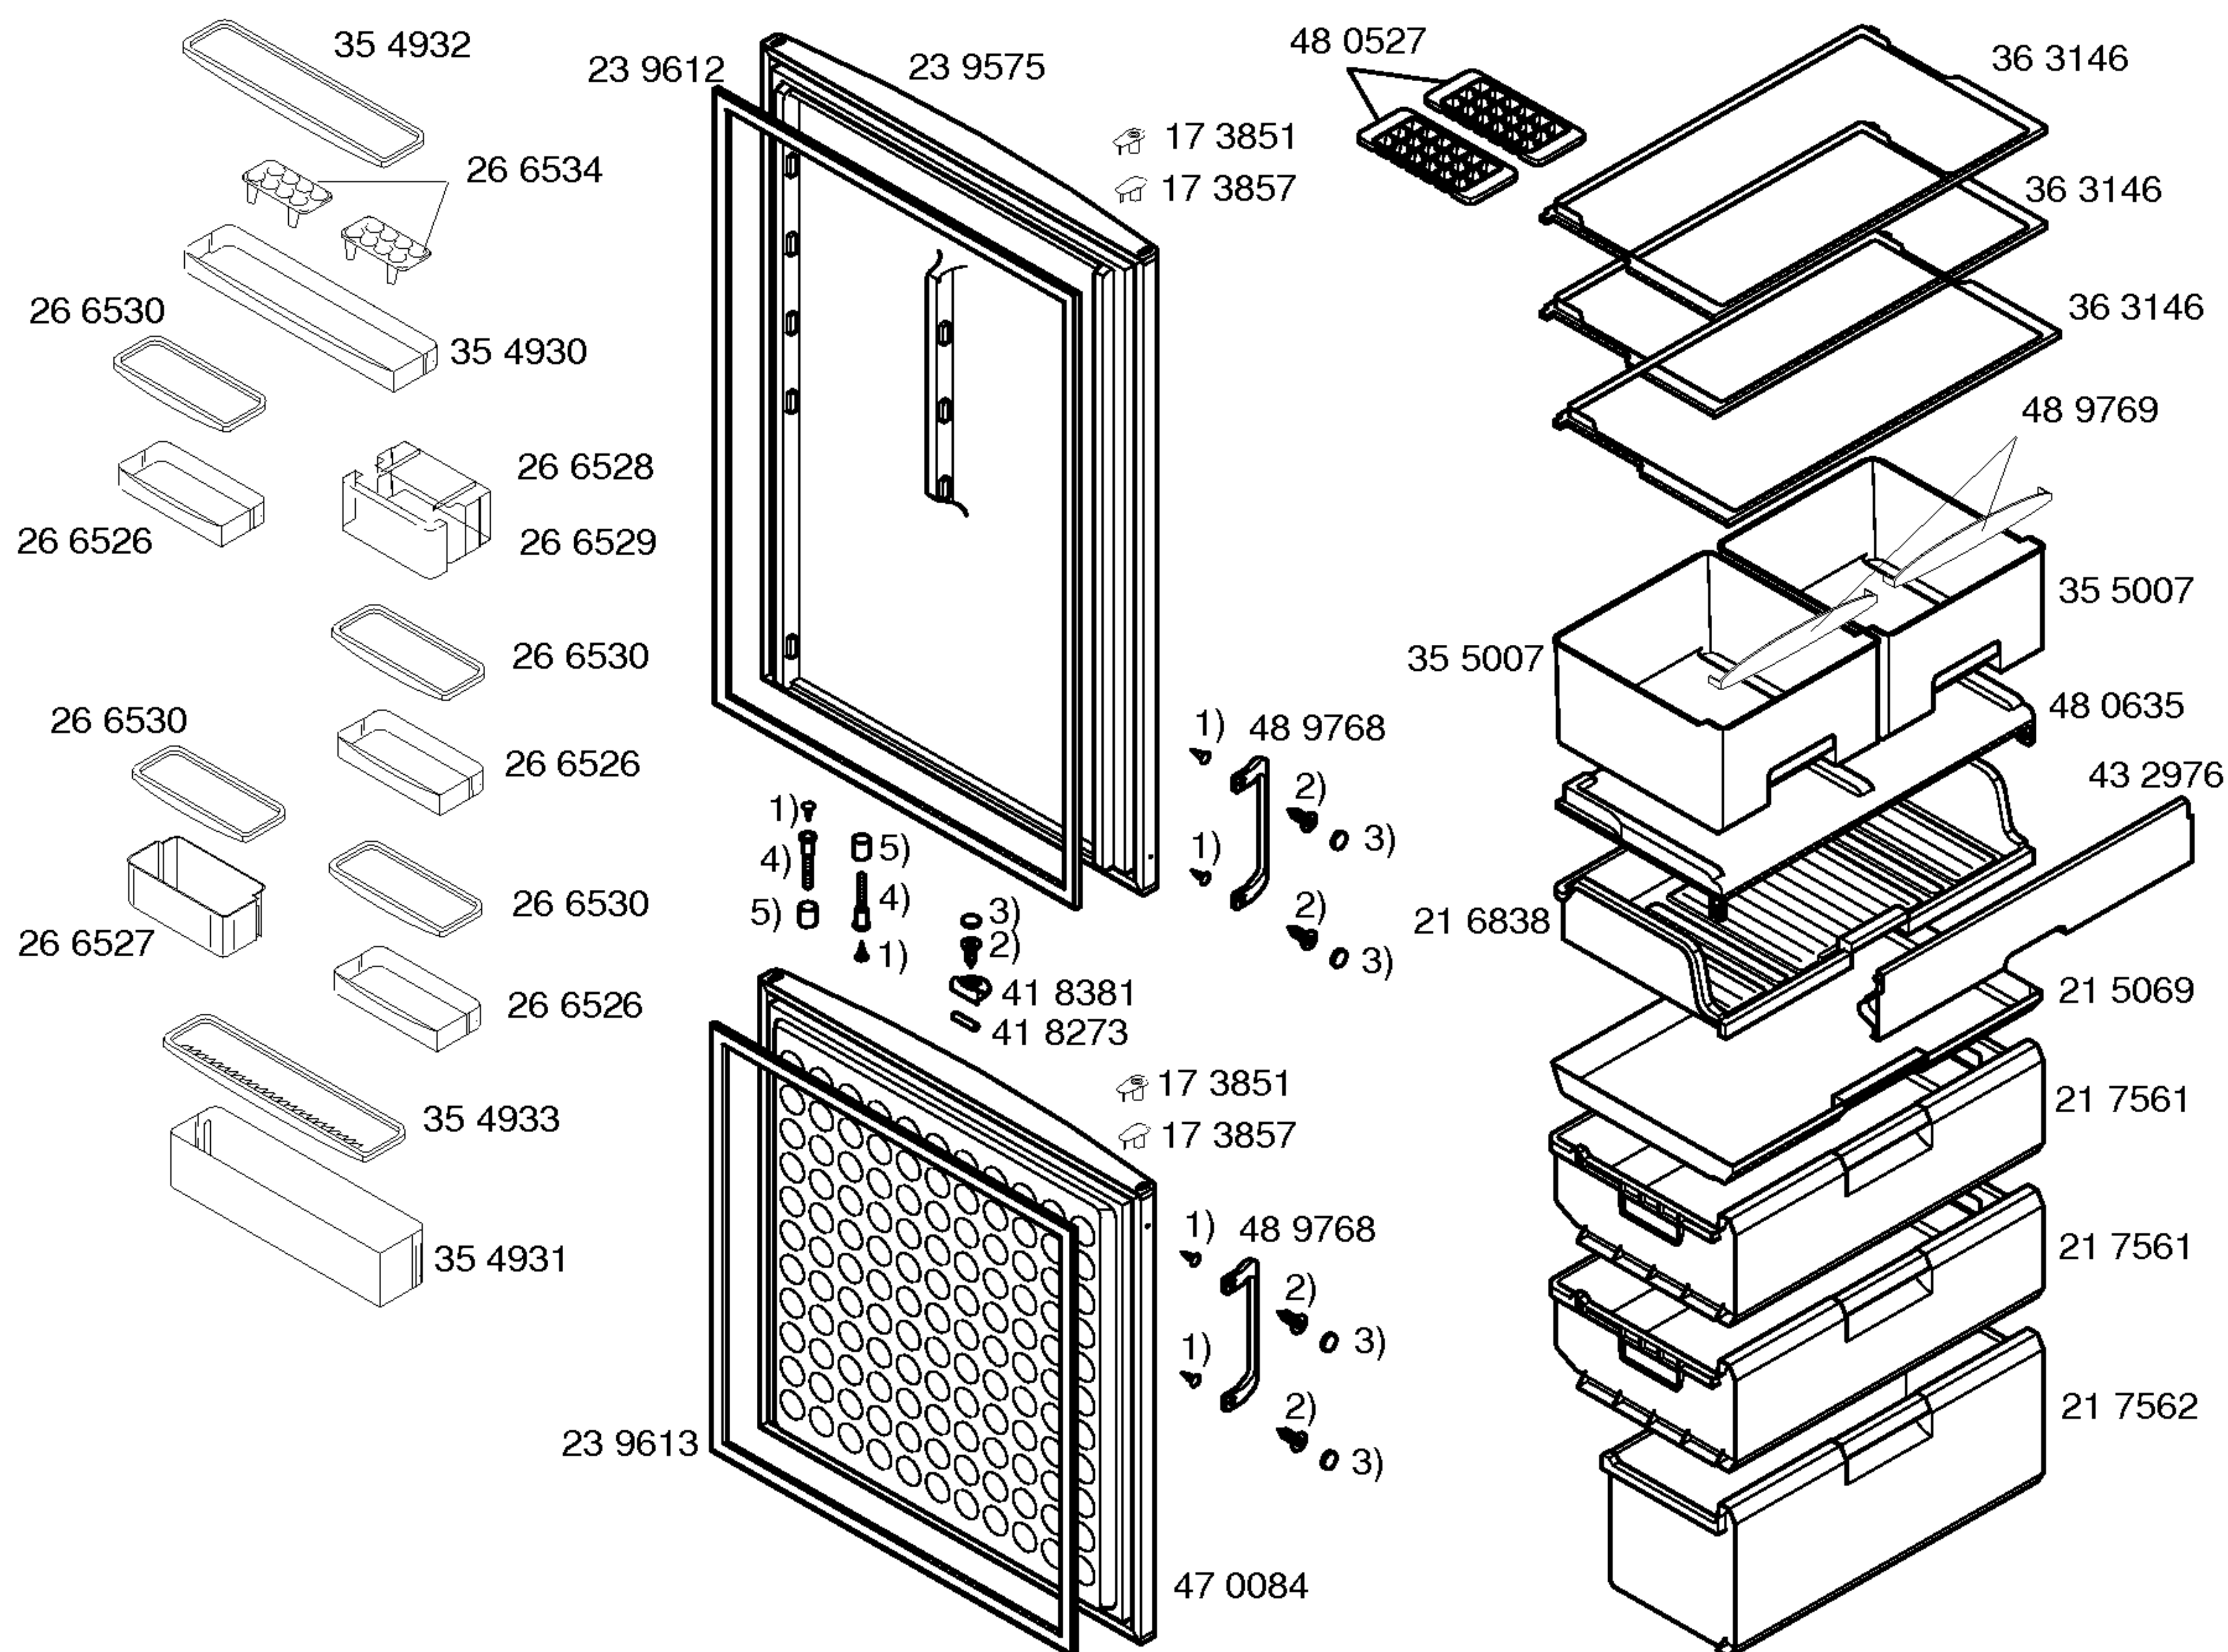



Mat. – Nr. – Konstante
3740

- 1) 17 3862
- 2) 17 2274
- 3) 17 3879
- 4) 18 8194
- 5) 18 8187

Mat. – Nr. – Konstante
3740

1) 43 2396

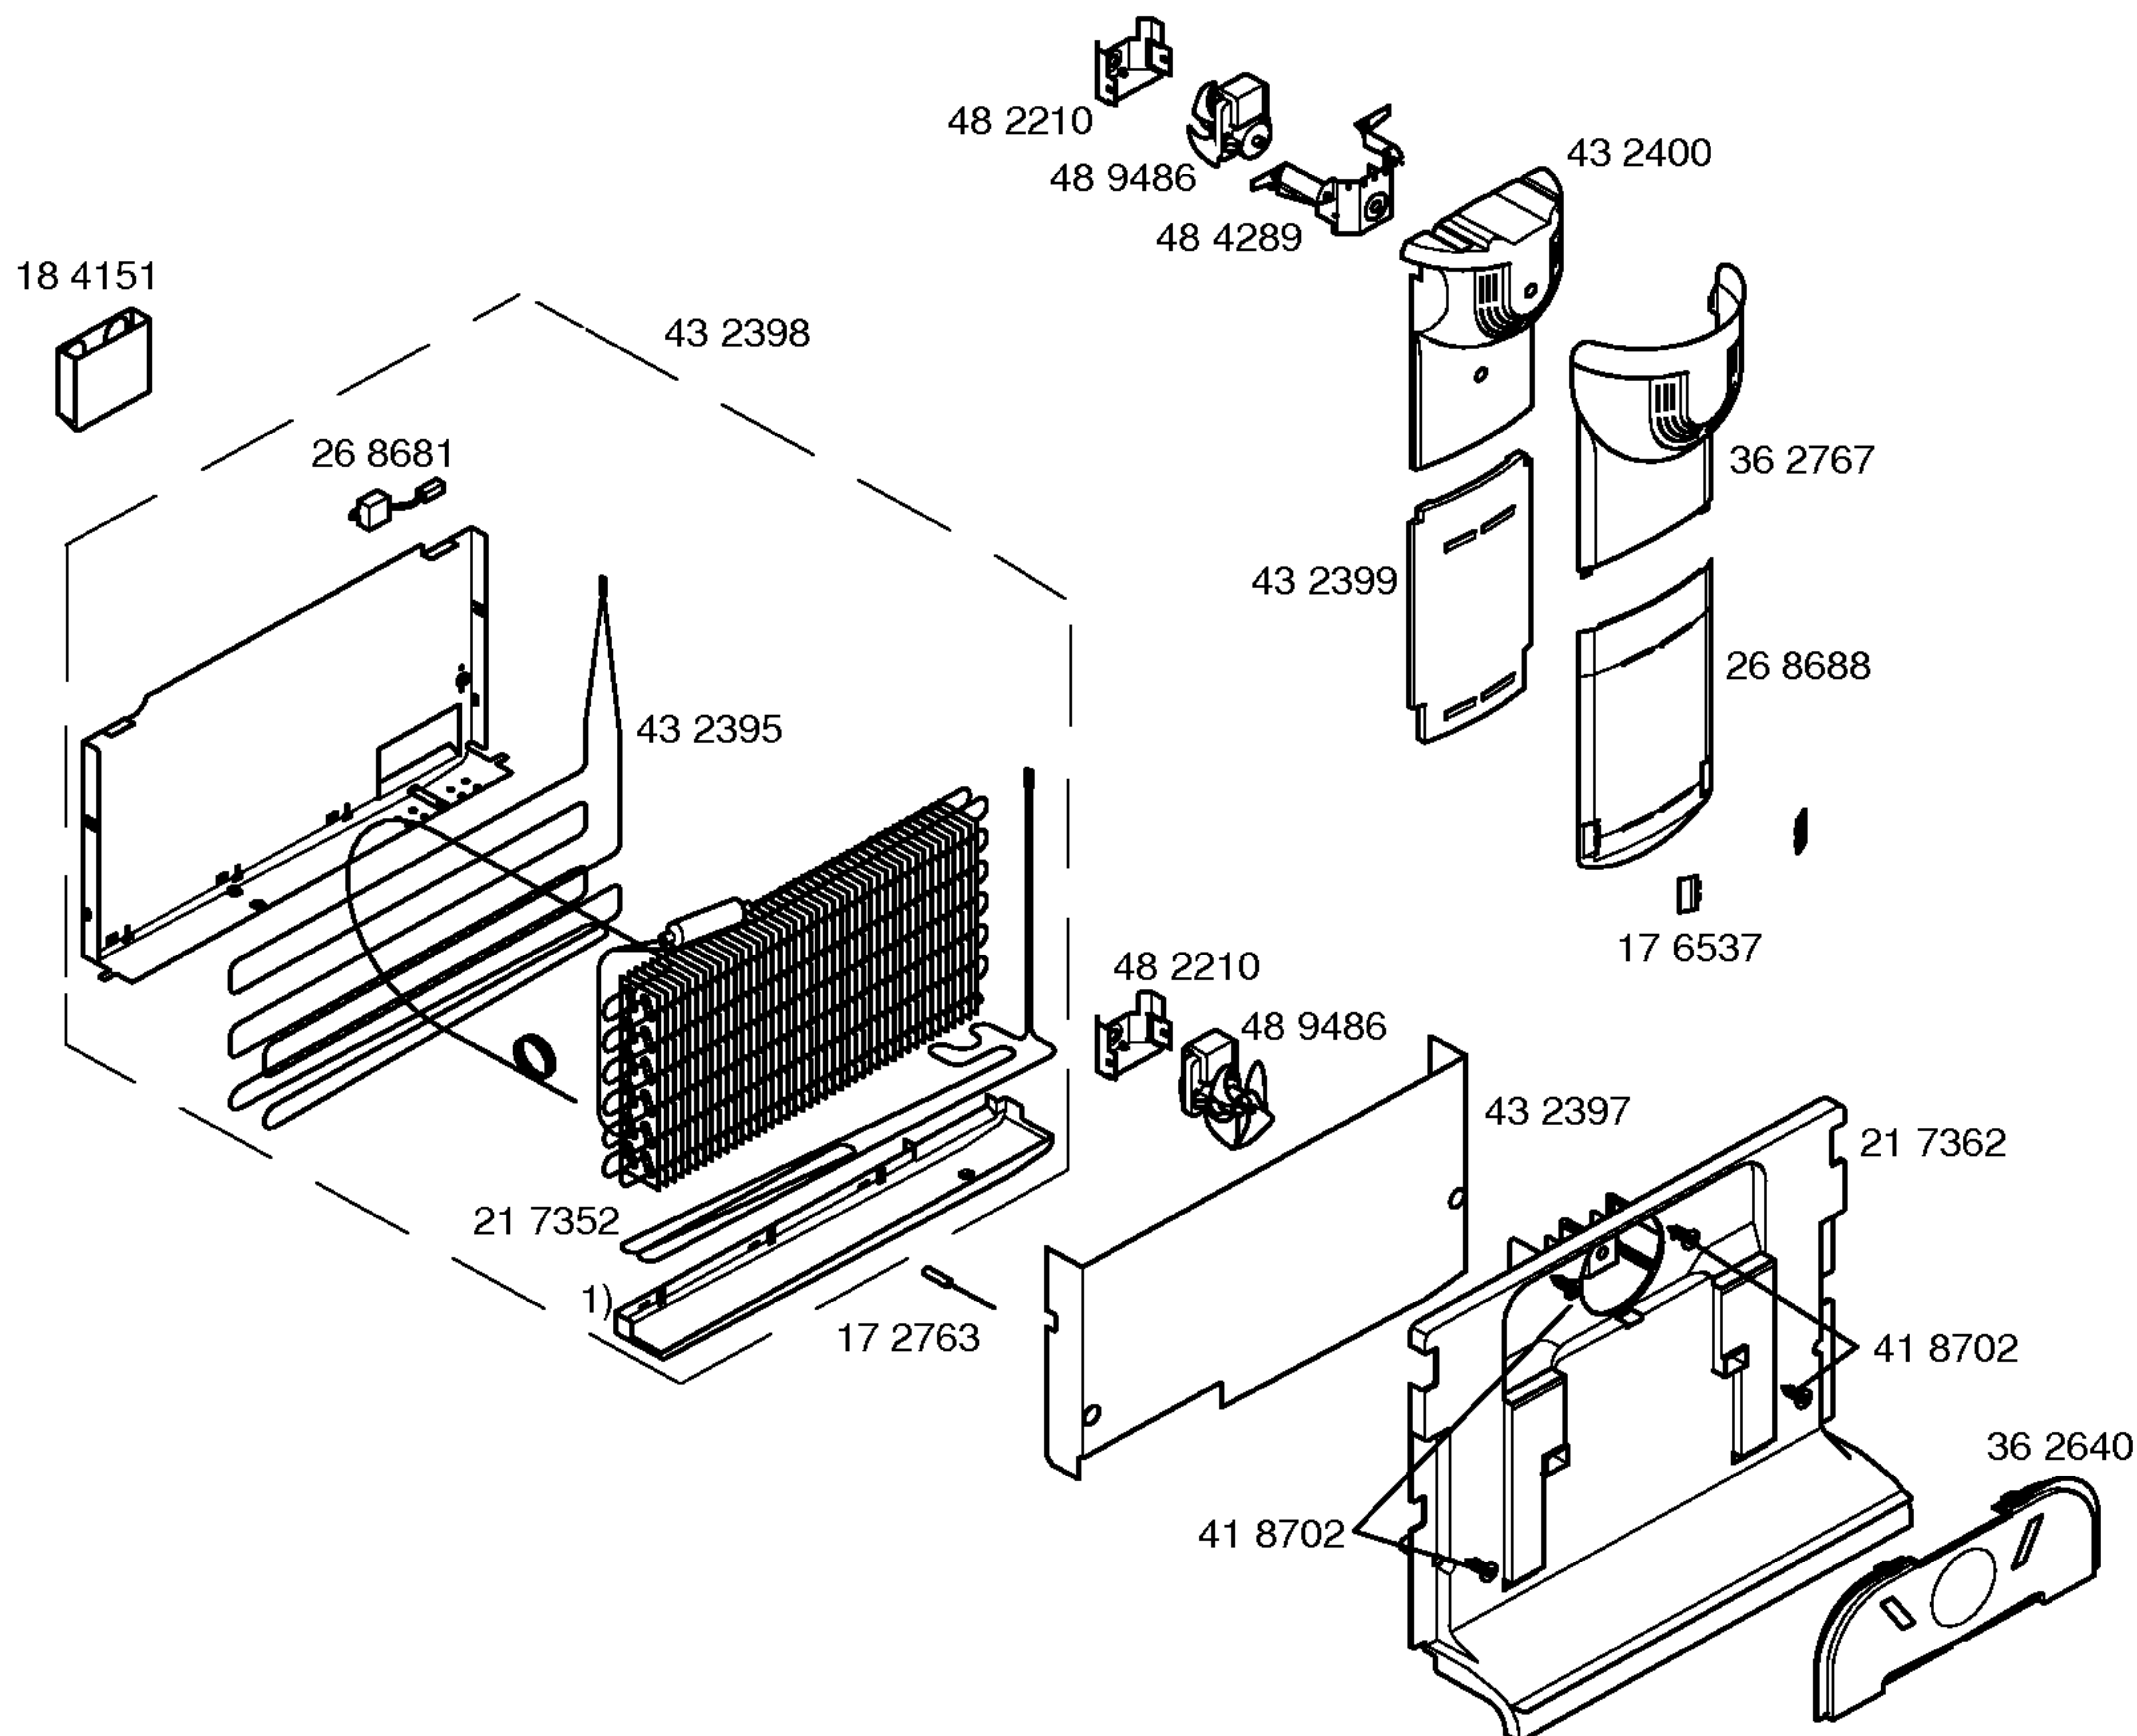

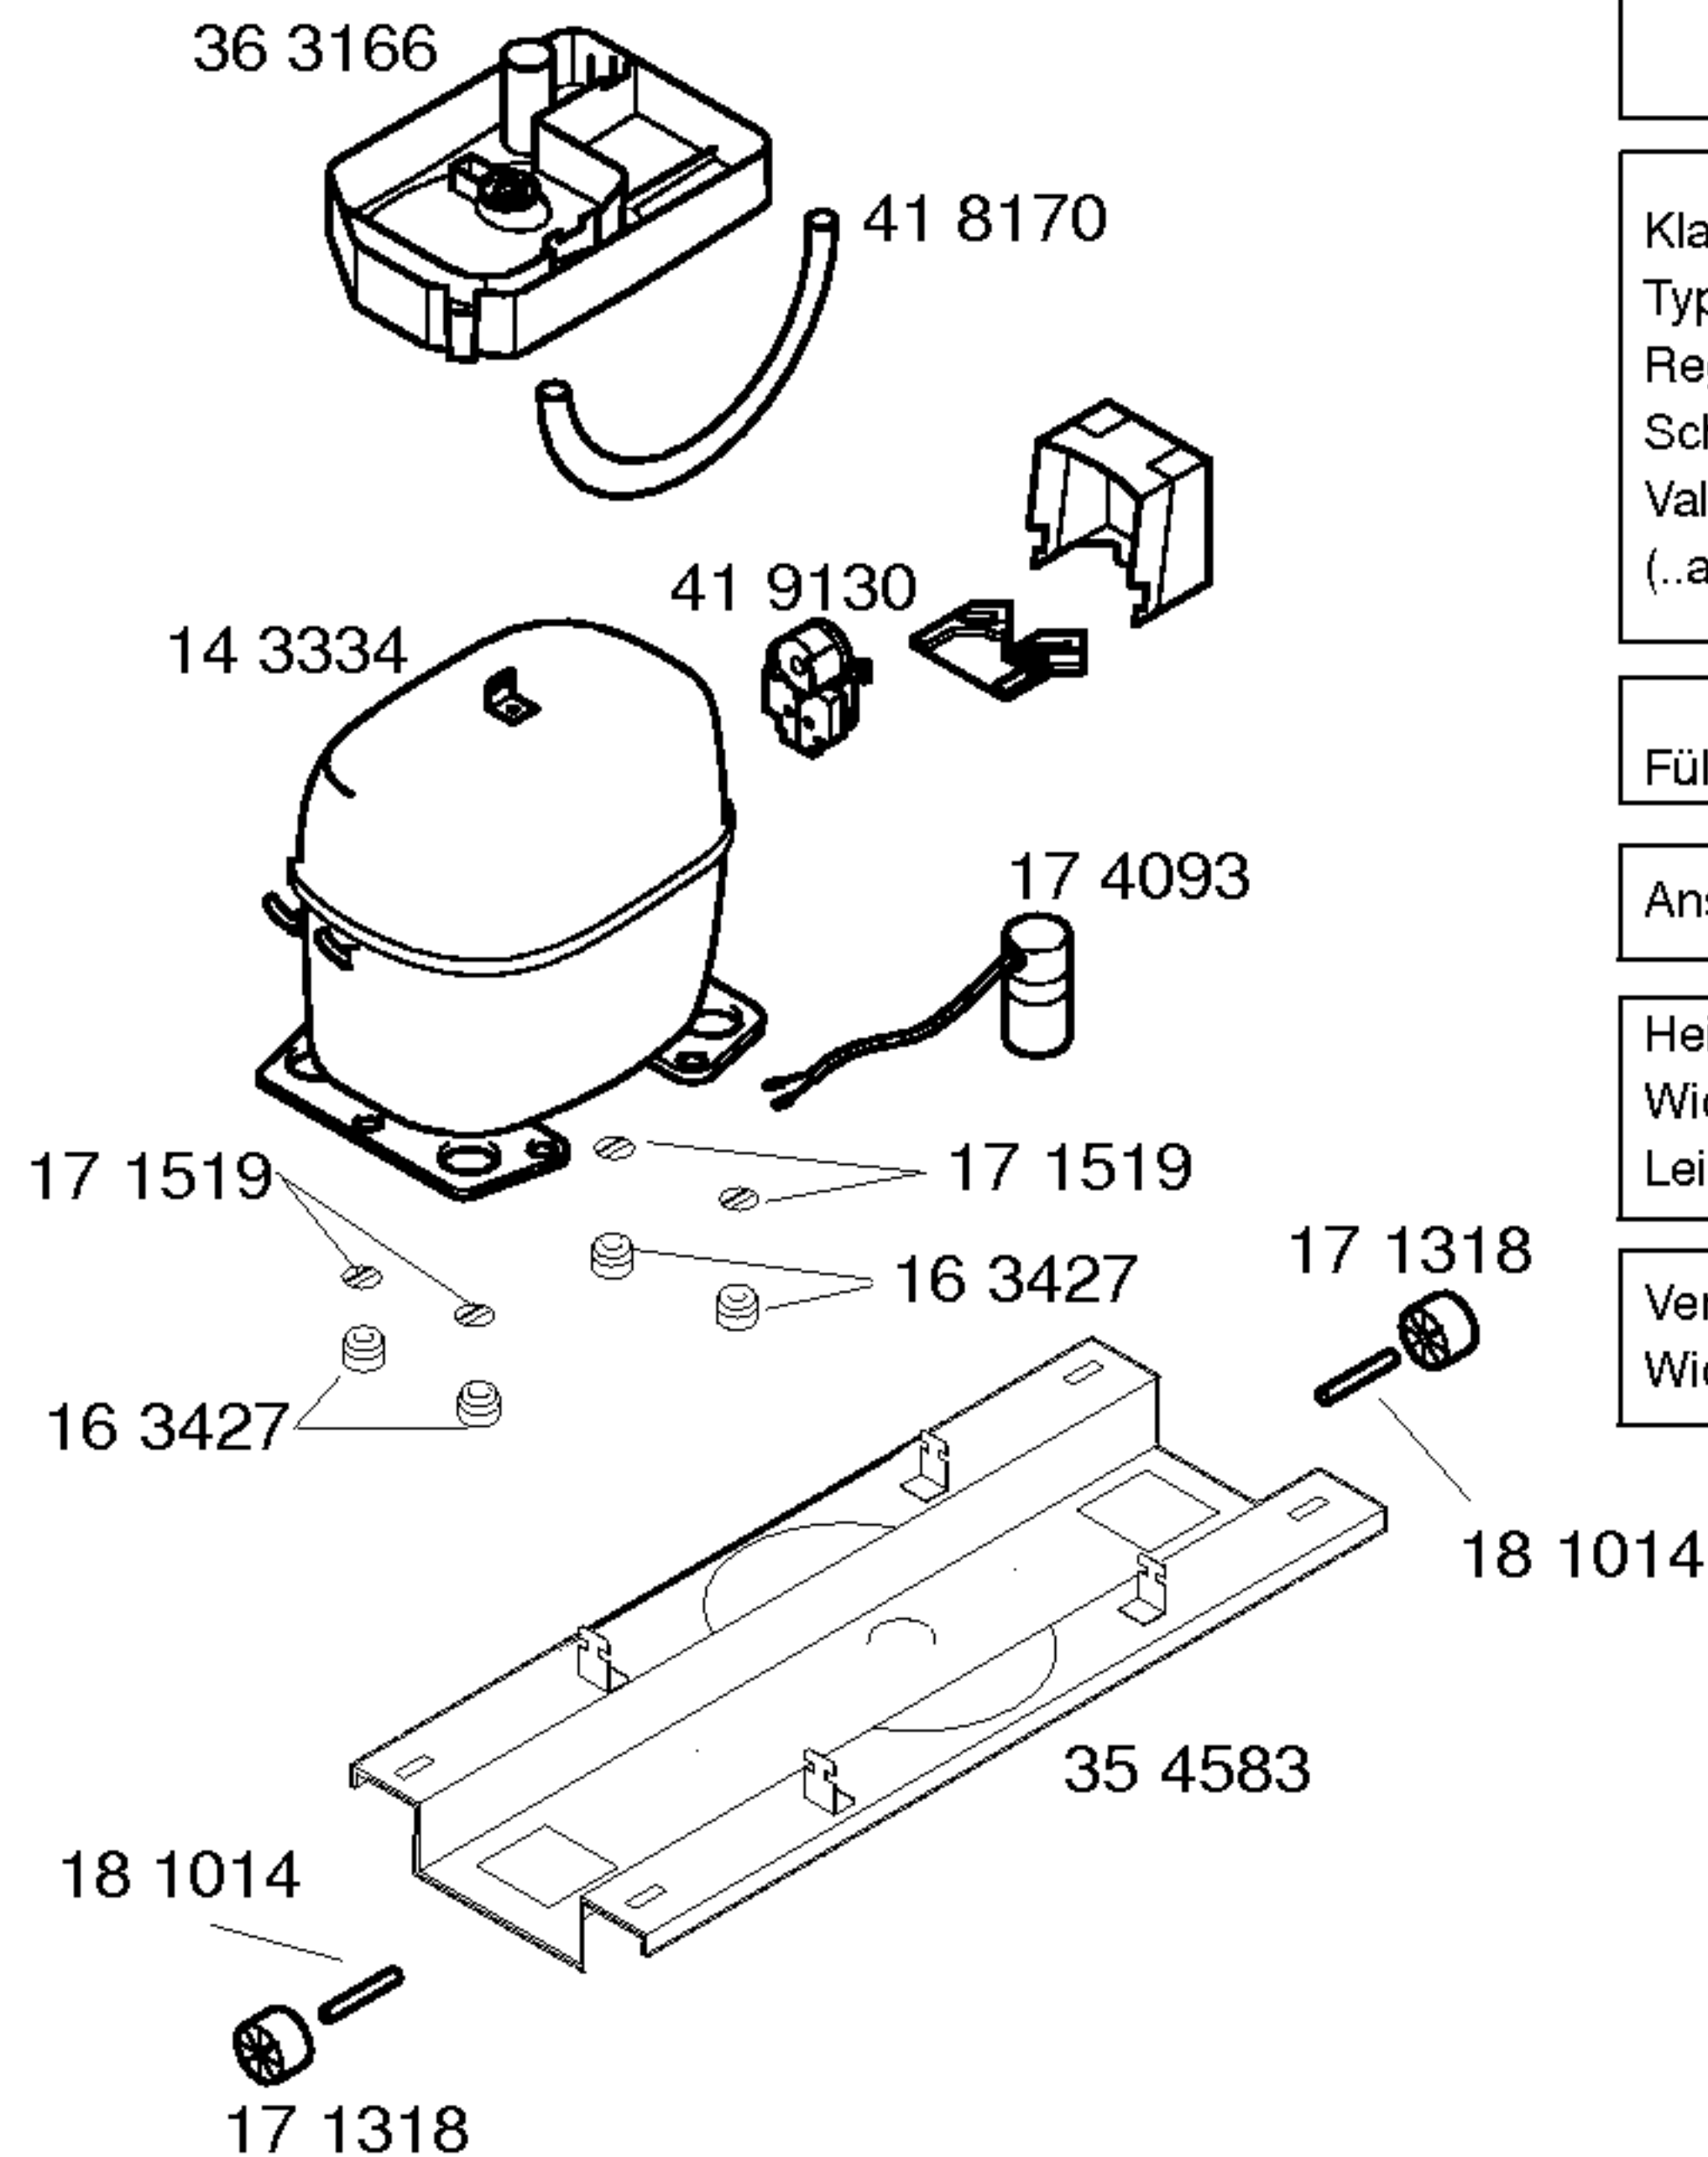

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Aspera NBT1118Y		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g	65		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KΩ Leistung/Power/Puissance/Potencia W			4
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KΩ	Verdichter	Verdampfer	

Mat. – Nr. – Konstante
3740