


Libro de instrucciones 51 7462 (E, P, GB, F, NL, GR)

Instrucciones R600a 51 9240 (D,GB,F,I,NL,DK,N, S,SF,P,GR,E,TR)


Anexo ind. temperatura 52 0758 (D,GB,F,I,NL,E,SF,S,N, DK,P,GR)

- 1) 06 7746
- 2) 03 3055



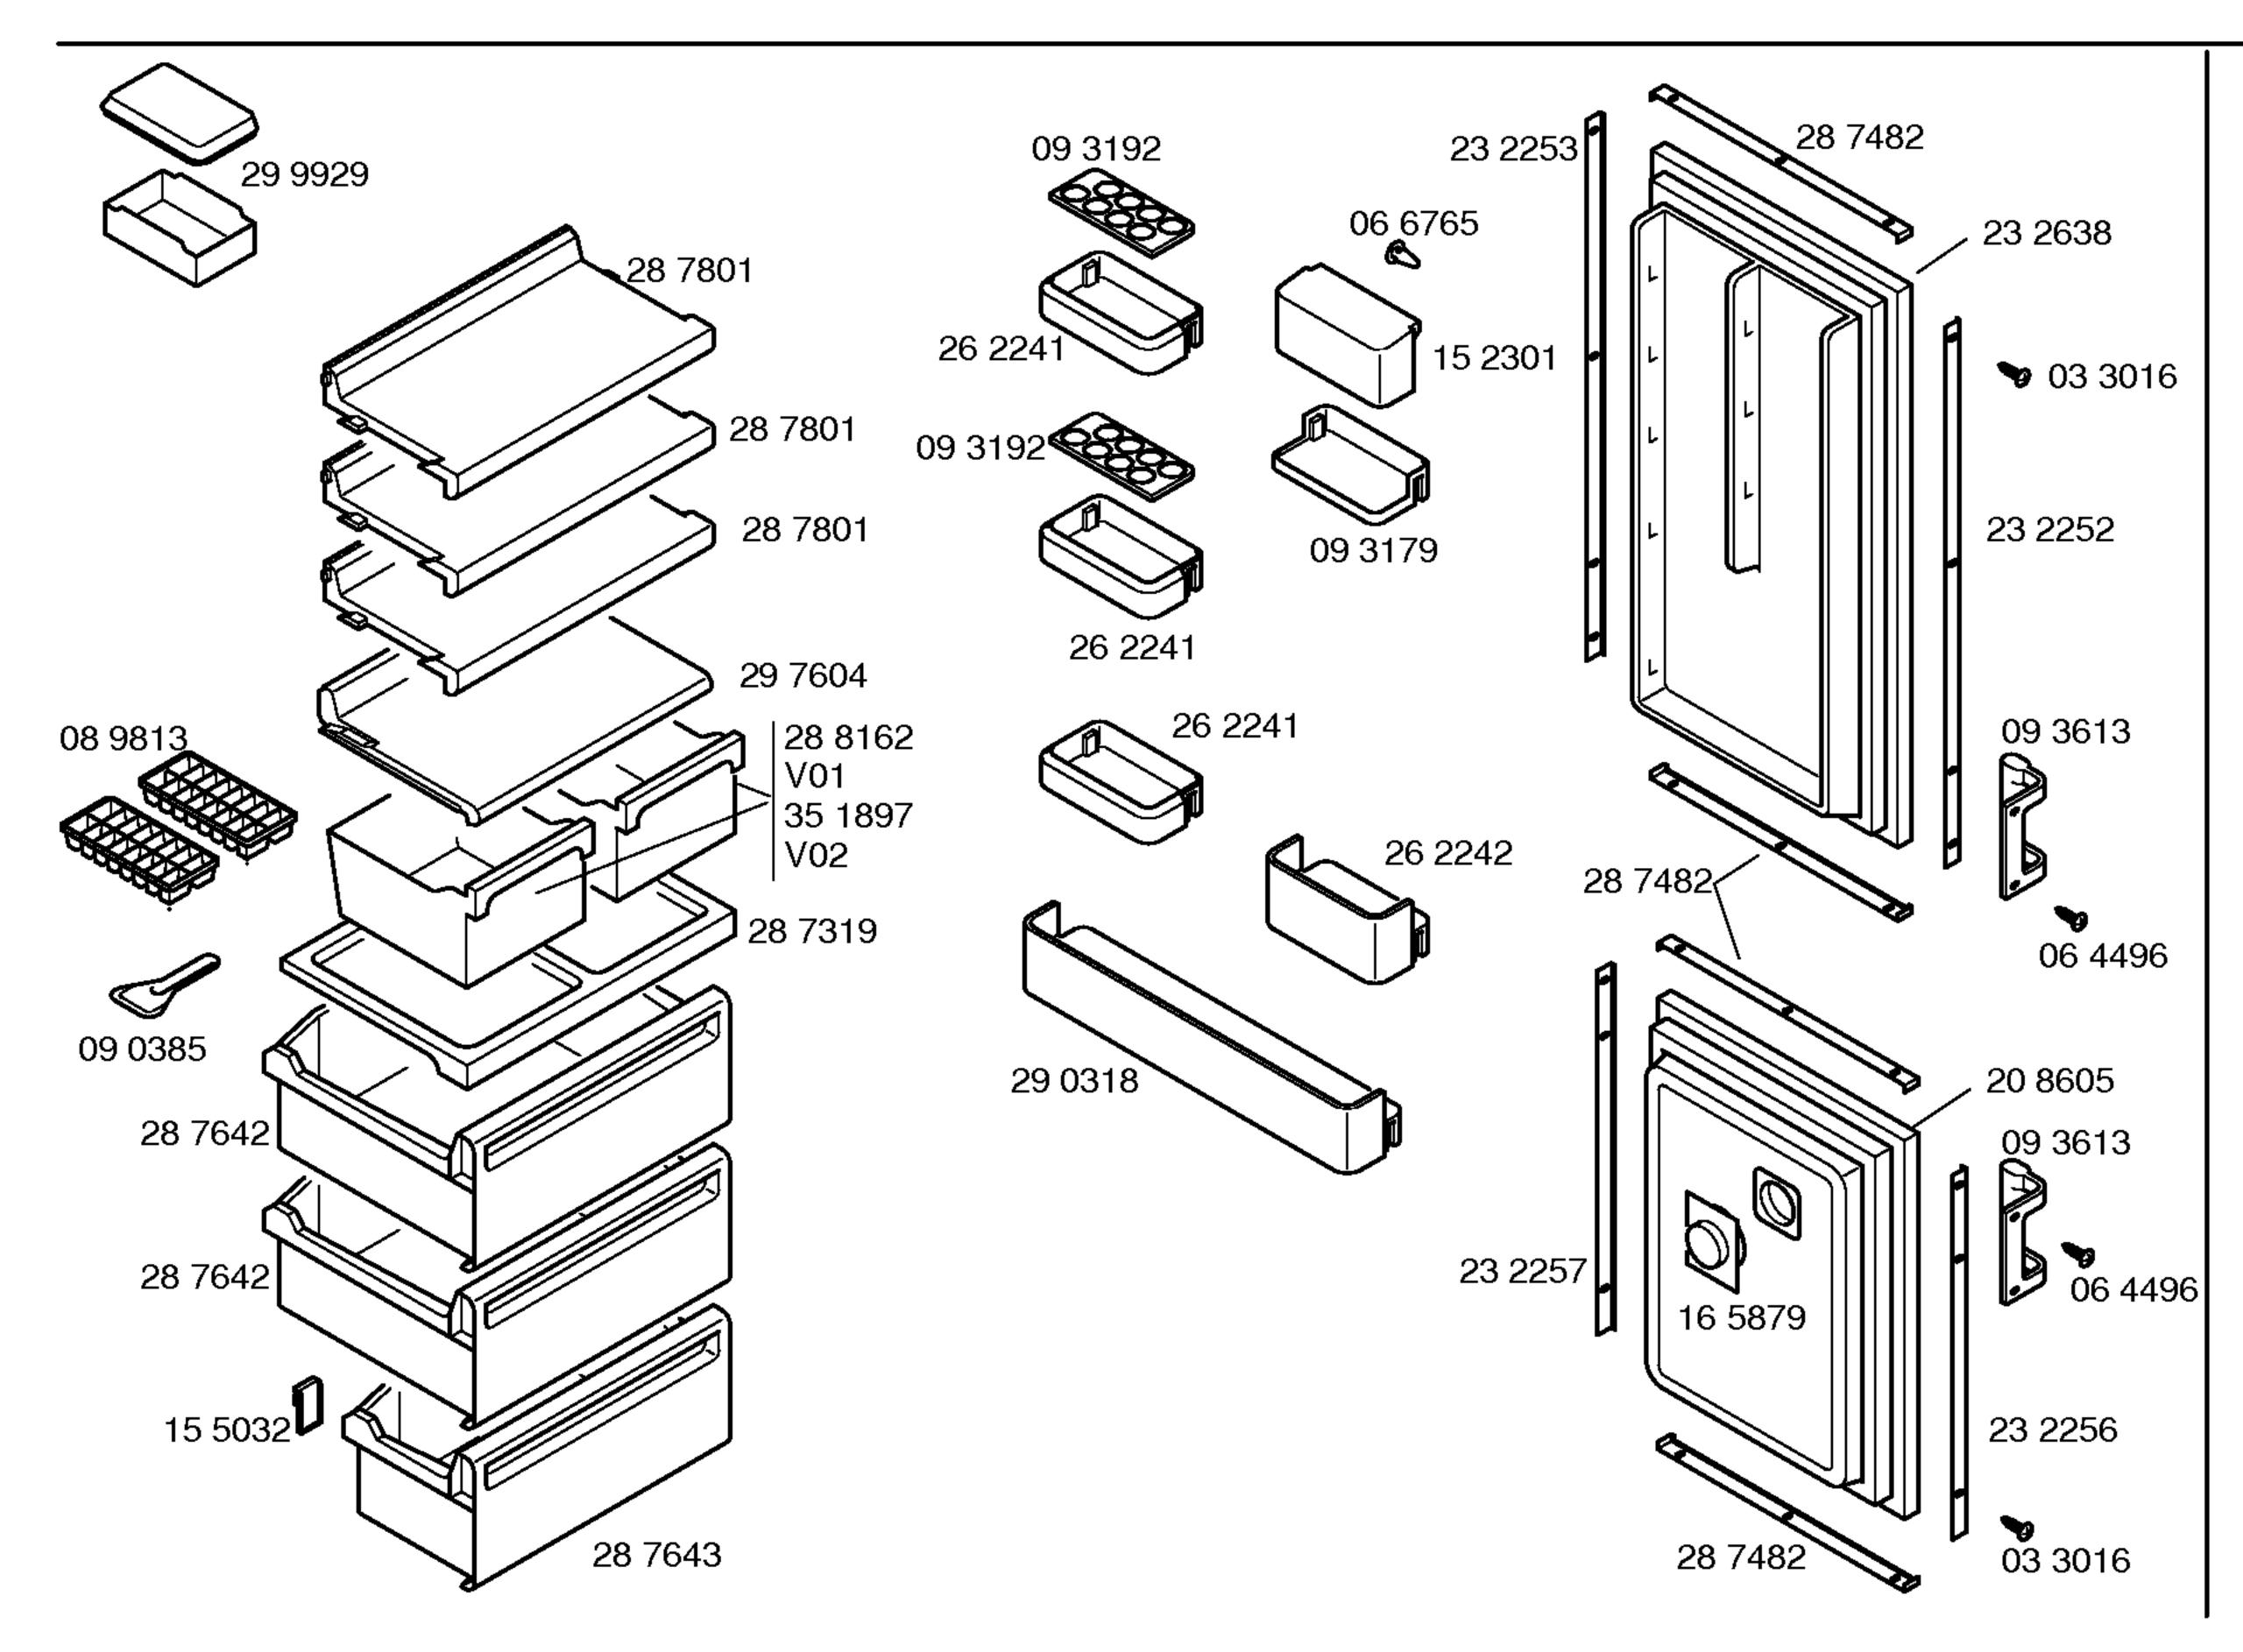



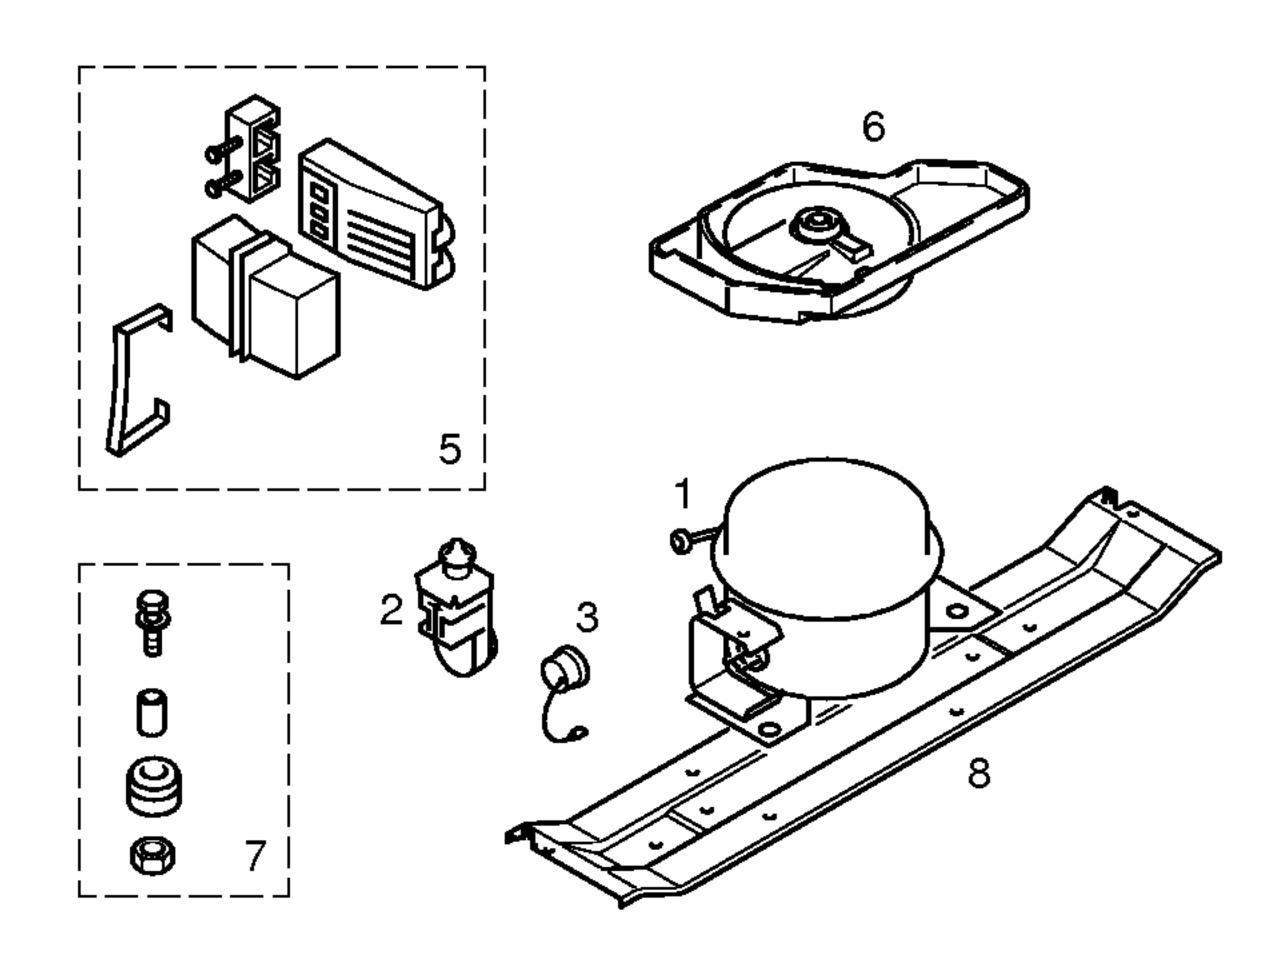

Pos.		***	
	Aspera	Aspera	
	BMP1084Y	BMP1110Y	
1	14 1723	14 1605	
2	15 4315	15 4315	
3	16 7769	16 5230	
4			
5			
6	26 4123		
7	05 0166	05 0166	
8	28 0162	28 0162	
9			
10			
11			
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNICUES/DATOS TECNICOS								

Verdichter/Compressor/Compresseur/Compresor	Aspera	Aspera						
Typ/Type/Tipo	BMP1084Y	BMP1110Y						
Förderleistung/Delivery/Debit/Aspiración I/h								
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A	3,60							
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	29,60	24,70						
Hi/aux.	38,50	37,65						
Temp.Reyler/Thermostat/Termostato	Ranco	Ranco						
Typ/Type/Tipo	K59-L6045	K54-L1940						
Reglerstellung/Position/Conexión	MIN. MAX.	MIN. MAX.						
Schaltwerte/Switching values/ein/conex.ºC	+6º	-14º -22º						
Valeurs de commutation/Desconexaus"/descon.	-14º -28º	–20º –28º						
(abtaven' od)alarm'		–10º –18º						
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*						
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	86						
Heizung/Heater/Chauflage/Resistenc.descong.								
Widerstand/Resistance/Resistencia Ohm								
Leistung/Power/Puissance/Potencia W								
Ventilador/Blower/Ventilateur/Ventilador								
Widerstand/Resistance/Resistencia Ohm								
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula								
Widerstand/Resistance/Resistencia Ohm								
Spannung/Voltage/Tension/Tensión V								
Temp.Reyler/Thermostat/Termostato ambiente para								
ventilador refrigerador								

^{*} Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques /Ver plaqueta de características