


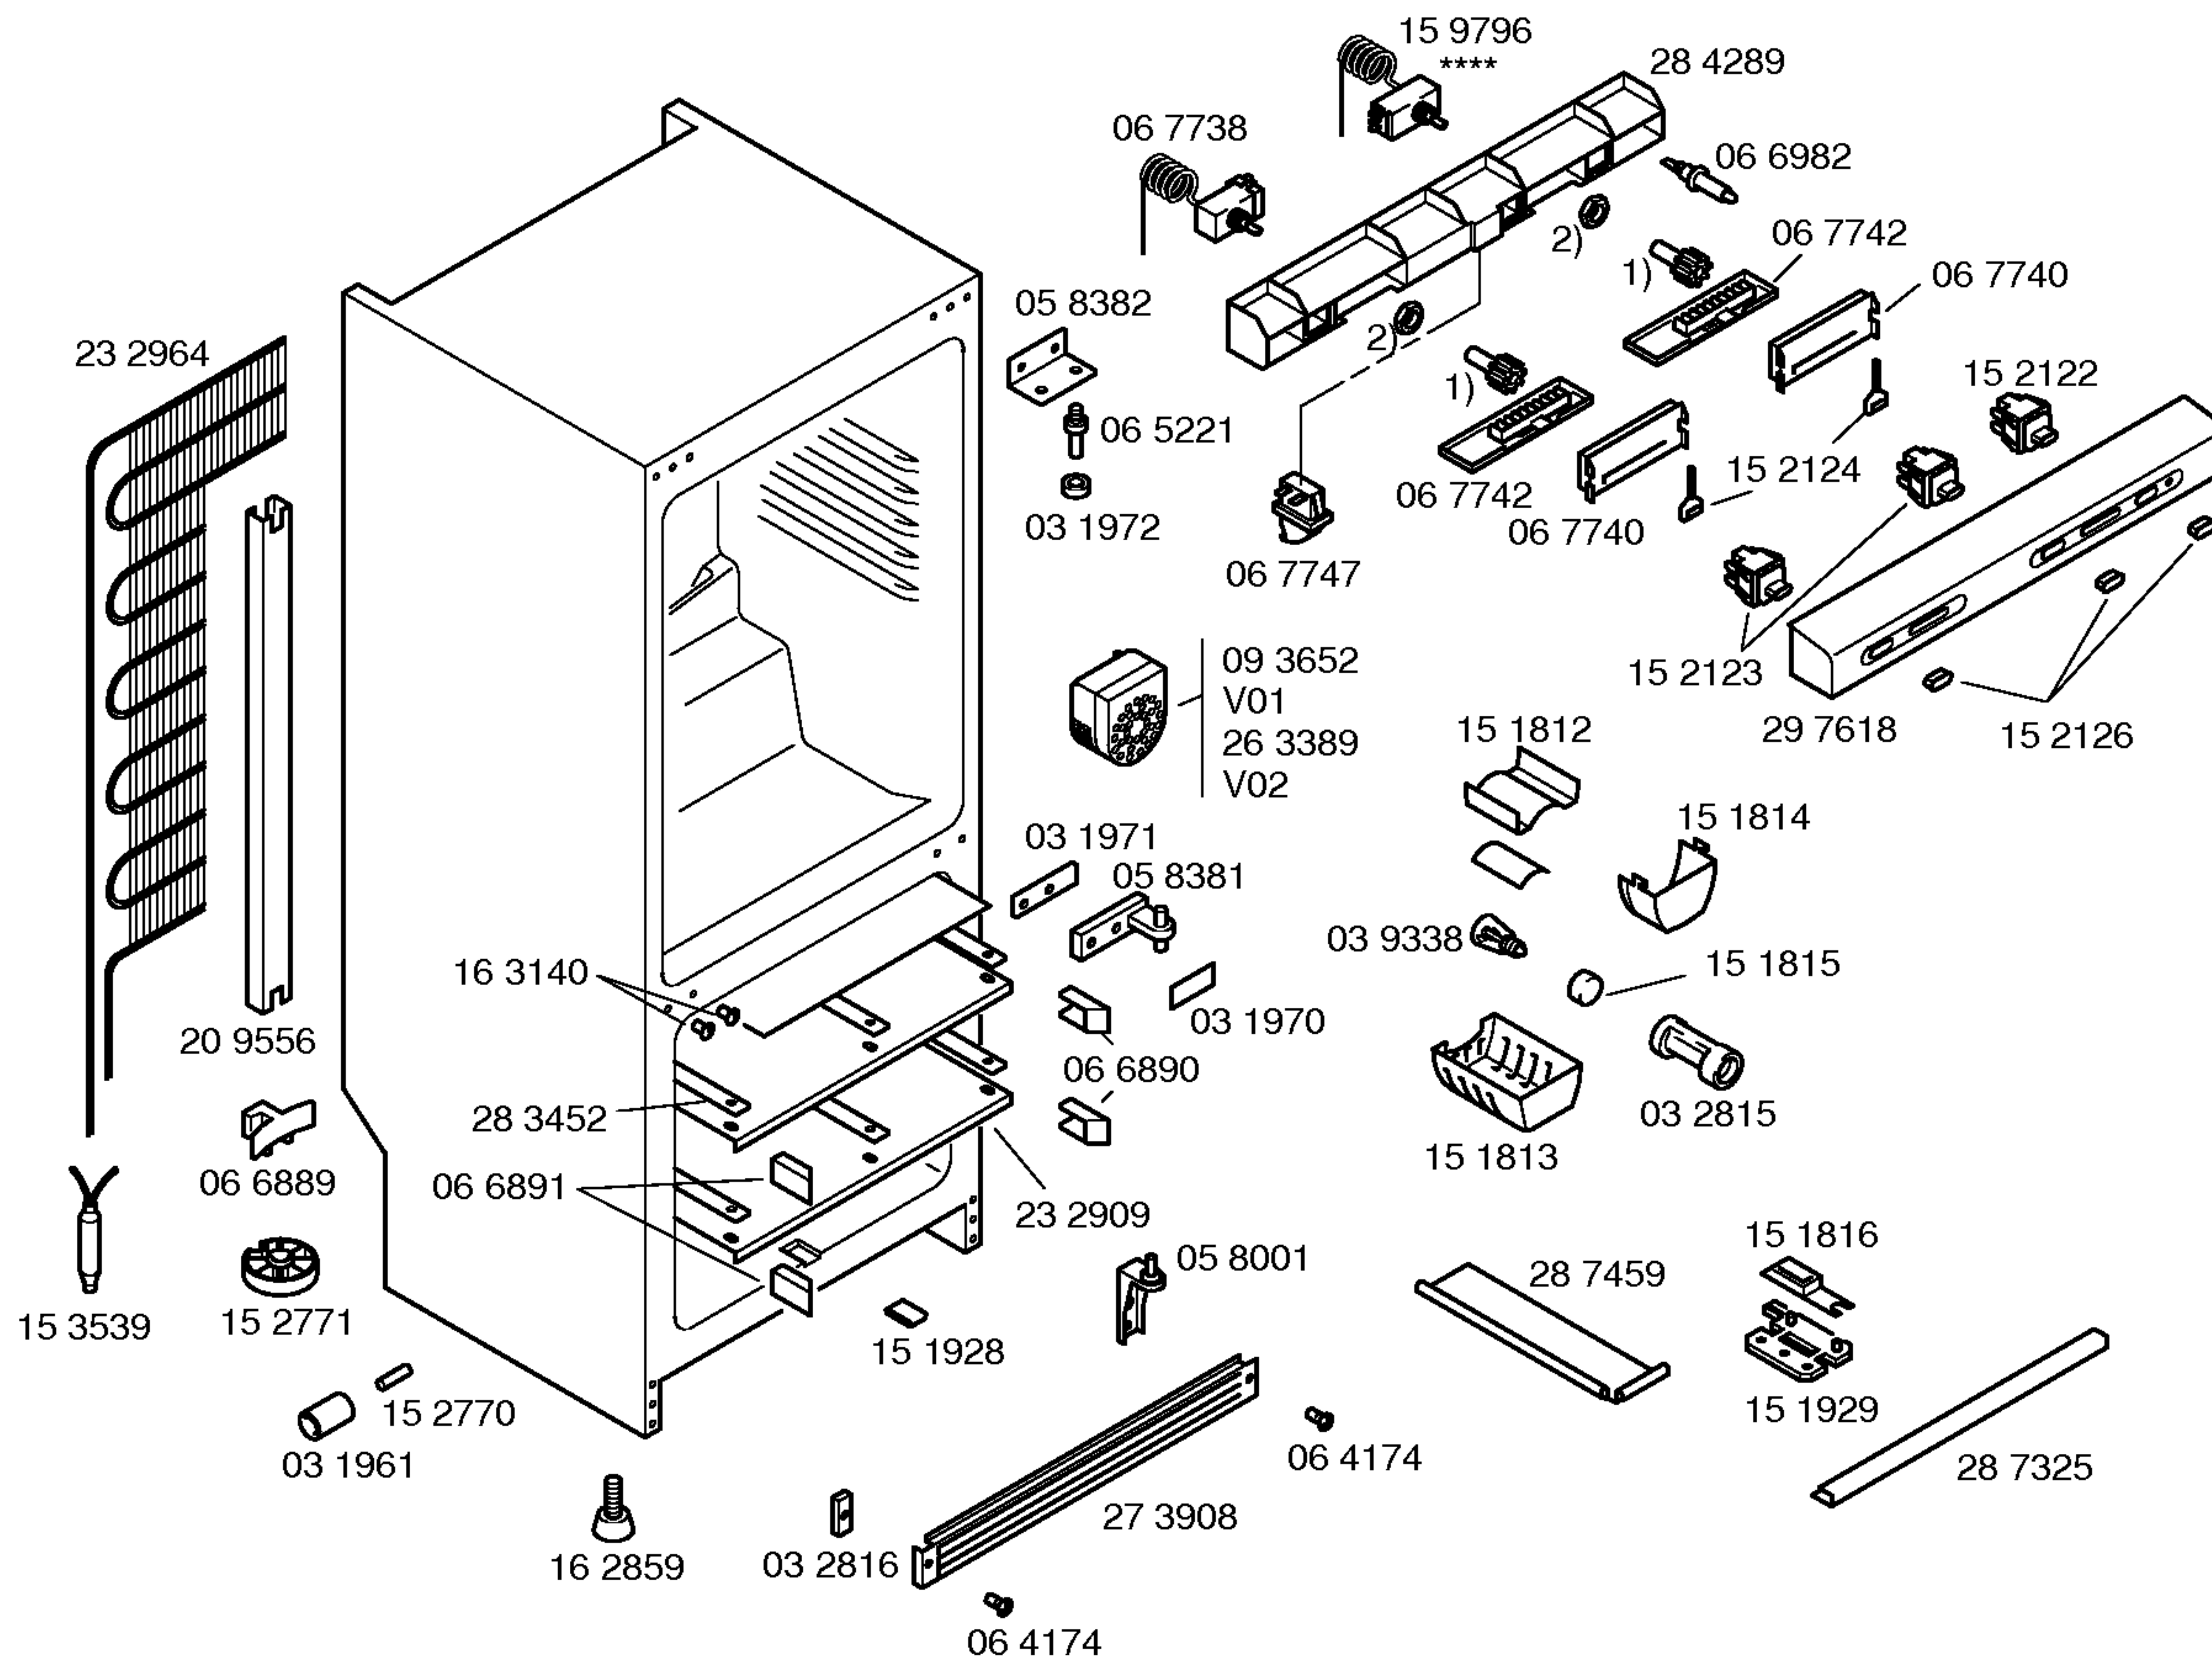


Libro de instrucciones
51 7462
(E, P, GB, F, NL, GR)


Libro de instrucciones
del dispensador
51 6722
(E, P, GB, F, NL, GR)

Instrucciones R600a
51 9240
(D,GB,F,I,NL,DK,N,
S,SF,P,GR,E,TR)

1) 06 7746
2) 03 3055

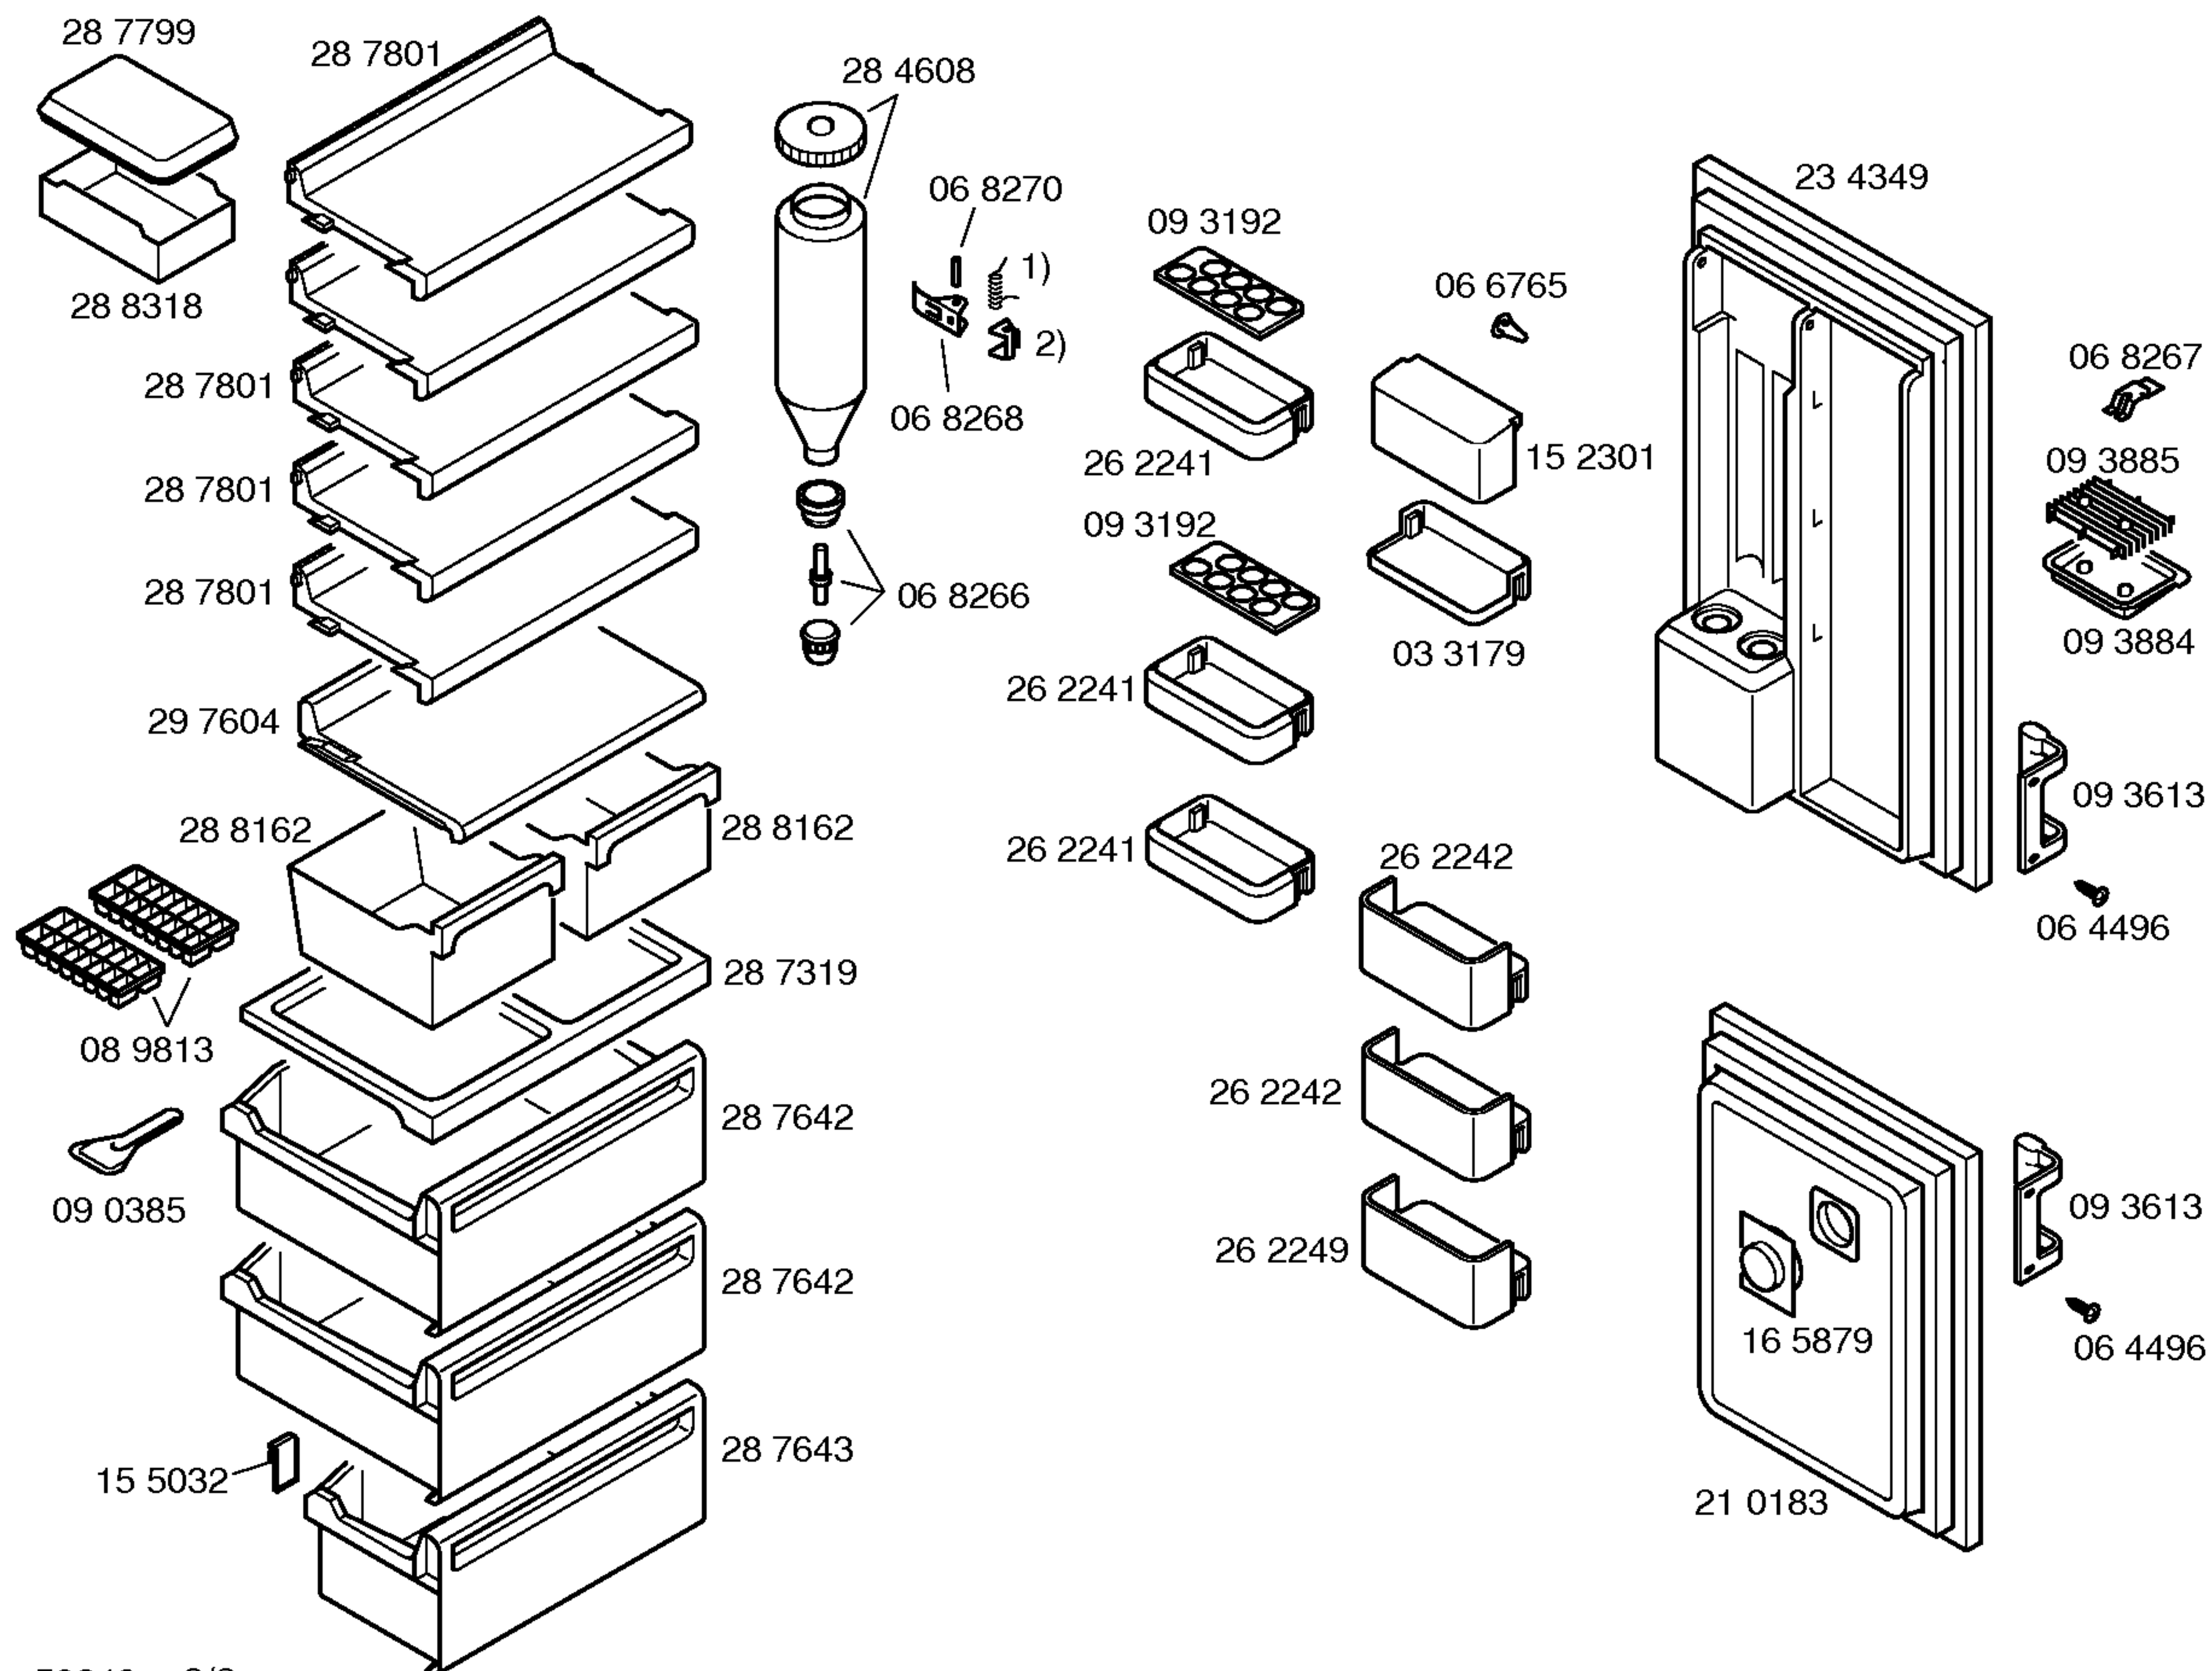

1) 06 8271
2) 06 8269

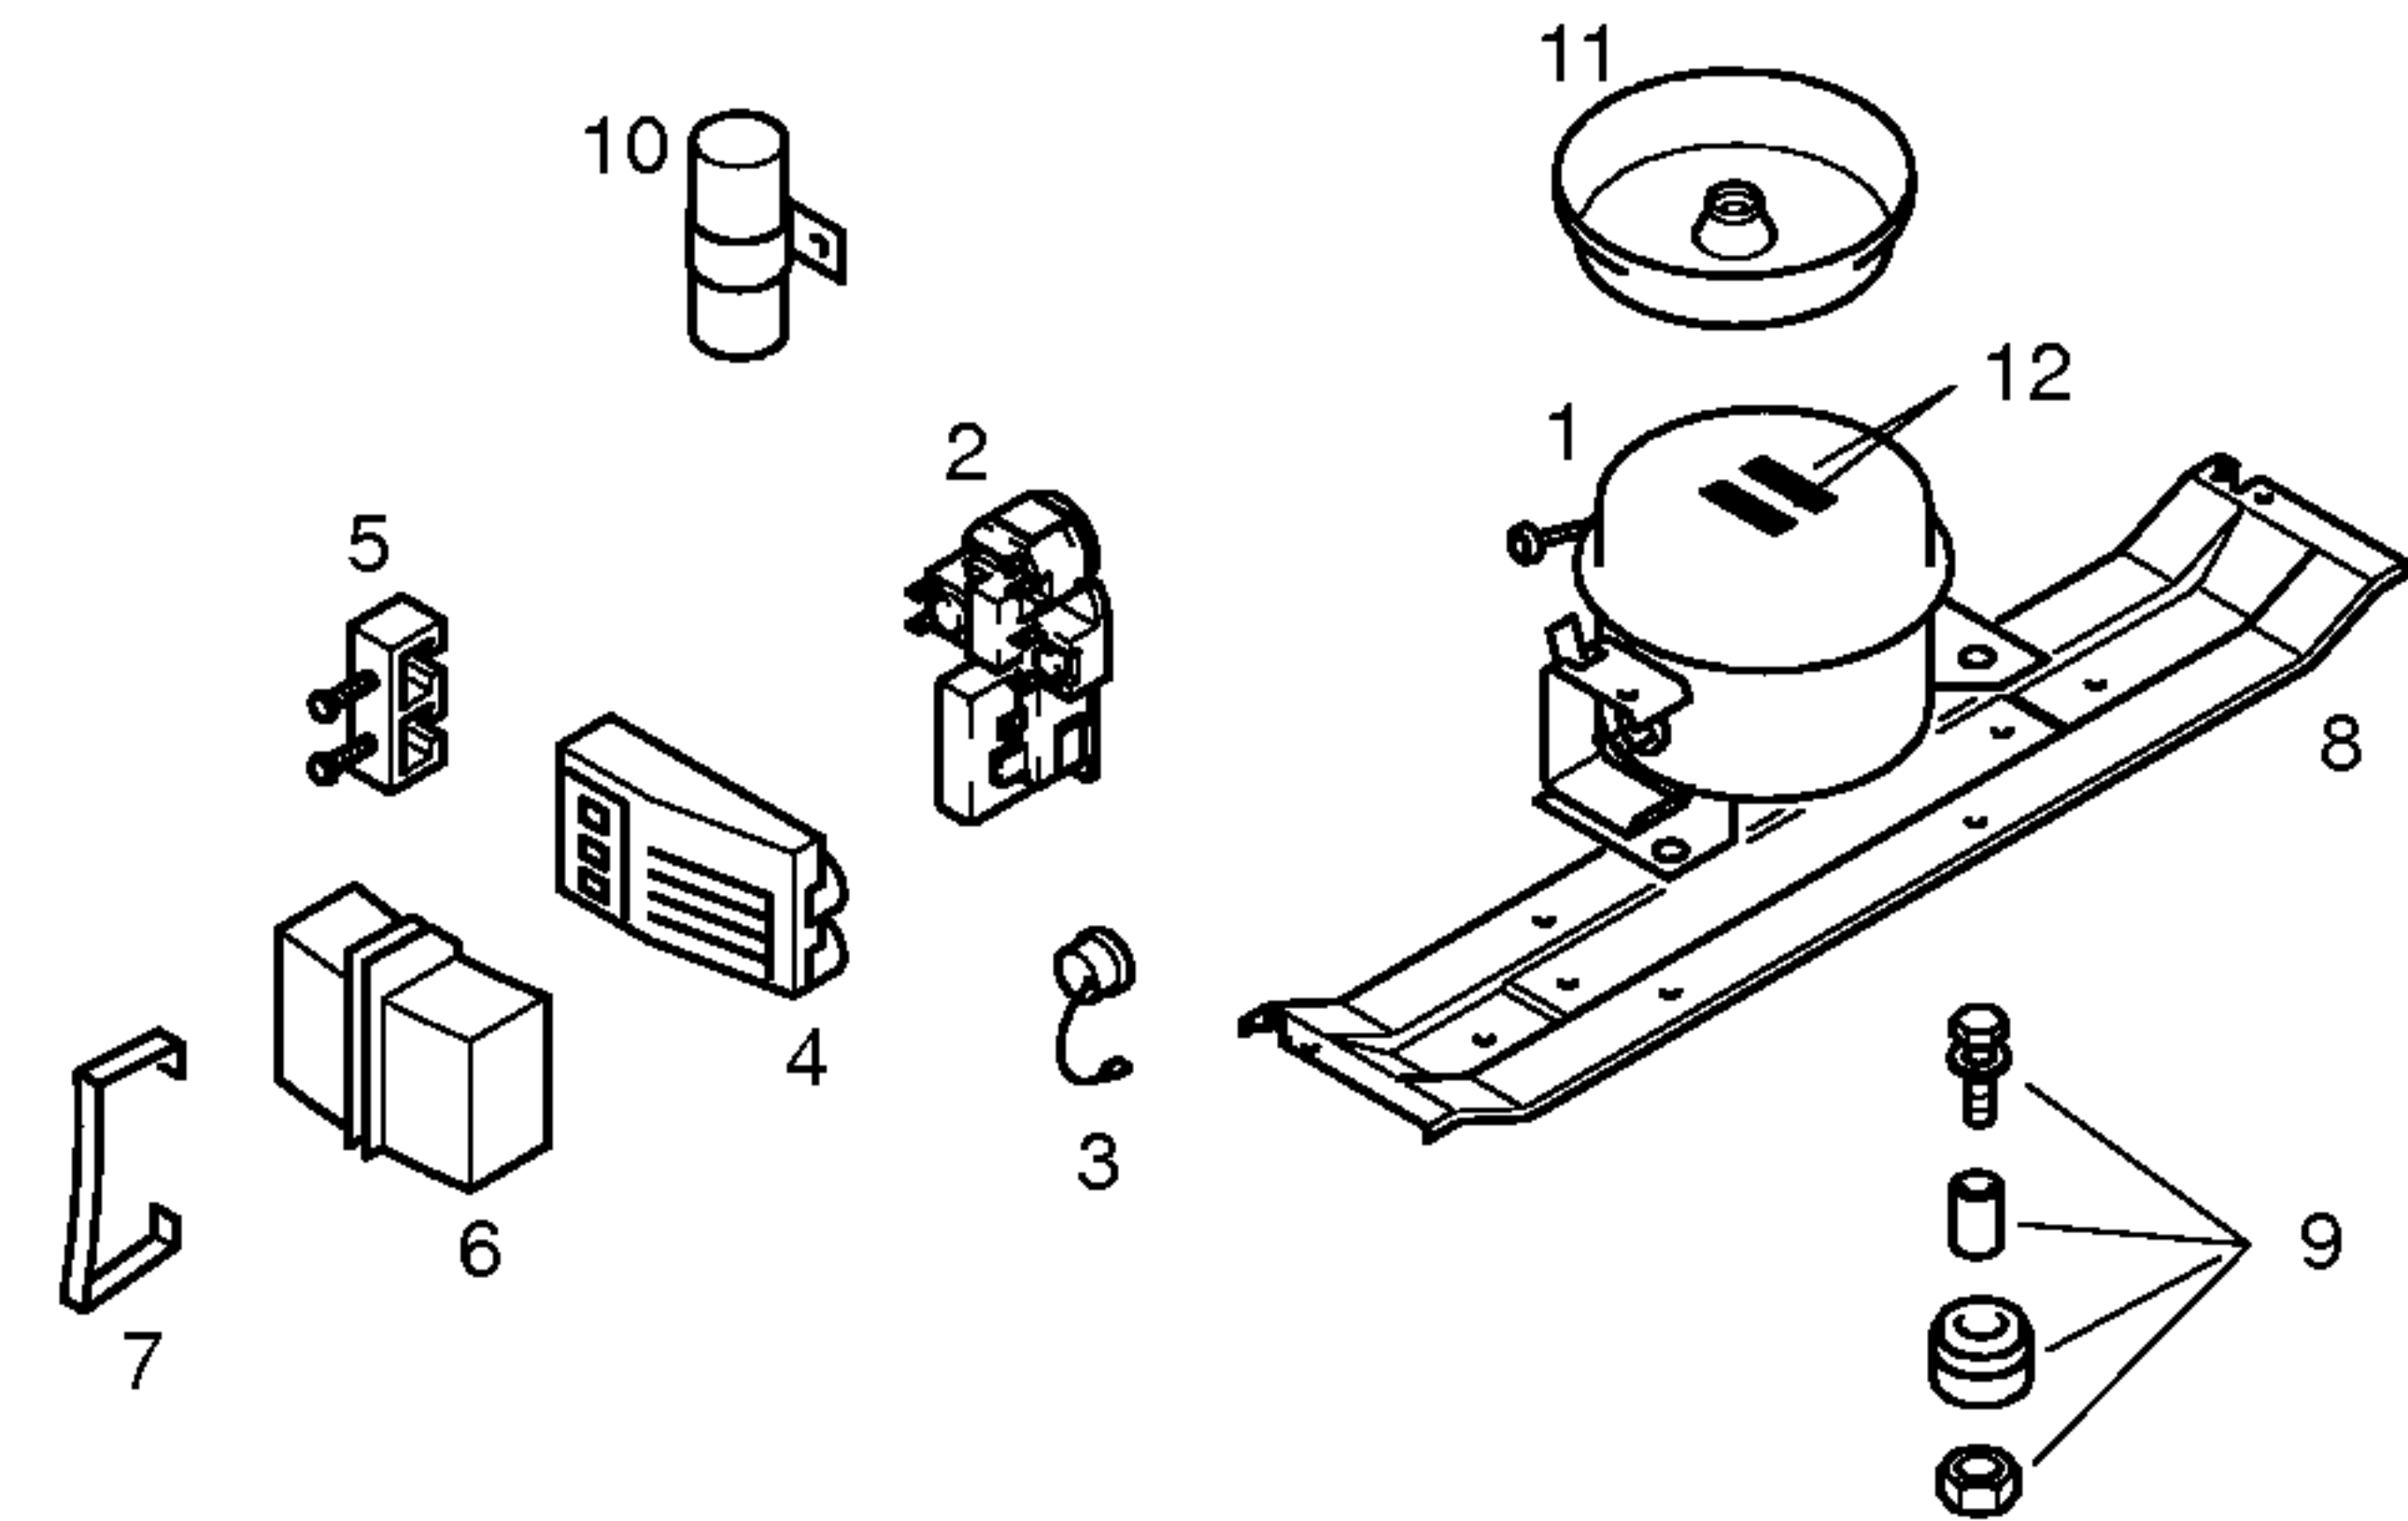

Pos.	Matsushita	Aspera		
	SD65E67WAY5	BPM1110Y		
1	14 1590	14 1605		
2	16 5229	15 4315		
3		16 5230		
4				
5				
6				
7				
8	28 0162	28 0162		
9	05 0166	05 0166		
10				
11	09 5320			
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Typo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita SD65E 29,80 31,80	Aspera BPM1110Y 24,70 37,65	
Temp.Reyler/Thermostat/Termostato Typ/Type/Typo Reglerstellung/Position/Conexión Schaltwerte/Switching values/.. Valeurs de commutation/Desconex.. (..abtaven' od)	Danfoss 077B62 MIN. MAX +6º -13º -28º	Ranco K54-L1941 MIN. MAX -14º -22º -20º -28º -10º -18º	
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	89	86
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			

* Siehe Typenschild/Ver plaqueta de características