



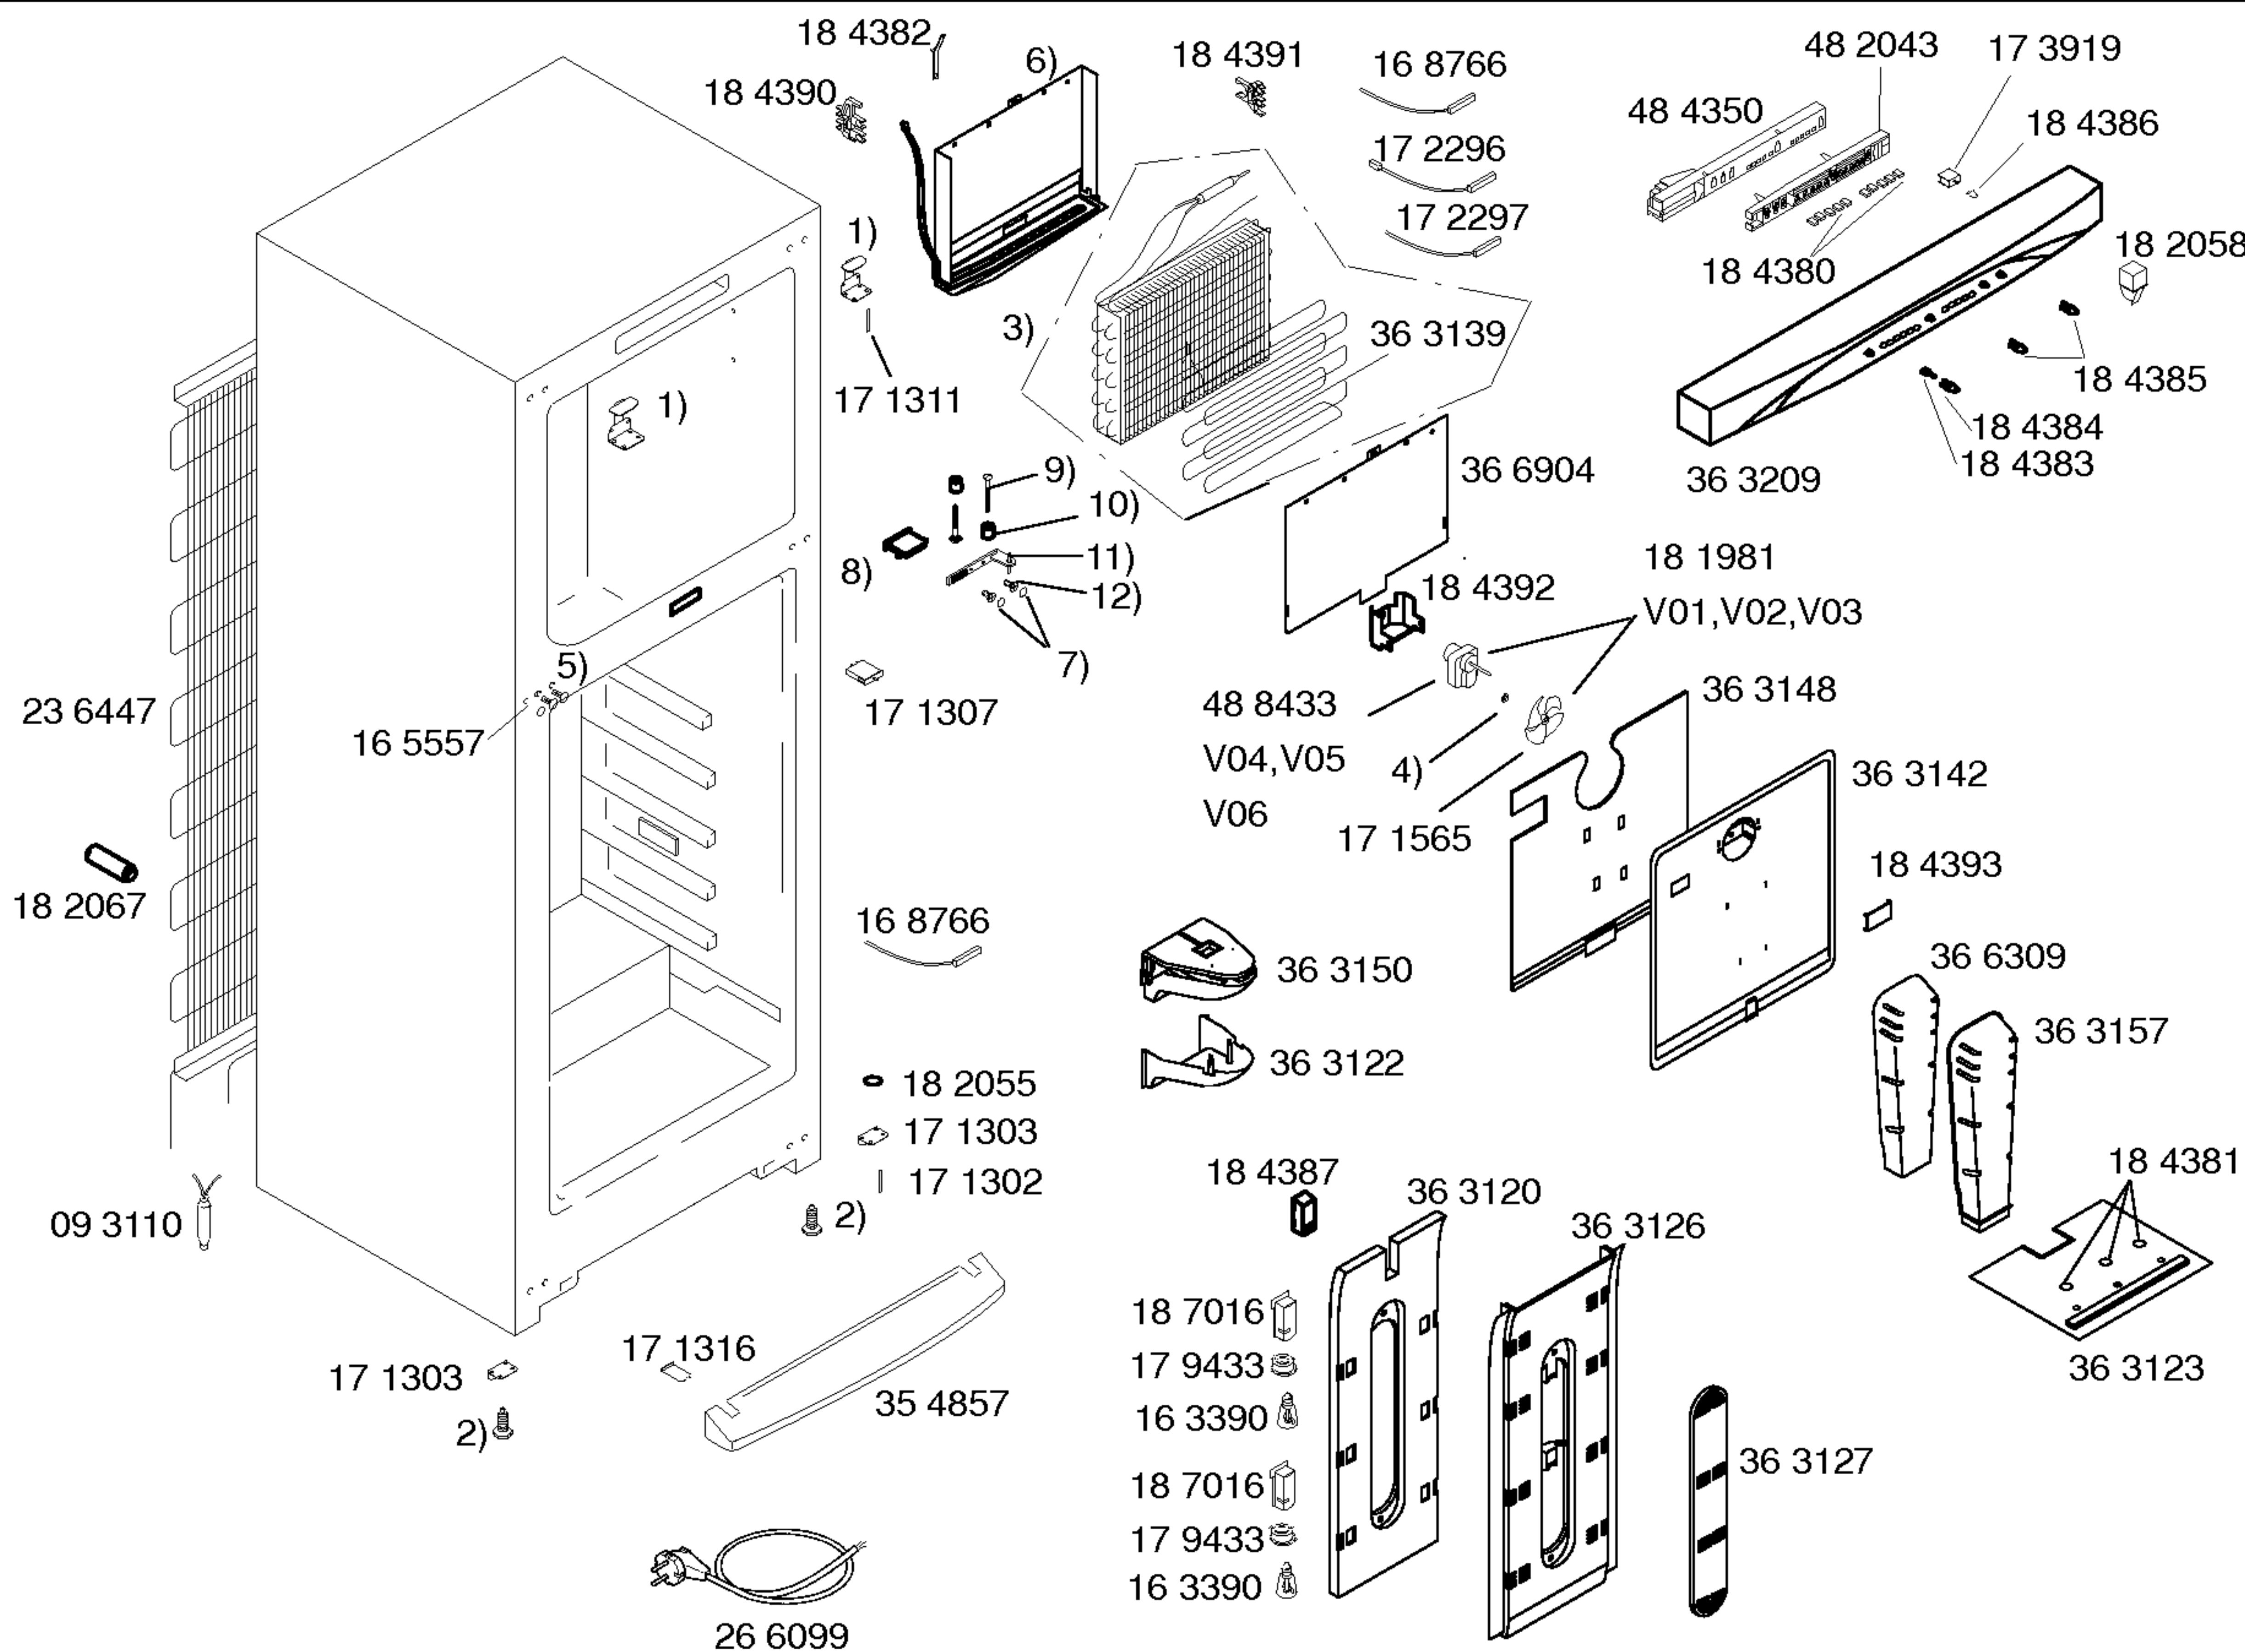


Gebrauchsanweisung
52 9501
(DE,GB,FR,ES,PT)

- 1) 17 1312
2) 17 1304
3) 36 3136
V01,V02
36 9817
V03,V04,V05,V06
4) 17 1508
5) 16 5552
6) 36 3133
V01
36 9510
V02,V03,V04,V05
V06
7) 17 6137
8) 18 8197
9) 18 8194
10) 18 8188
11) 18 8191
12) 18 8196
13) 36 3139
V01,V02
36 9821
V03,V04,V05,V06

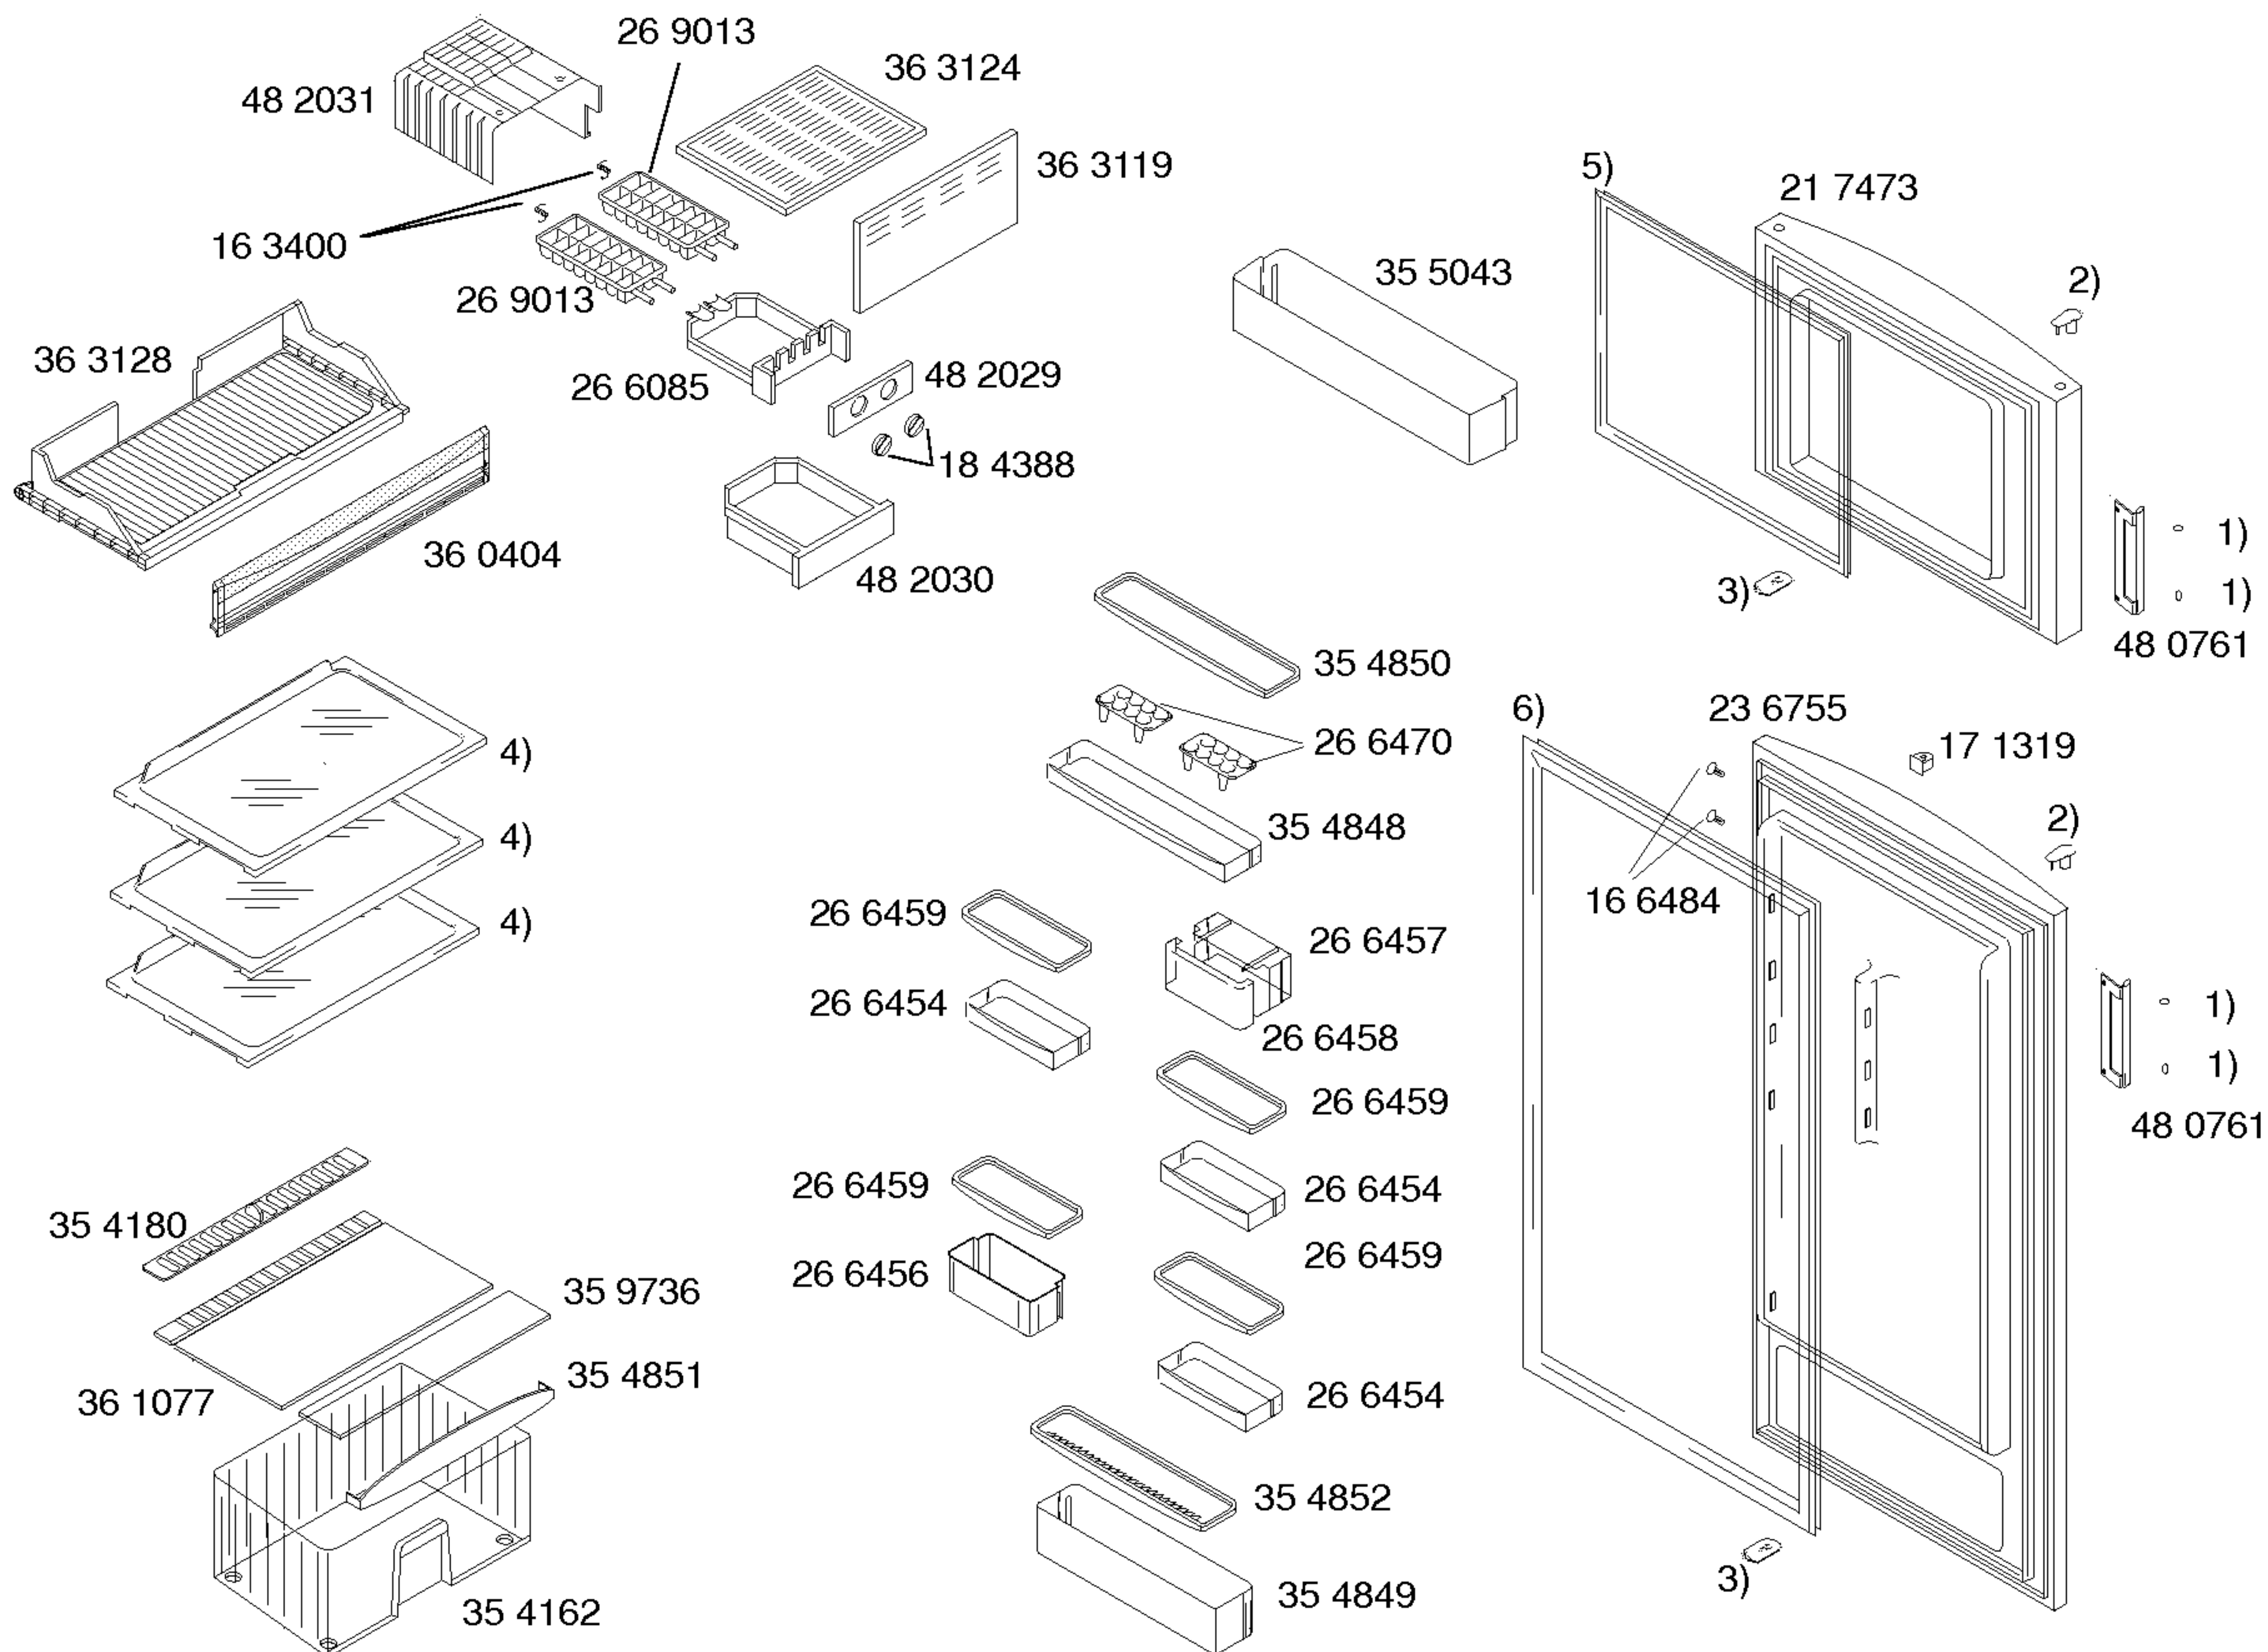

- 1) 16 5557
- 2) 17 1321
- 3) 17 1506
- 4) 36 3129
- 5) 21 6863
- V01,V02,V03,V04
- V05
- 21 8854
- V06
- 6) 23 6355
- V01,V02,V03,V04
- V05
- 23 8422
- V06

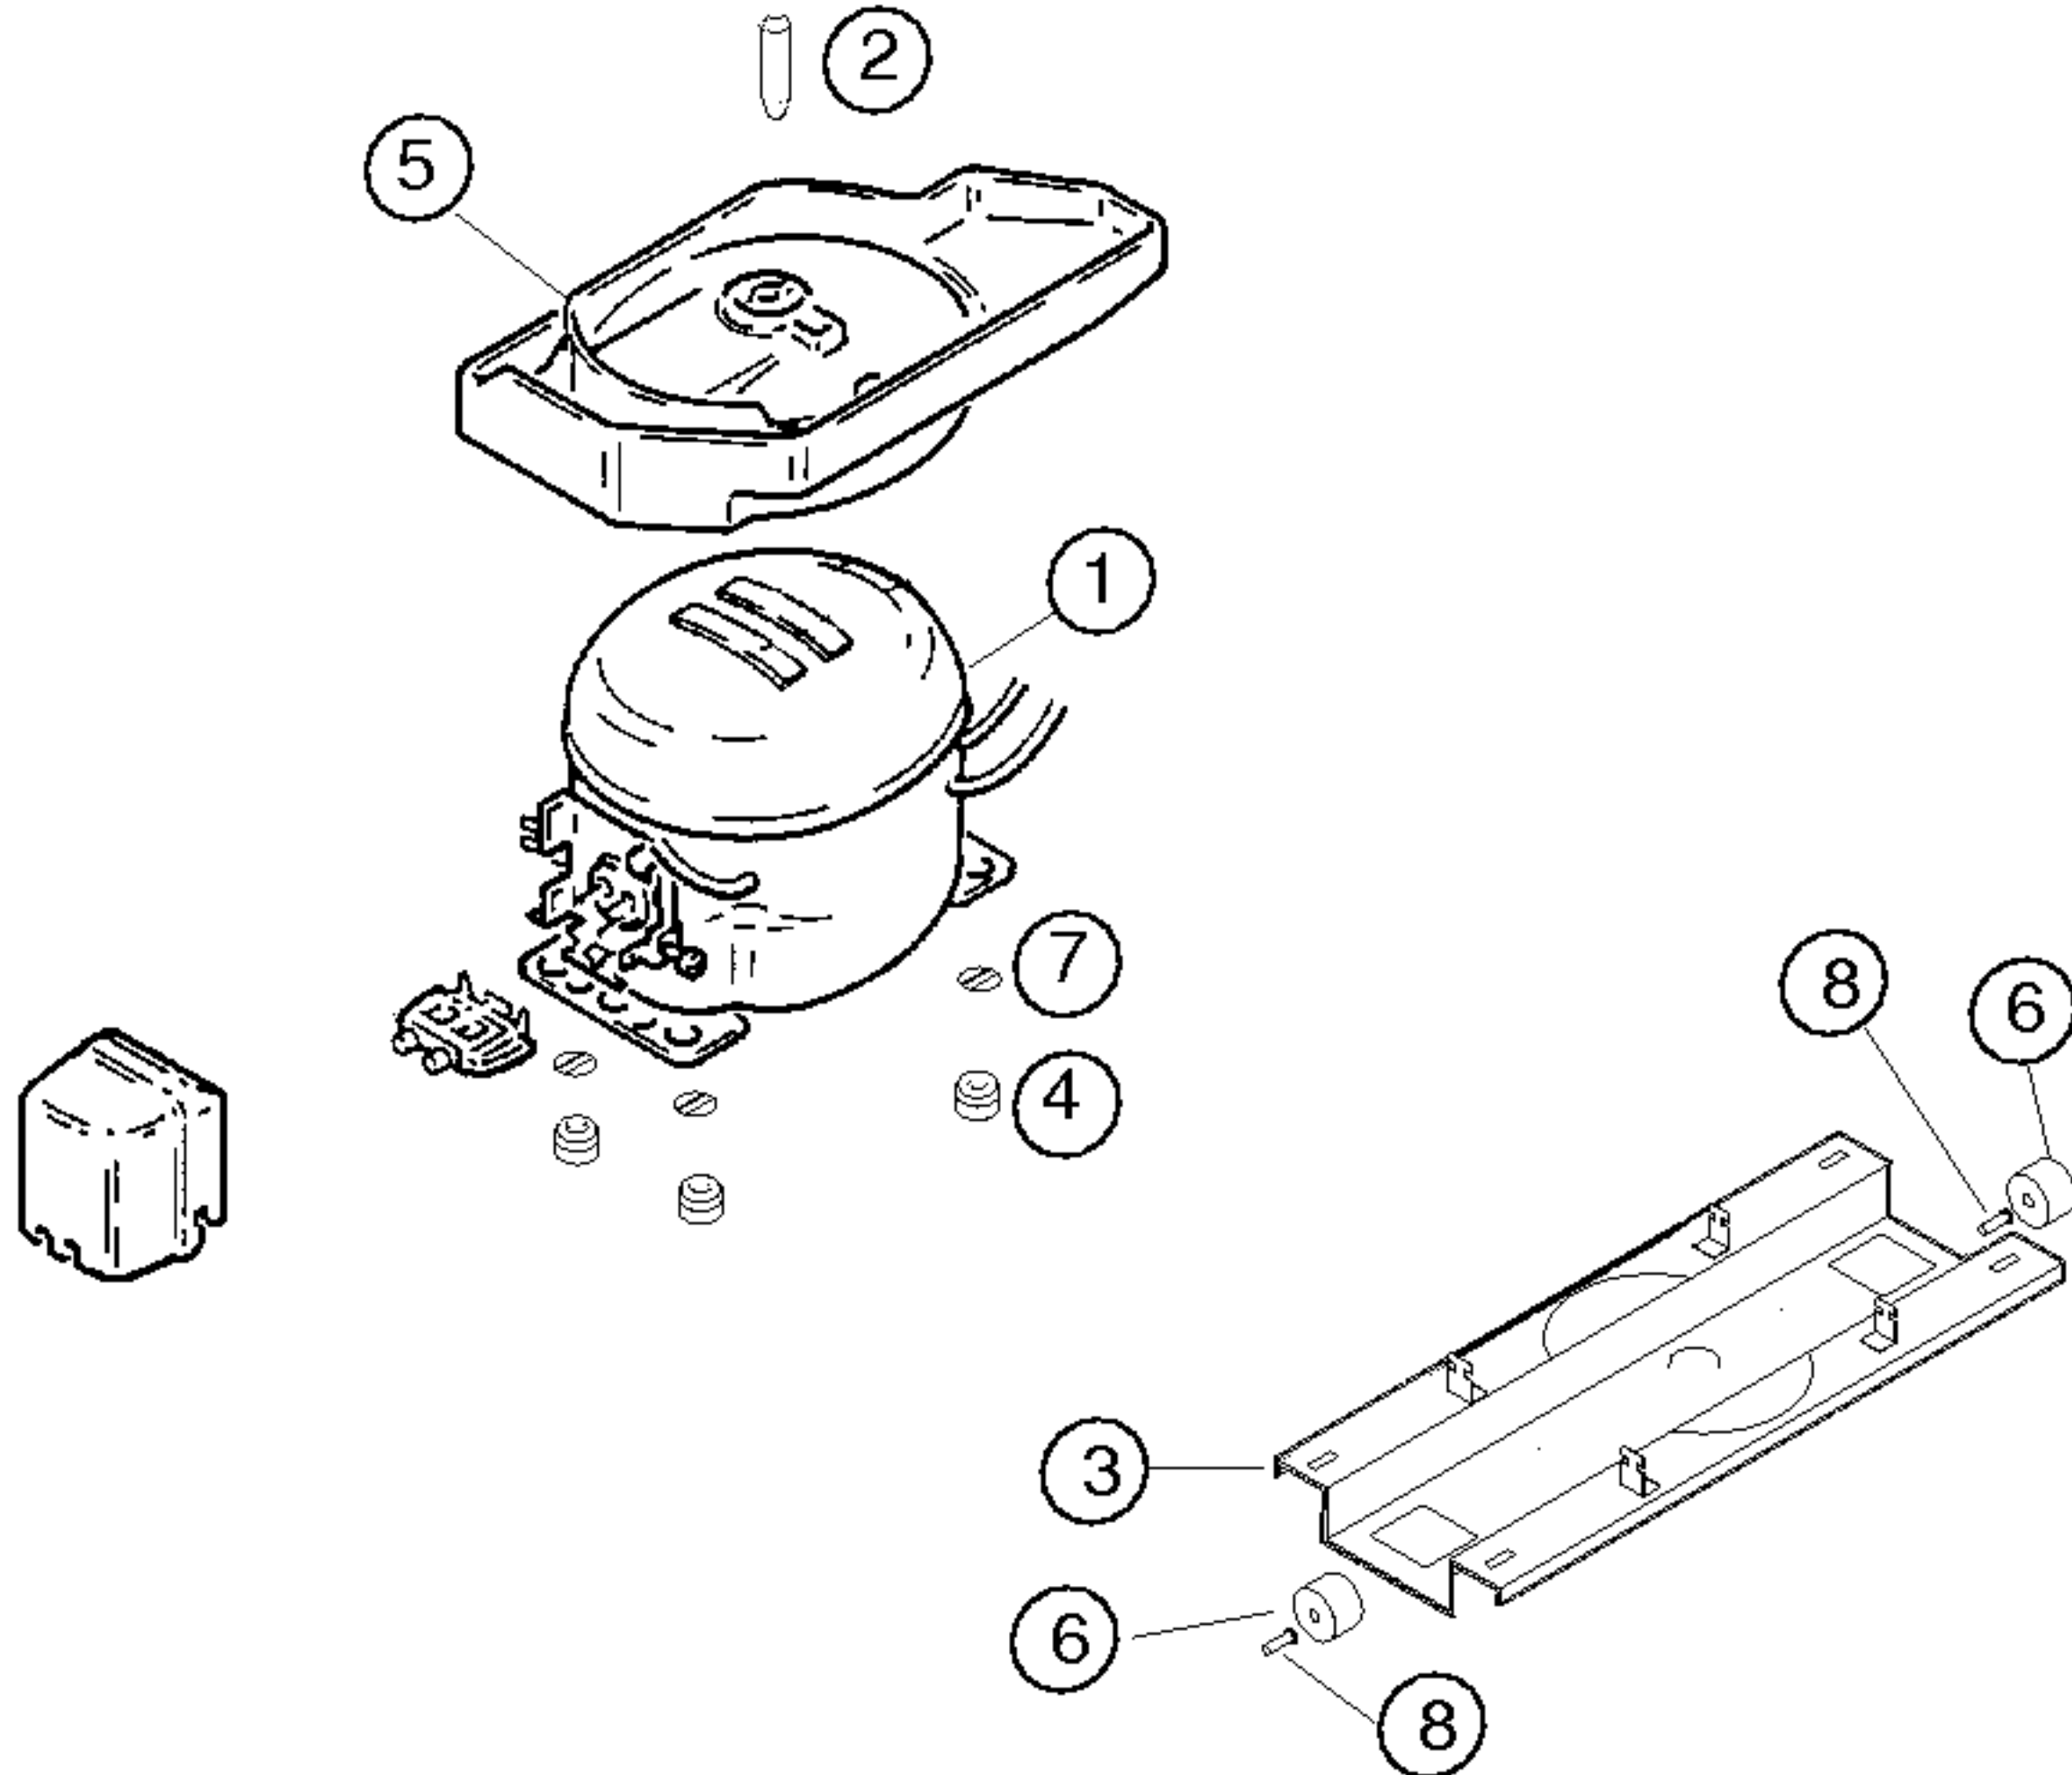

	V01,2,3,4	V05	V06
Pos.	Aspera	Matsushita	
	NBT 1116Y	DA125E	
1	14 2193	14 2303	
2	18 4389		41 8170
3	35 4158		
4	16 3427		
5	36 3166	26 5327	
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE9F 10.7 12.9 18		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Verdampfer 120	Ablaufrinne 53	4
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz