



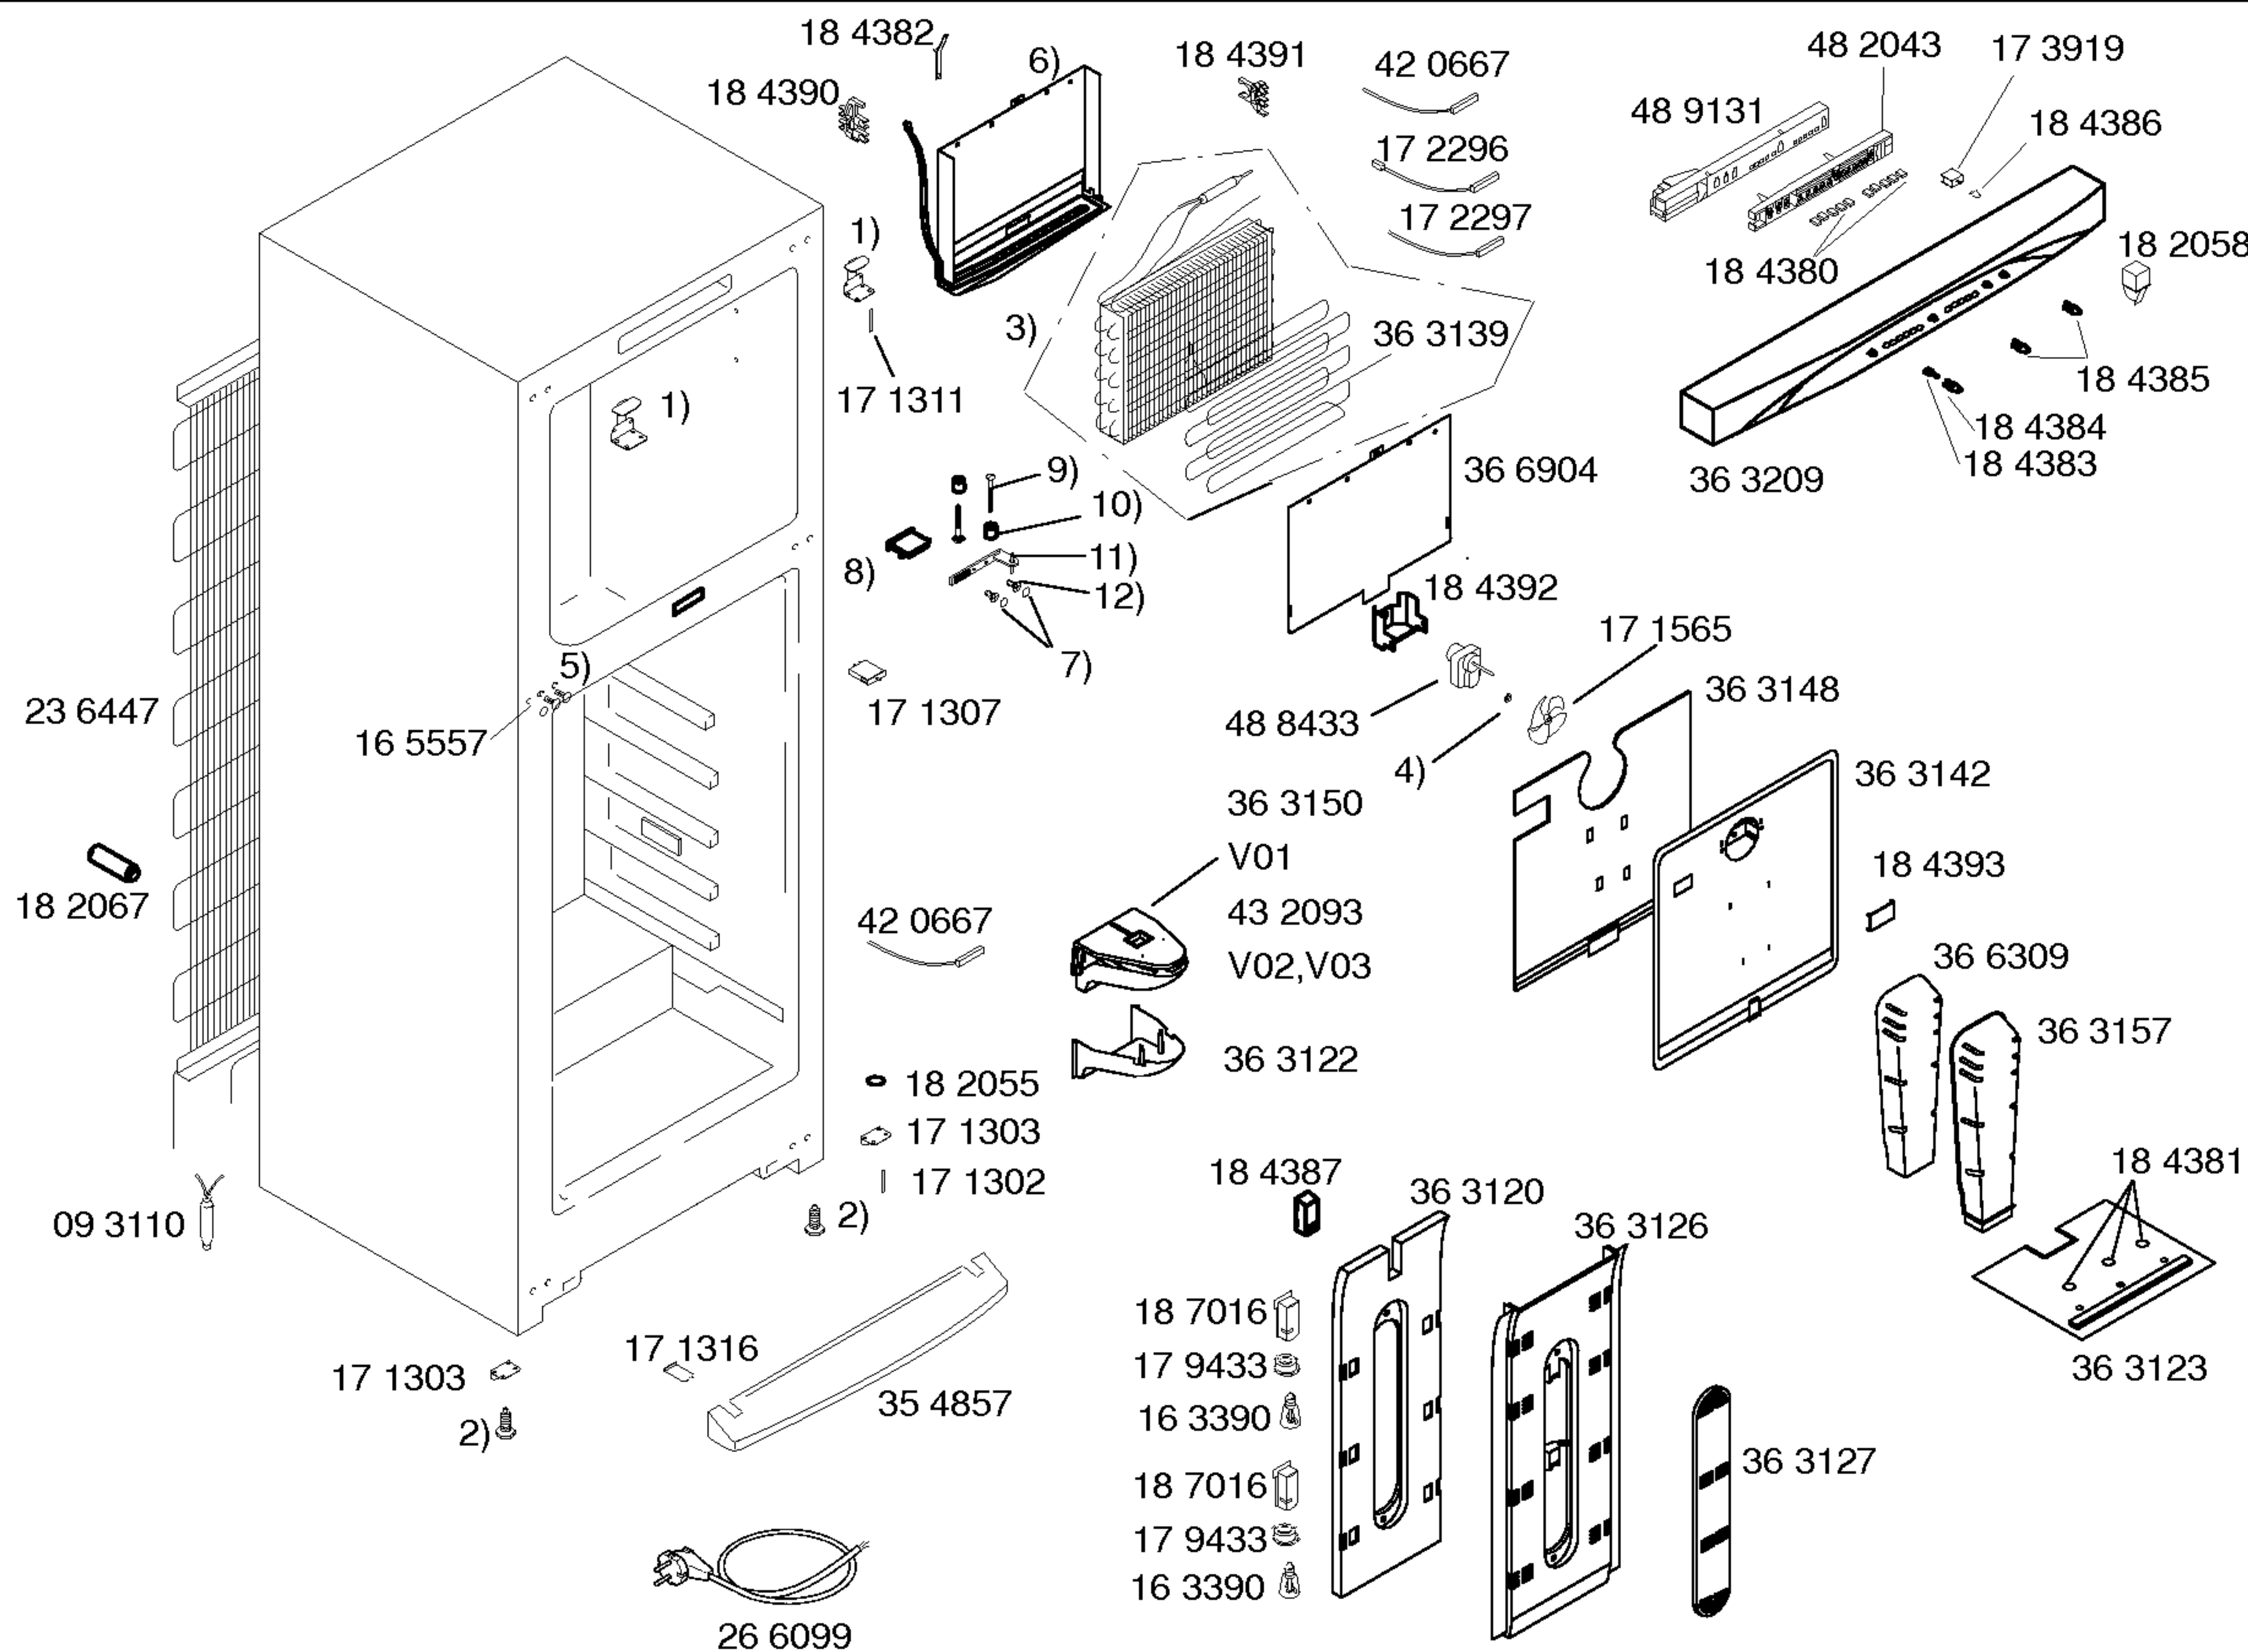


Gebrauchsanweisung
52 9501
(DE,GB,FR,ES,PT)

- 1) 17 1312
- 2) 17 1304
- 3) 36 9817
- 4) 17 1508
- 5) 16 5552
- 6) 36 9510
- 7) 17 6137
- 8) 41 8128
- 9) 18 8194
- 10) 18 8188
- 11) 18 8191
- 12) 18 8196
- 13) 36 9821

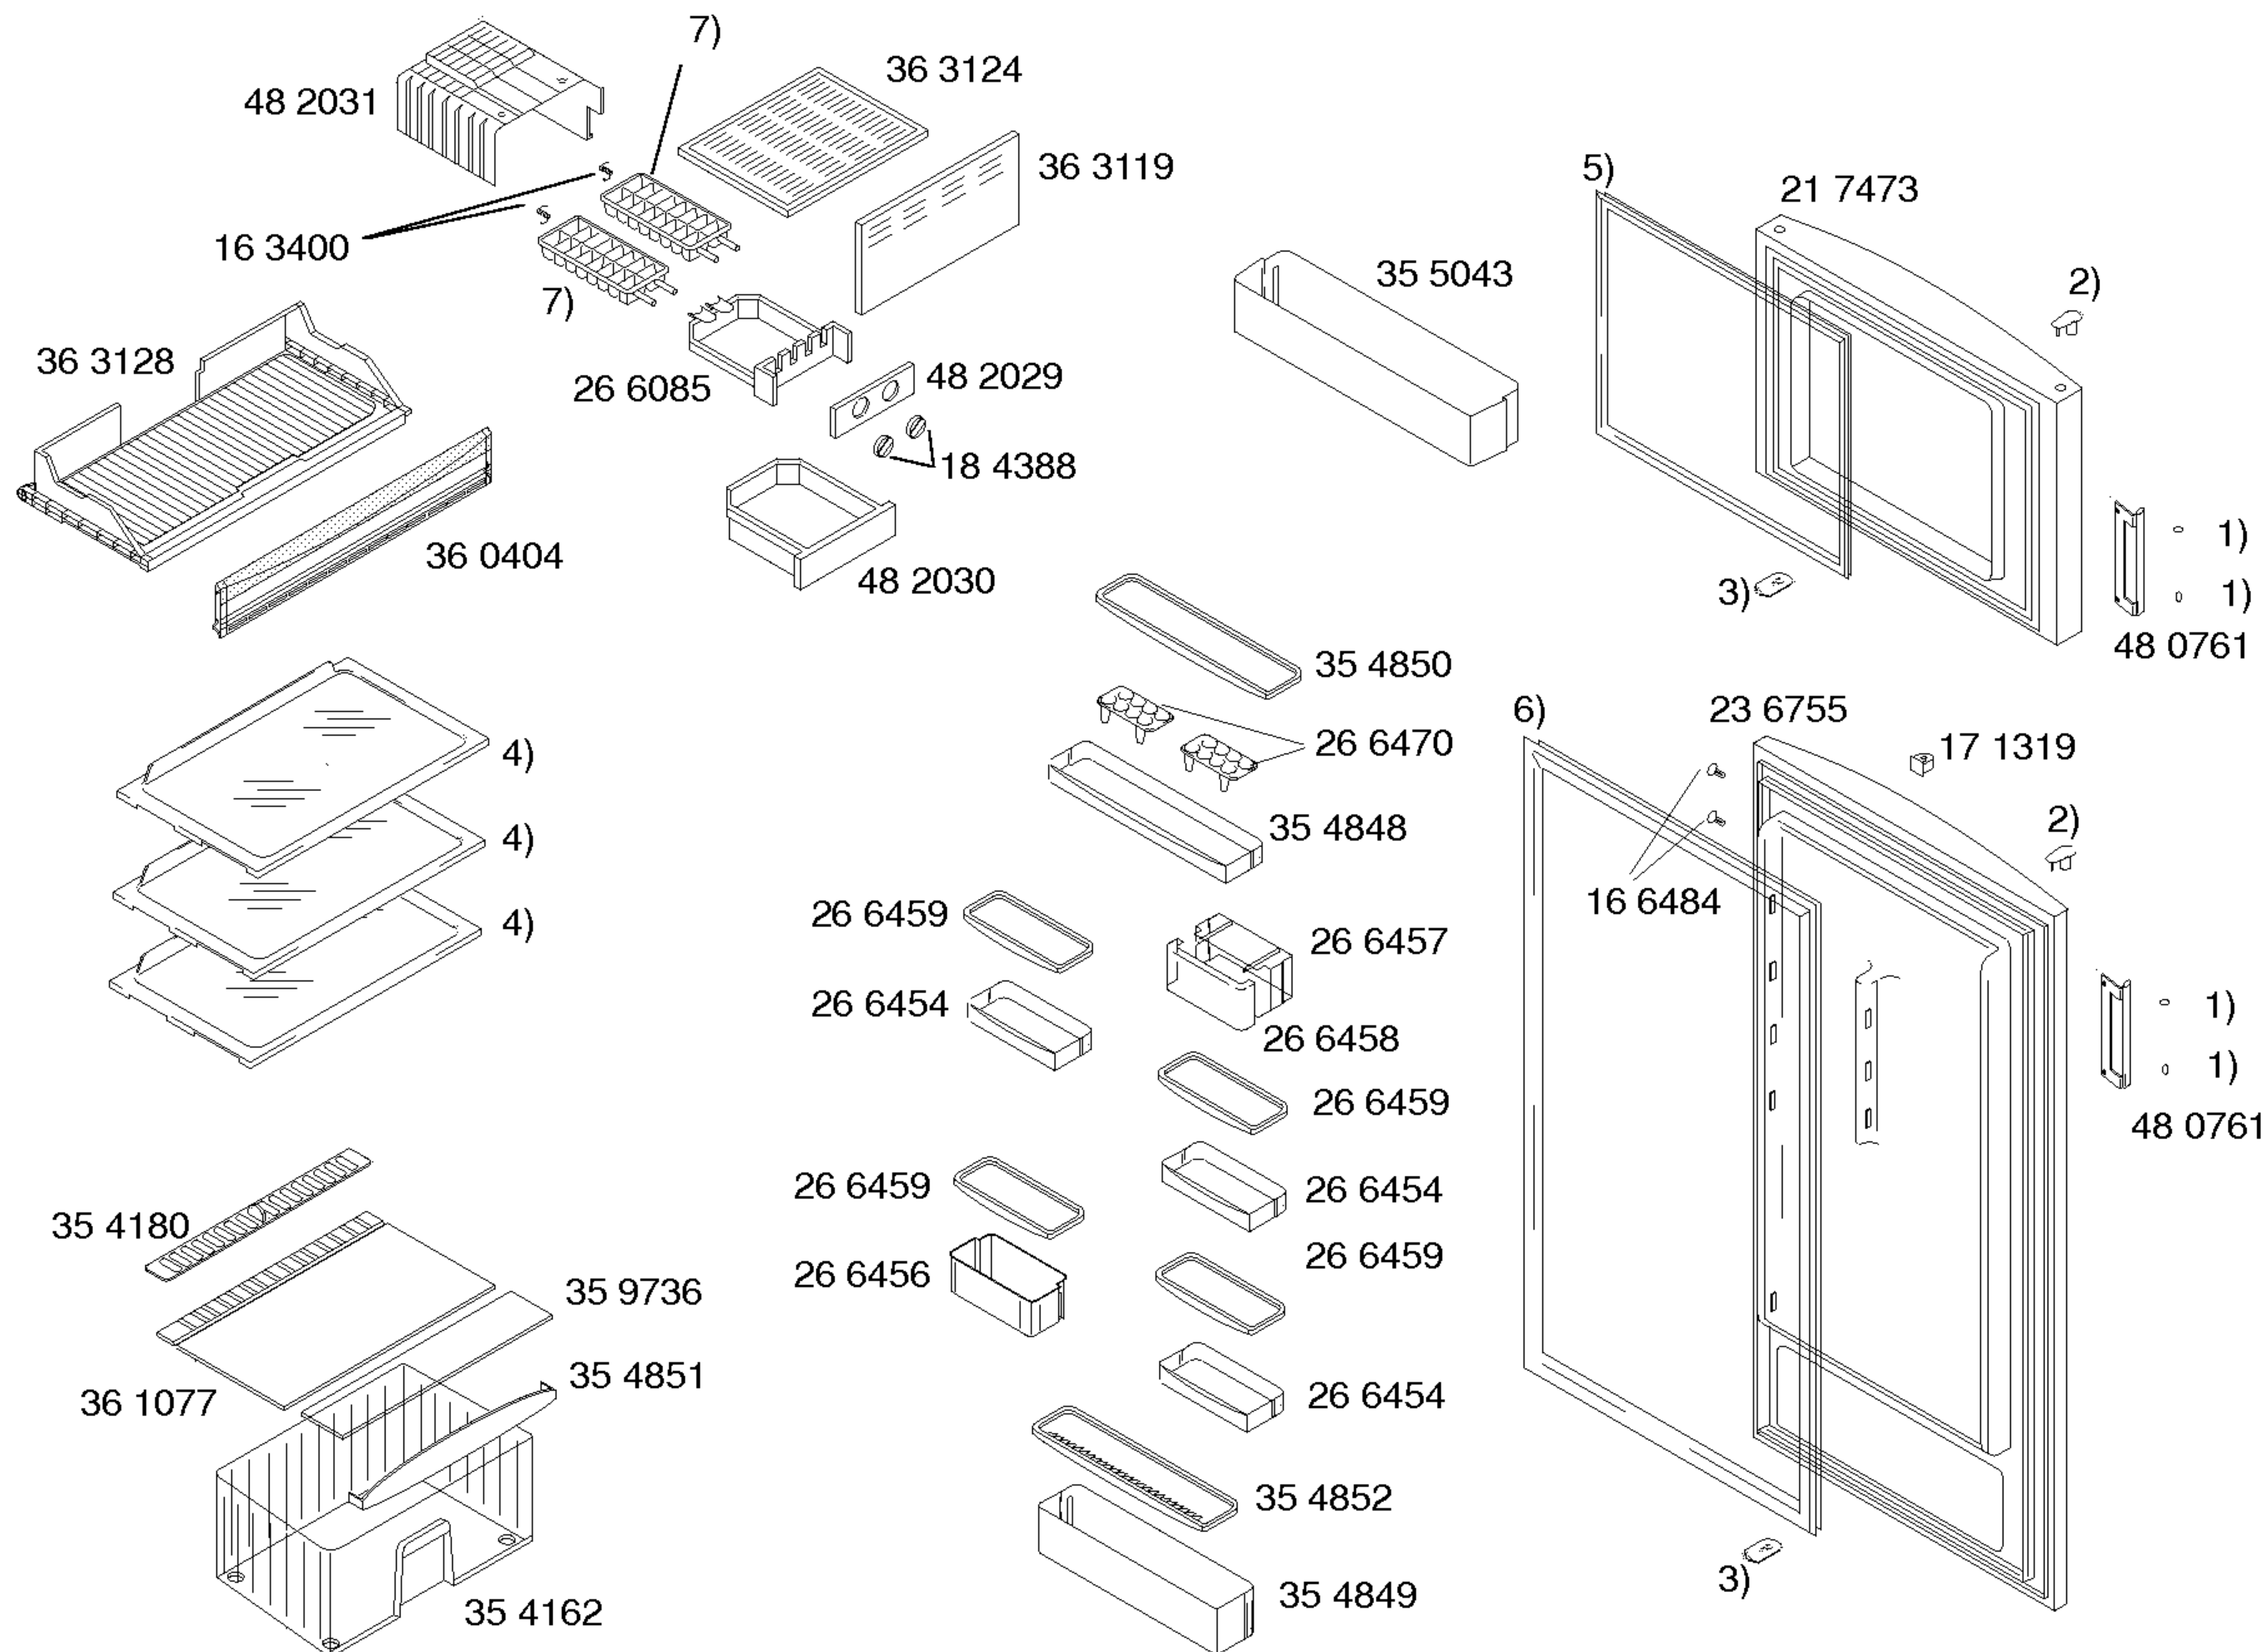

- 1) 16 5557
 - 2) 17 1321
 - 3) 17 1506
 - 4) 36 3129
 - 5) 21 8854
 - 6) 23 8422
 - 7) 26 9013
- V01,V02
48 9738
V03

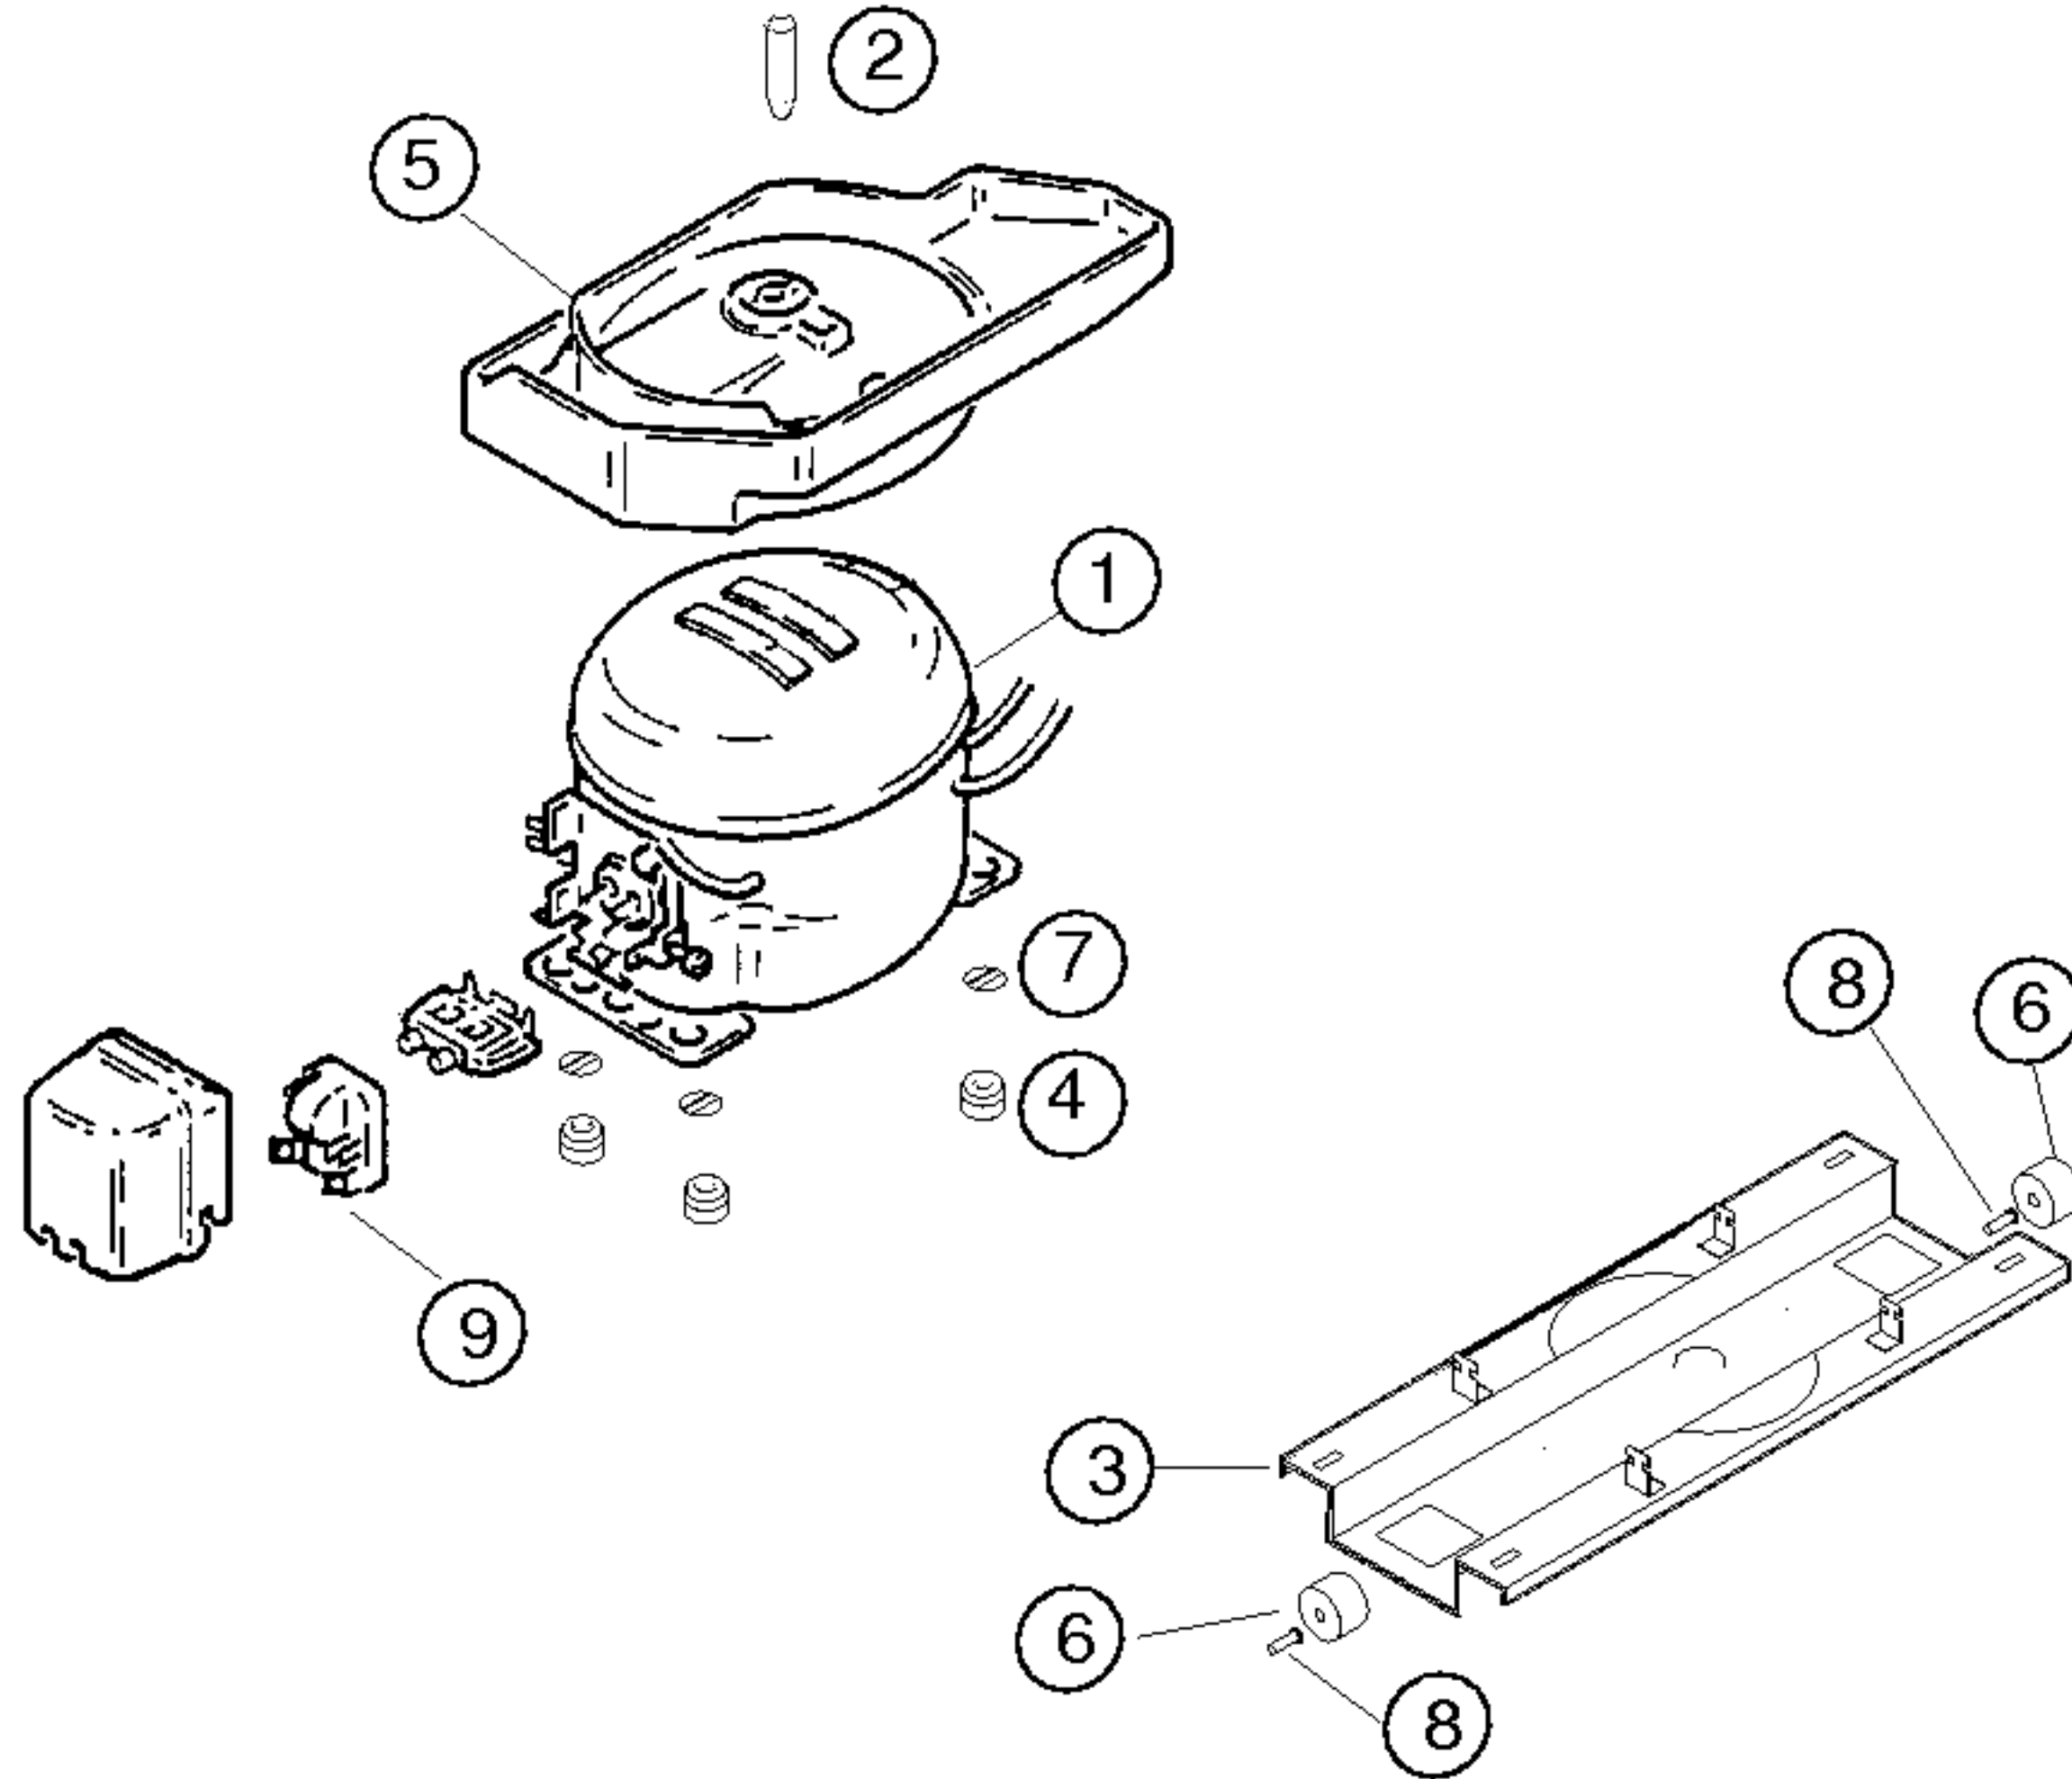

	V01,2,3	V04	
	Matsushita	Aspera	
Pos.	DA125E	T1116Y	
1	14 2303	14 2193	
2	41 8170		
3	35 4158		
4	16 3427		
5	26 5327	36 3166	
6	17 1318		
7	17 1519		
8	18 1014		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE9F 10.7 12.9 18	Aspera T1116Y	
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Verdampfer 120	Ablaufrinne 53	4
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız