
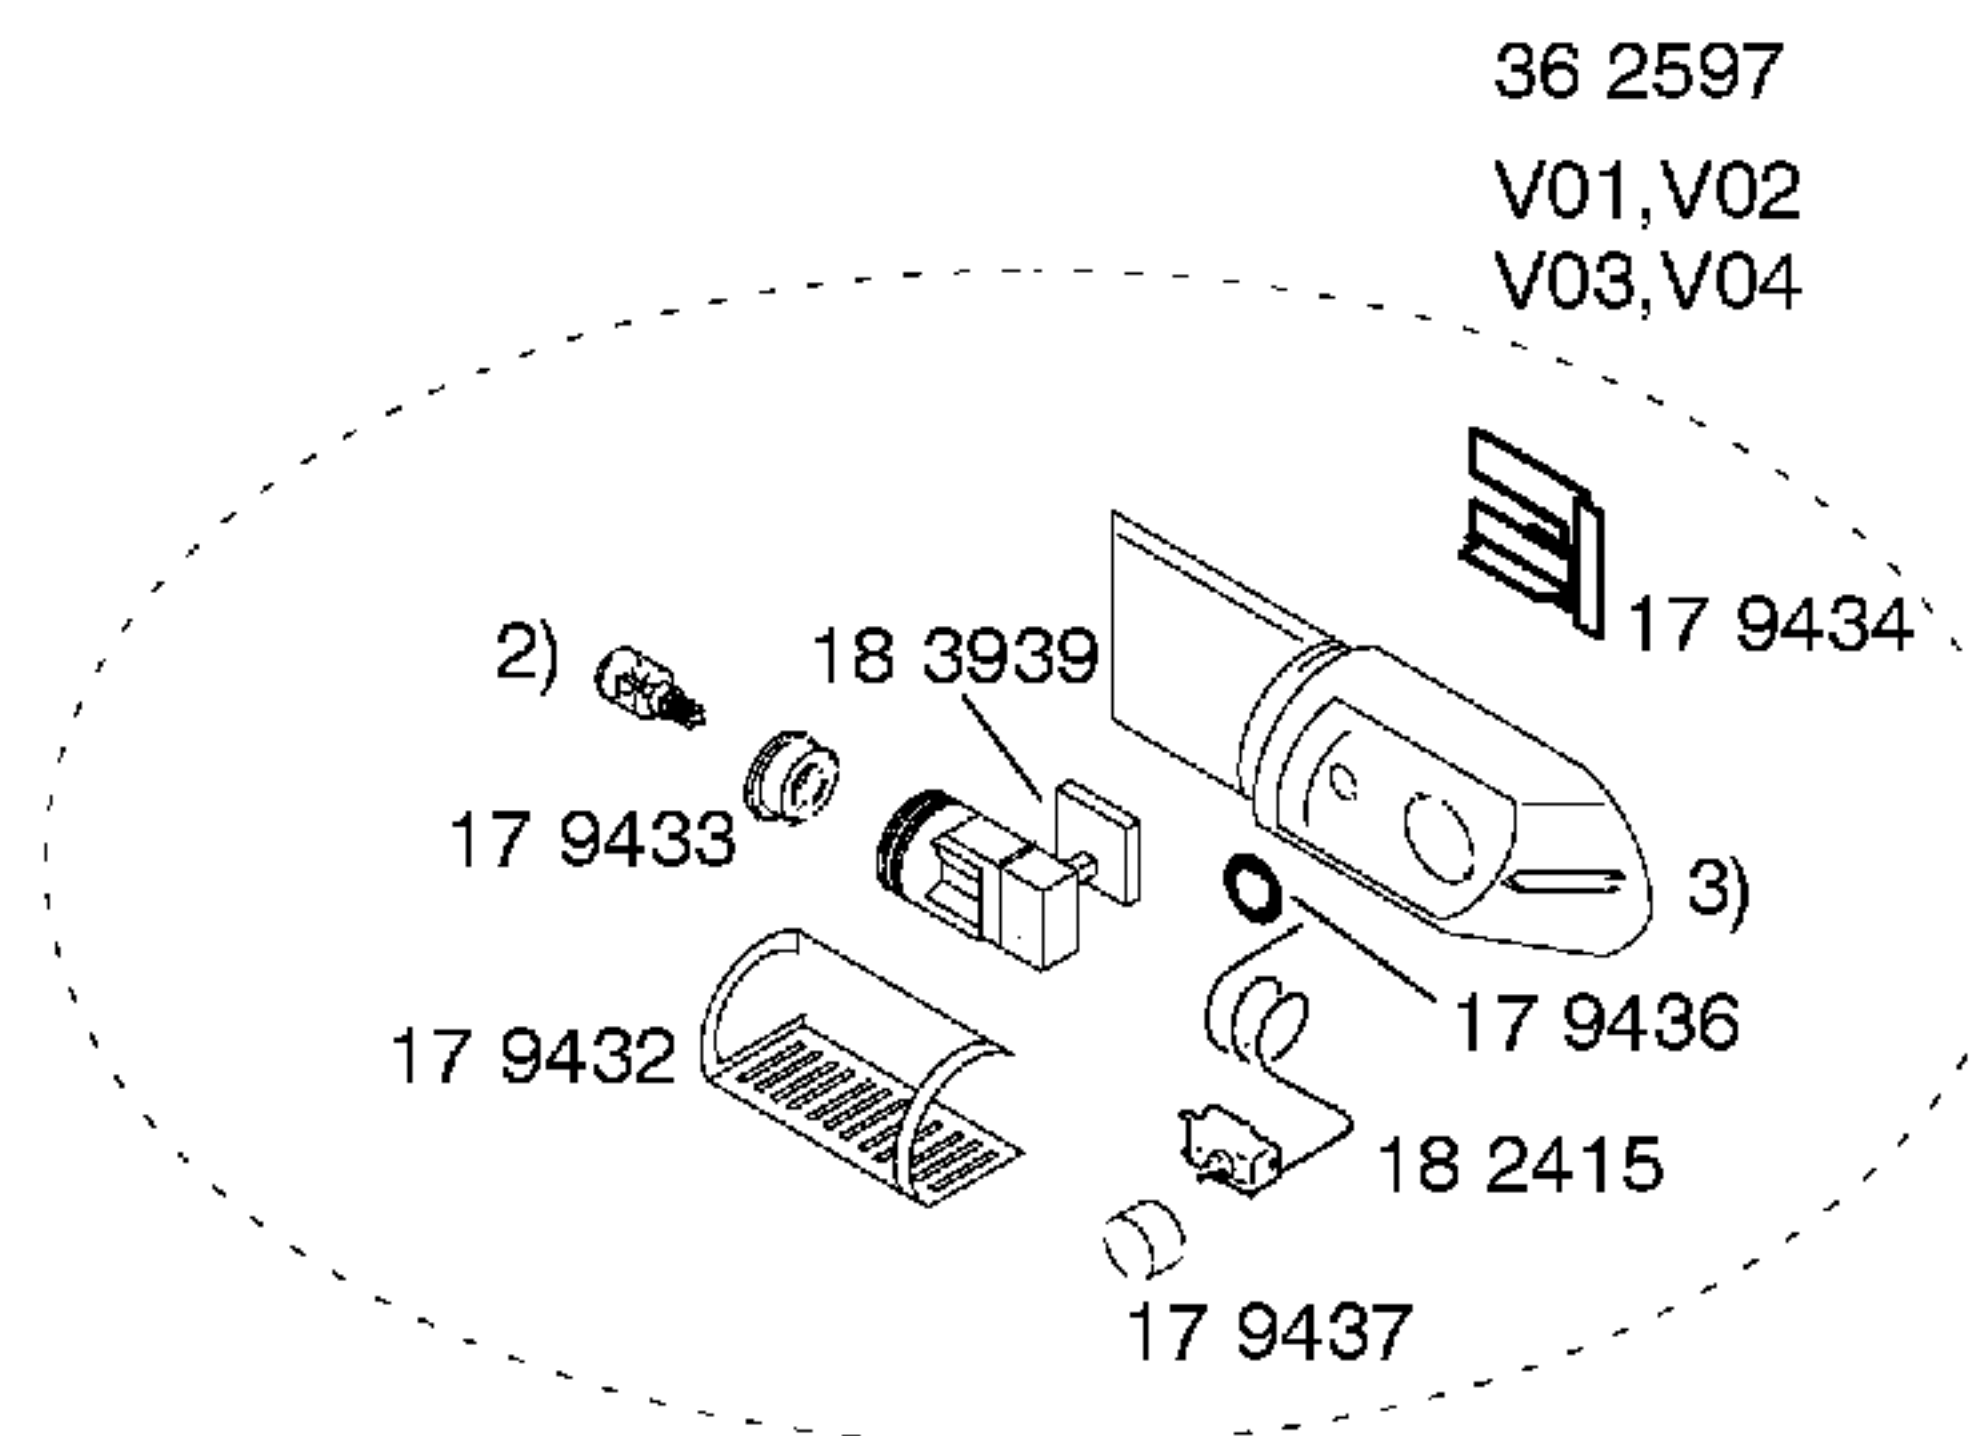
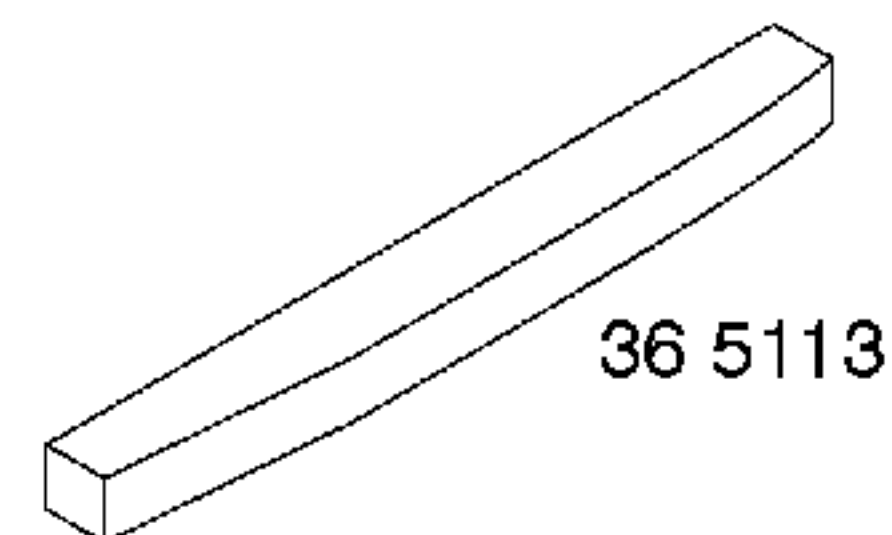


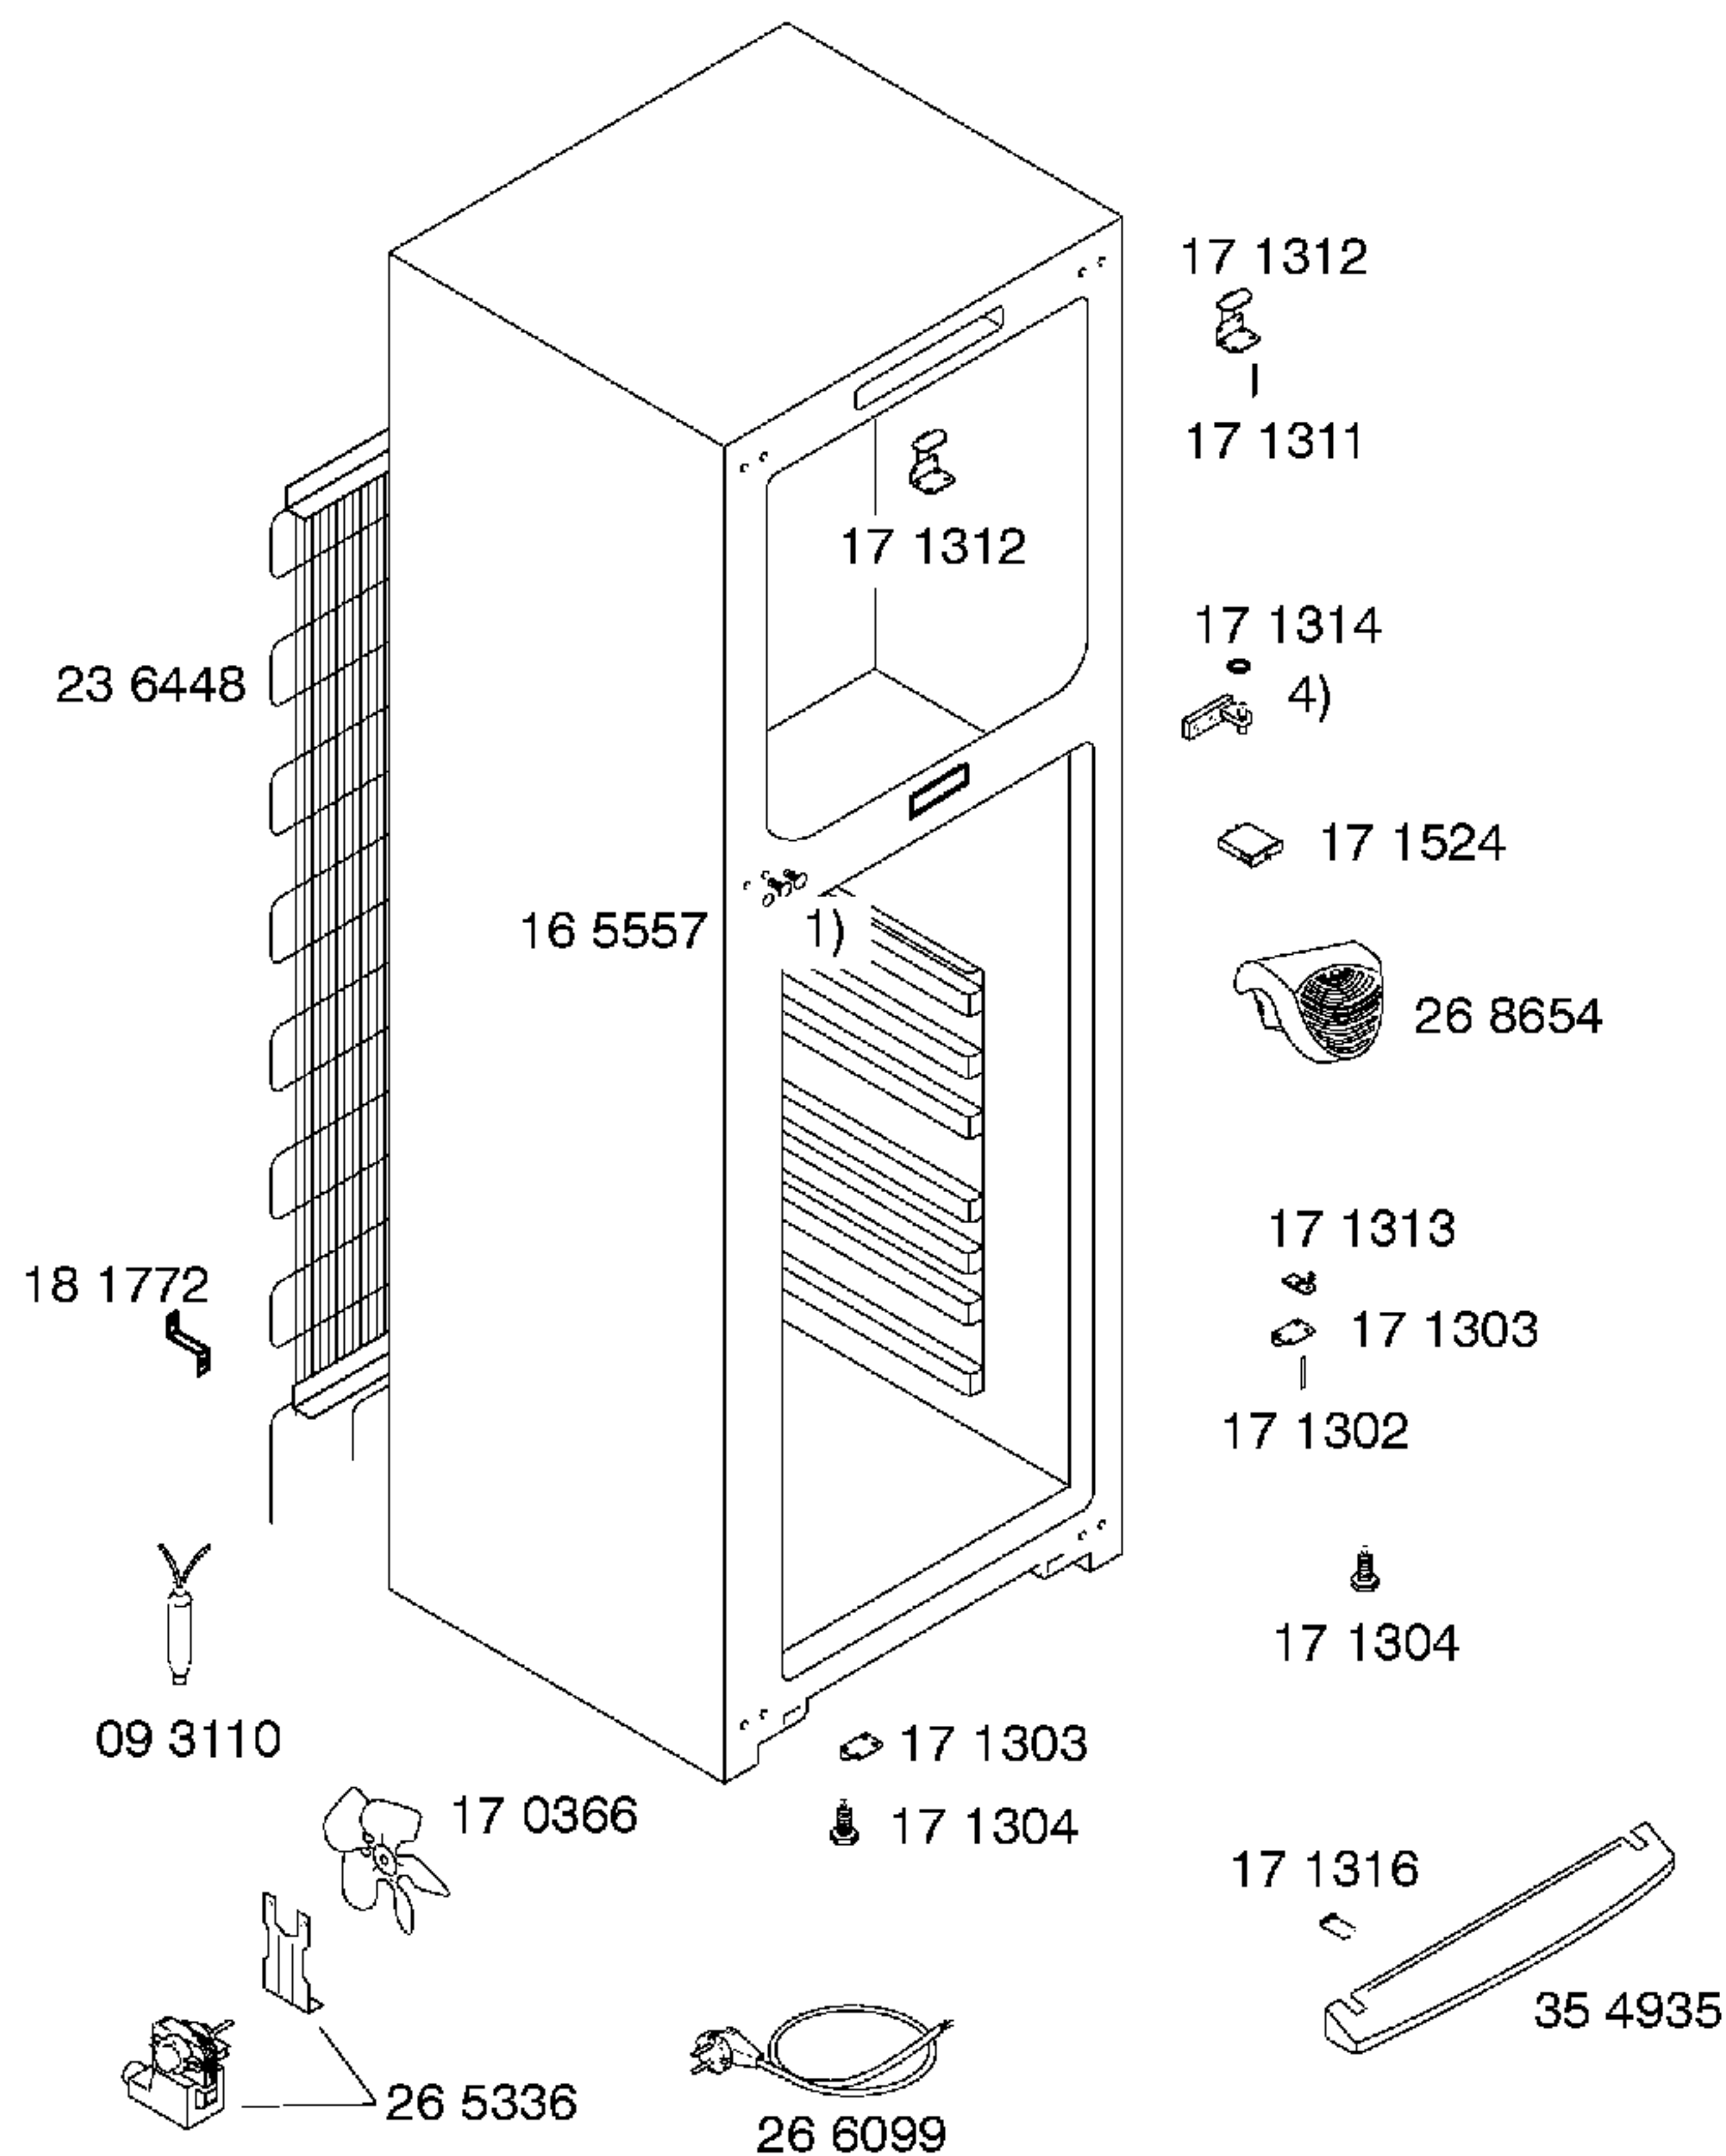

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisung
 52 9922

V01, V02, V03, V04

58 5896

V05, V06, V07
 (DE, EN, FR, ES, PT)

1) 16 5552

2) 16 3390

V01, V02, V03, V04

41 9942

V05, V06, V07

3) 26 9586

V01, V02, V03, V04

49 0182

V05, V06, V07


4) 17 1308

V01, V02, V03, V04

V05


42 0643

V06, V07

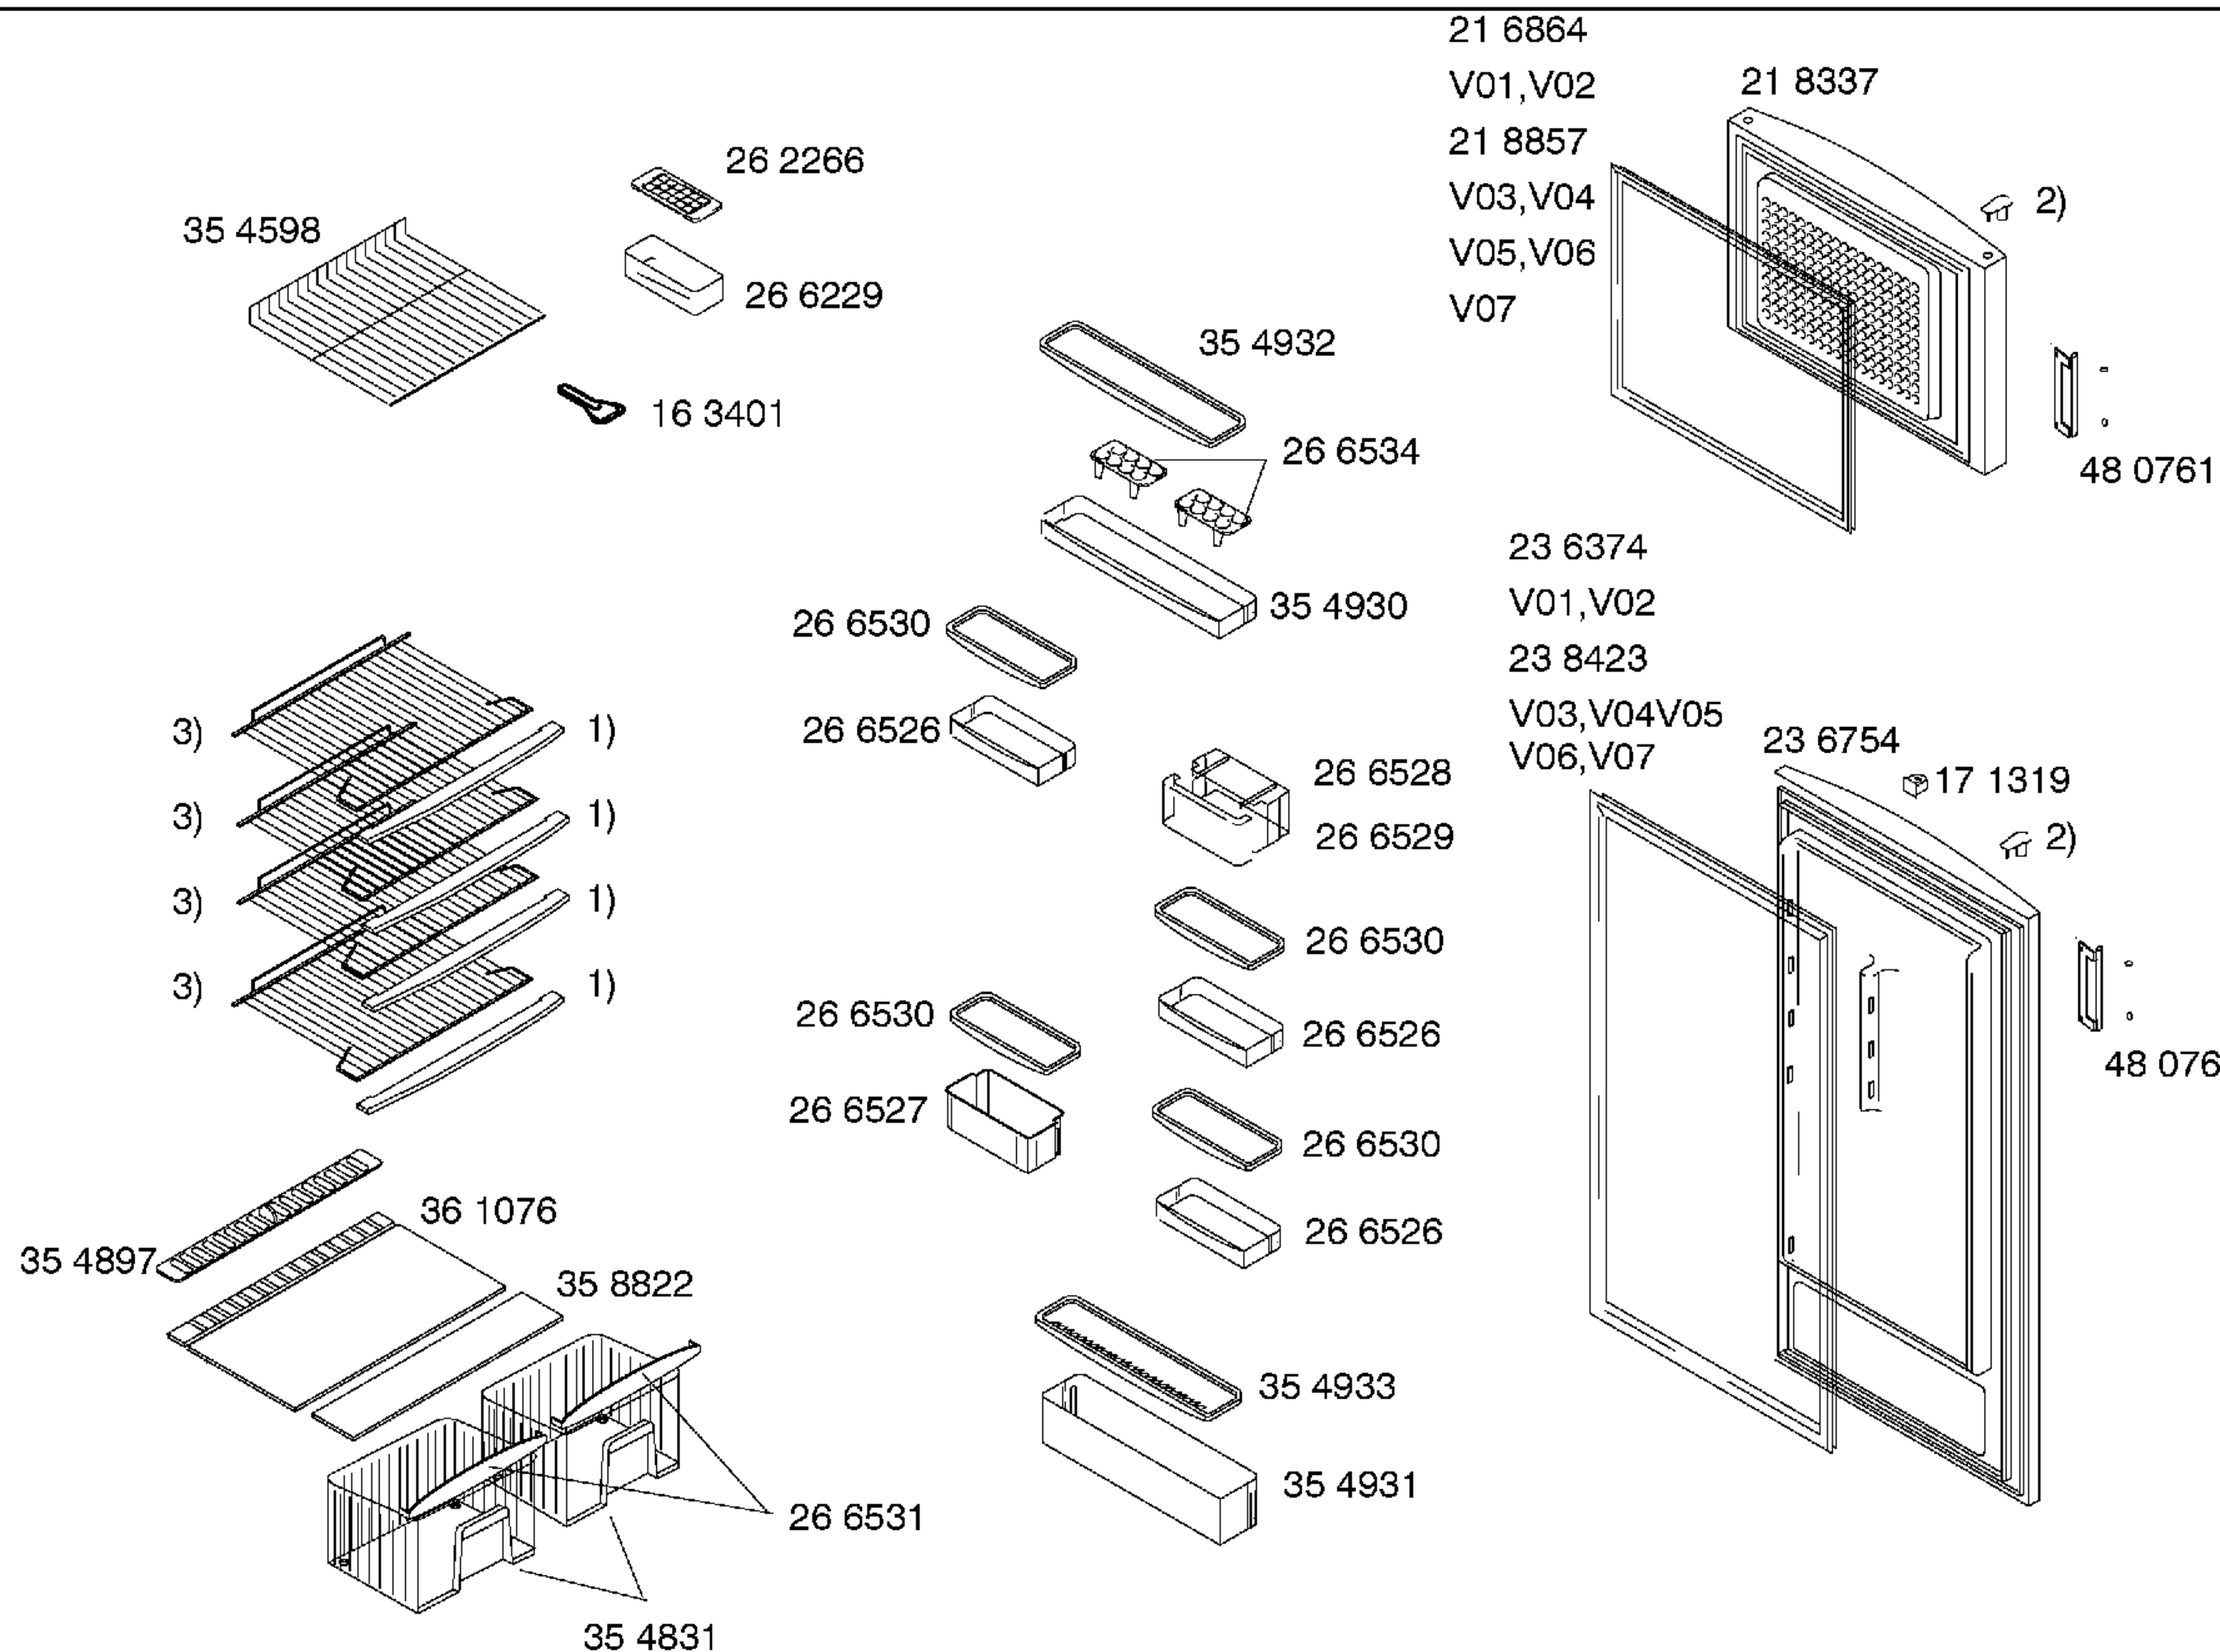

Mat. - Nr. - Konstante
 3740

- 1) 35 4936
- 2) 17 1321
- 3) 35 4780

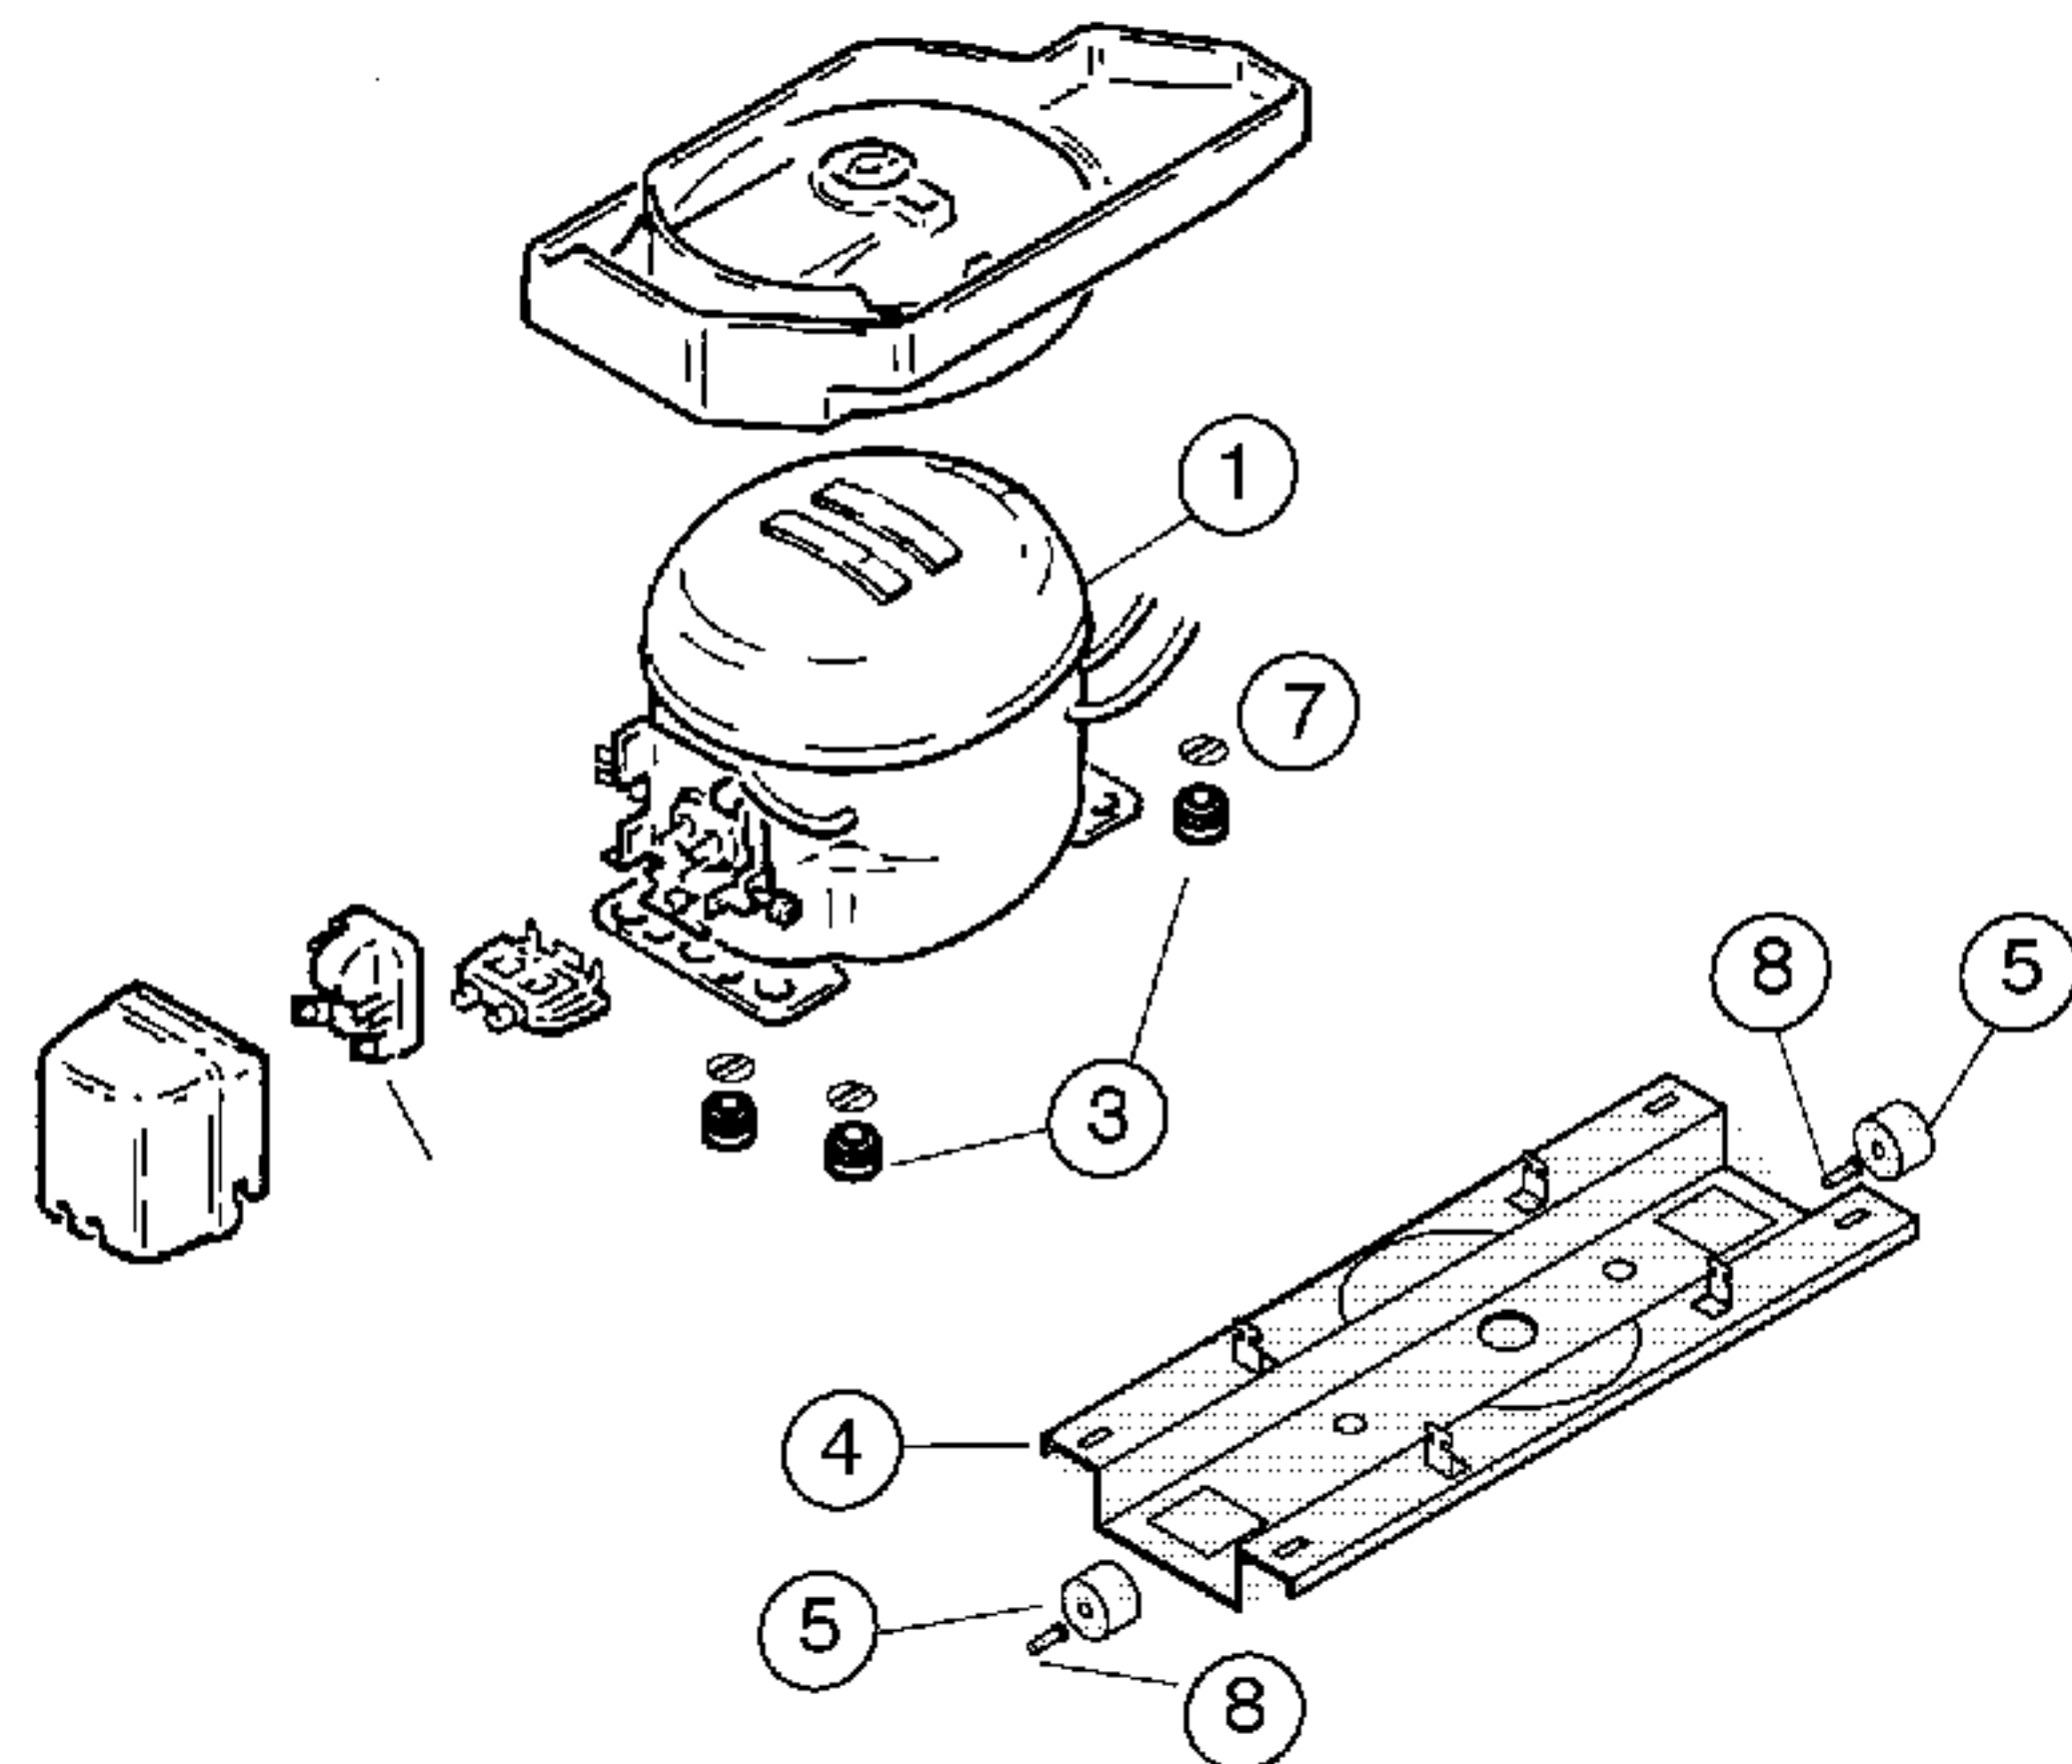

Pos.	V01-V06	V07	
	ACC	ACC	
	HXK12AA	HXK12AA	
1	145383	145383	
2			
3	16 3427		
4	35 4583		
5	17 1318		
6			
7	17 1519		
8	18 1014		
9			
10			
11			
12			

Mat. - Nr. - Konstante
 3740

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01-V06	V07	
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	ACC HXK12AA	ACC HXK12AA	
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Actua kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)			
Füllmenge/Fill. quantity/ Dolum miktari	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ohm W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ohm V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz