




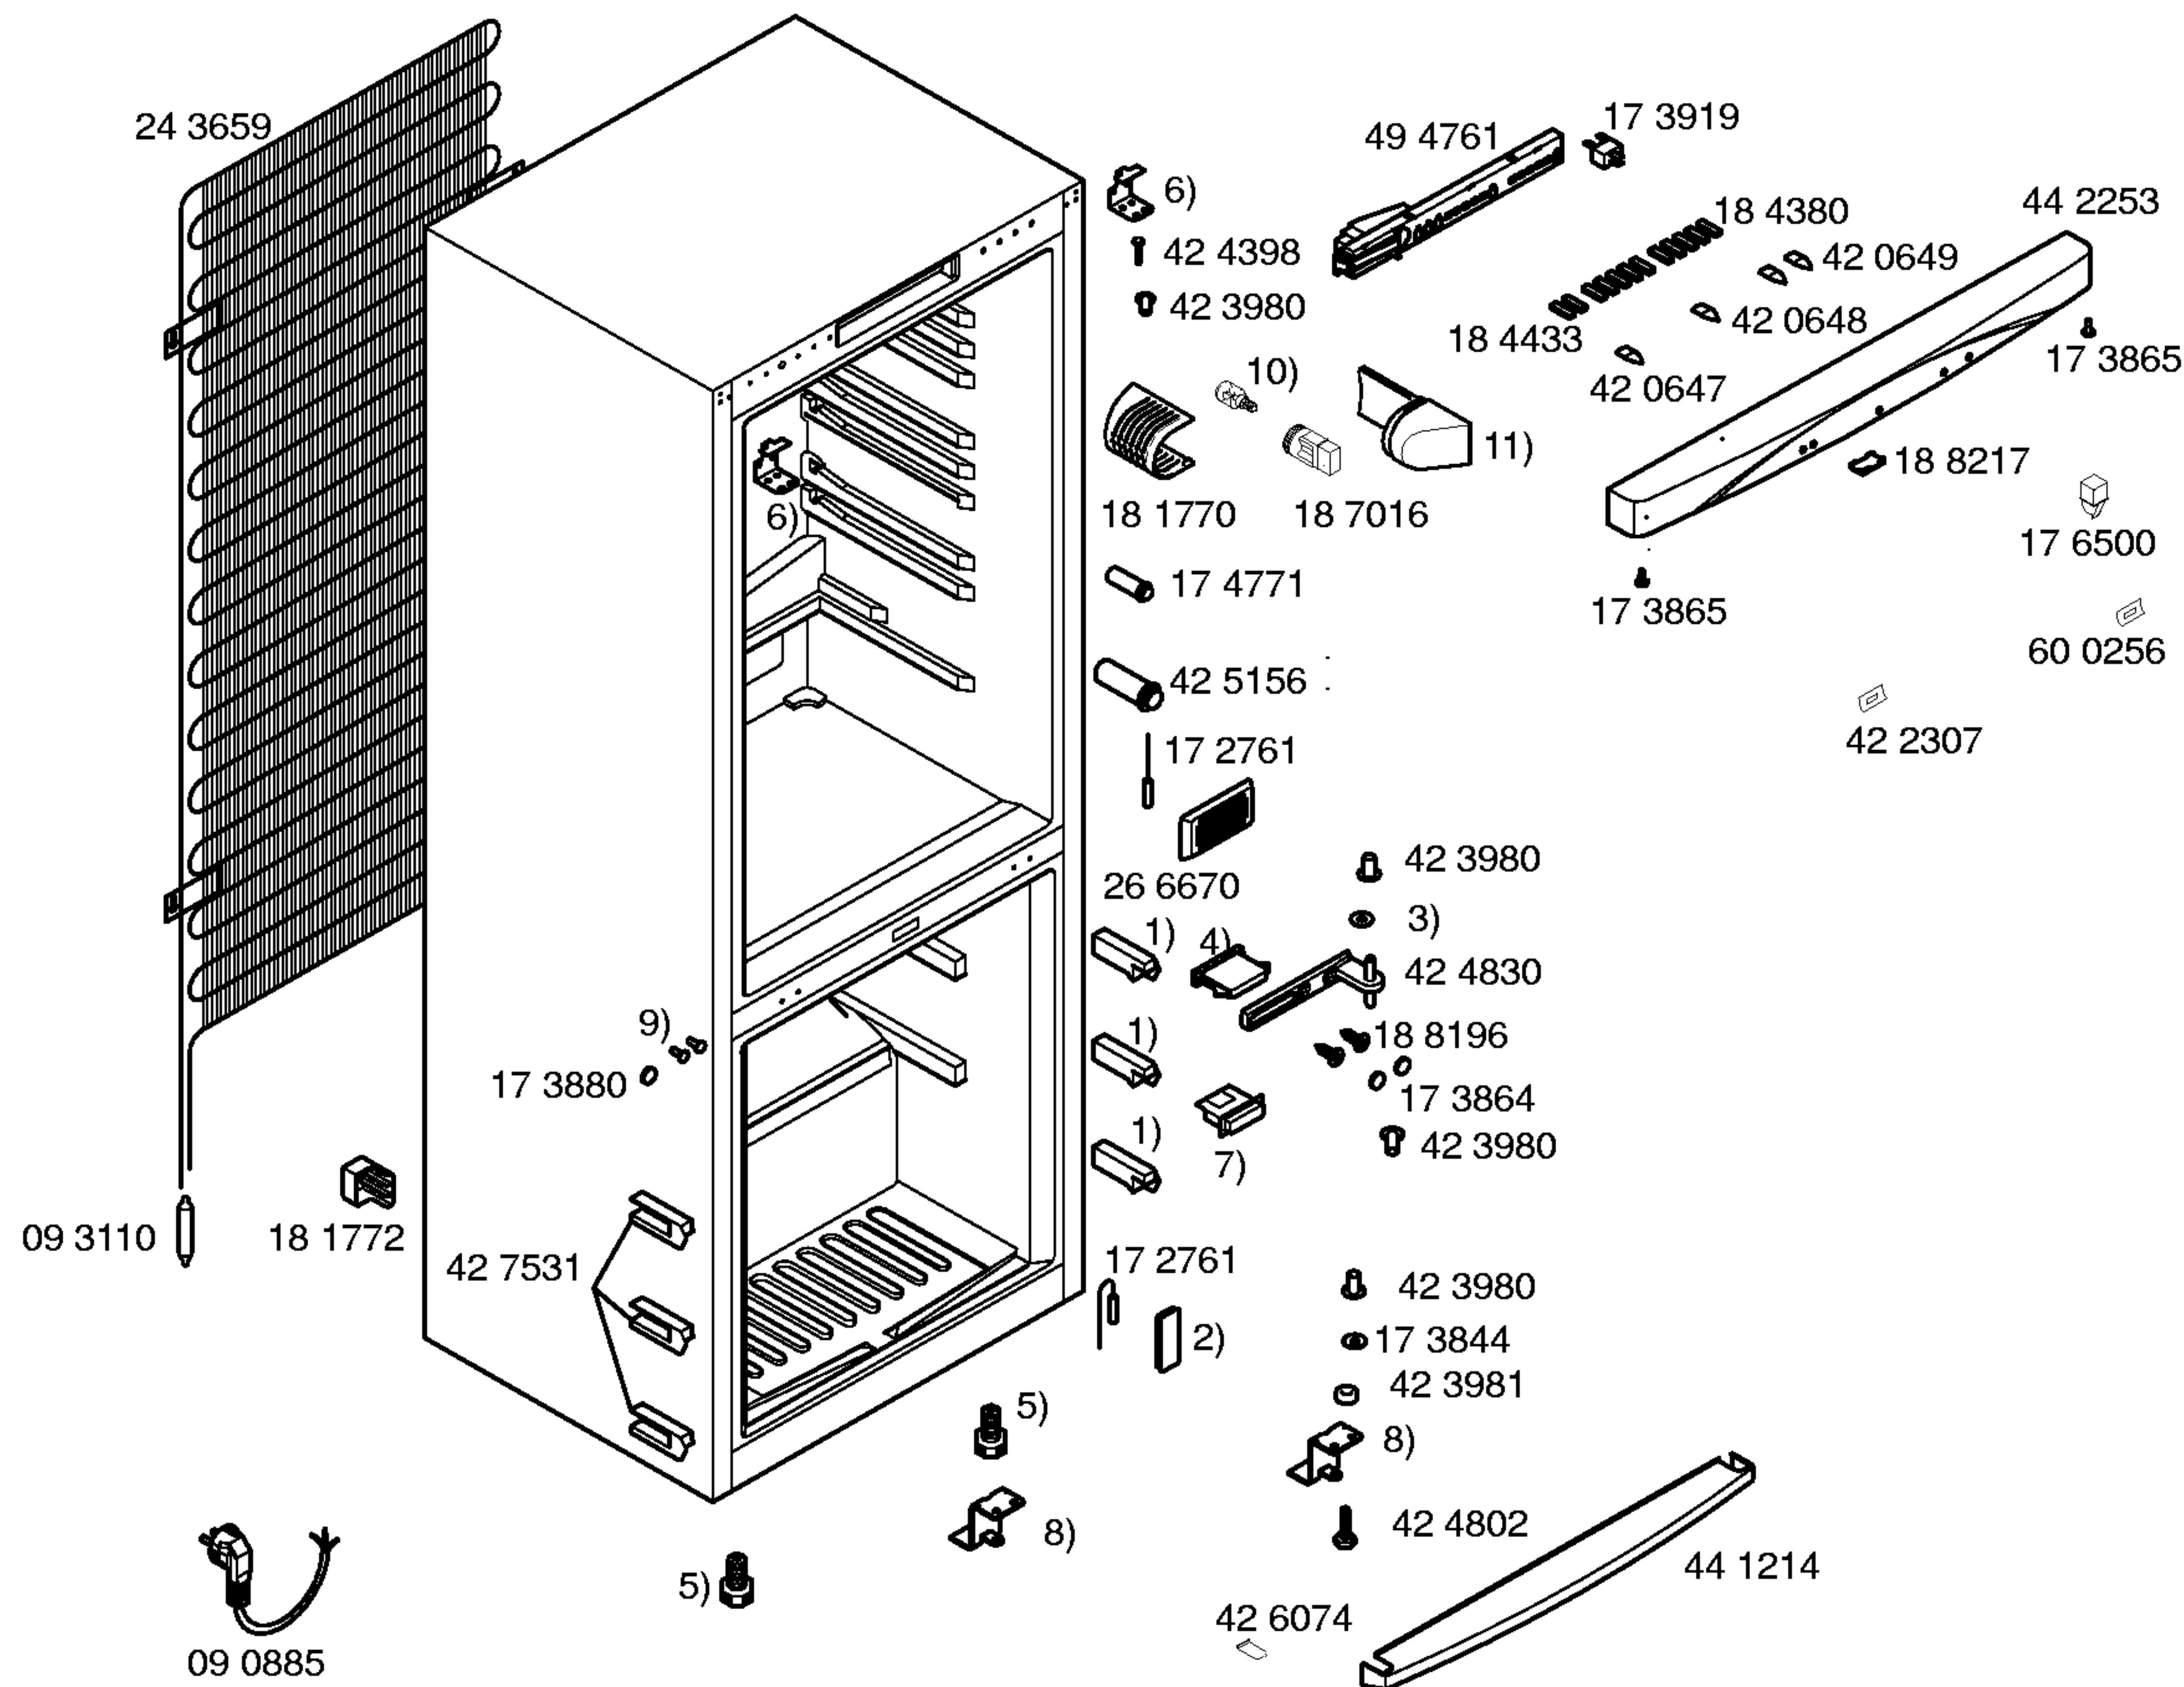


Gebrauchsanweisung
59 1422
(ES,PT)

- | | |
|-----|---------|
| 1) | 42 7532 |
| 2) | 17 2293 |
| 3) | 17 3844 |
| 4) | 41 8165 |
| 5) | 42 4340 |
| 6) | 17 1312 |
| 7) | 41 8381 |
| | V01 |
| | 41 7908 |
| | V02 |
| 8) | 42 8184 |
| 9) | 17 3865 |
| | V01 |
| | 16 5552 |
| | V02 |
| 10) | 41 9942 |
| 11) | 48 2971 |

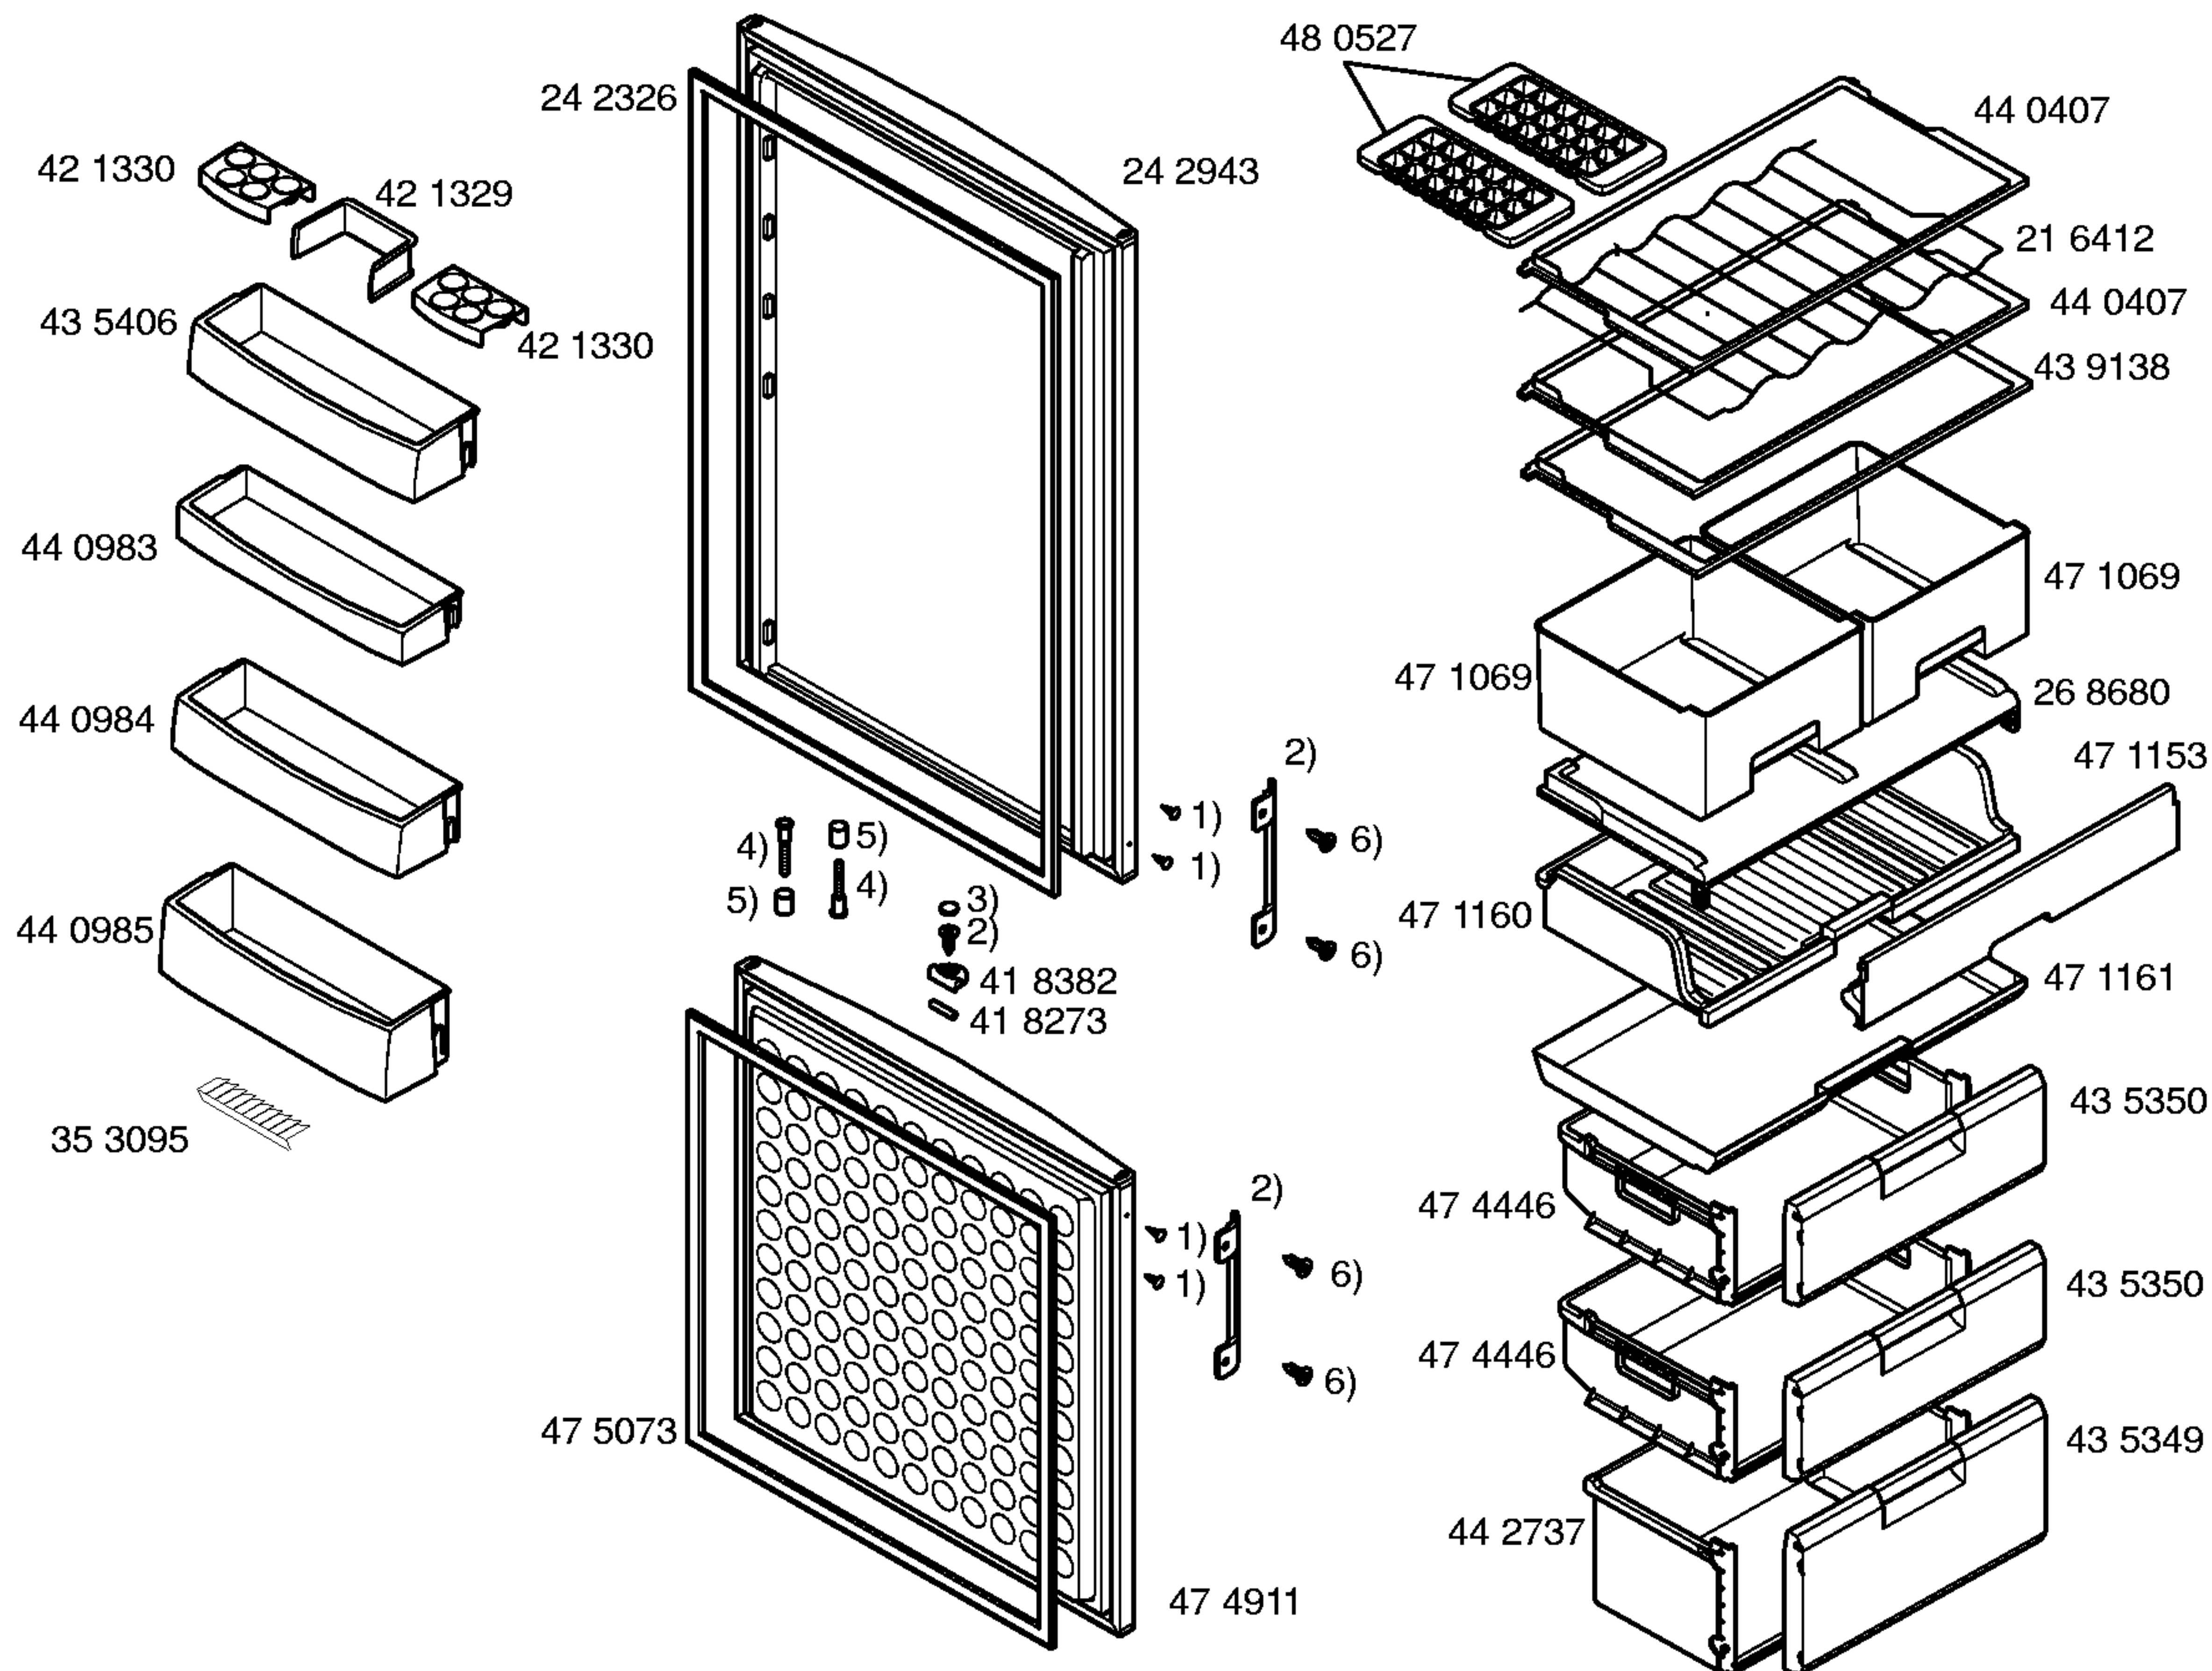

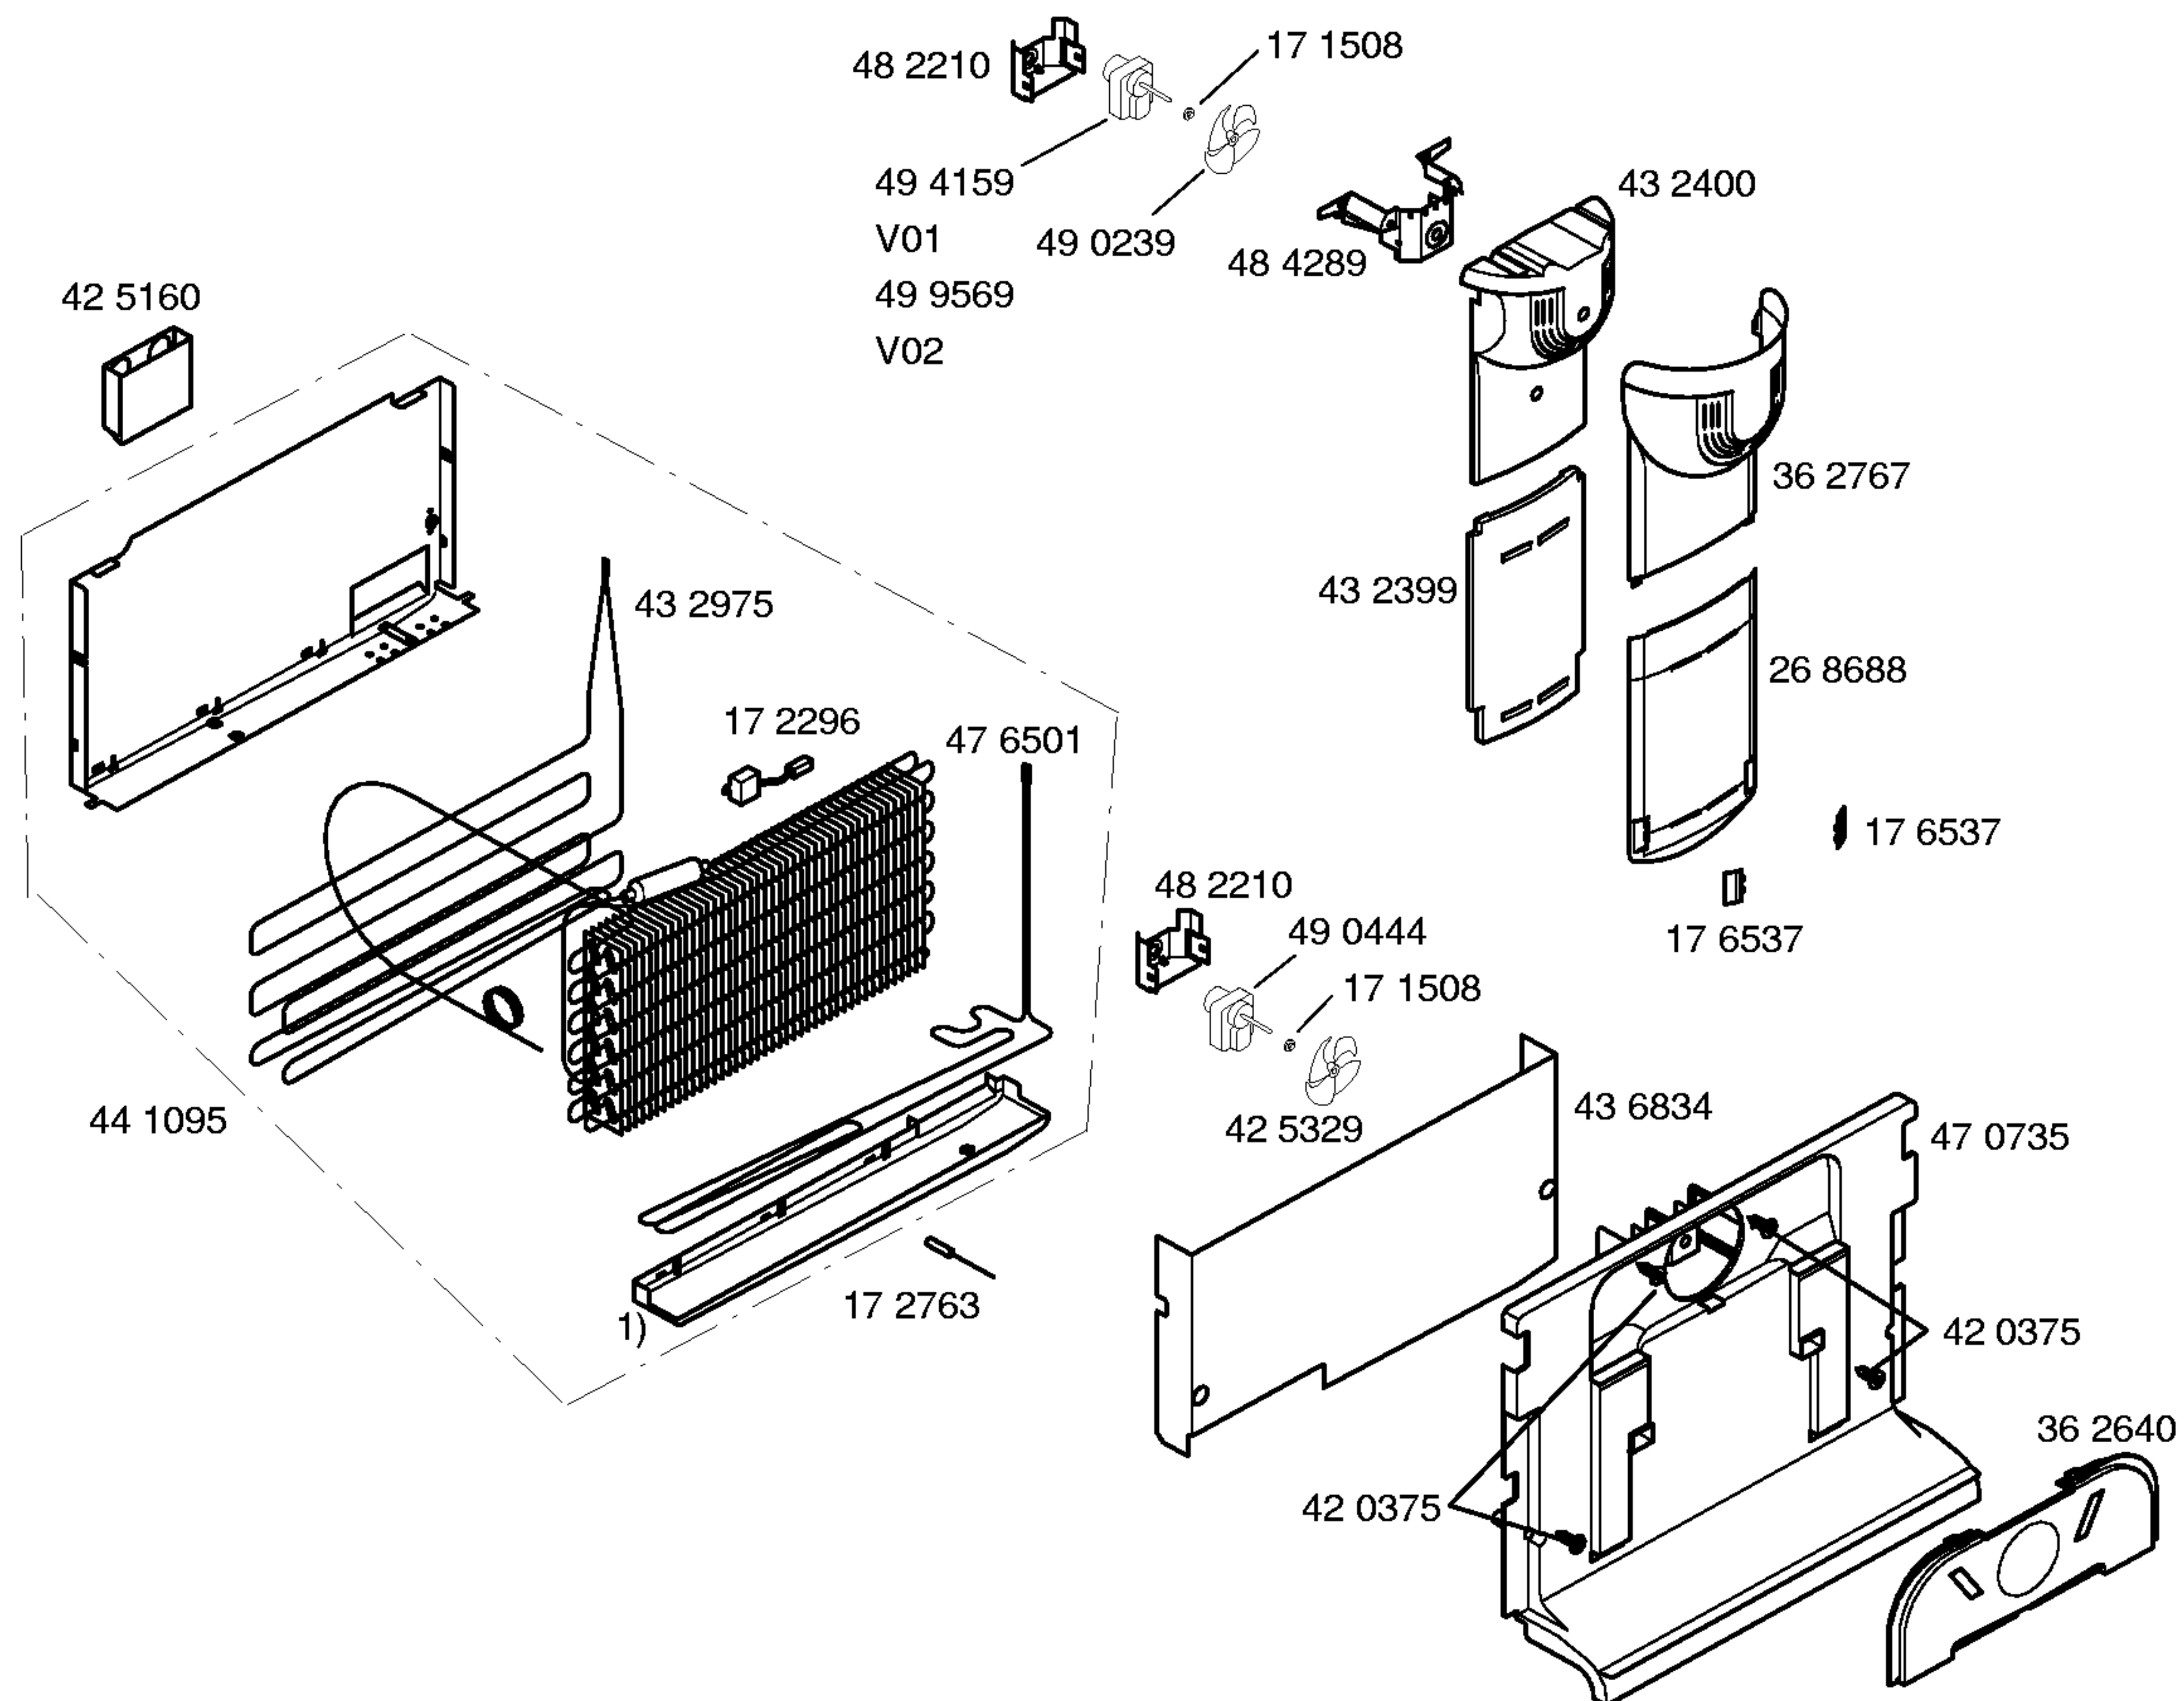

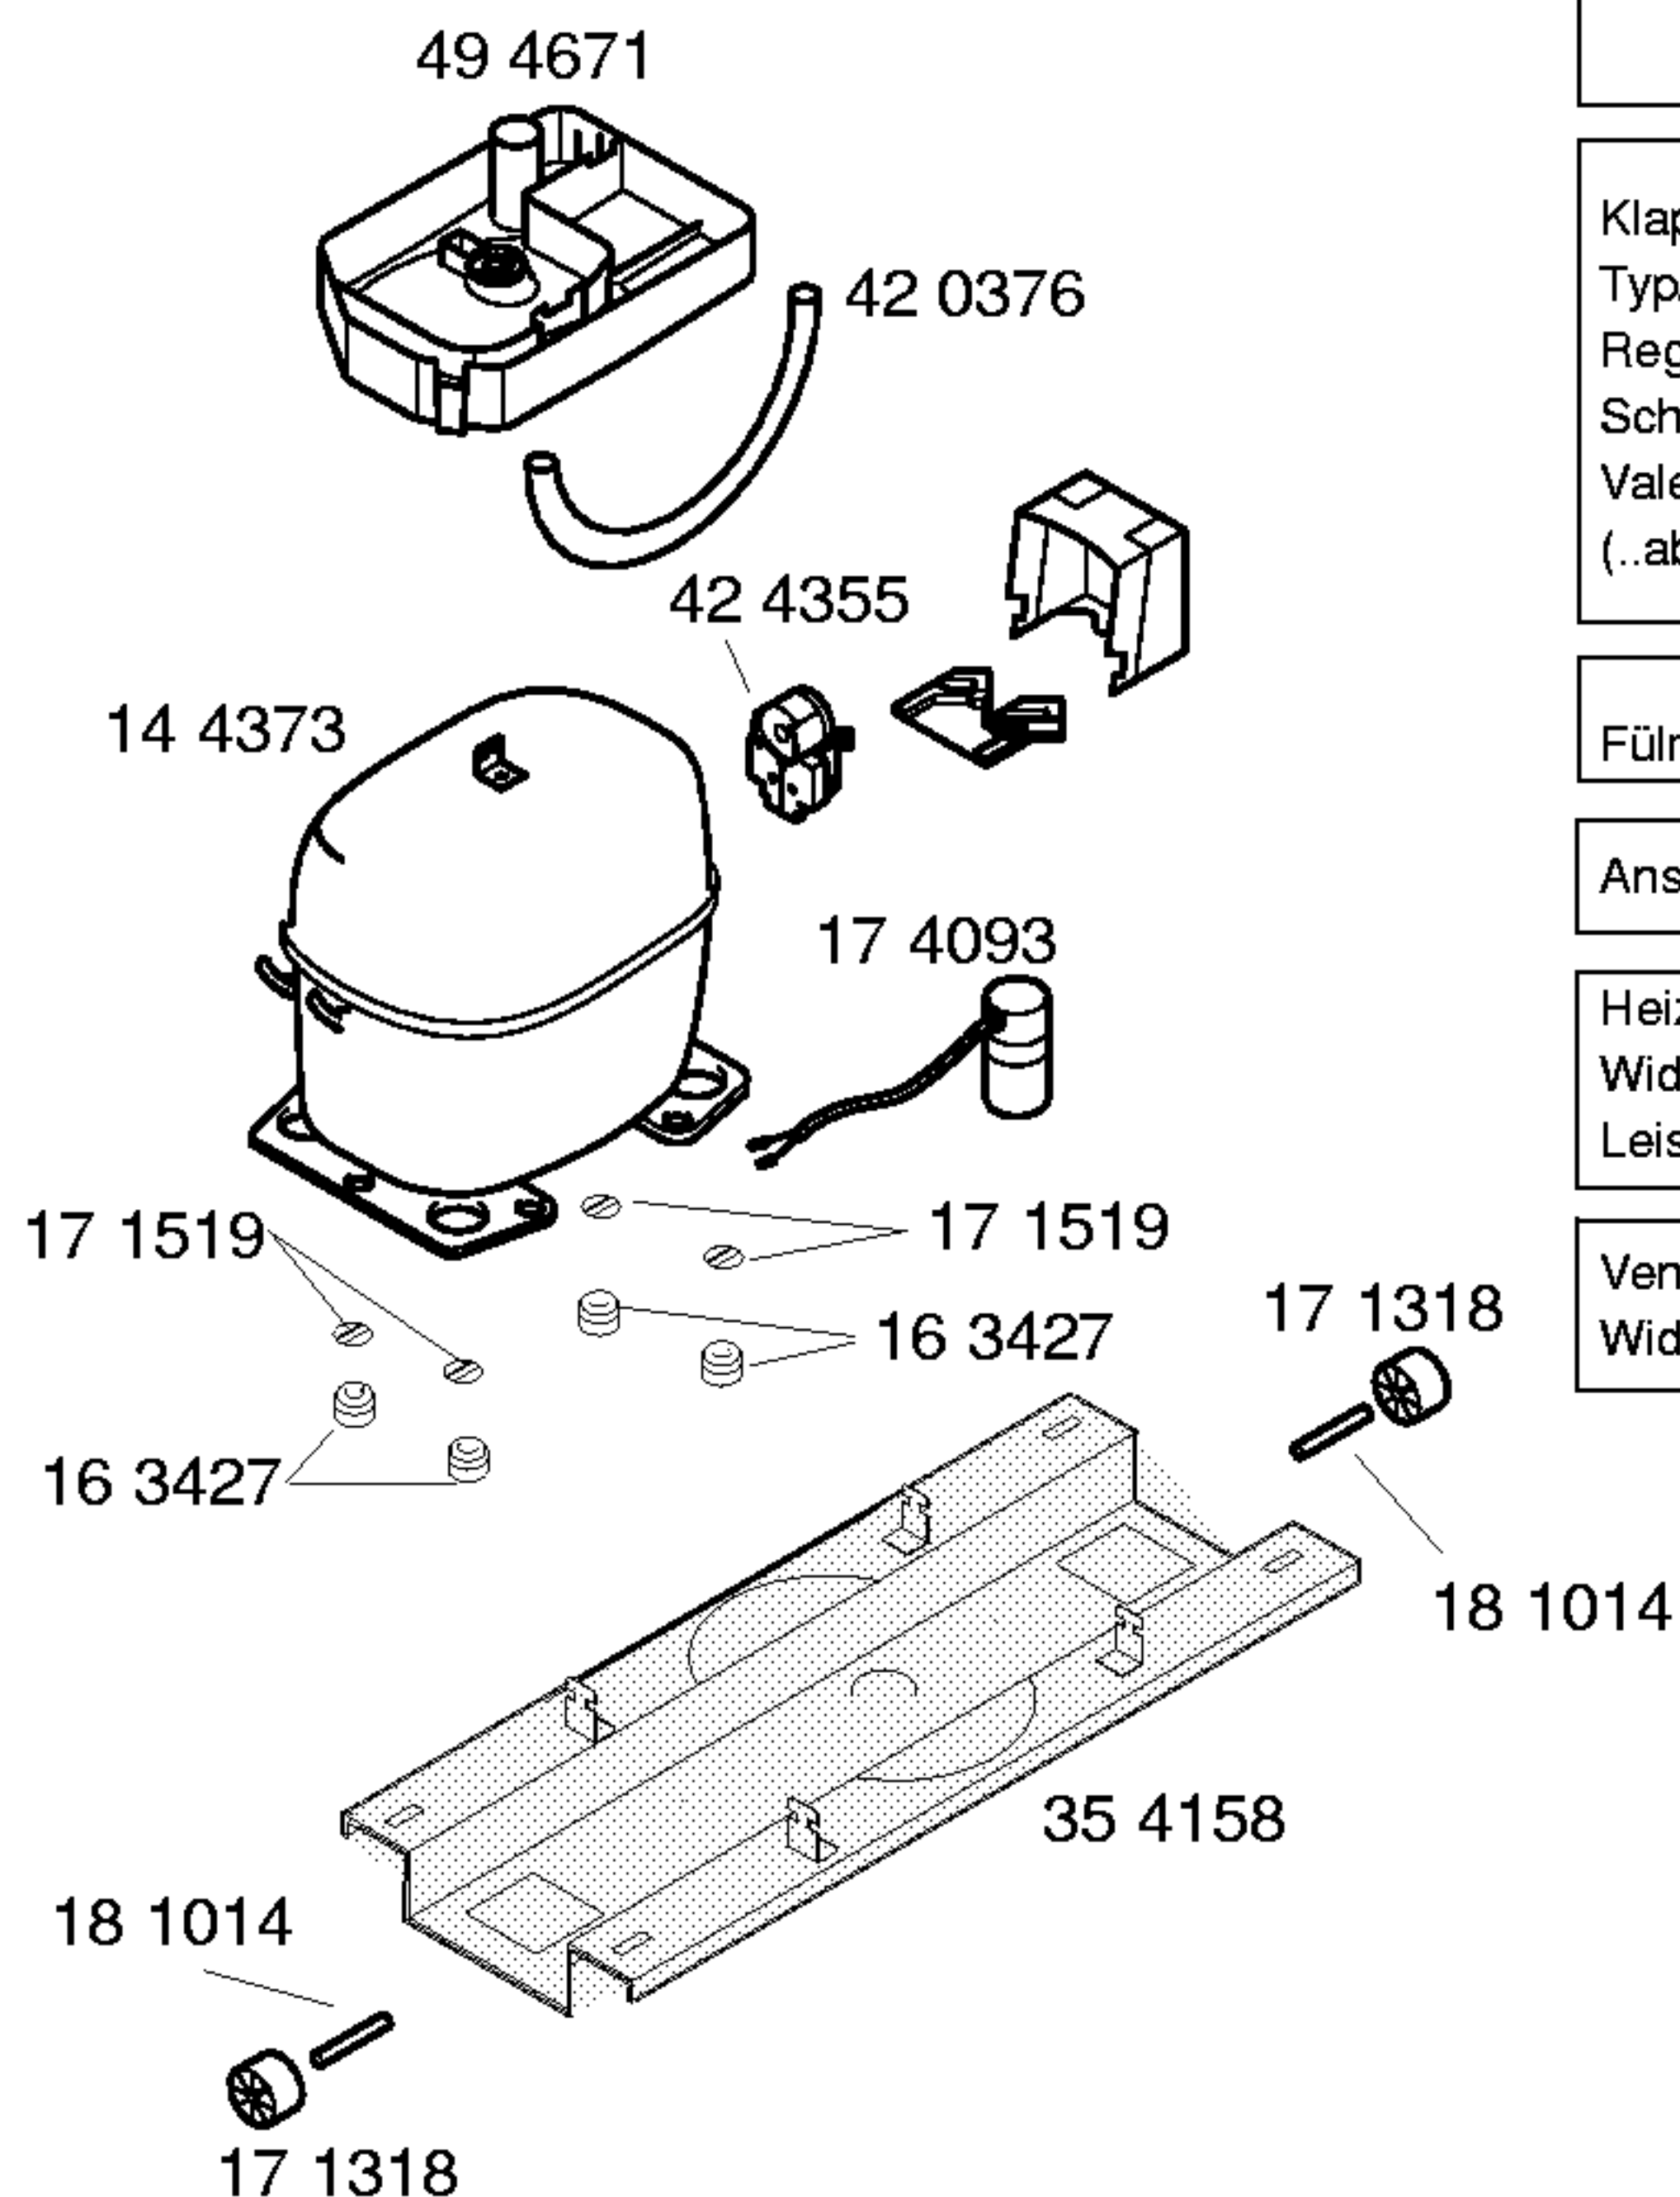

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour. démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NLX11KK2		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantity/Charge/Carga R600 g	49		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KΩ Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KΩ			