



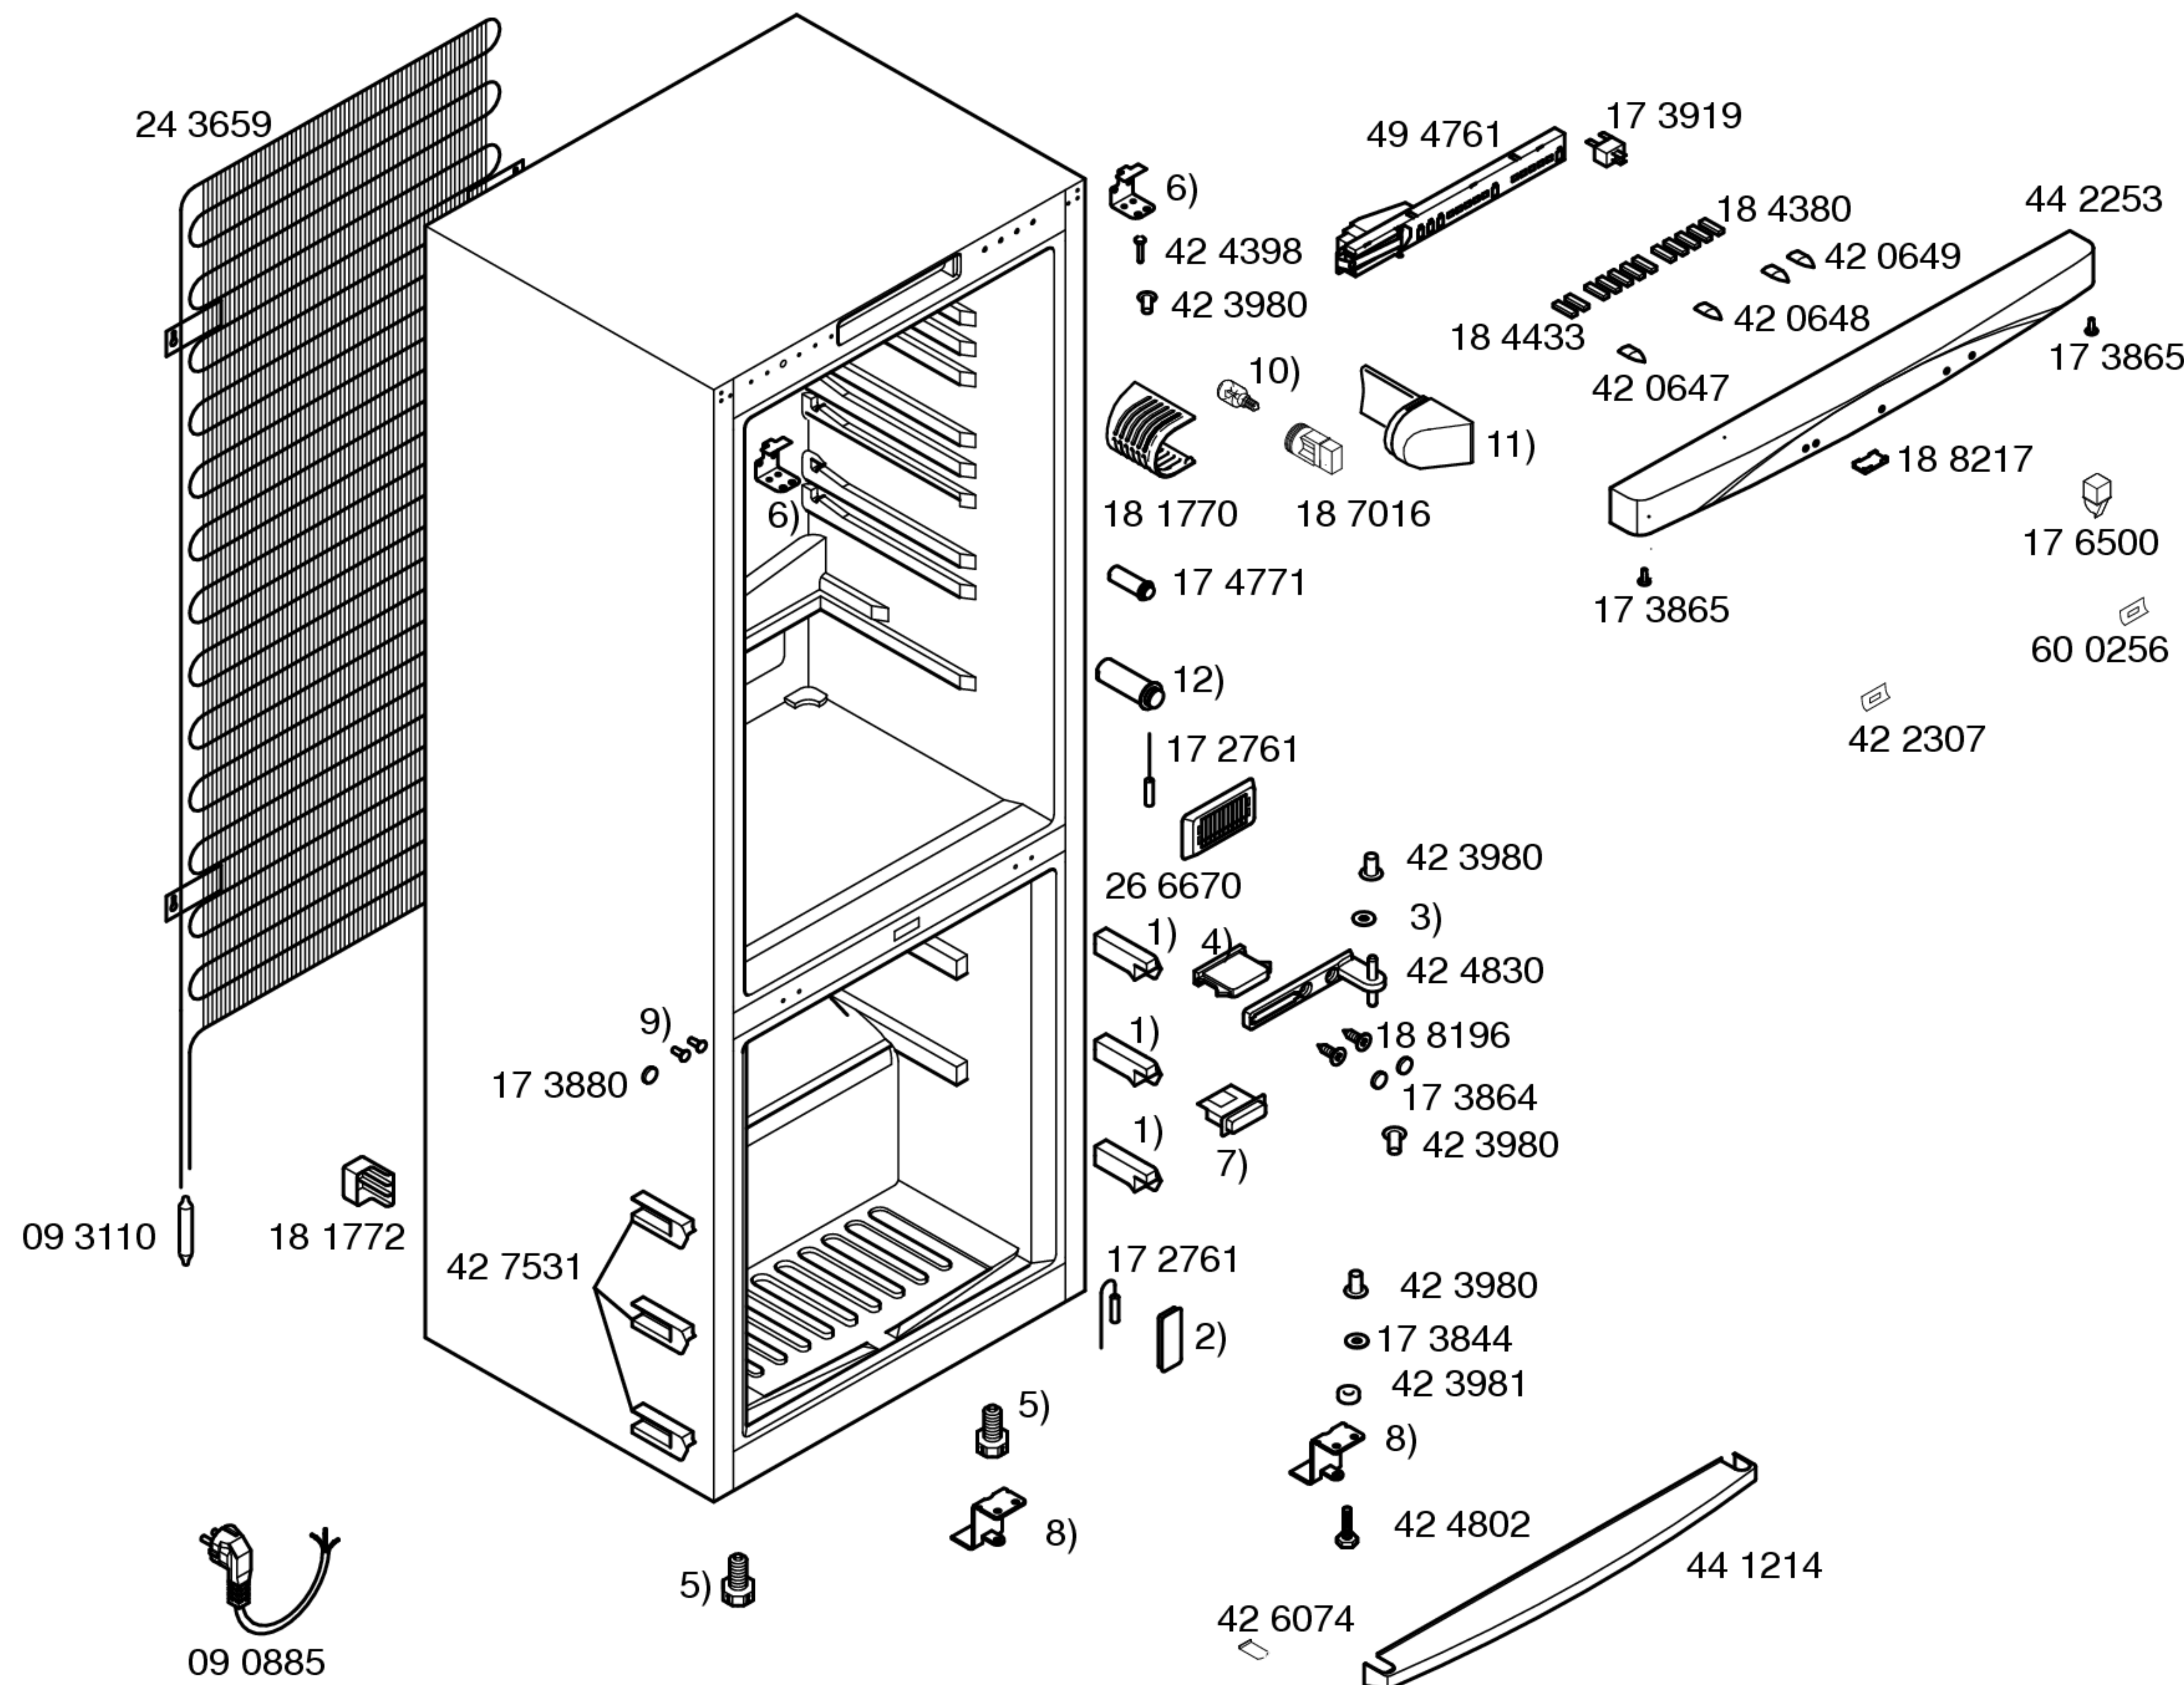


Gebrauchsanweisung
59 1422
(ES,PT)

- 1) 42 7532
 - 2) 17 2293
 - 3) 17 3844
 - 4) 41 8165
 - 5) 42 3754
 - 6) 17 1312
 - 7) 41 7908
 - 8) 42 8184
 - 9) 16 5552
 - 10) 17 0218
 - 11) 48 2971
 - 12) 42 5156
- V01,V02
60 5353
V03,V04

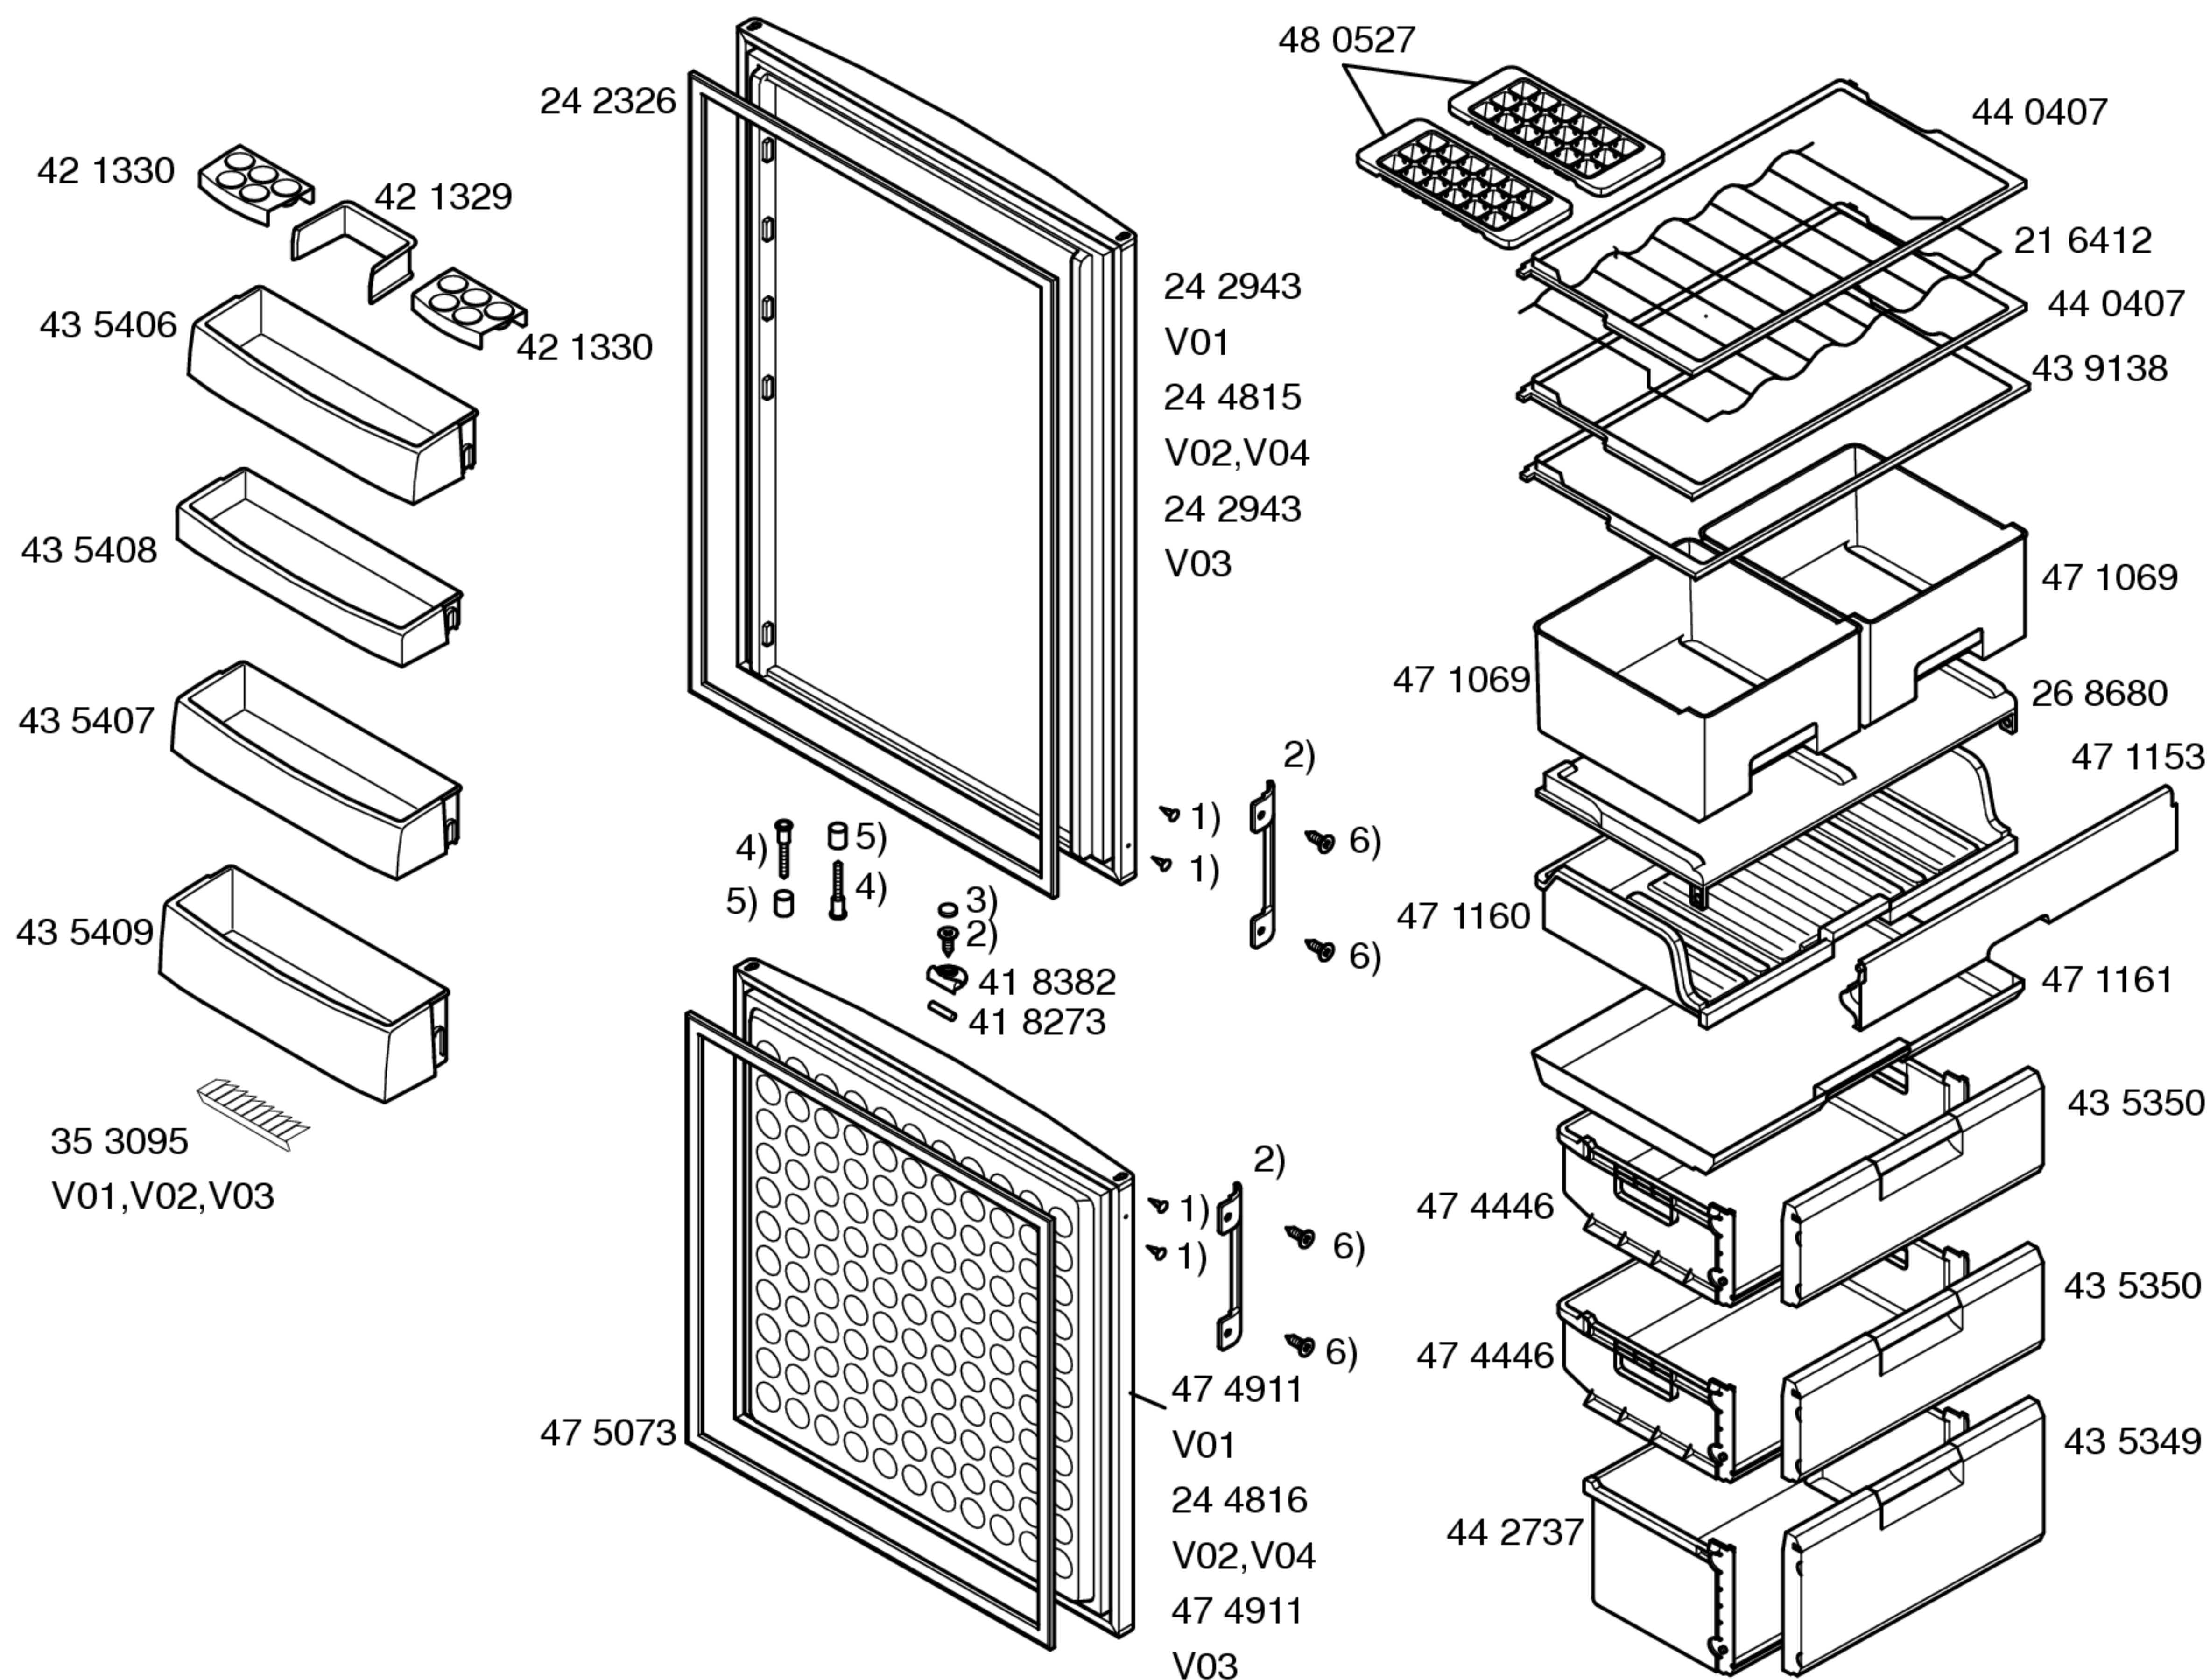

- 1) 17 3861
- 2) 49 2438
- 3) 17 3880
- 4) 18 8194
- 5) 18 8187
- 6) 60 1355

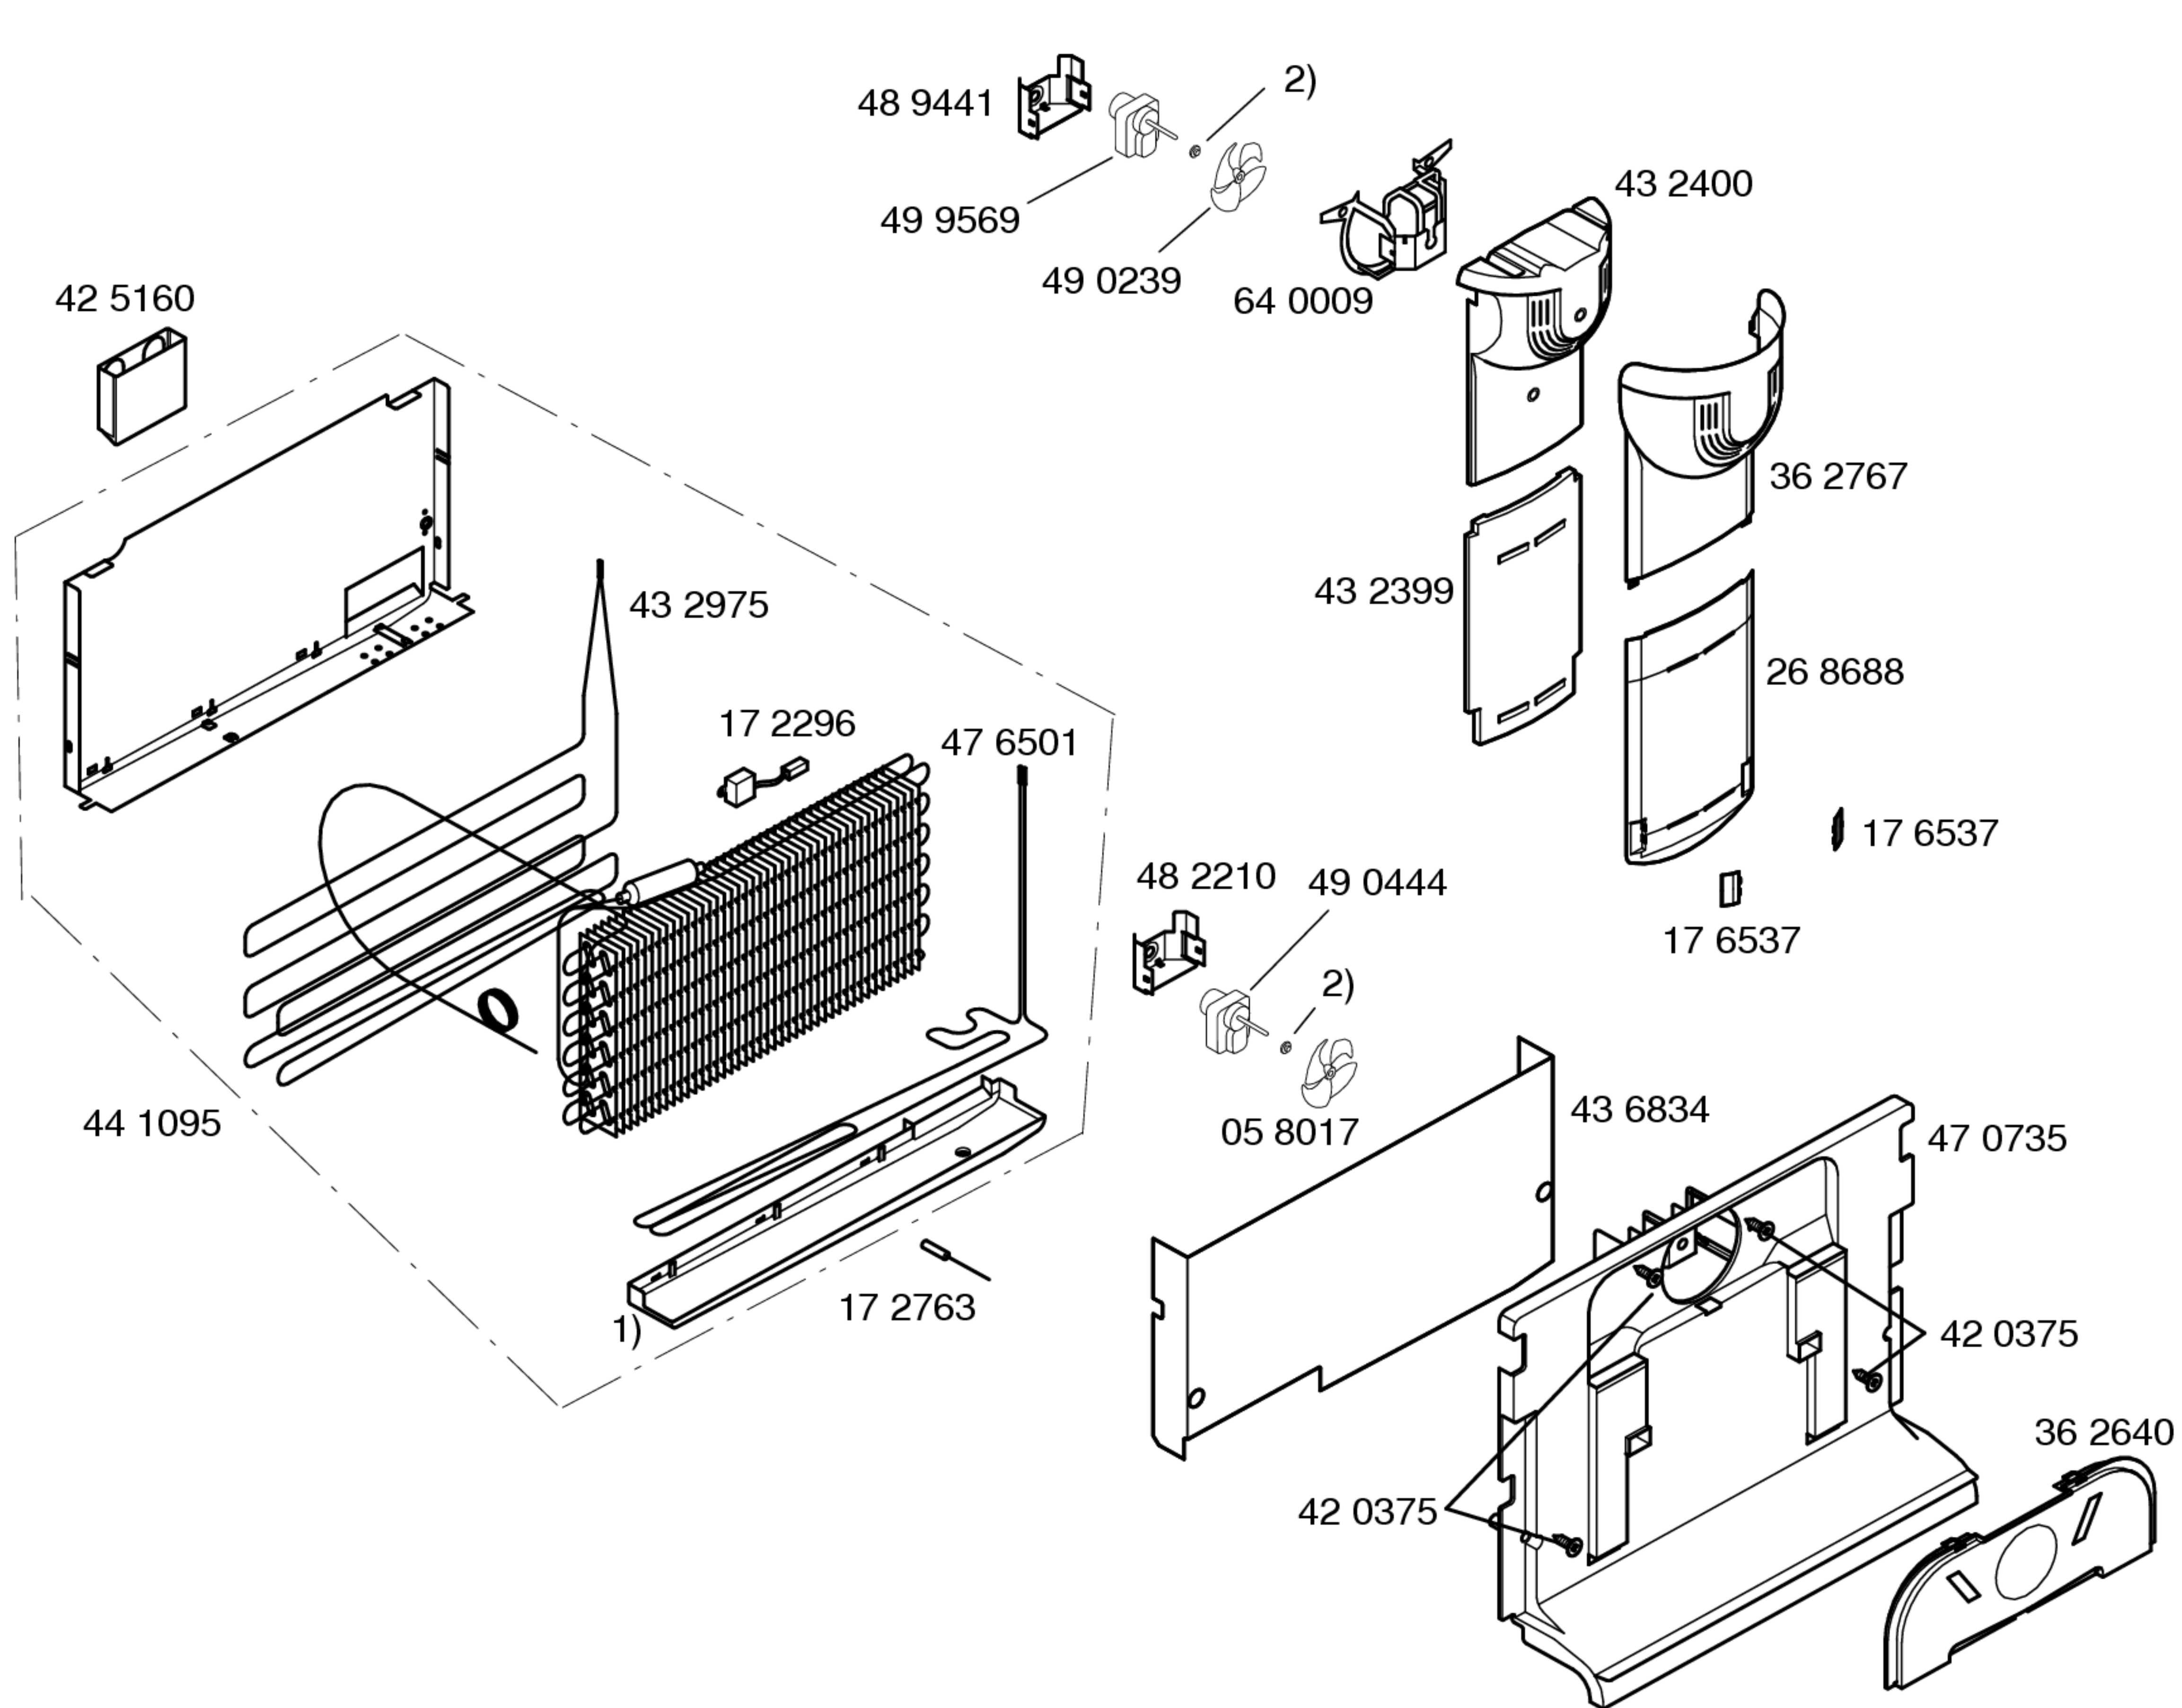

- 1) 43 2966
- 2) 17 1508
V01,V02
60 8327
V03,V04



3KF4836N/03-V01
3KF4836N/04-V02
3KF4836N/05-V03

3KF4836N/06-V04

Combis libre instalac.
De libre instalac. >= 60 cm anchura

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor	Danfoss		
Typ/Type/Tipo	NLX11KK2		
Leistung/Power/Puissance/Potencia	W		
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque	A	6.4	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		18.5	
Hi/aux.		31.8	
Klape Therm./Thermostat/Termostat			
Typ/Type/Tipo			
Reglerstellung/Position/Conexión			
Schaltwerte/Switching values/	..ein/conex.°C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R600	g	49	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chauflage/Resistenc.descong.		Verdampfer	Ablaufrinne
Widerstand/Resistance/Resistencia	KΩ		
Leistung/Power/Puissance/Potencia	W	267	81
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	KΩ		

