




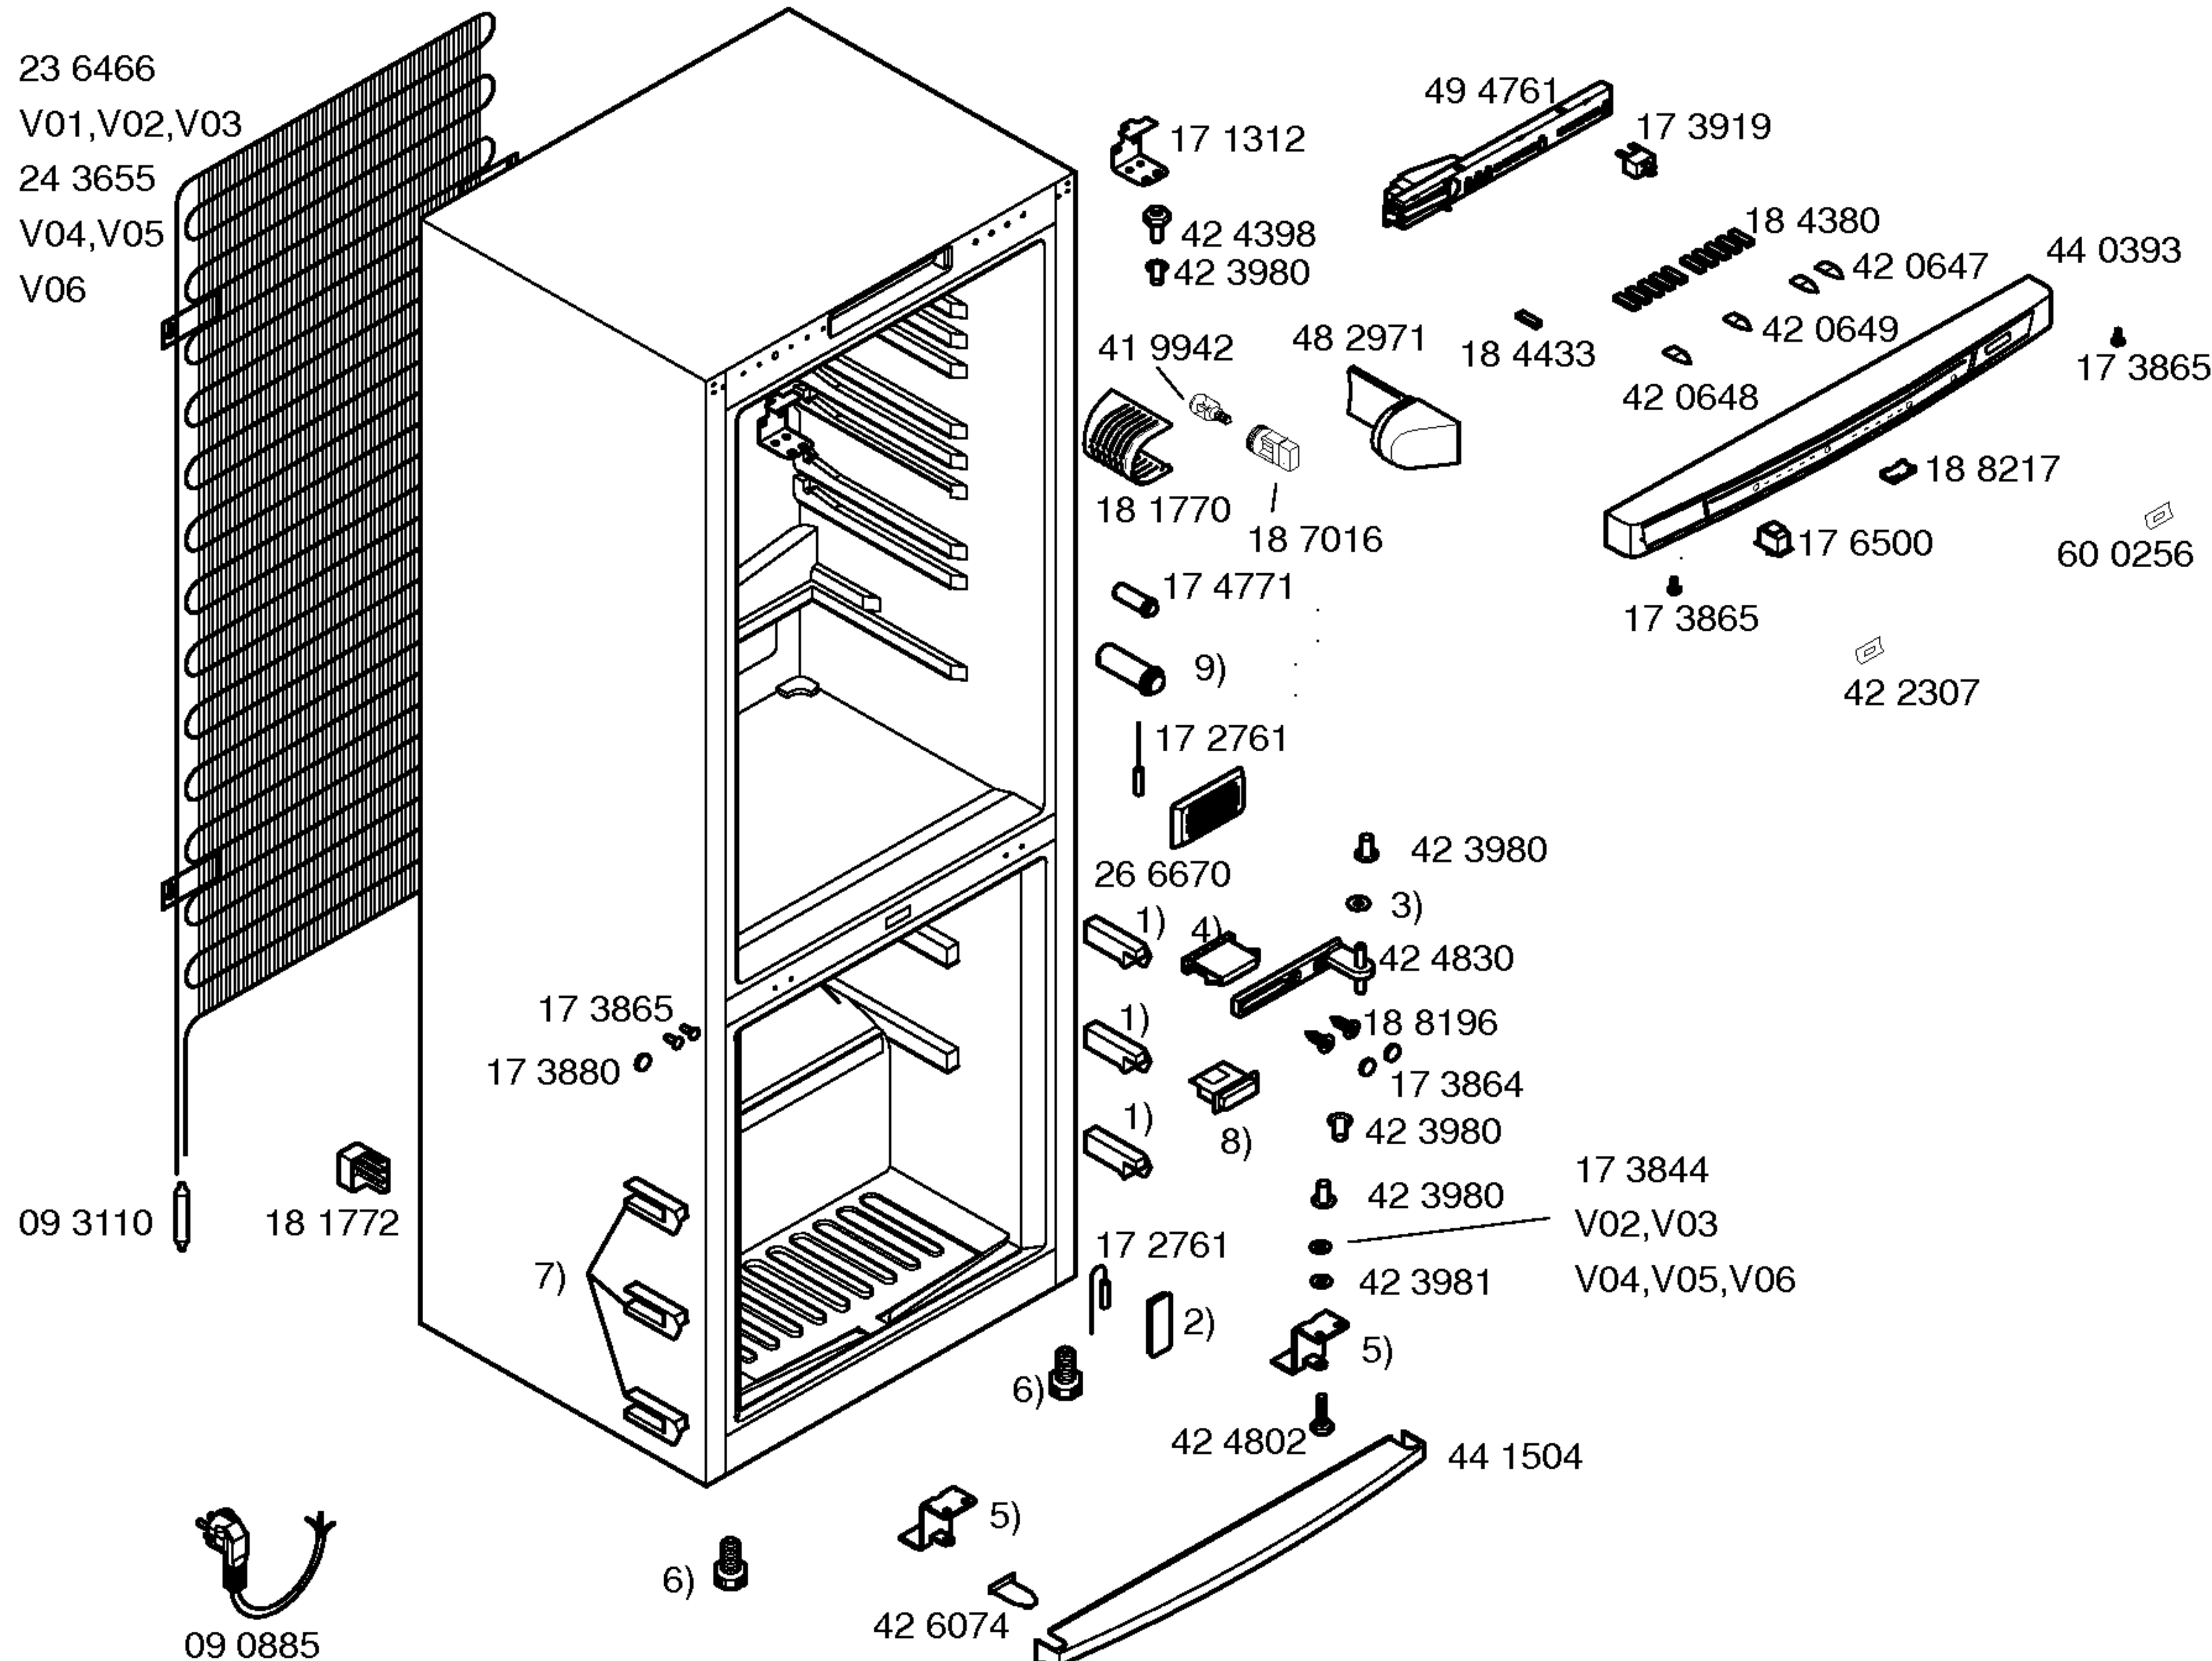


Gebrauchsanweisung
 59 1422
 (ES,PT)

- 1) 17 2579
 V01
 42 7532
 V02,V03,V04,V05
 V06
- 2) 17 2293
- 3) 17 3844
- 4) 41 8165
- 5) 42 4801
 V01
 42 8184
 V02,V03,V04,V05
 V06
- 6) 42 4340
- 7) 17 2578
 V01,V02
 42 7531
 V03,V04,V05,V06
- 8) 41 8381
- 9) 42 5156
 V01,V02,V03,V04
 V05
 60 5353
 V06

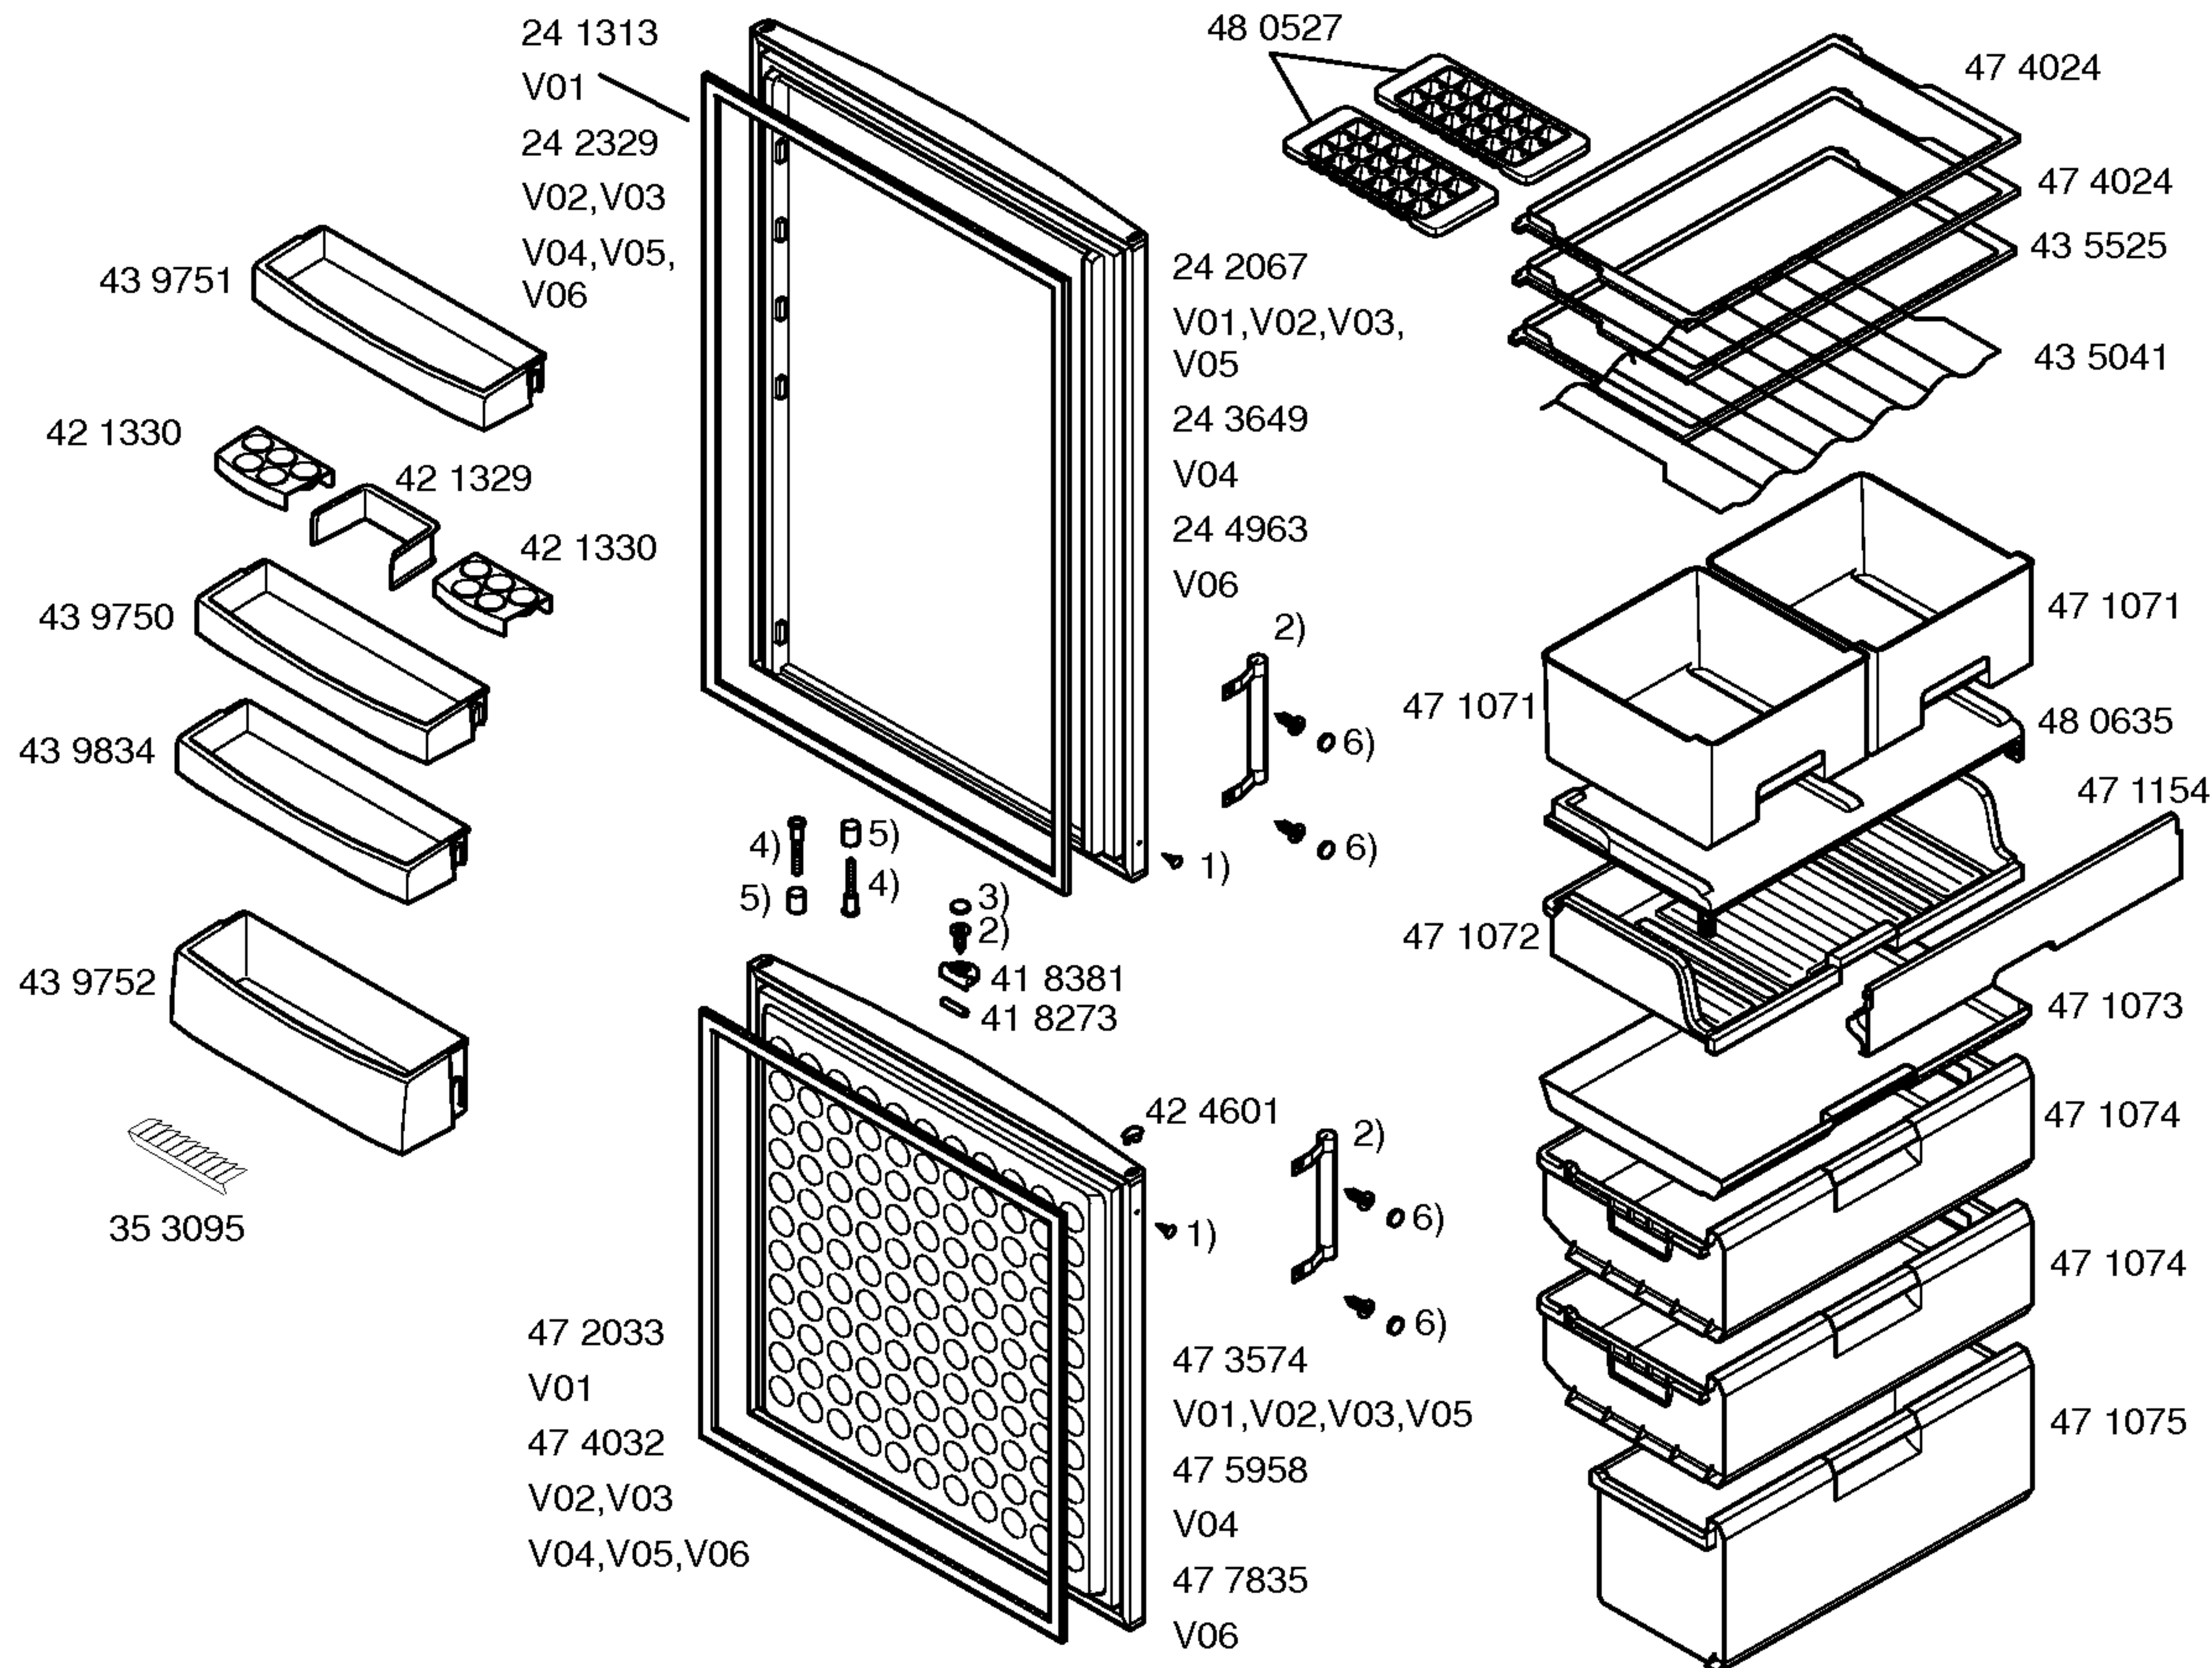

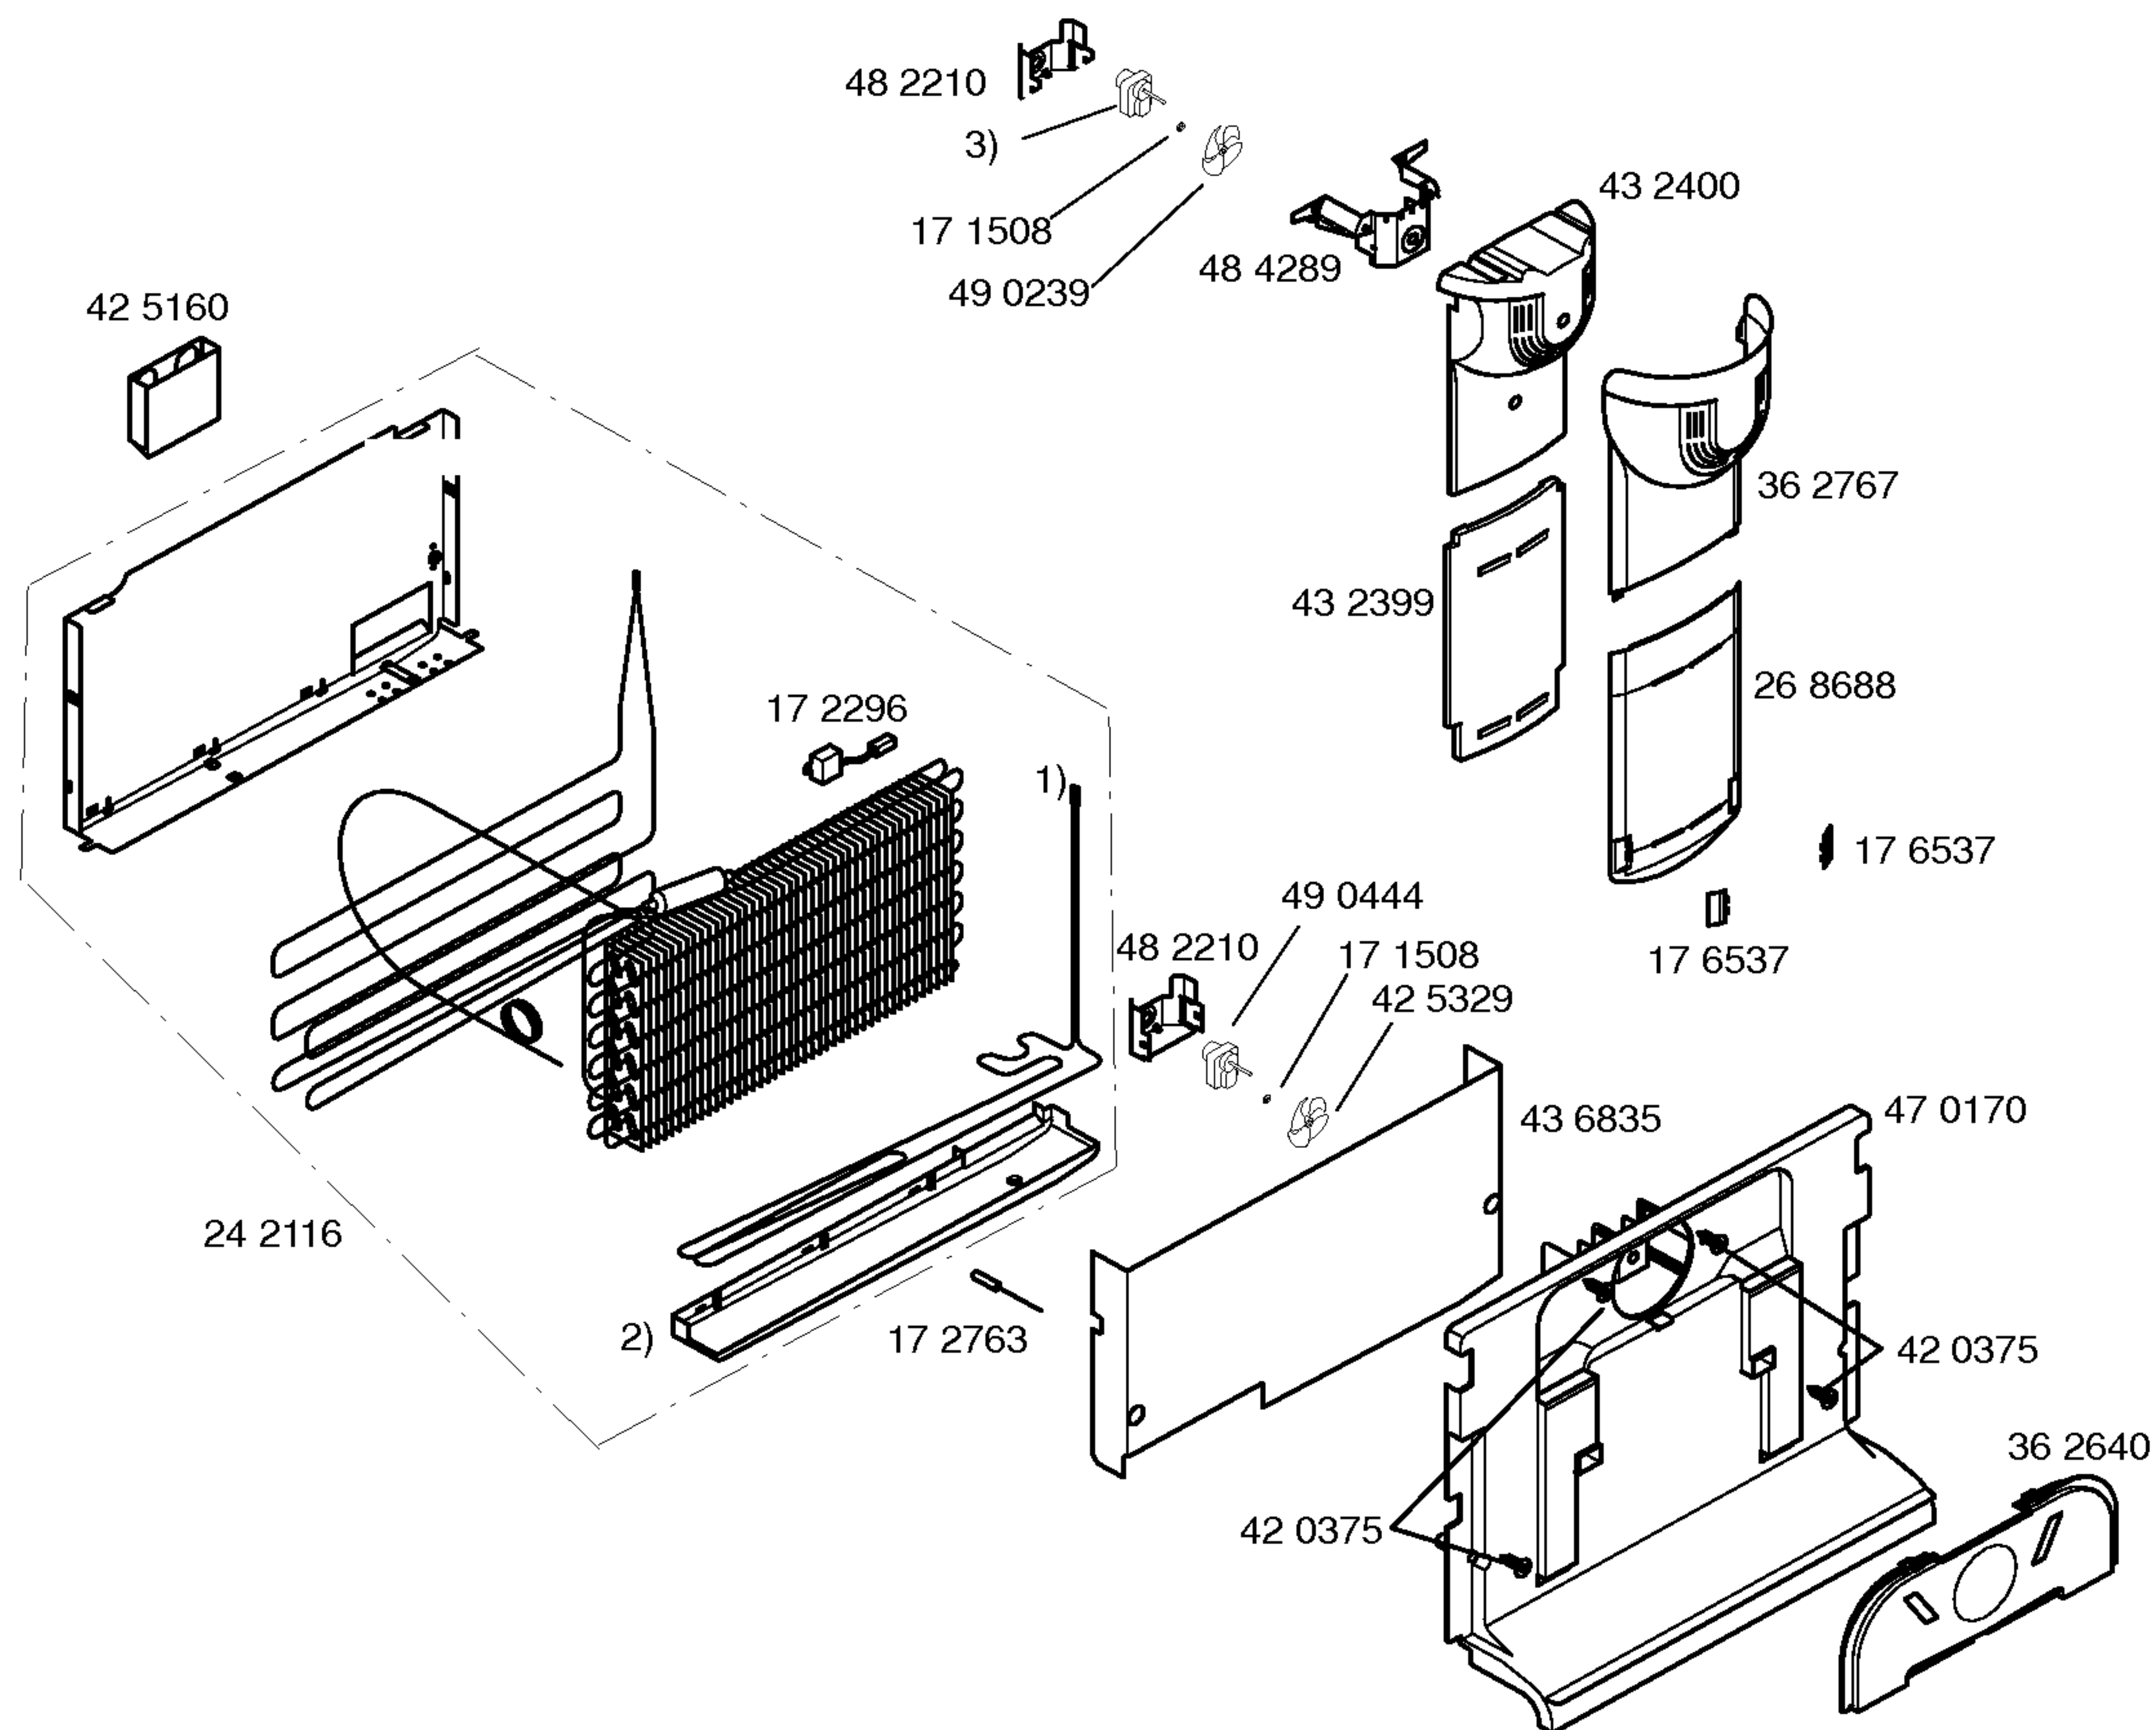

- 1) 47 4021
 - 2) 43 2396
 - 3) 49 4159
- V01,V02,V03,V04
 V05
 49 9569
 V06

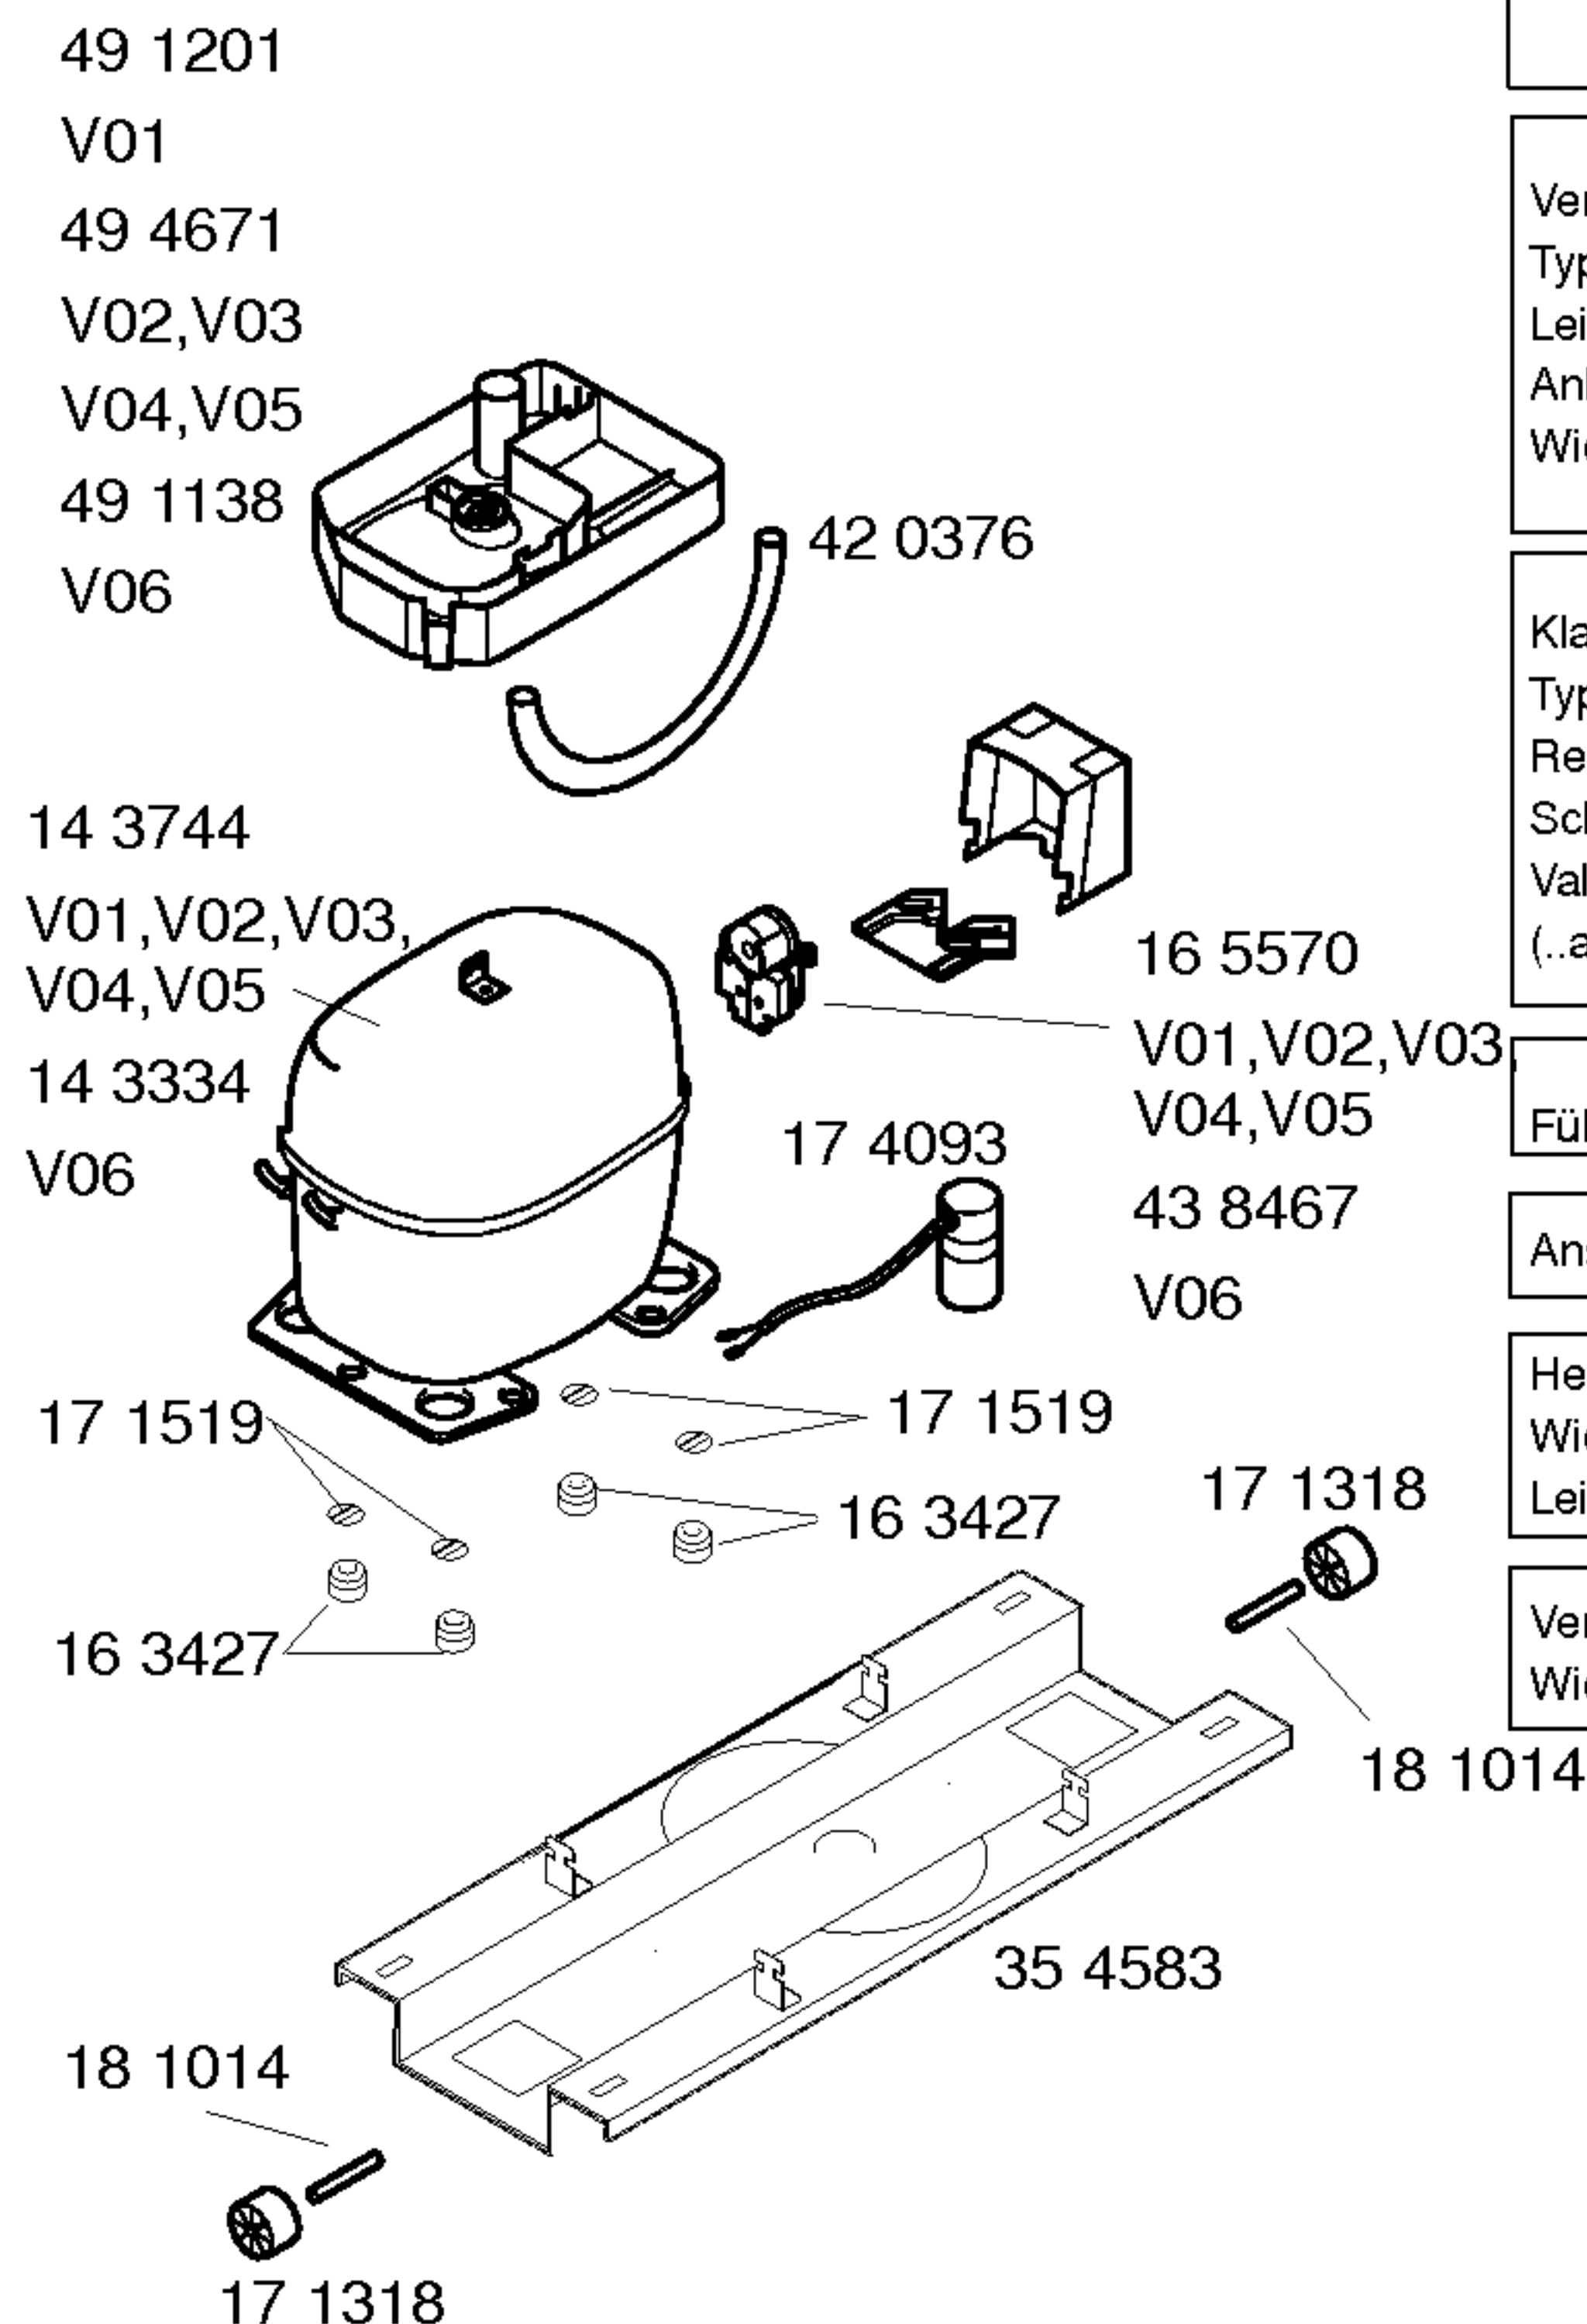

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
	V01,V02,V03 V04,V05	V06	
Verdichter/Compressor/Compresseur/Compresor	Danfoss NLX15 KK	Aspera NBT1118	
Typ/Type/Tipo			
Leistung/Power/Puissance/Potencia	W	181	
Anlaufstromm/Starting current/Cour.démarrage/Int.arranque	A	5,8	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		11,5	
Hi/aux.		12,7	
Klape Therm./Thermostat/Termostat			
Typ/Type/Tipo			
Reglerstellung/Position/Conexión			
Schaltwerte/Switching values/	..ein/conex.°C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R600	g	65	65
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	KW		
Leistung/Power/Puissance/Potencia	W		
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	KW		