


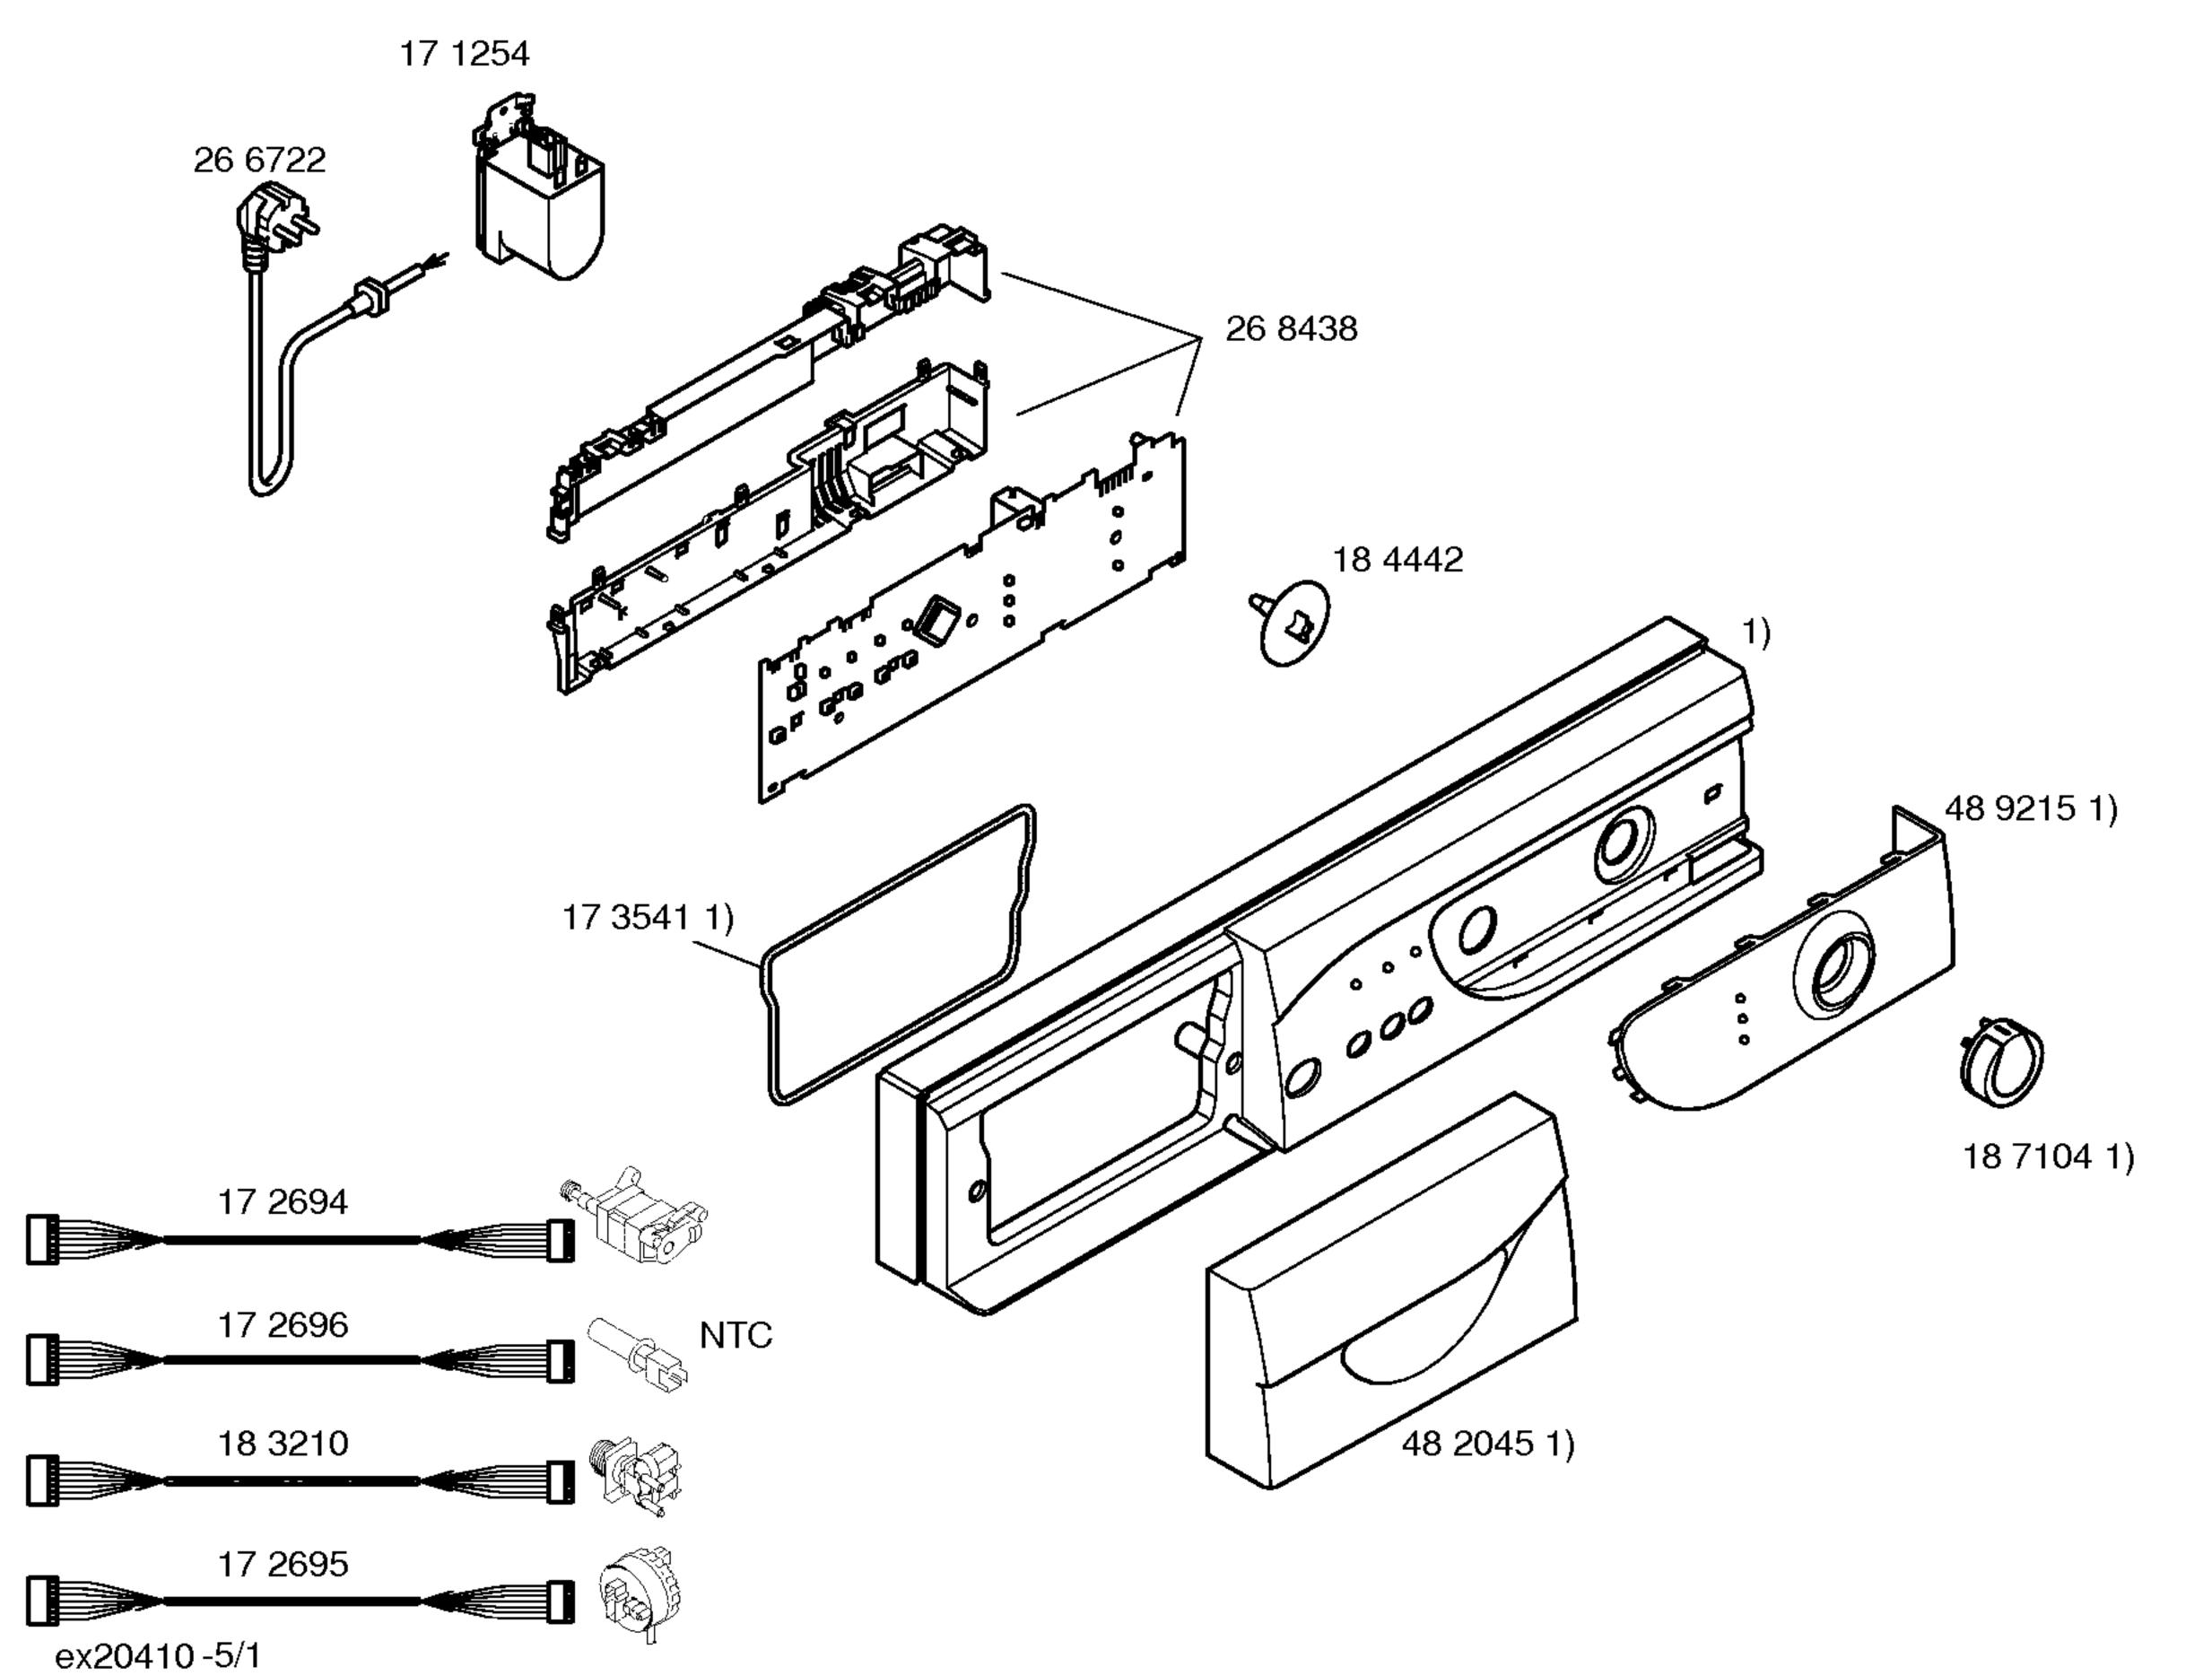

TE745 - 3TE745A/01-V01

TE745 - 3TE745A/60-V02




Instrucciones de uso 58 4076 (es,pt)

Tabla de programas 41 8353 (es) 41 8354 (pt)

1) 43 2054




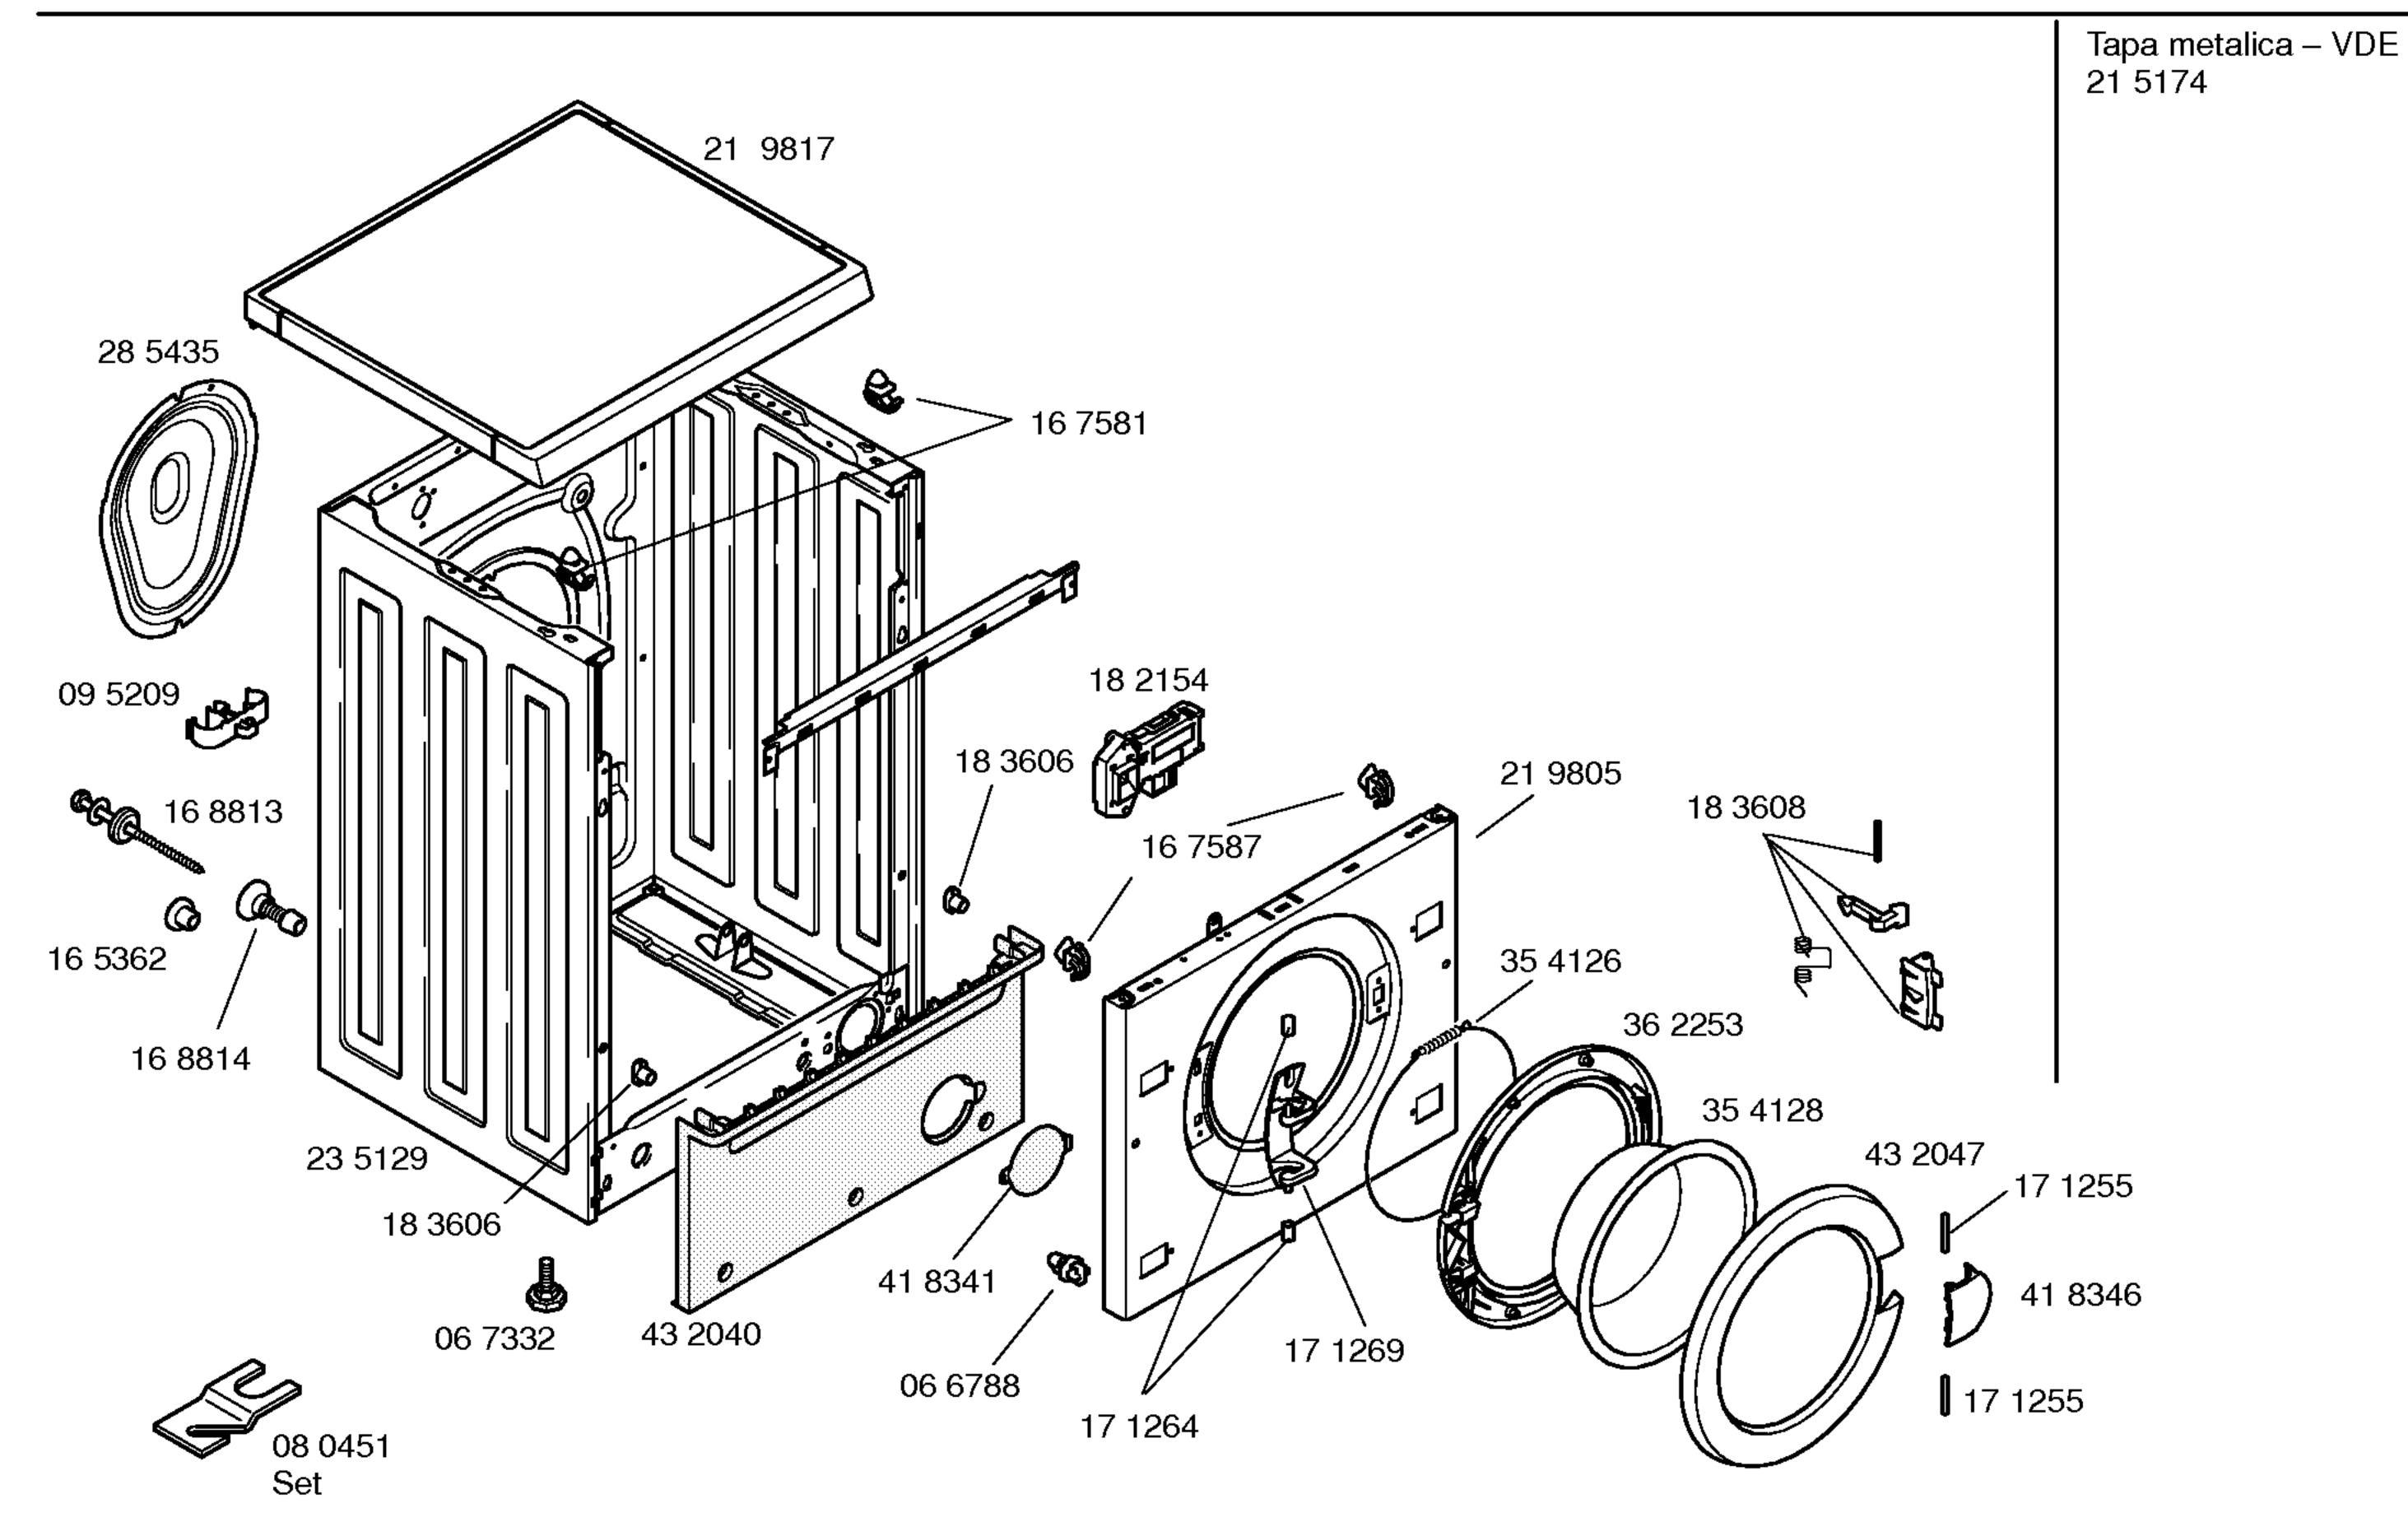





TE745 - 3TE745A/01-V01

TE745 - 3TE745A/60-V02

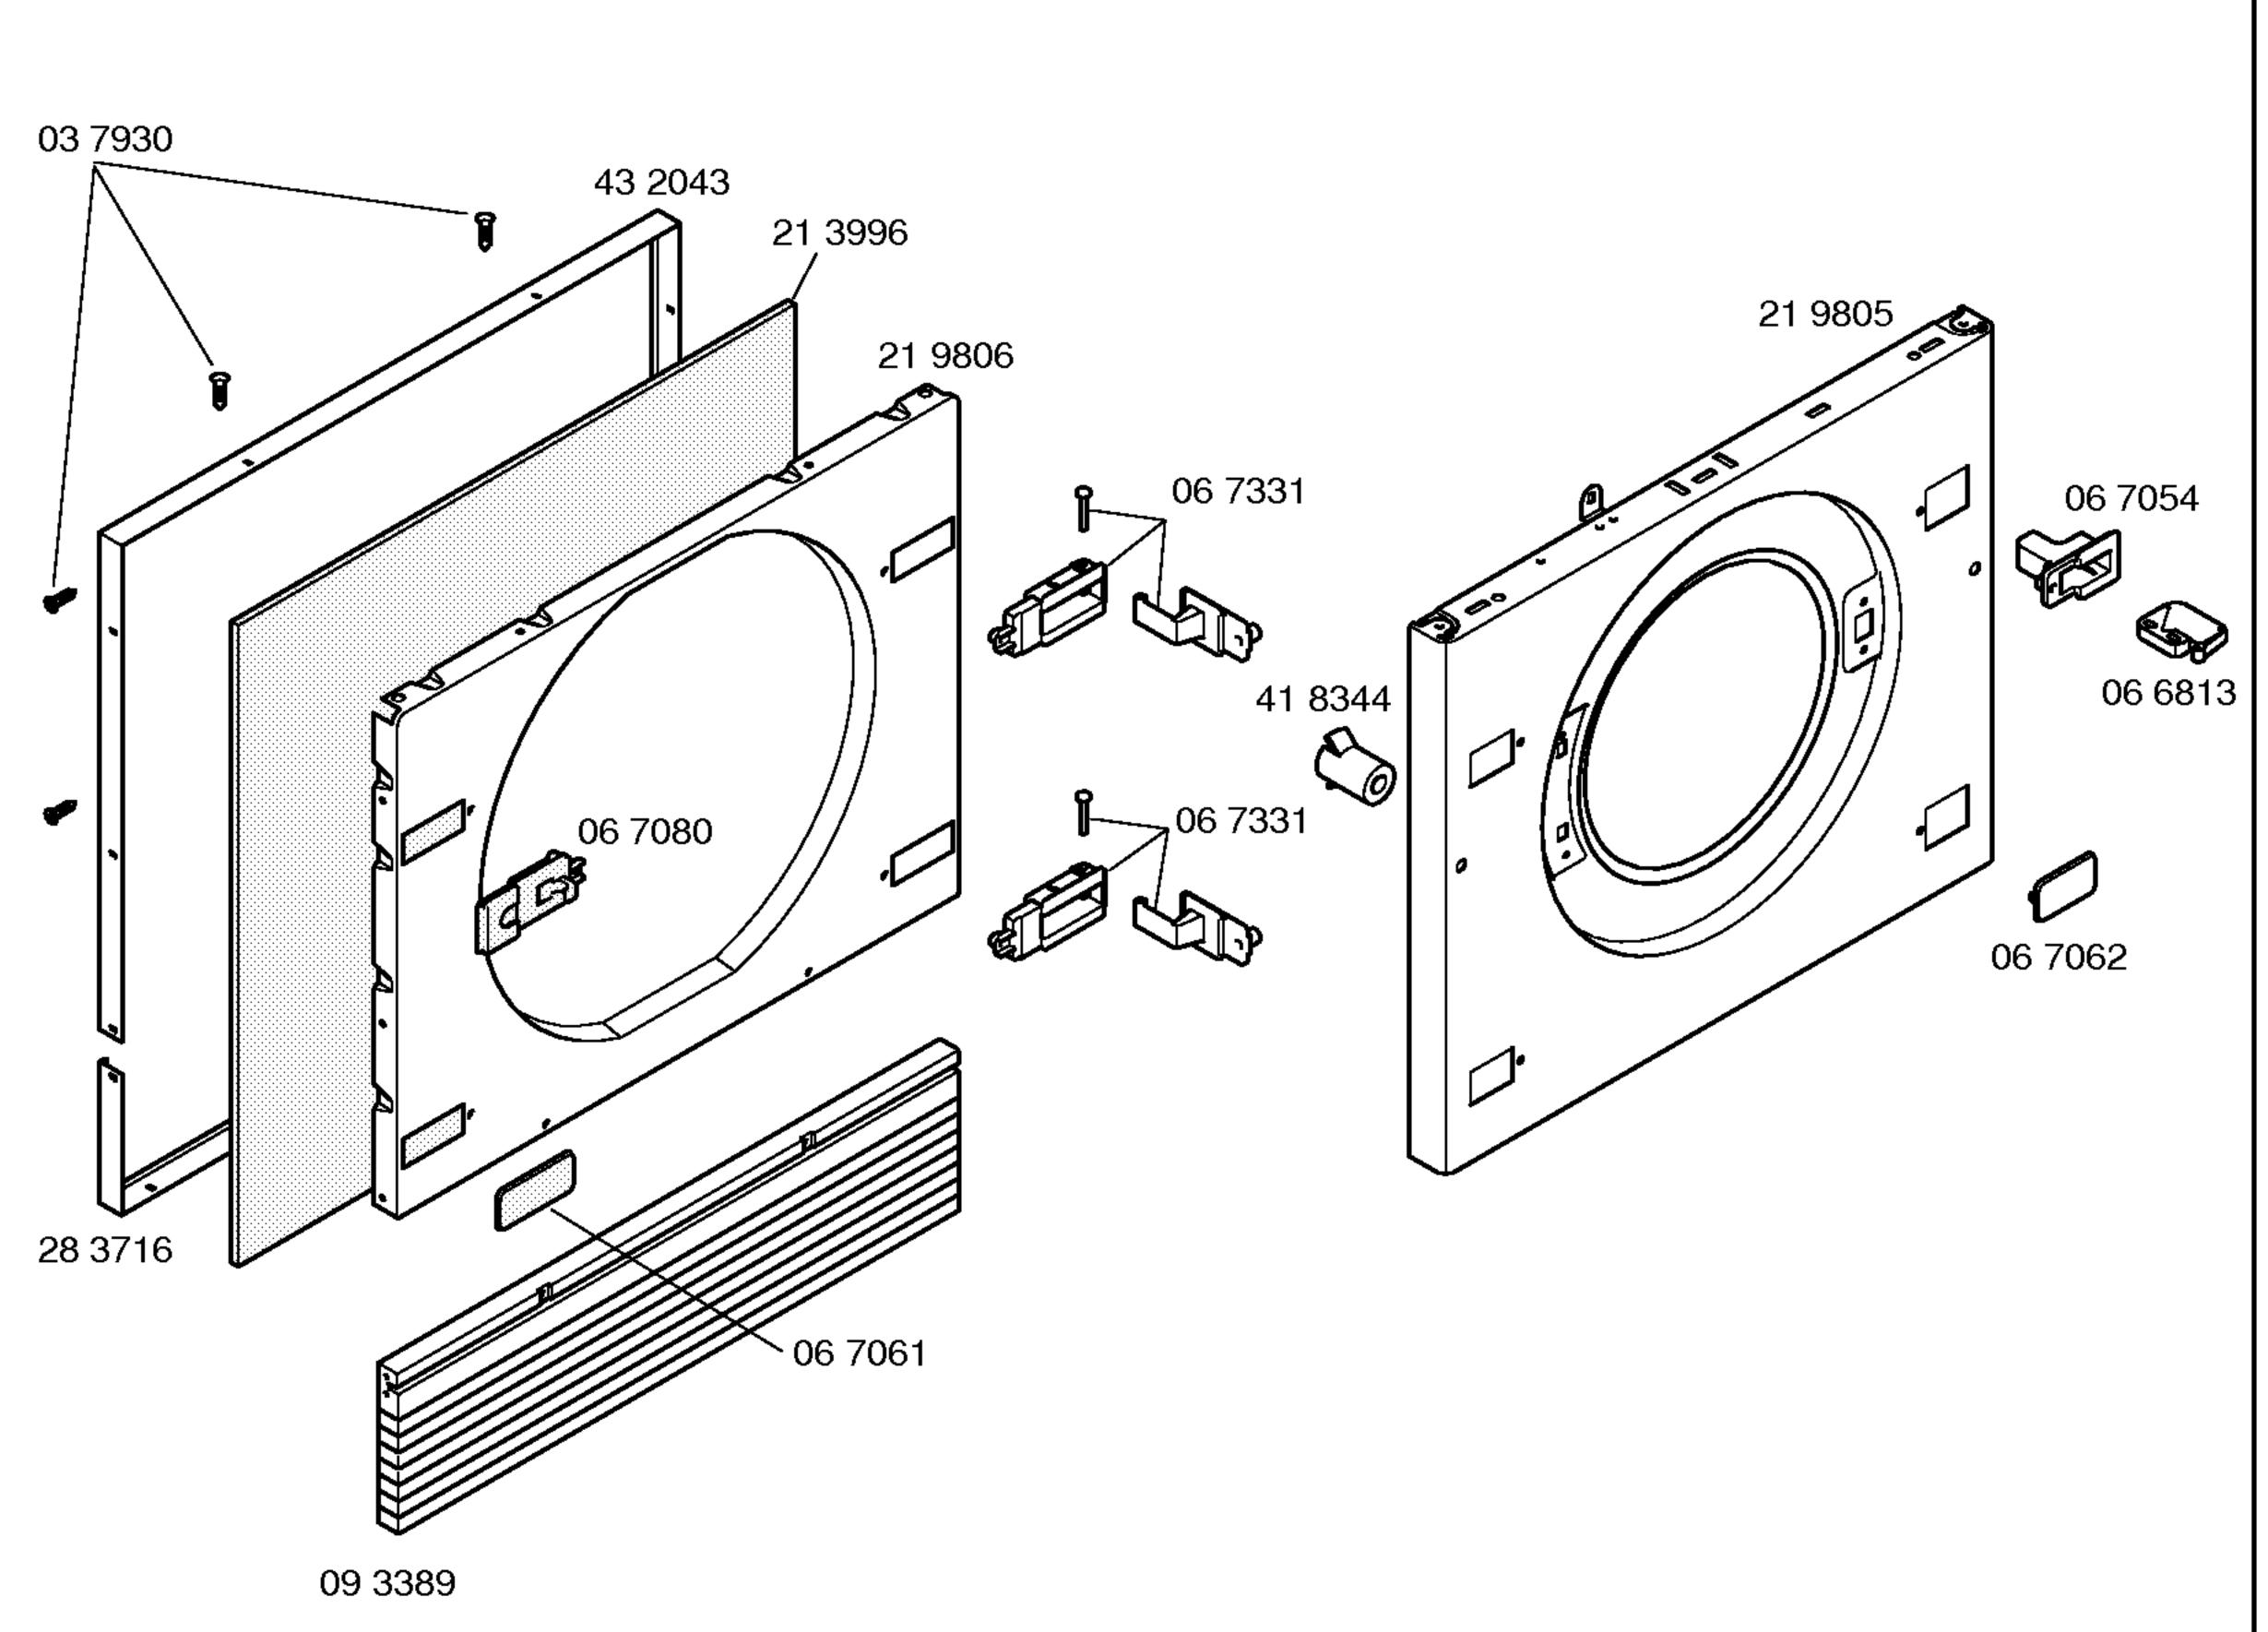



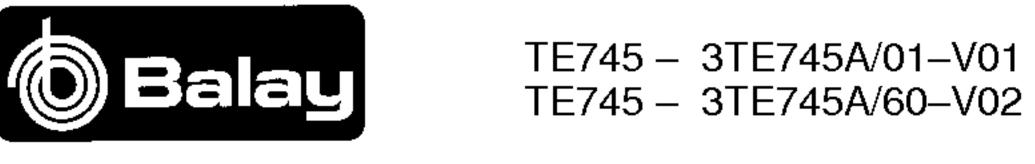

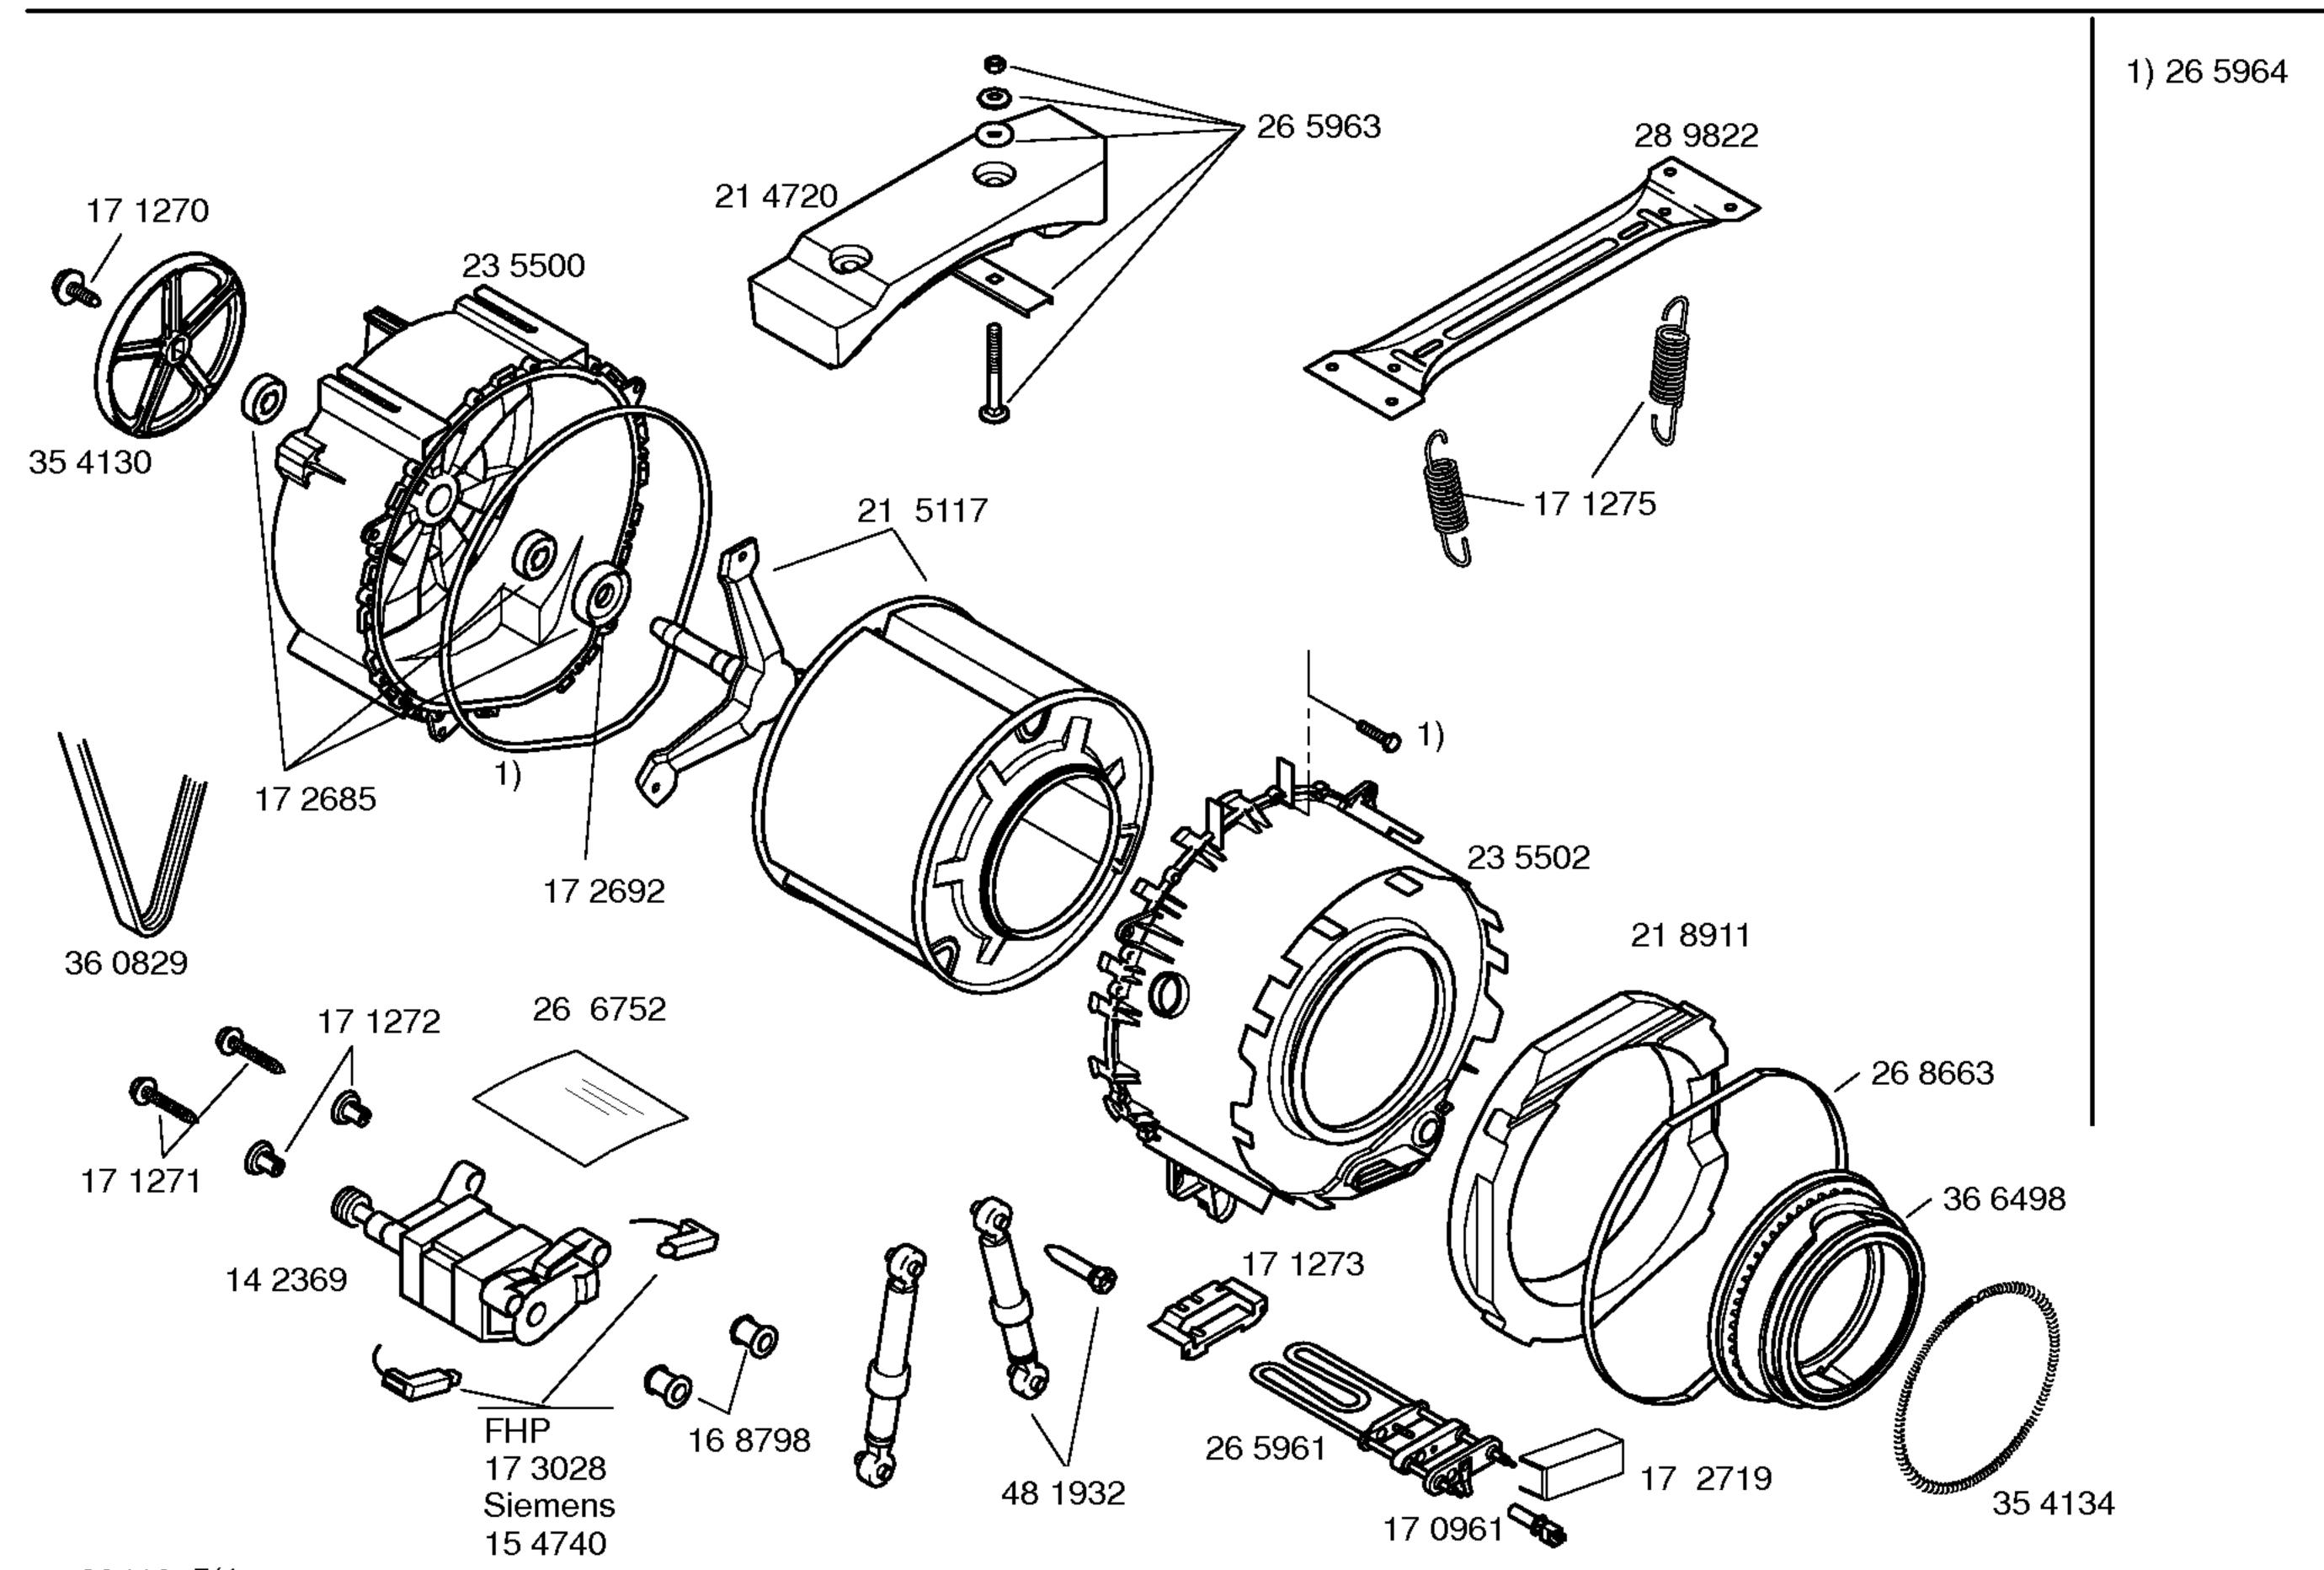



TE745 - 3TE745A/01-V01

TE745 - 3TE745A/60-V02

