


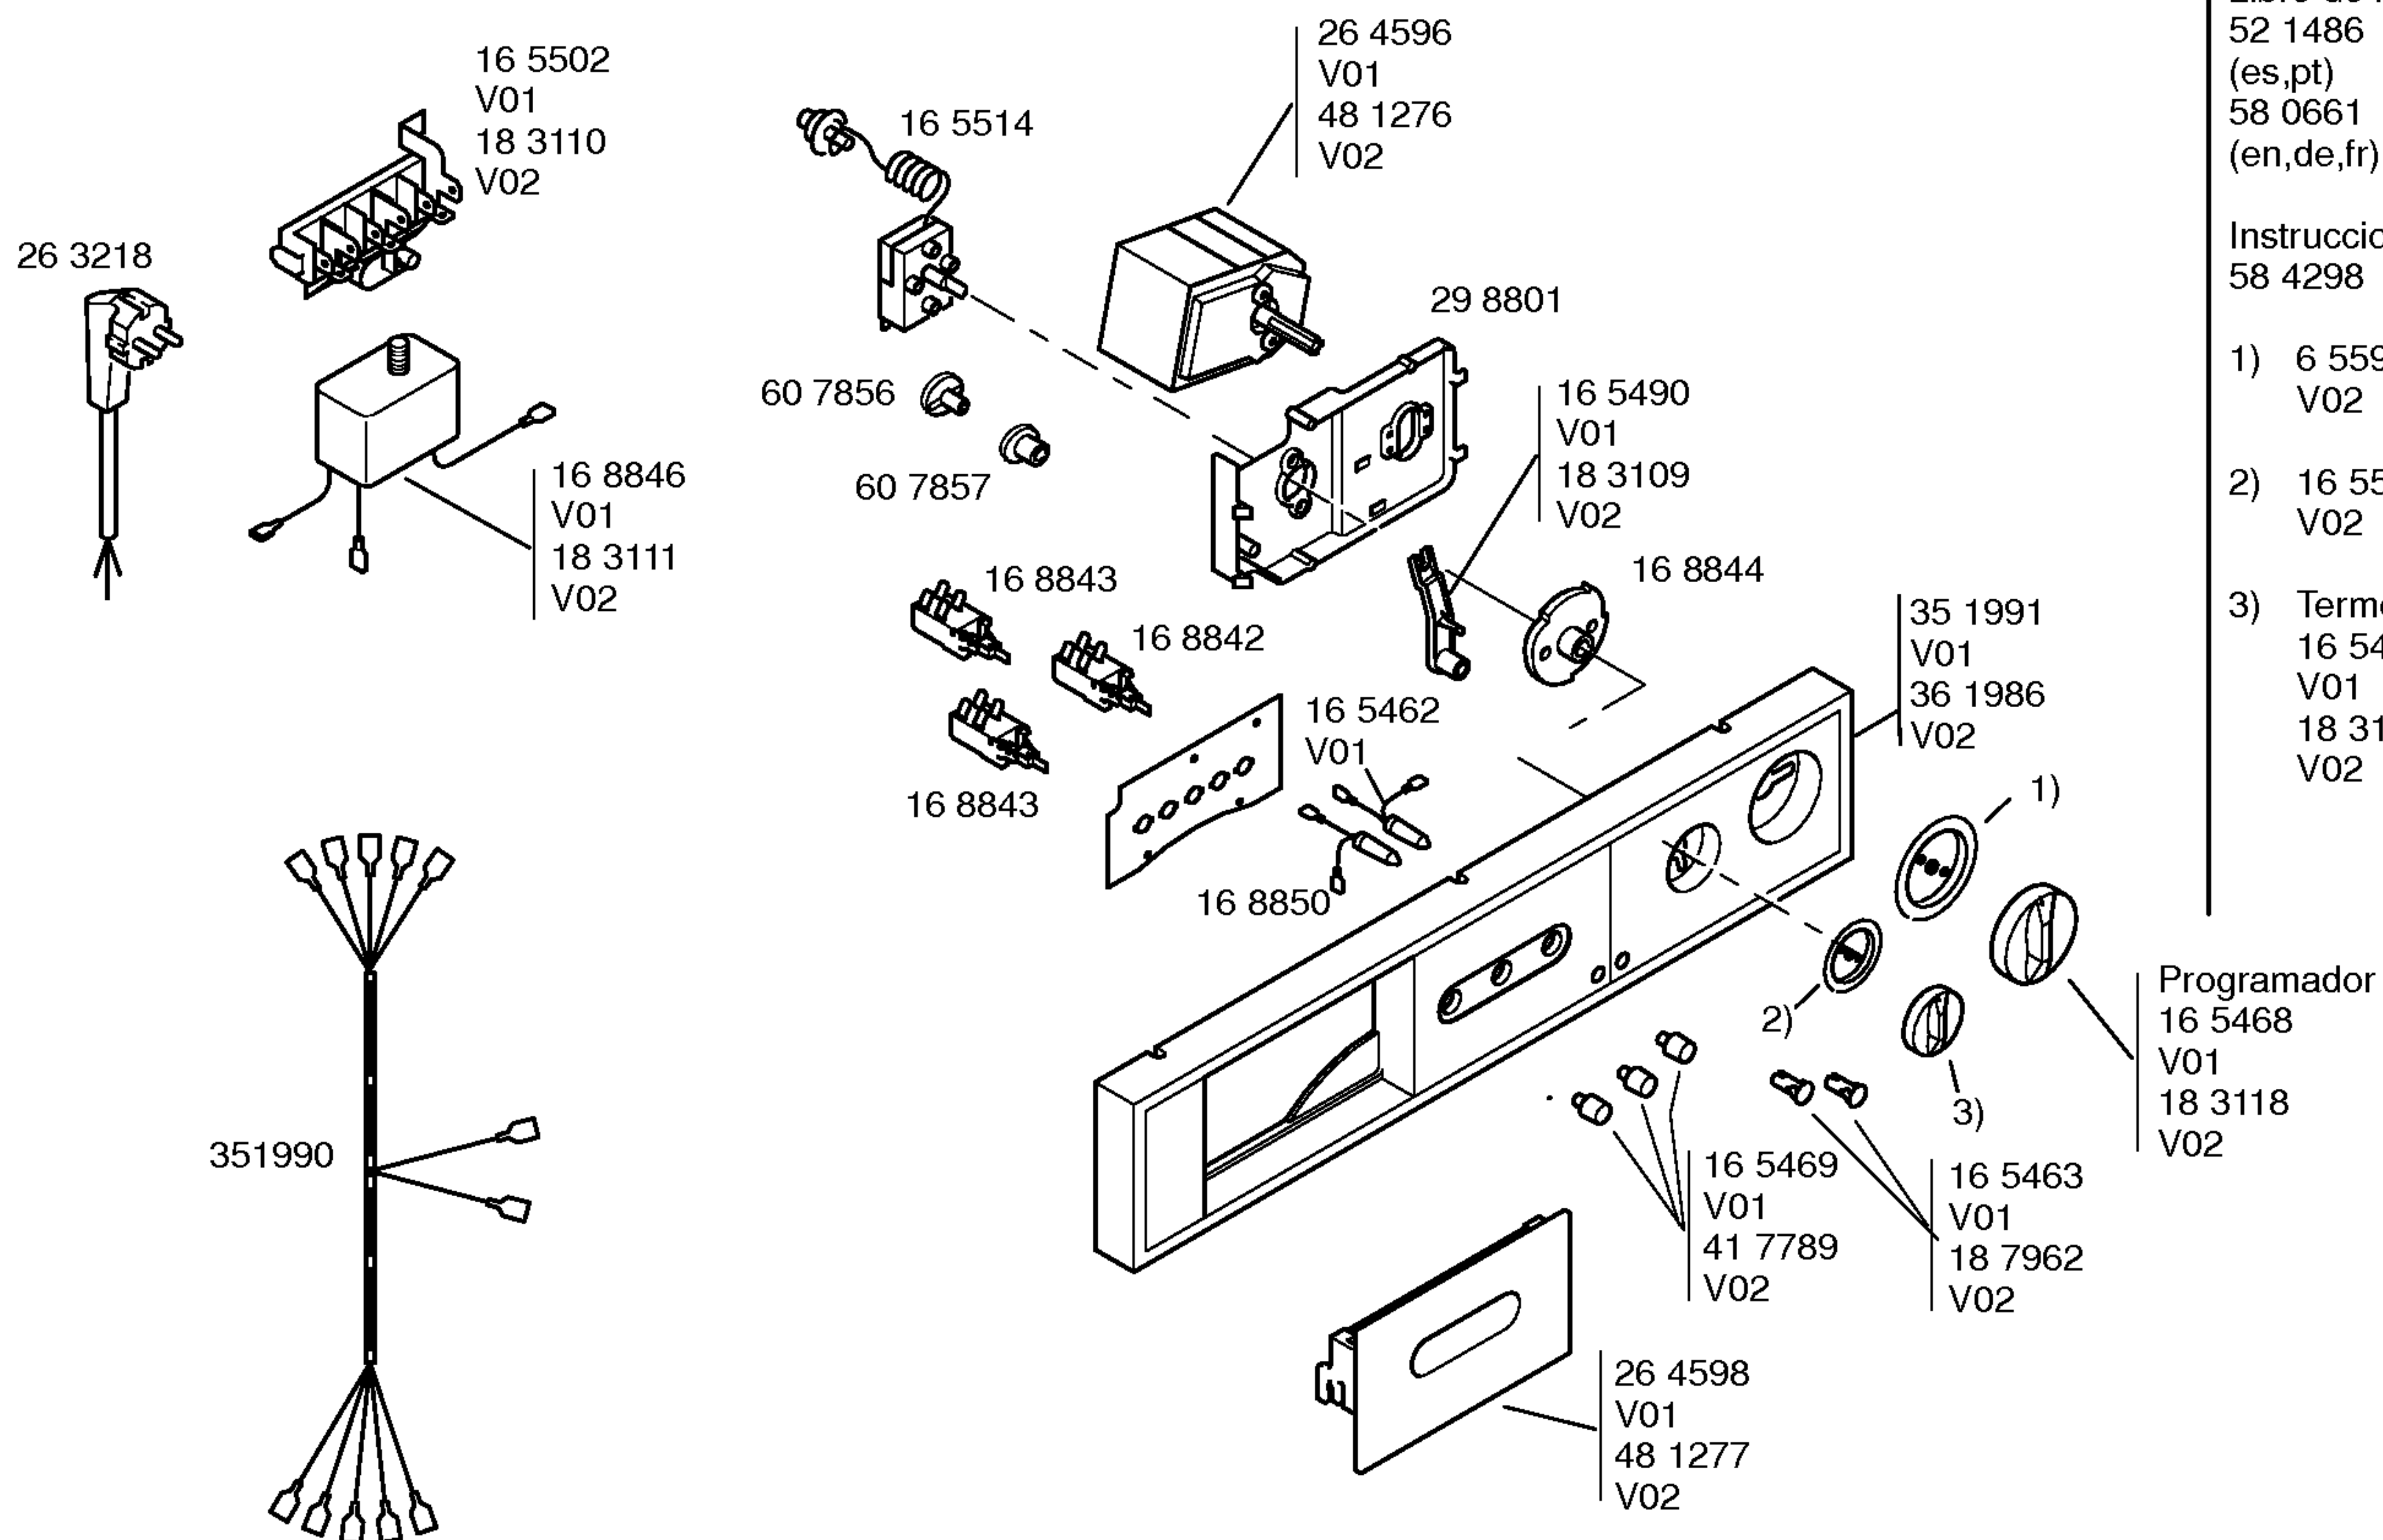


Libro de instrucciones
52 1486
(es,pt)
58 0661
(en,de,fr)


Instrucciones Montaje
58 4298

- 1) 6 5596
V02
- 2) 16 5594
V02
- 3) Termostato
16 5467
V01
18 3116
V02


Programador
16 5468
V01
18 3118
V02

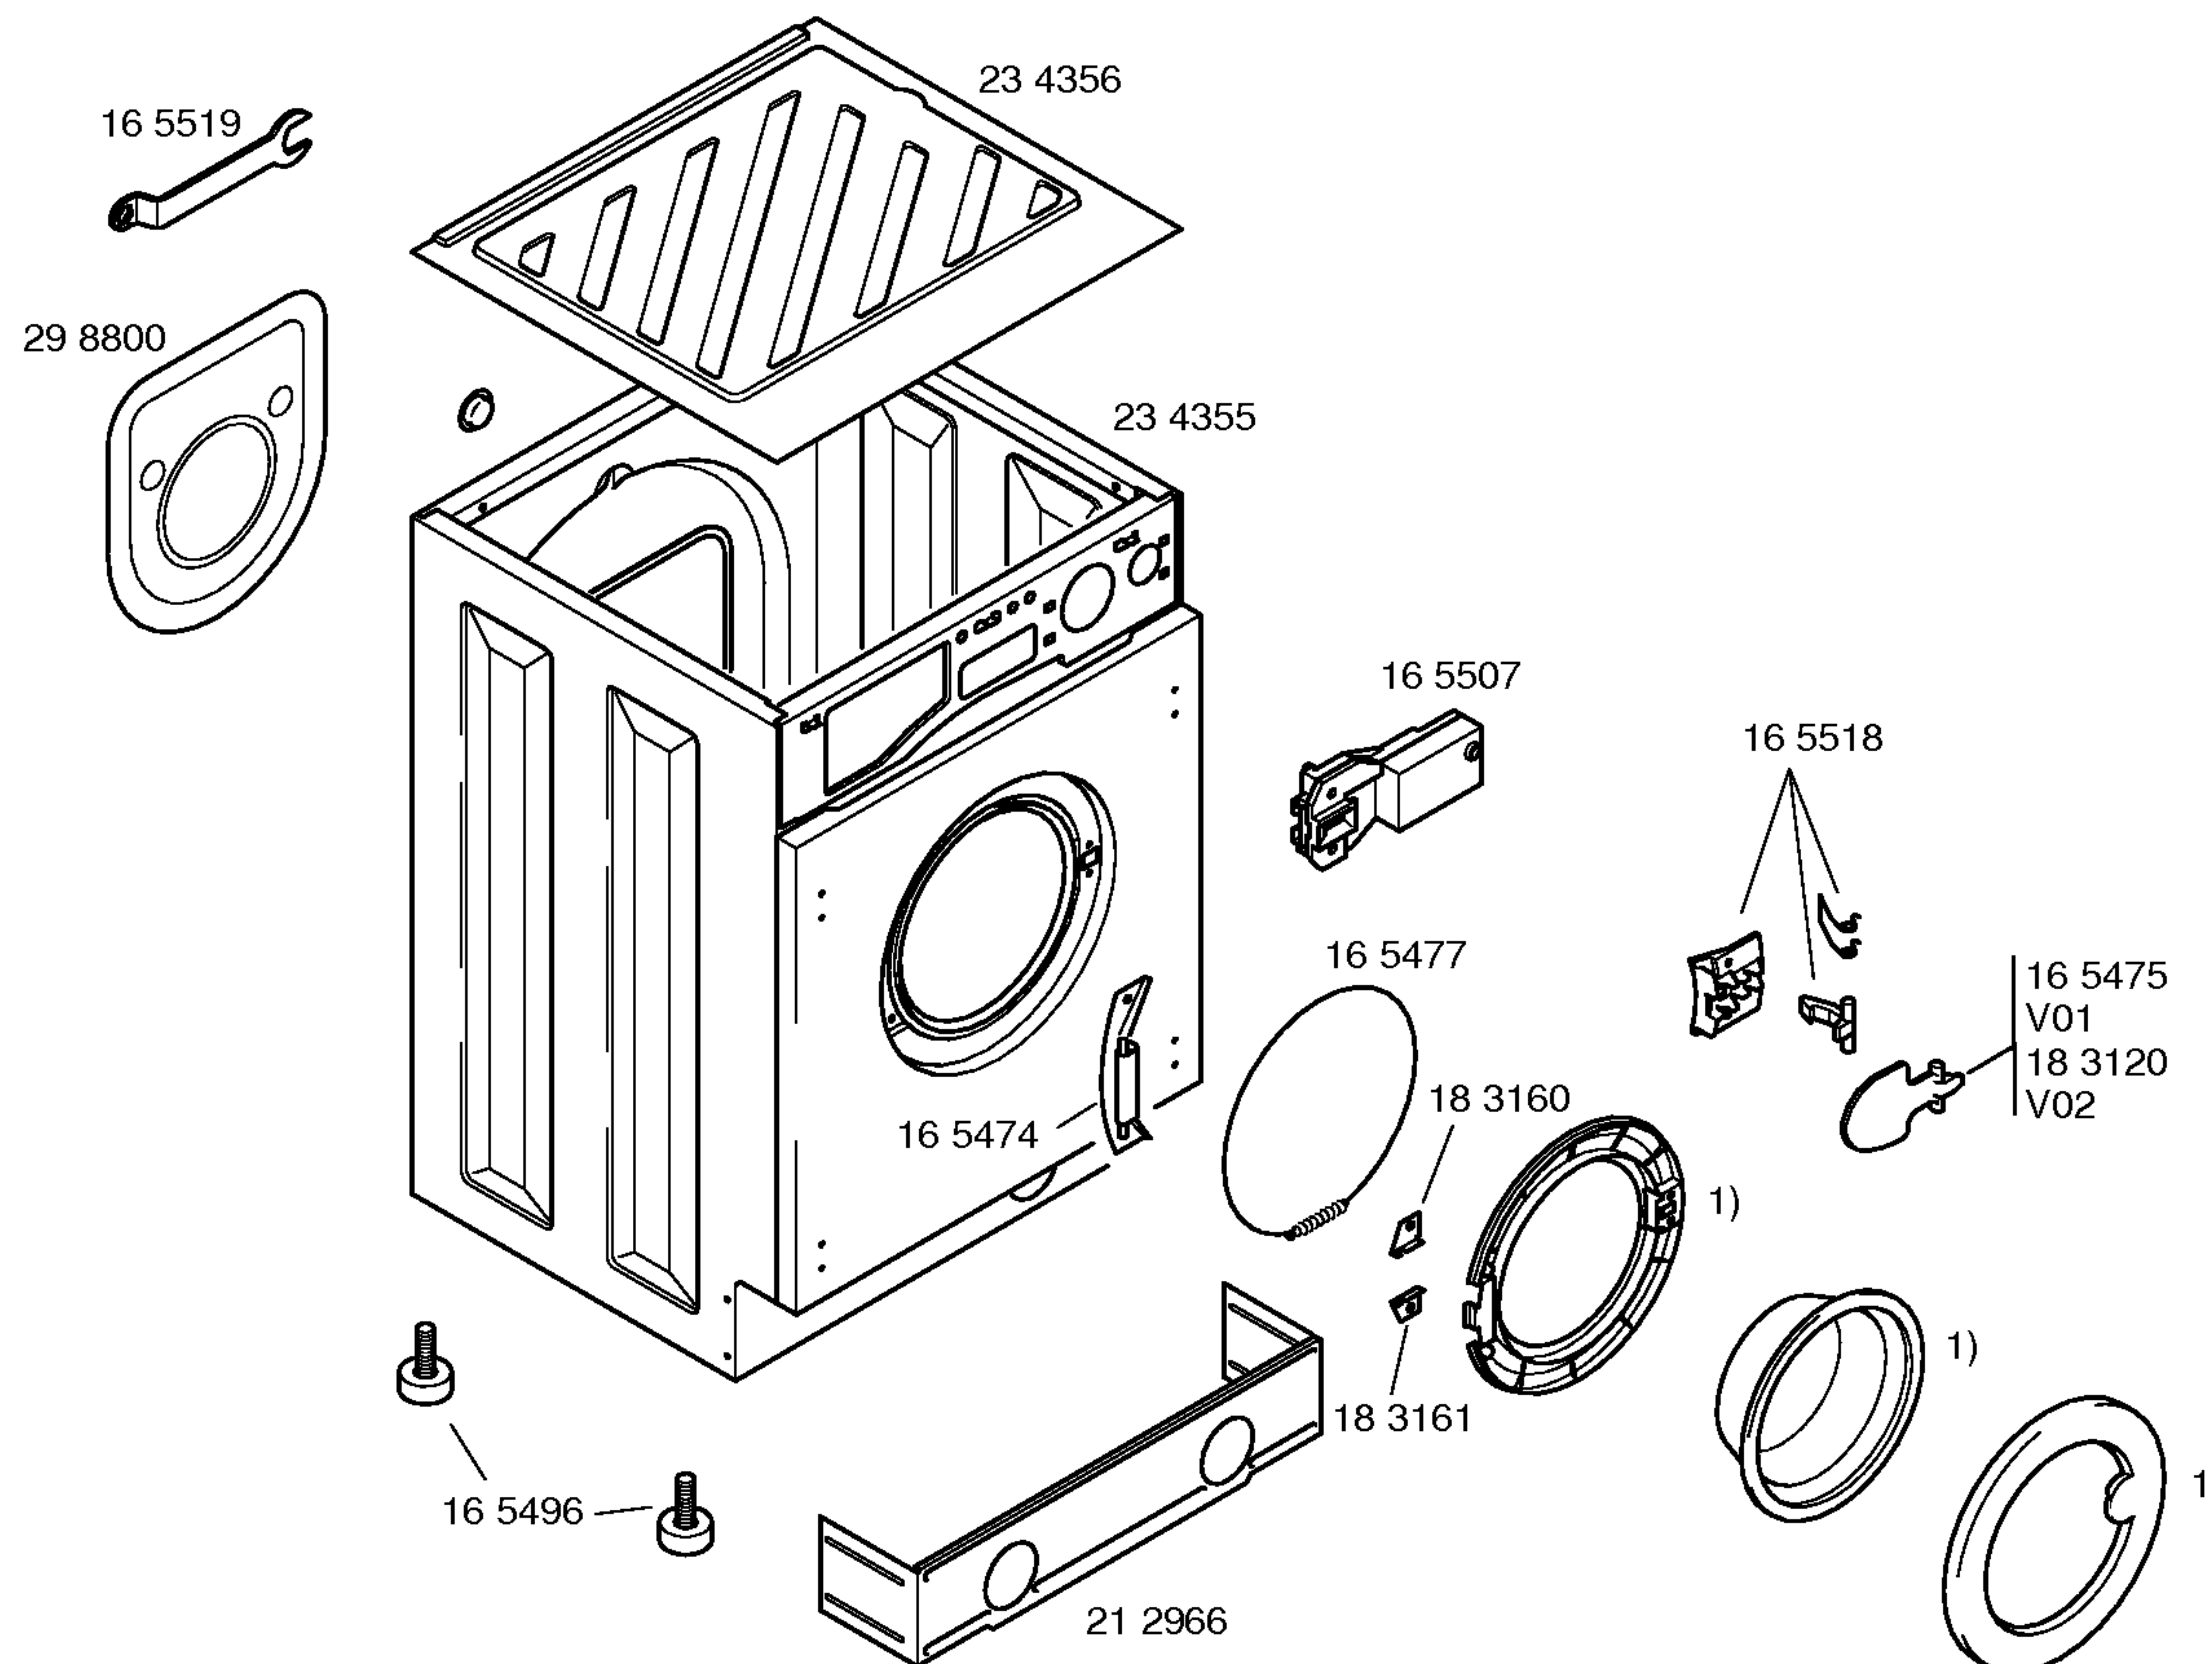


1) 29 8797
Completa

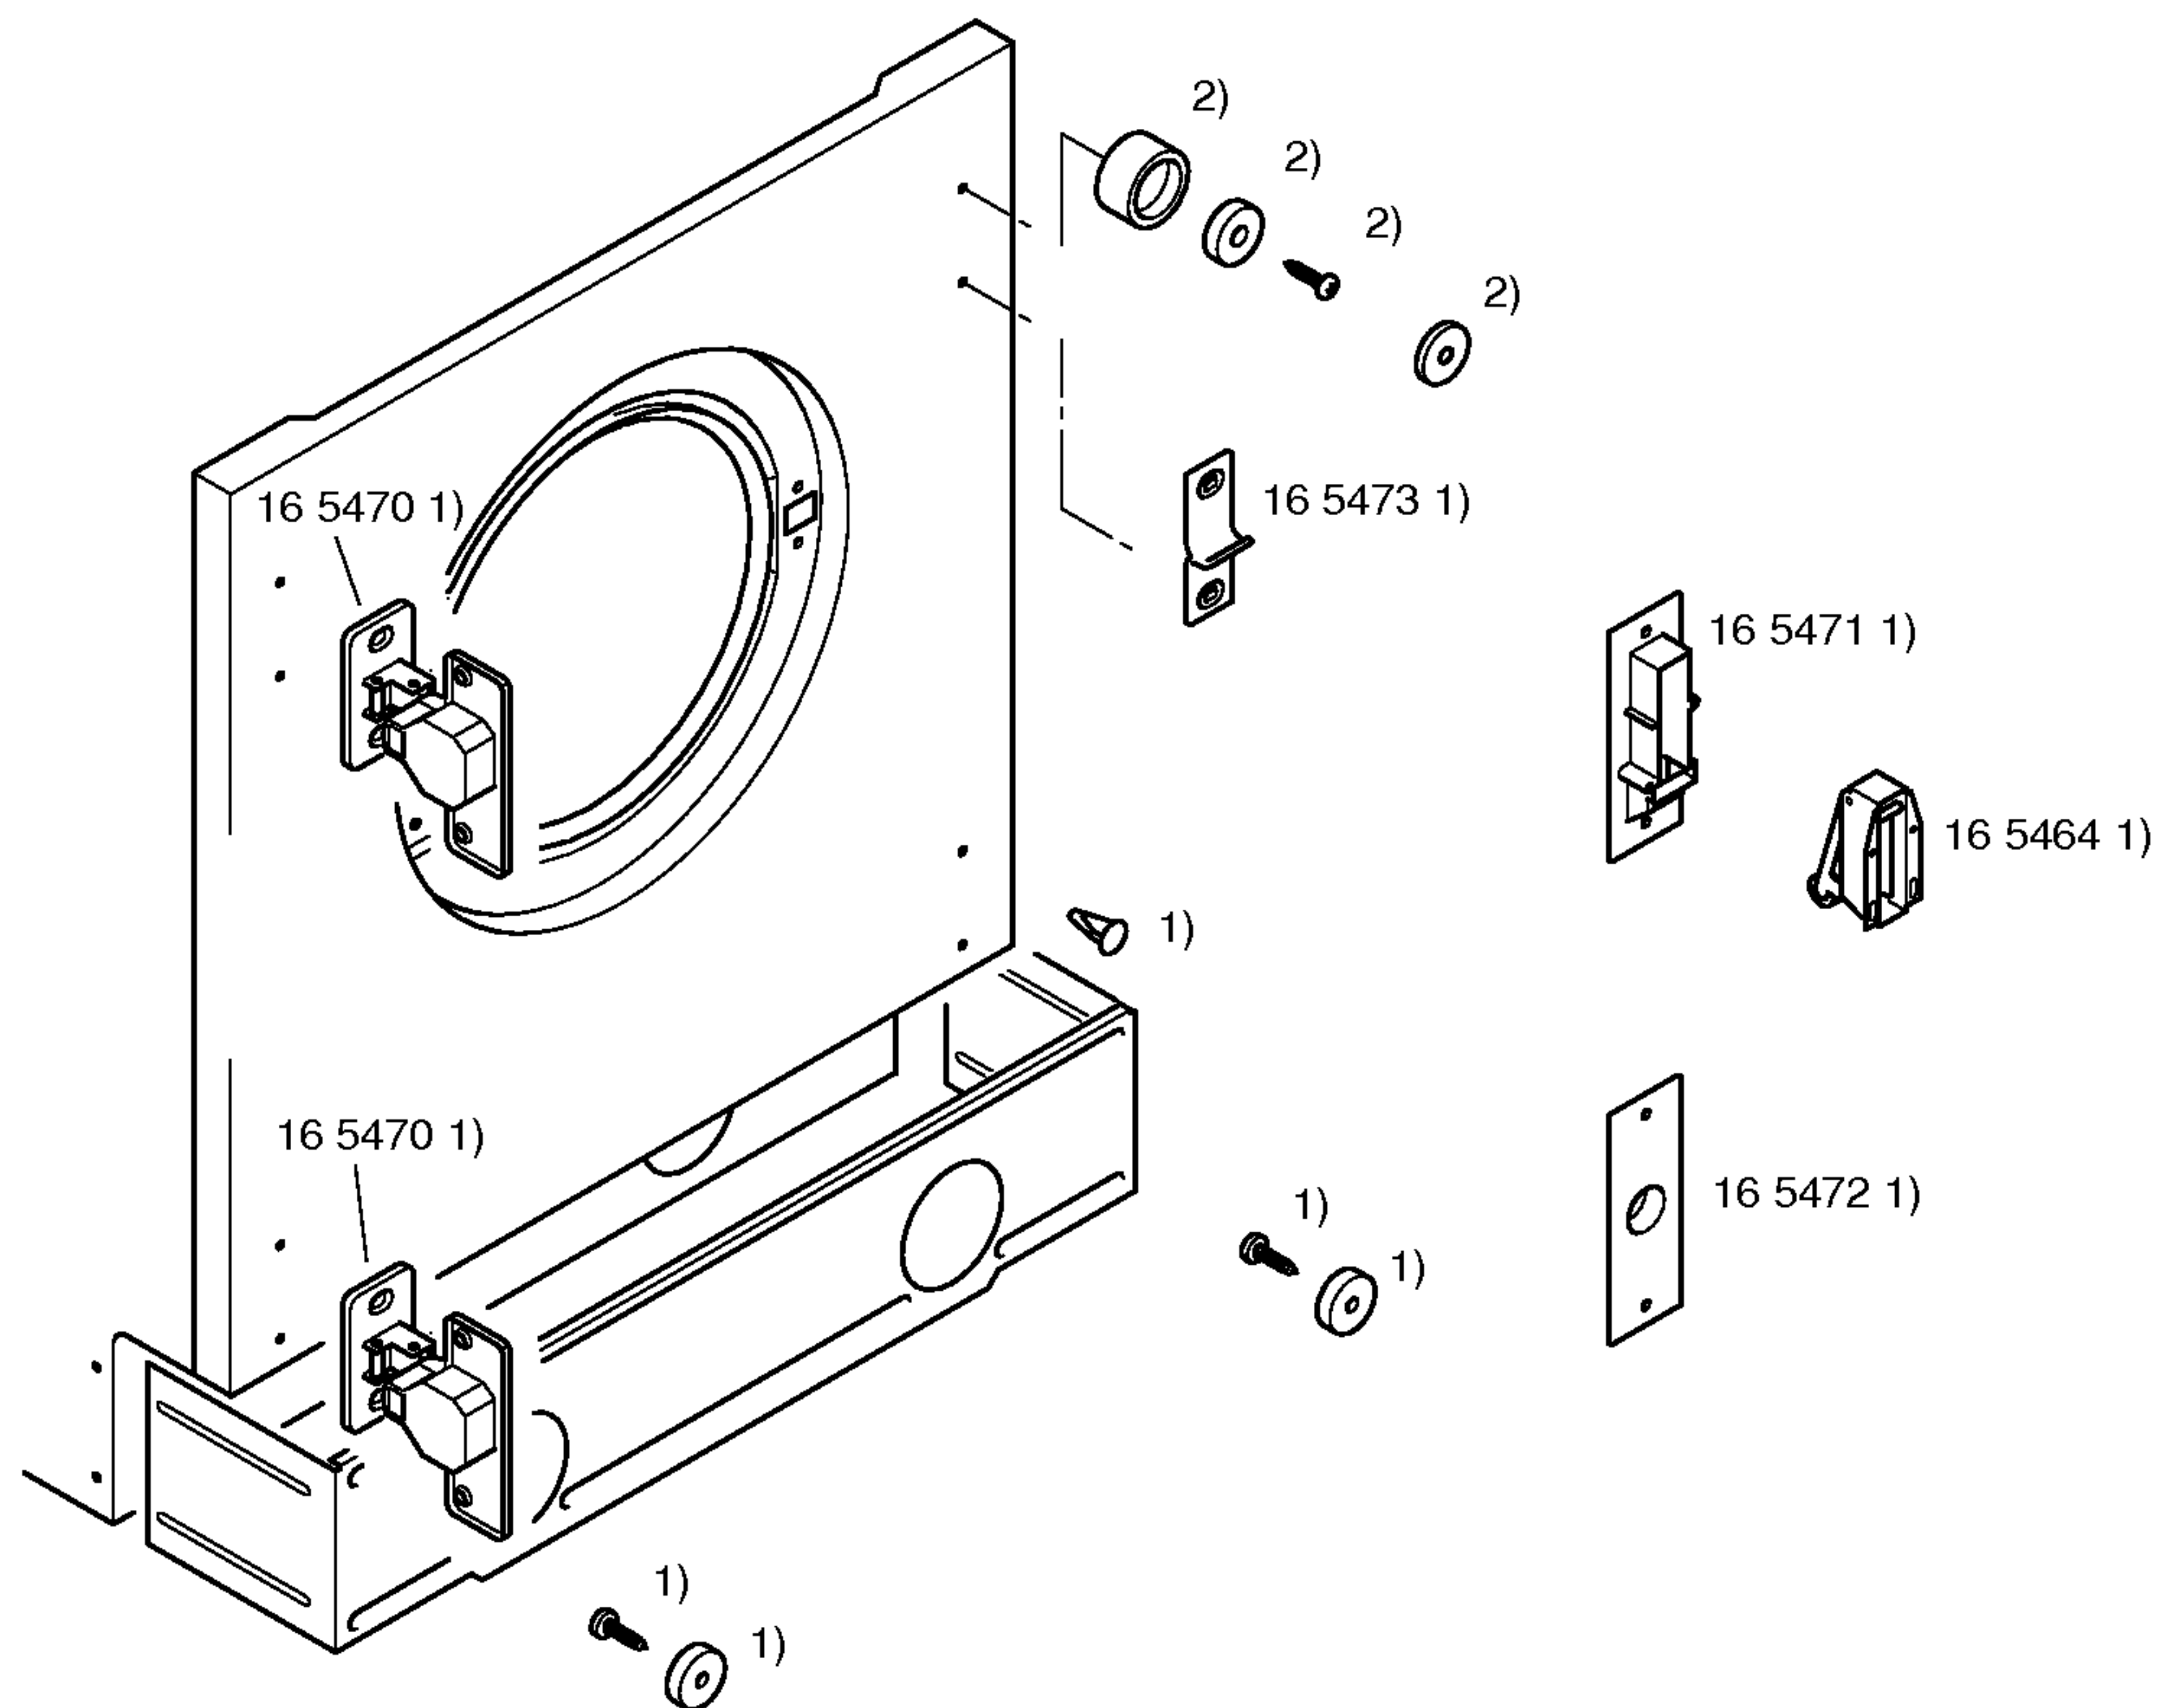

- 1) 16 5516
Completo
Cierre mecánico
- 2) 41 6442
Completo
Cierre magnético

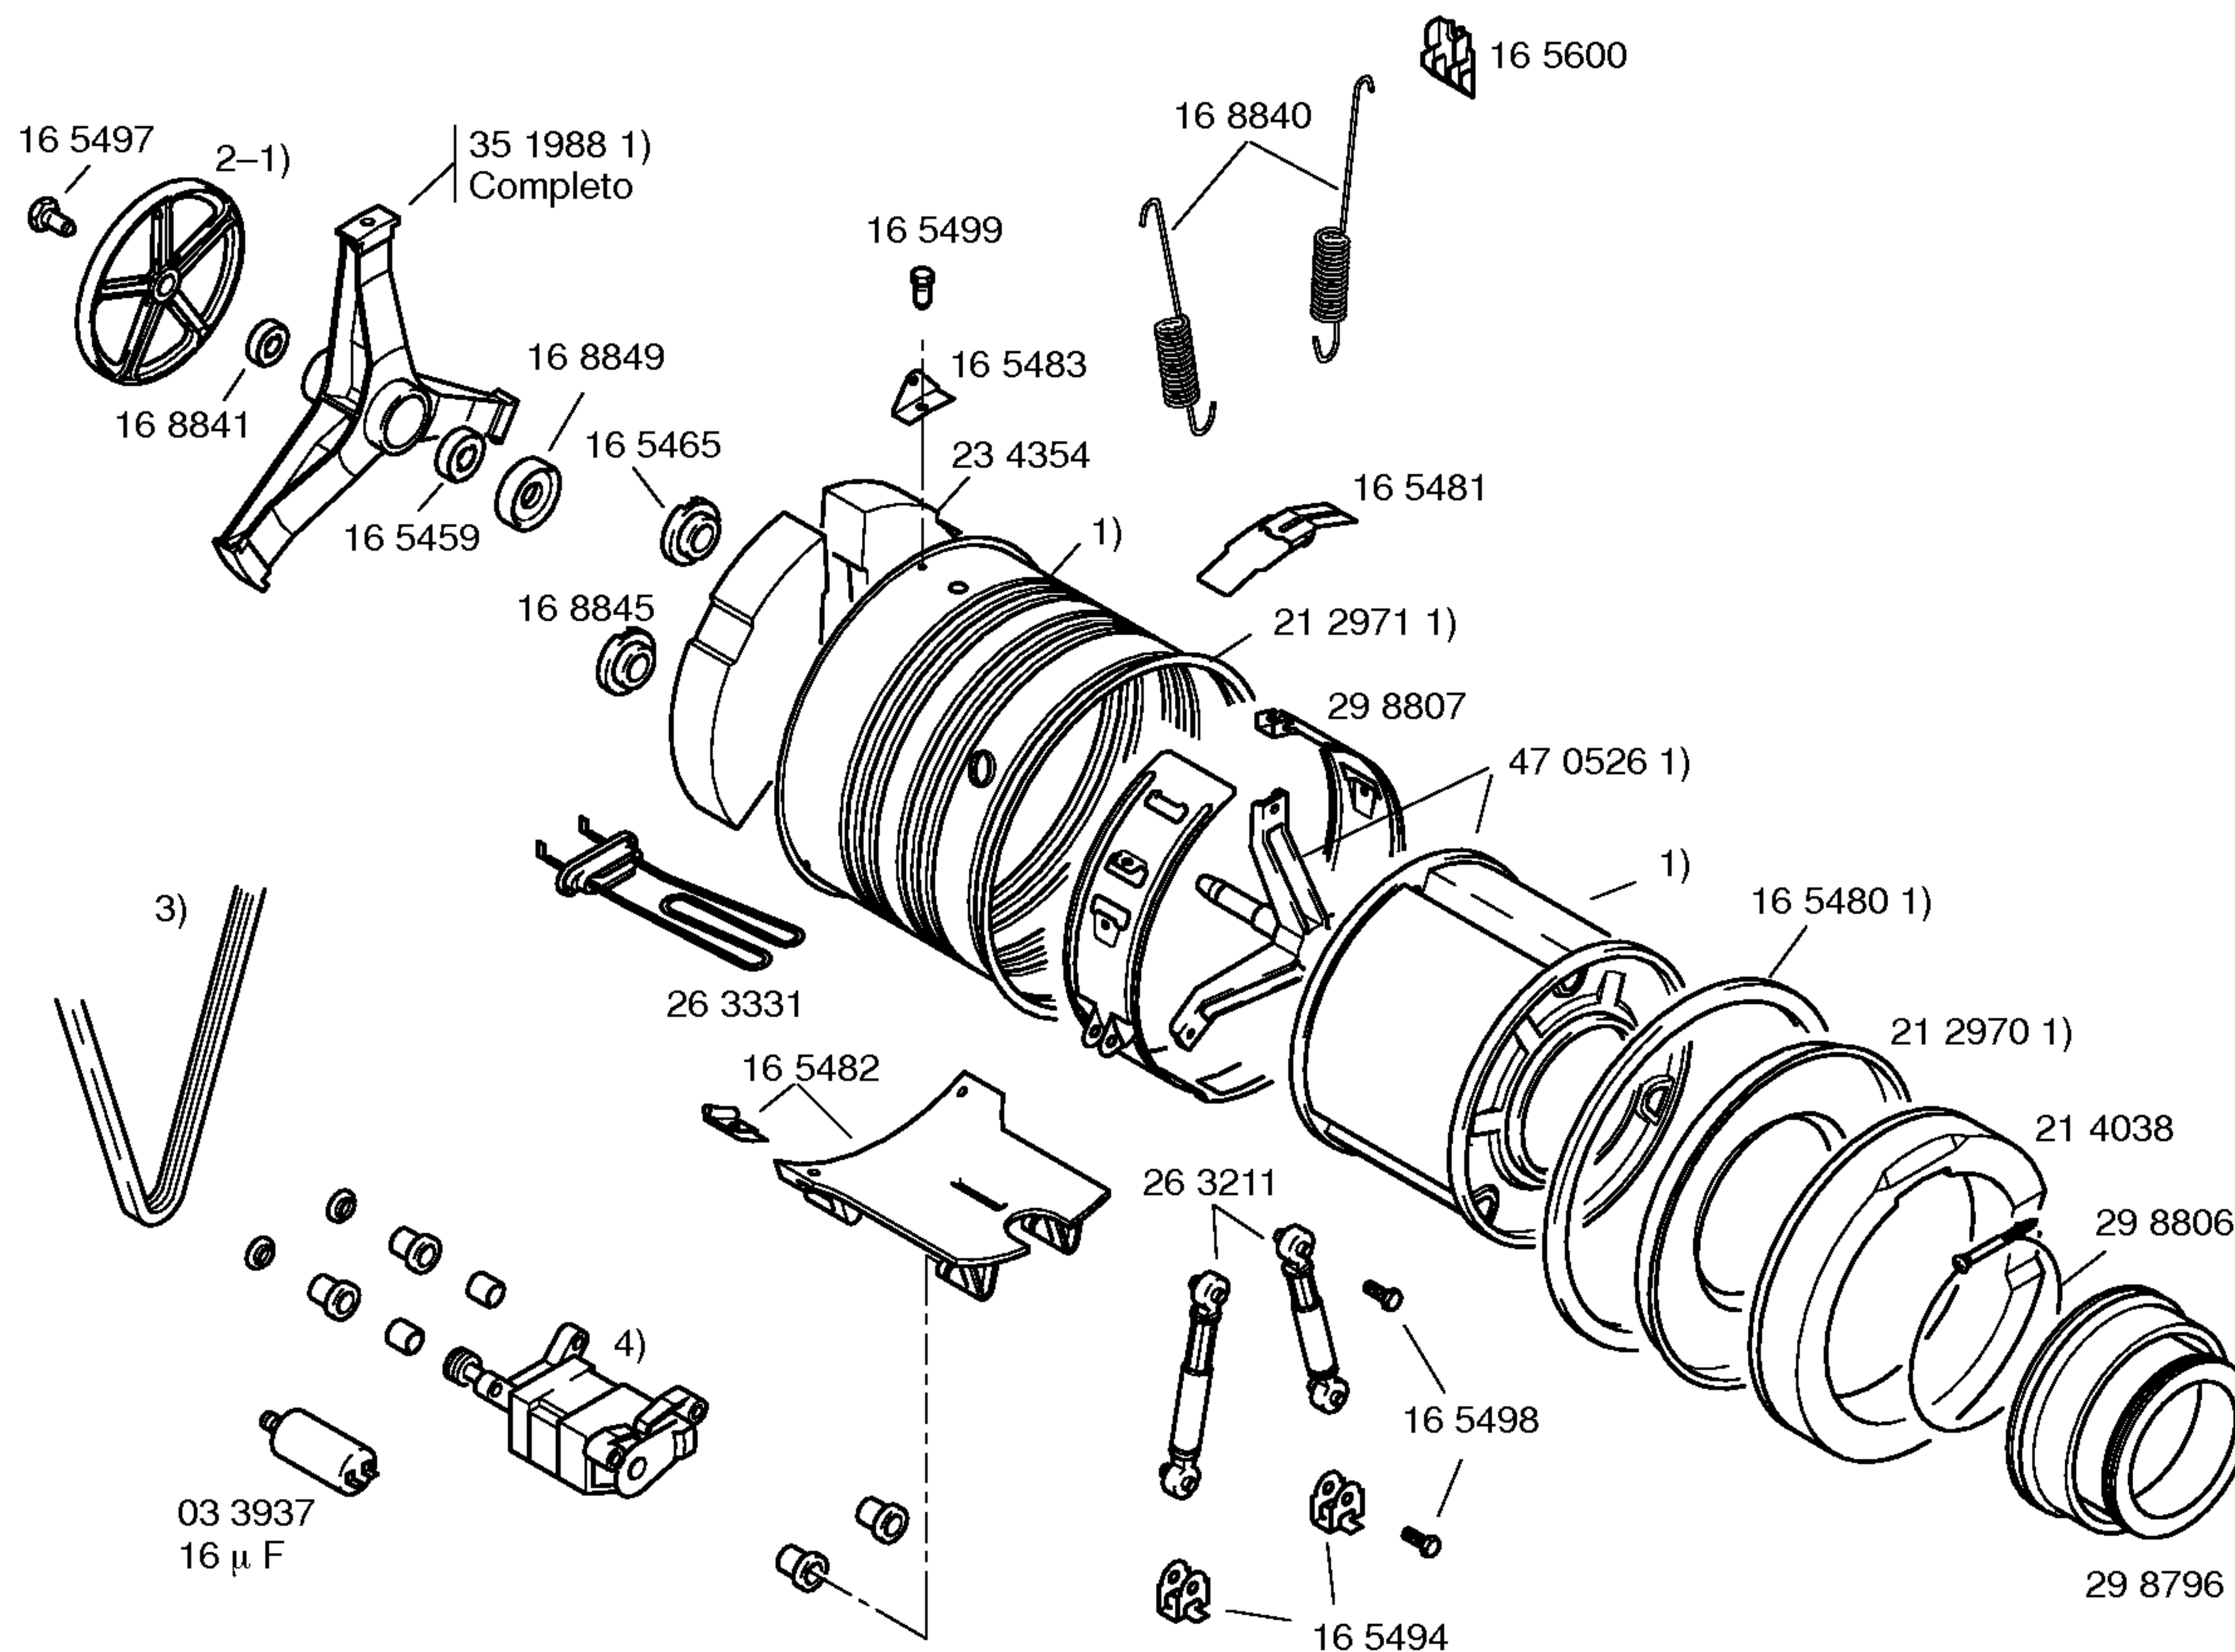

- 1) 21 4037
Completo
hasta FD7712
21 2967
Completo
desde FD7712
- 2) 26 8431
hasta FD7712
35 1989
desde FD7712
- 3) 26 4597
hasta FD7712
26 8432
desde FD7712
- 4) 14 1763
hasta FD7712
14 2054
desde FD7712

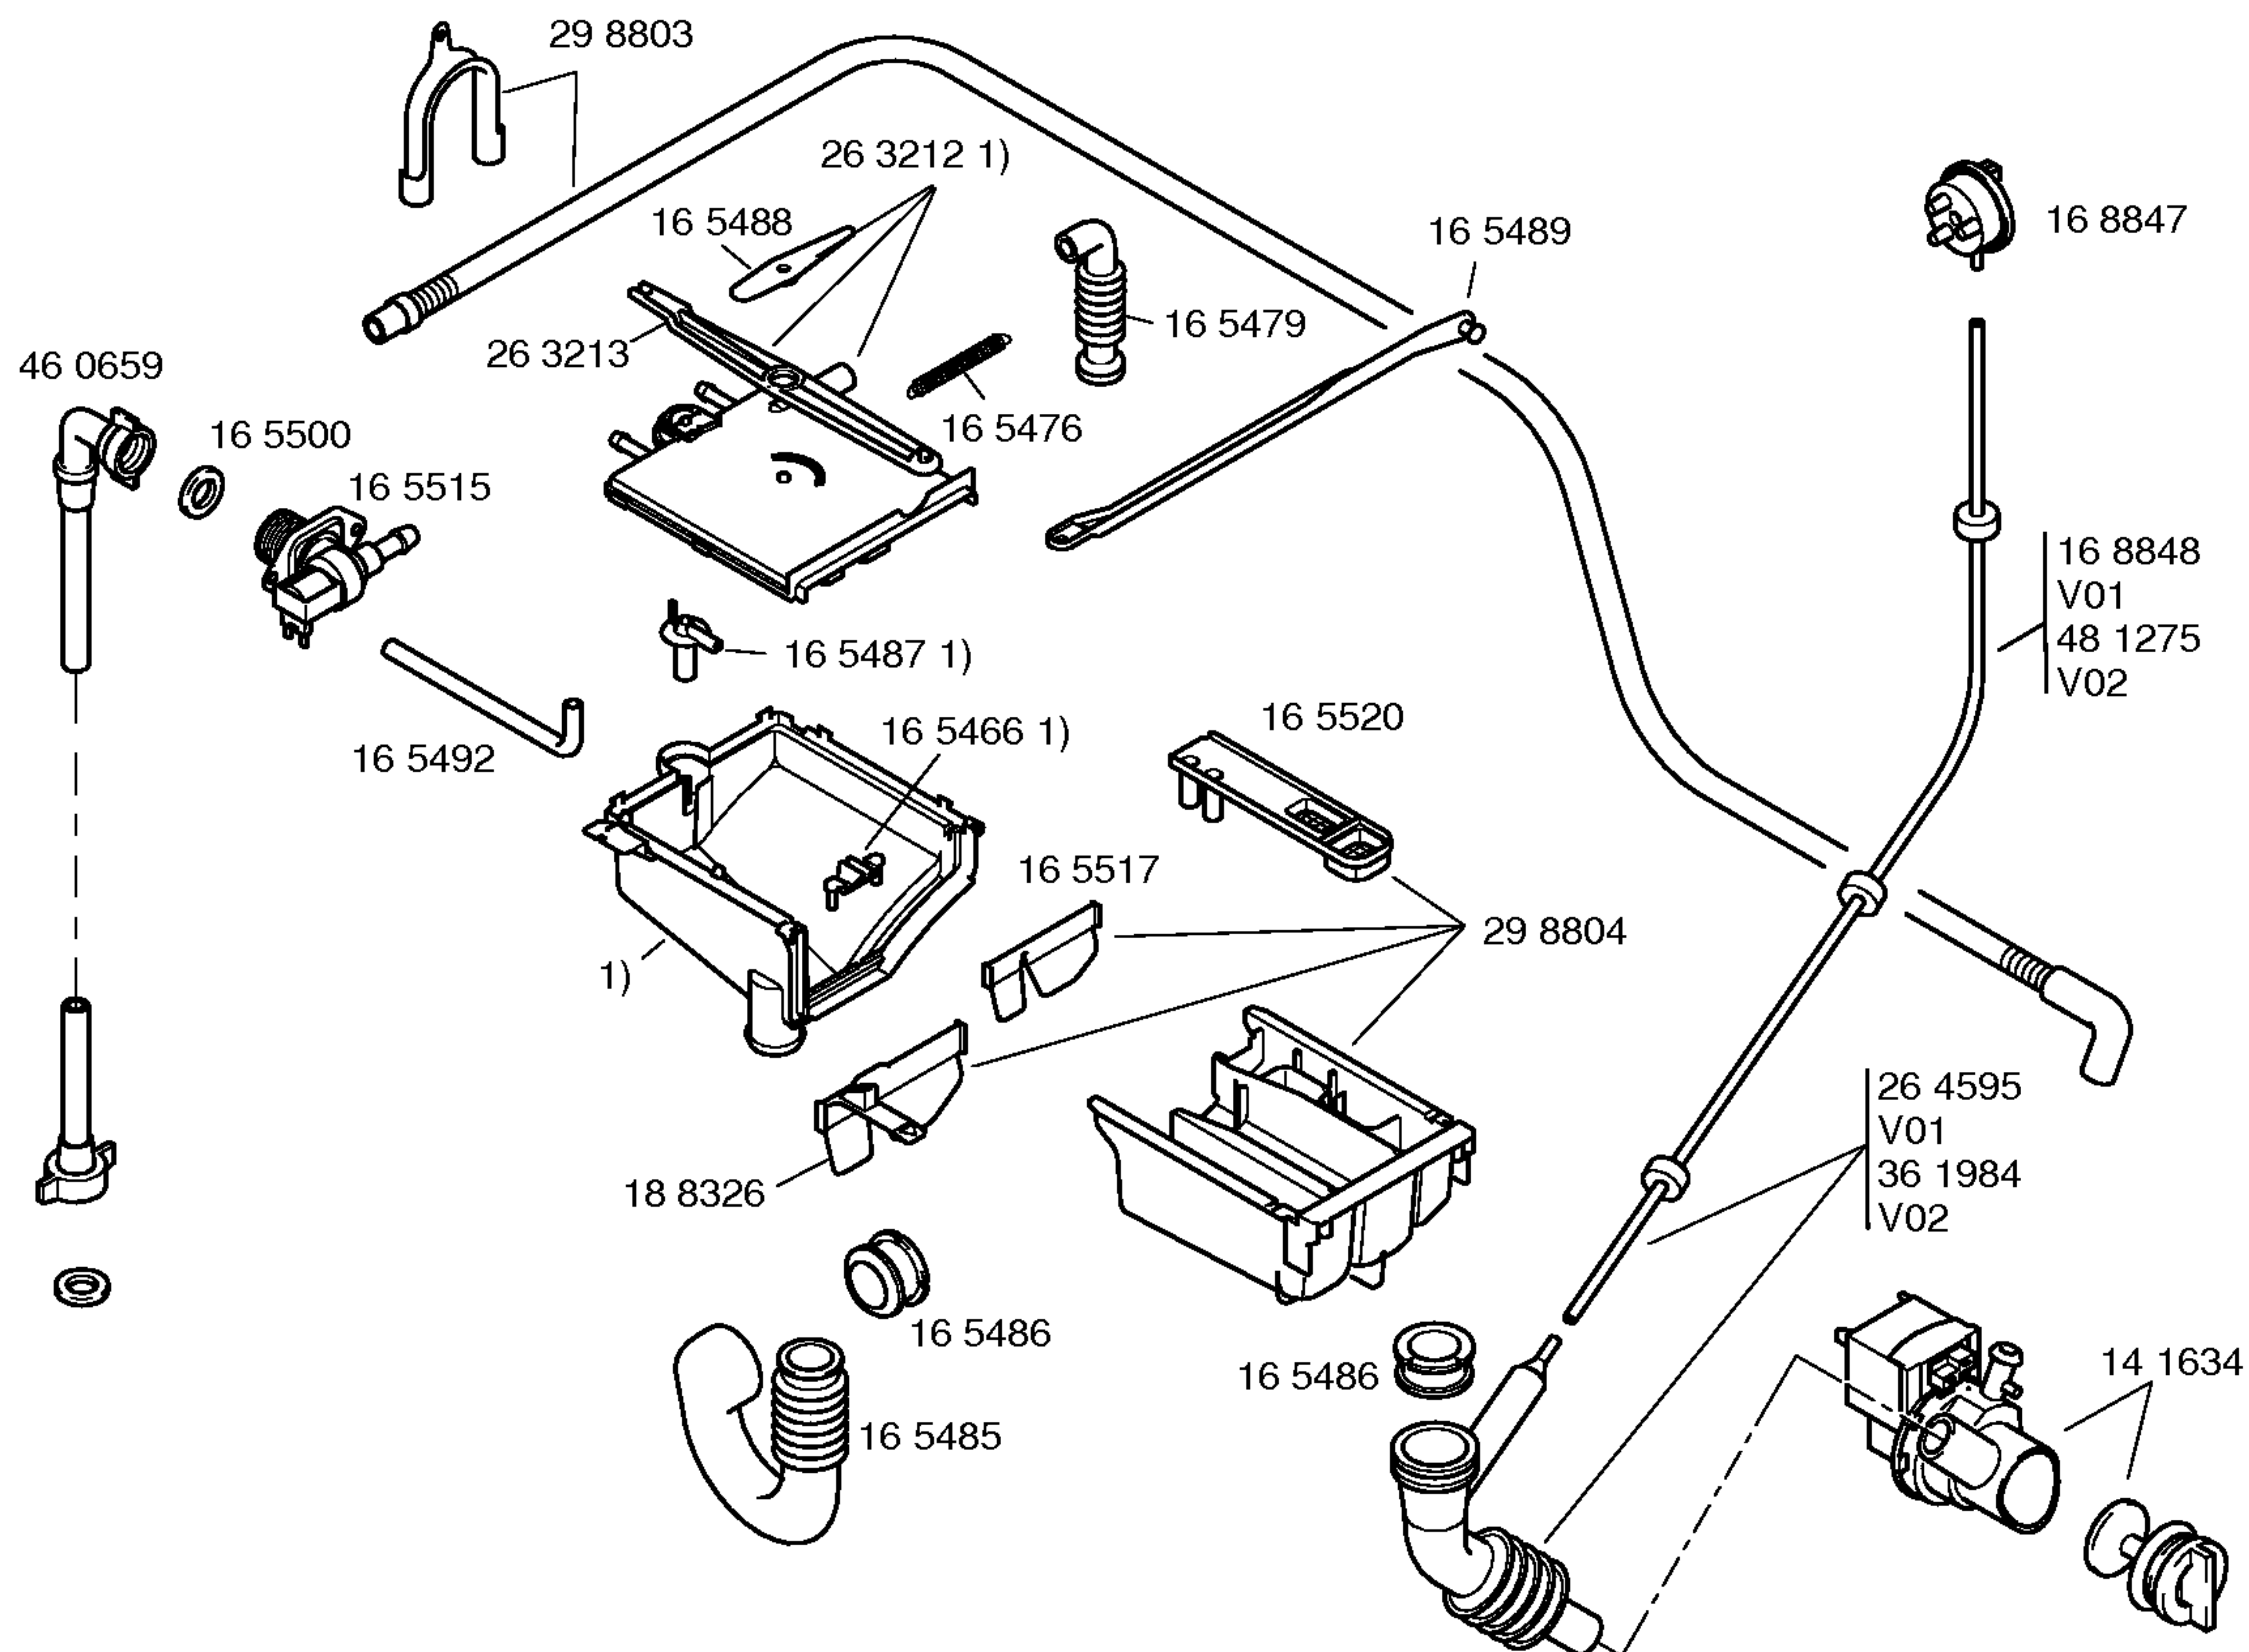

1) 29 8802
Completo