 
 
 


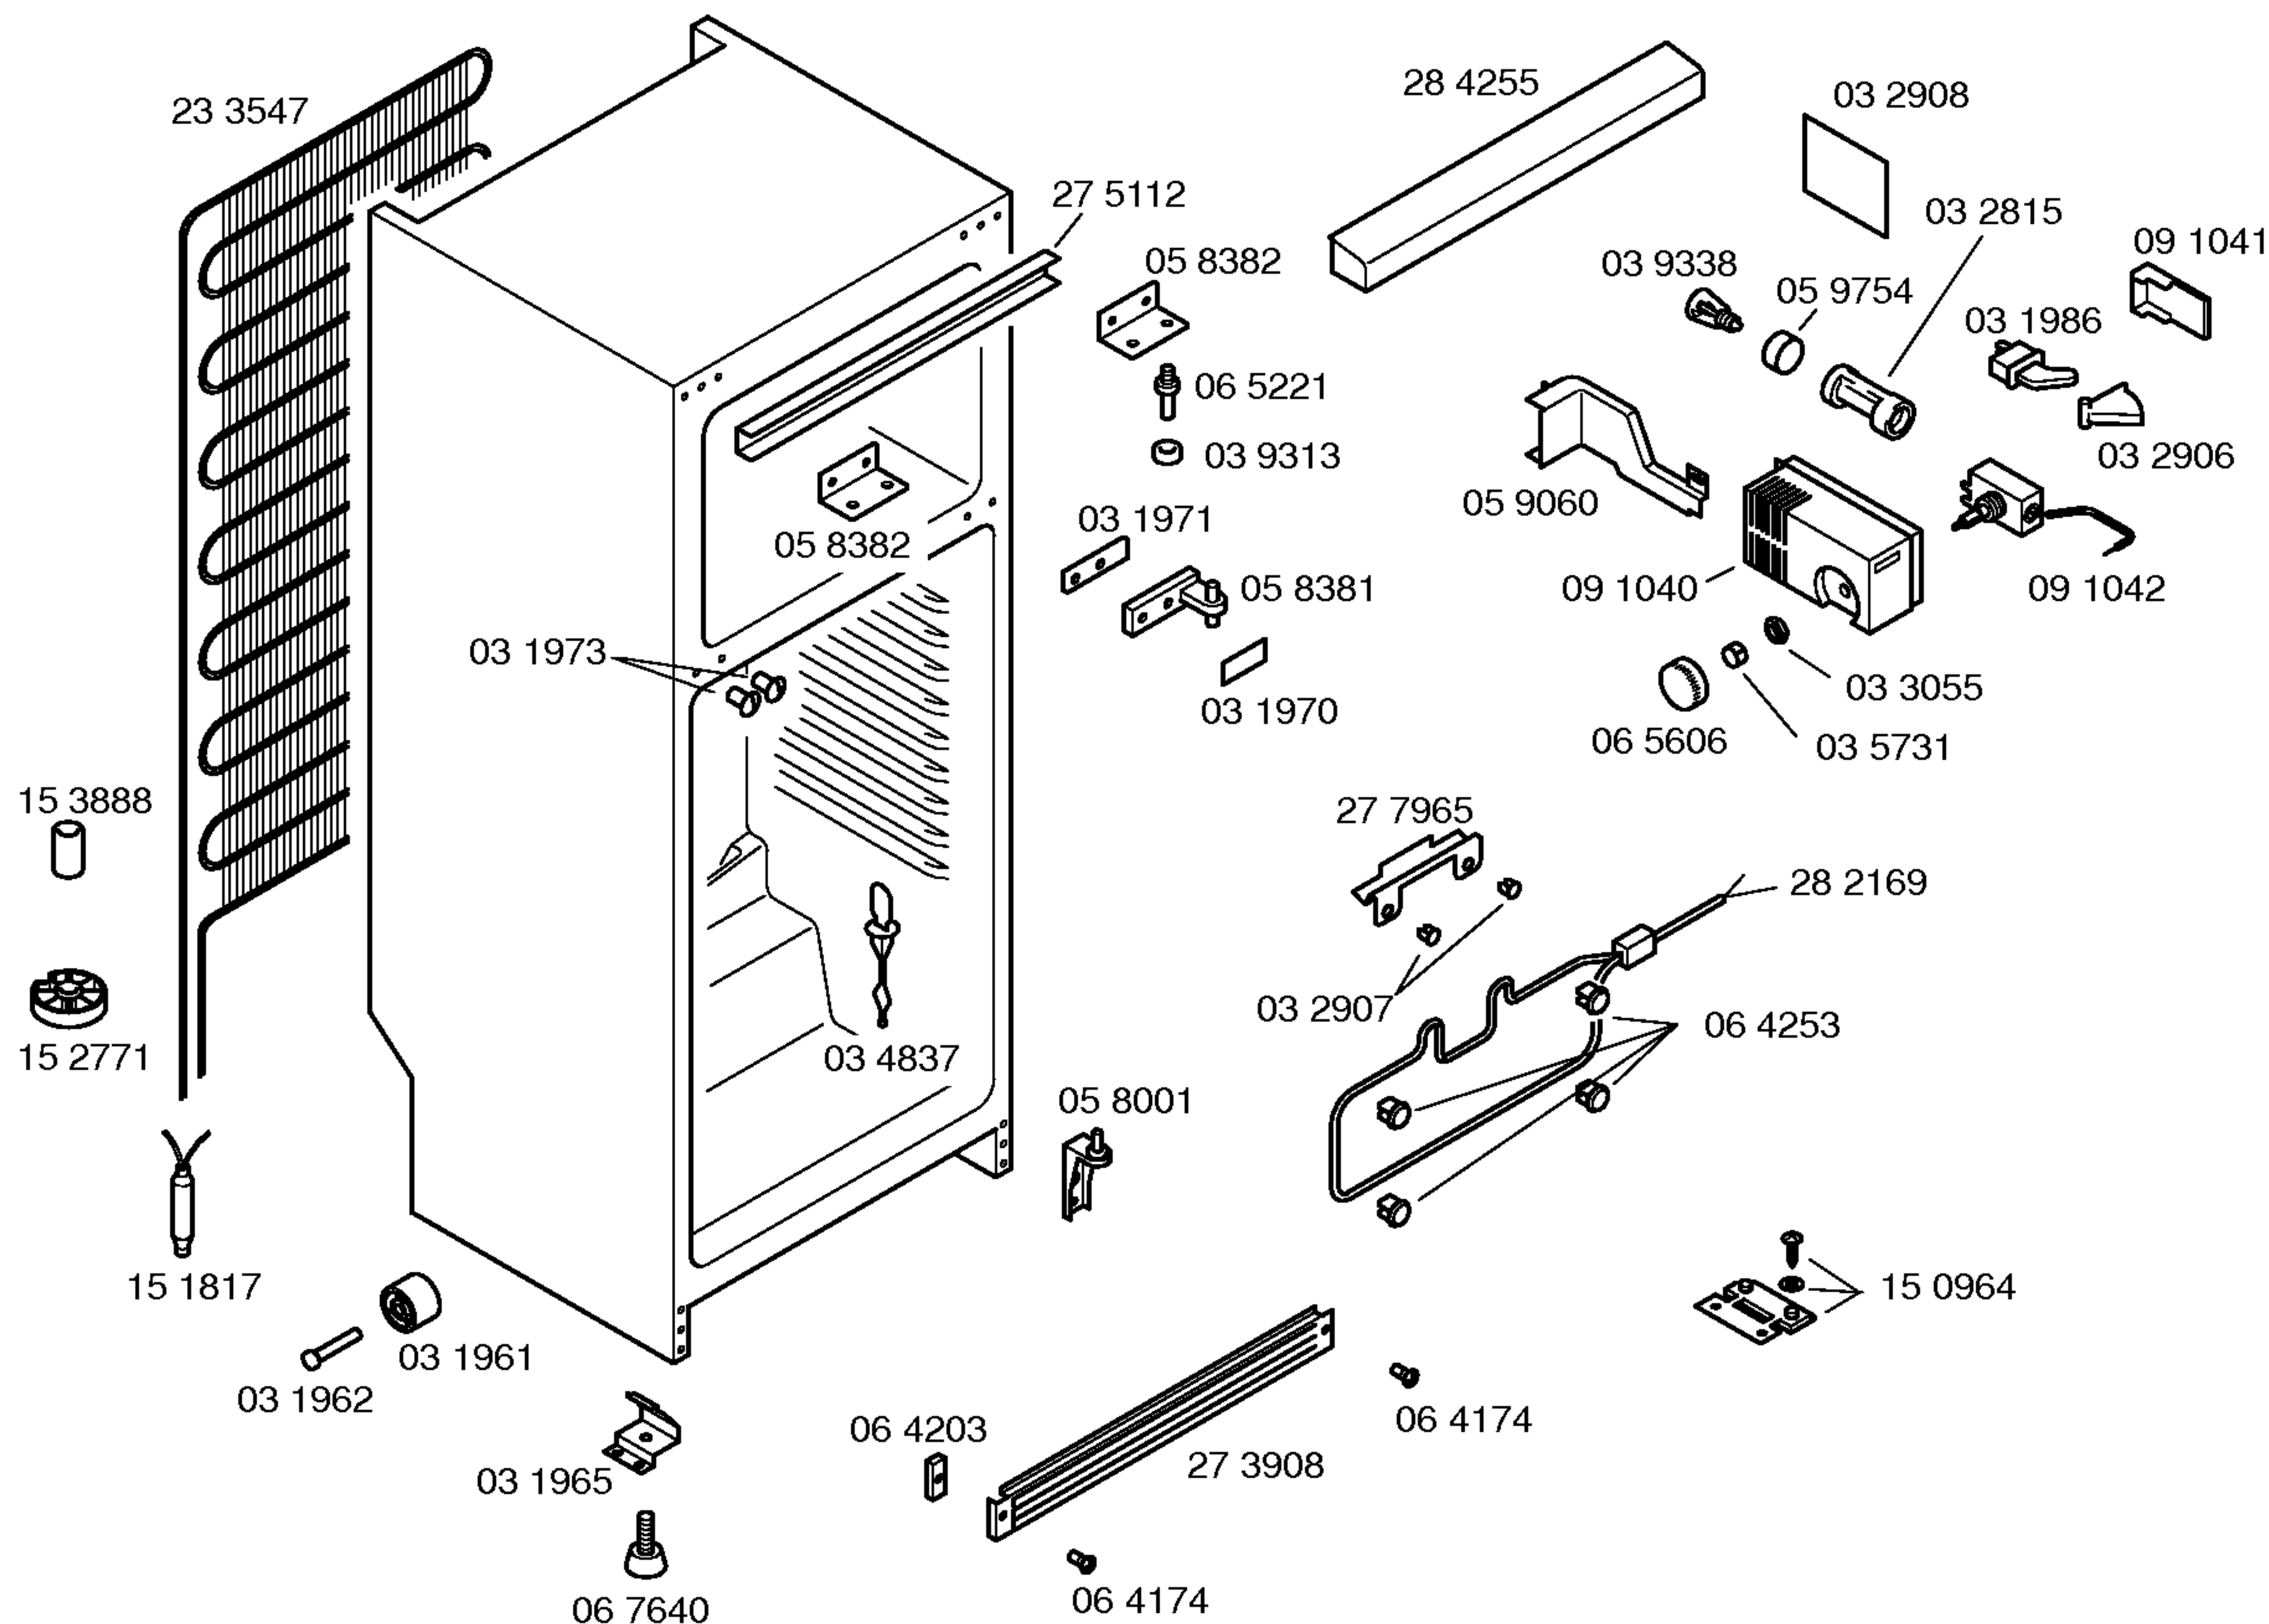

Libro de instrucciones
51 6294
(E, P, GB, F, NL, GR)

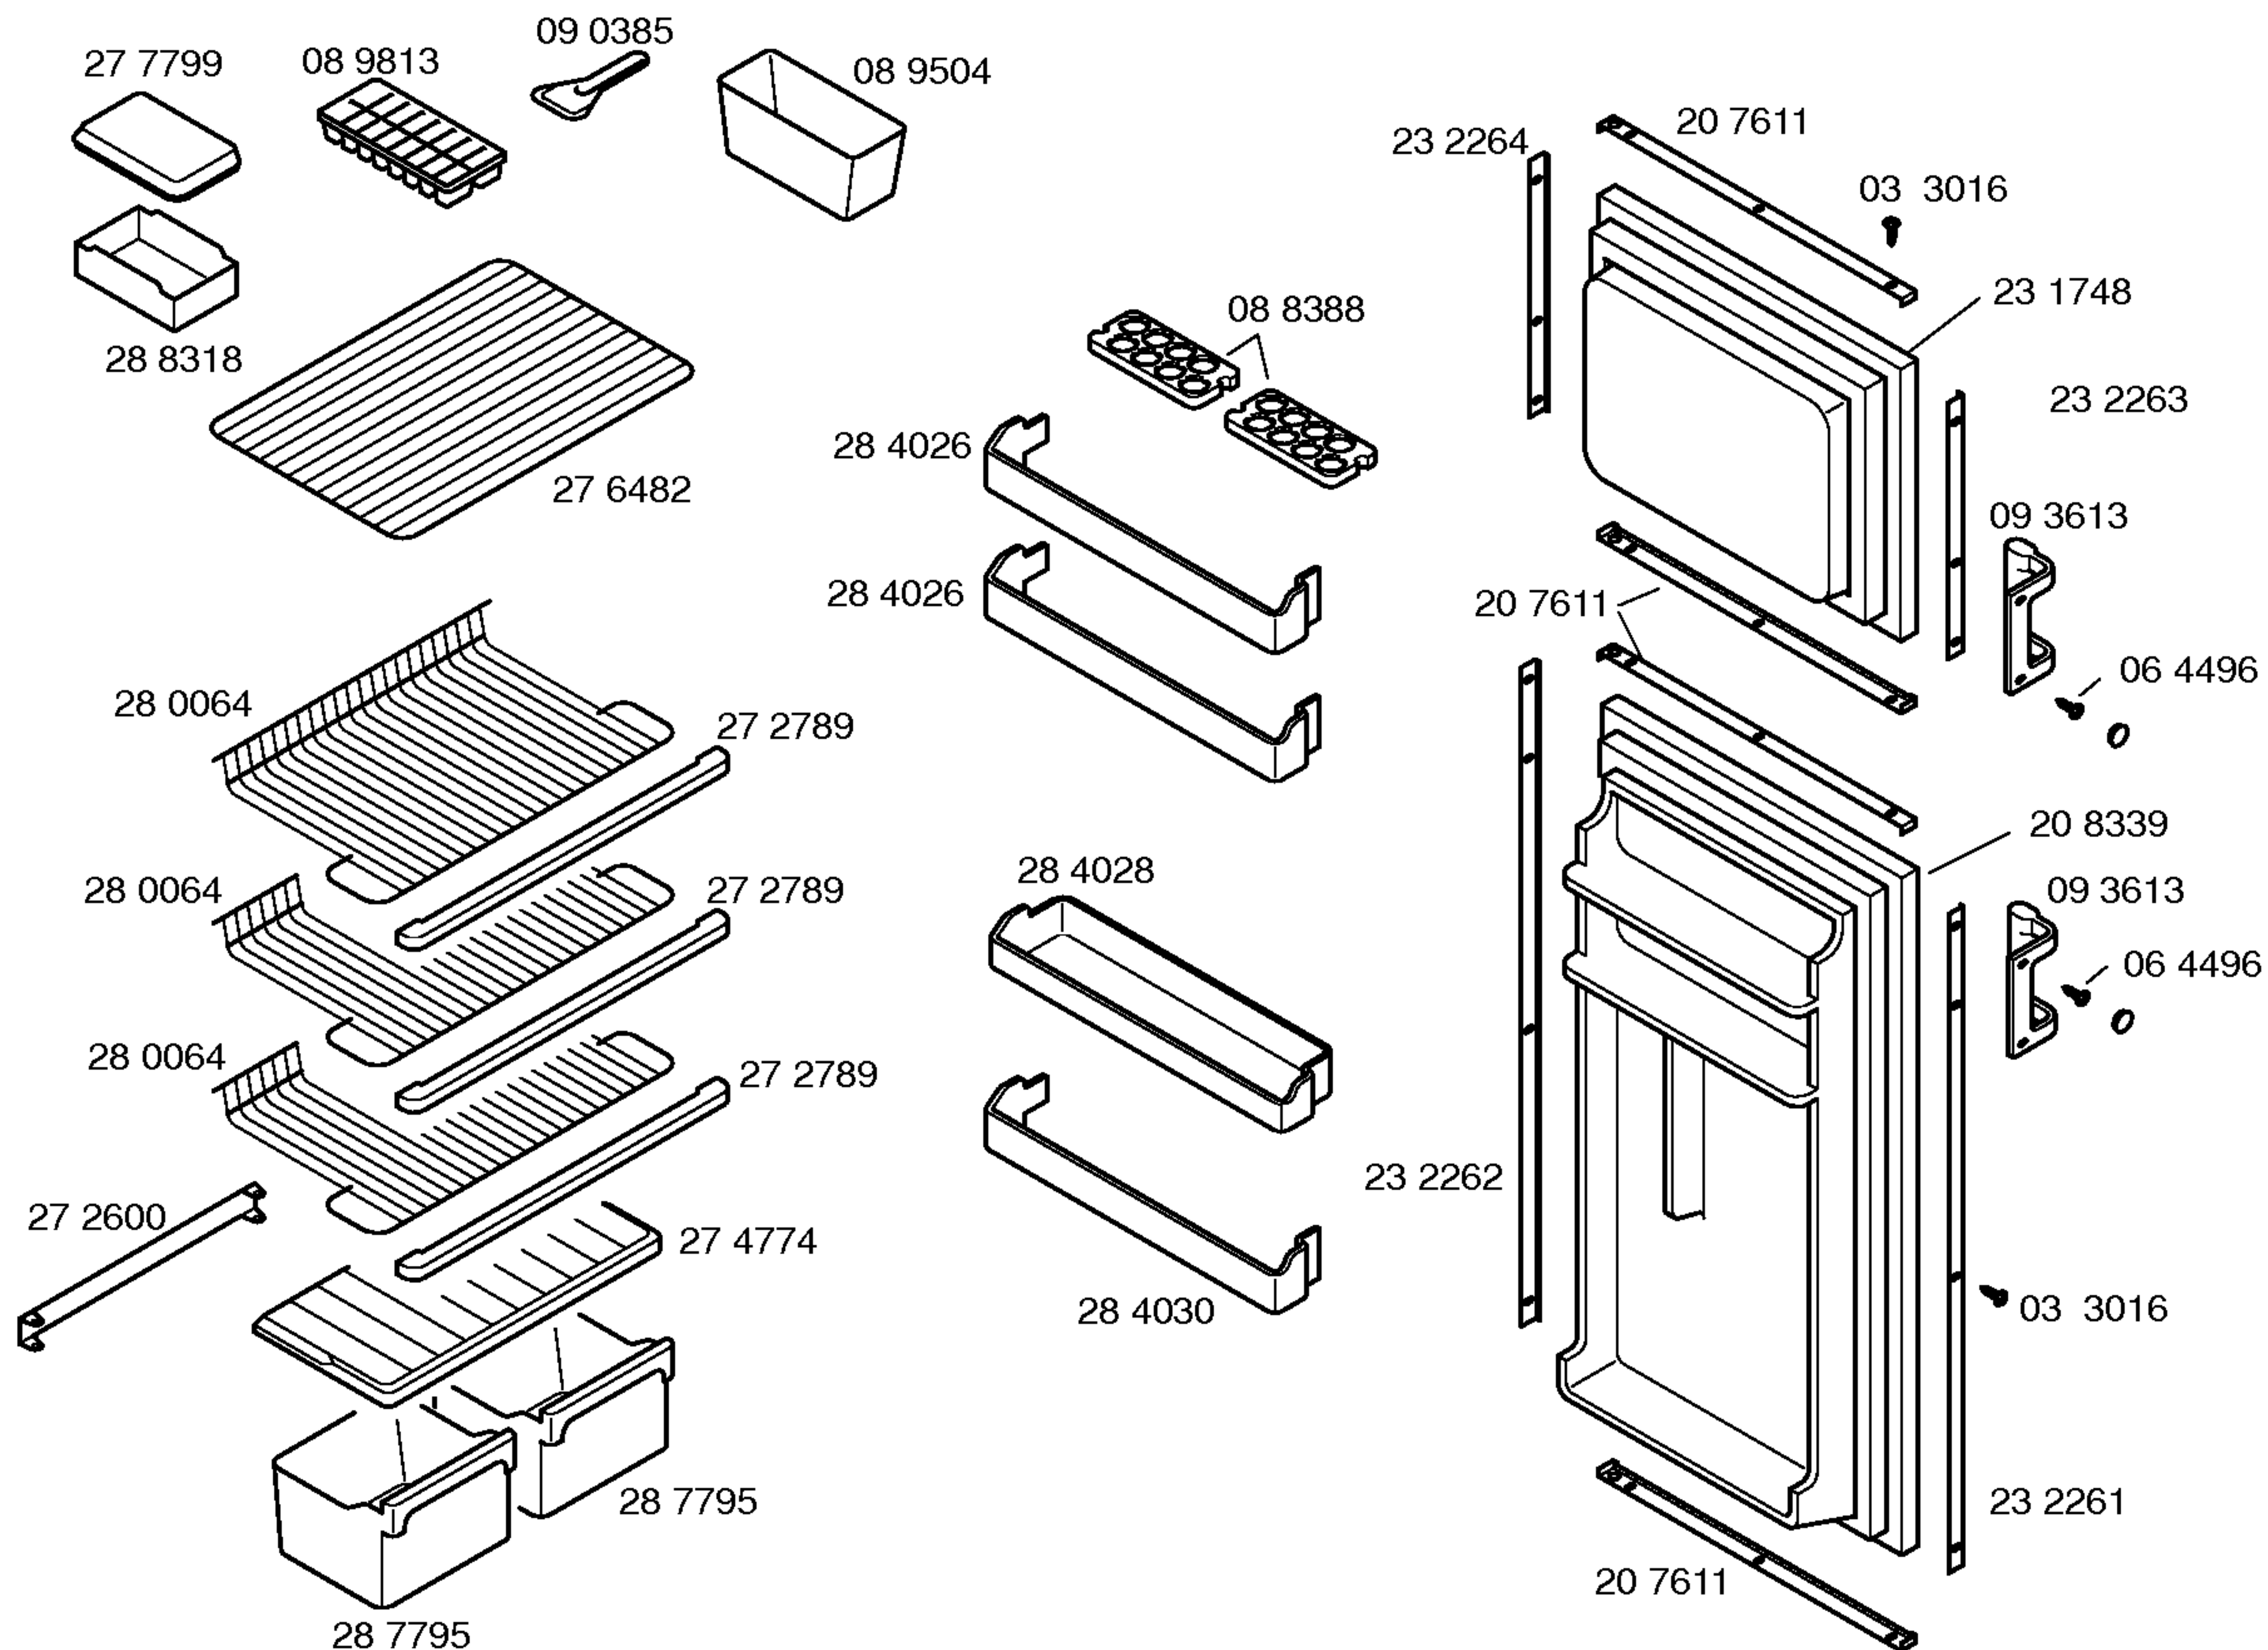

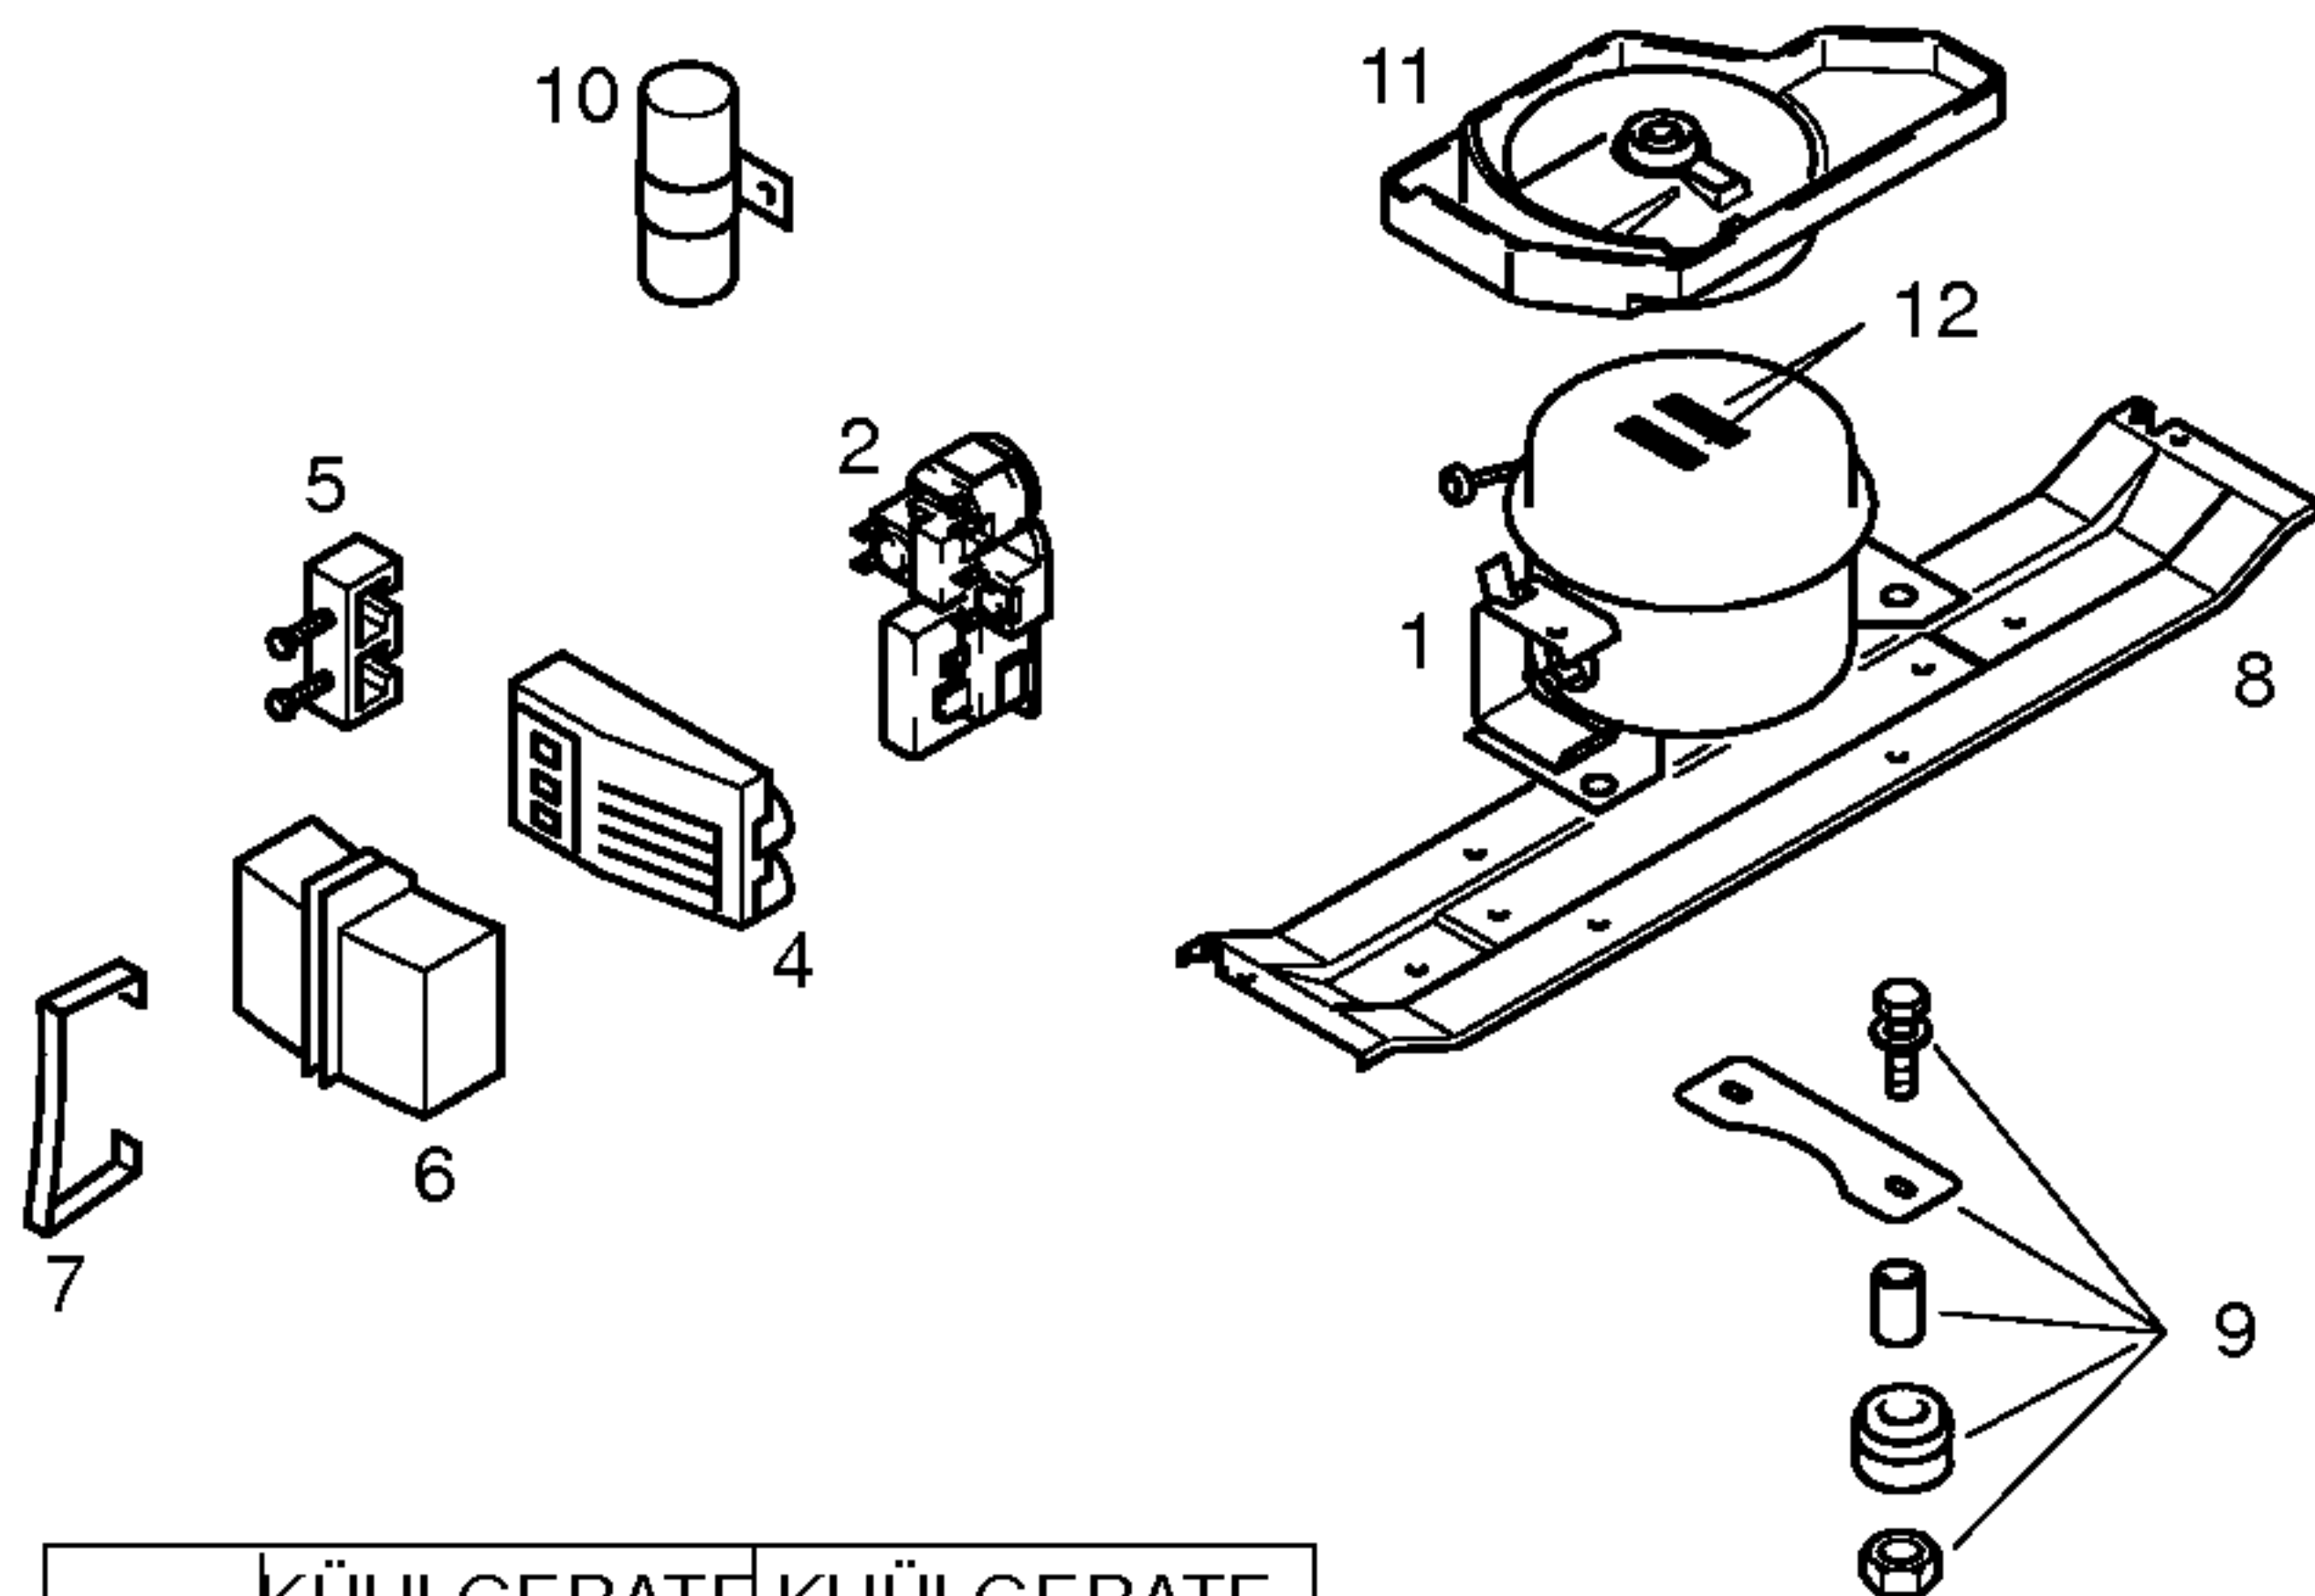

Pos.	KÜHLGERÄTE	KHÜLGERÄTE
	ZEM	U. HERMÉT.
	GL90AA	GL90AA
1	14 1383	14 1360
2	15 5308	15 4851
3		
4		
5		
6		
7		
8	28 9409	28 9409
9	05 0166	05 0166
10		
11	09 6332	09 6332
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	ZEM	U. Hermét.
Typ/Type/Tipo	GL90AA	GL90AA
Förderleistung/Delivery/Debit/Aspiración l/h		
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	12,8	12,8
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	9,2	9,0
Hi/aux.	22,8	22,4

Temp.Reyler/Thermostat/Termostato		RANCO
Typ/Type/Tipo		K52-L1561
Reglerstellung/Position/Conexión		MÁX.-MÍN.
Schaltwerte/Switching values/	..ein/conex.°C	+3,5° +6°
Valeurs de commutation/Desconex.	..aus"/descon.	+4° +14°
(..abtaven' od)	..alarm'	

Füllmenge/Fill. quantity/Charge/Carga	134a	g	230	230
---------------------------------------	------	---	-----	-----

AnschluBwert/Comm. load/puiss. Connect./Potenc.	W	184	184
---	---	-----	-----

Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		

Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Volare/Tension/Tensión	V		

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			
---	--	--	--