




Libro de instrucciones
51 6294
(E, P, GB, F, NL, GR)

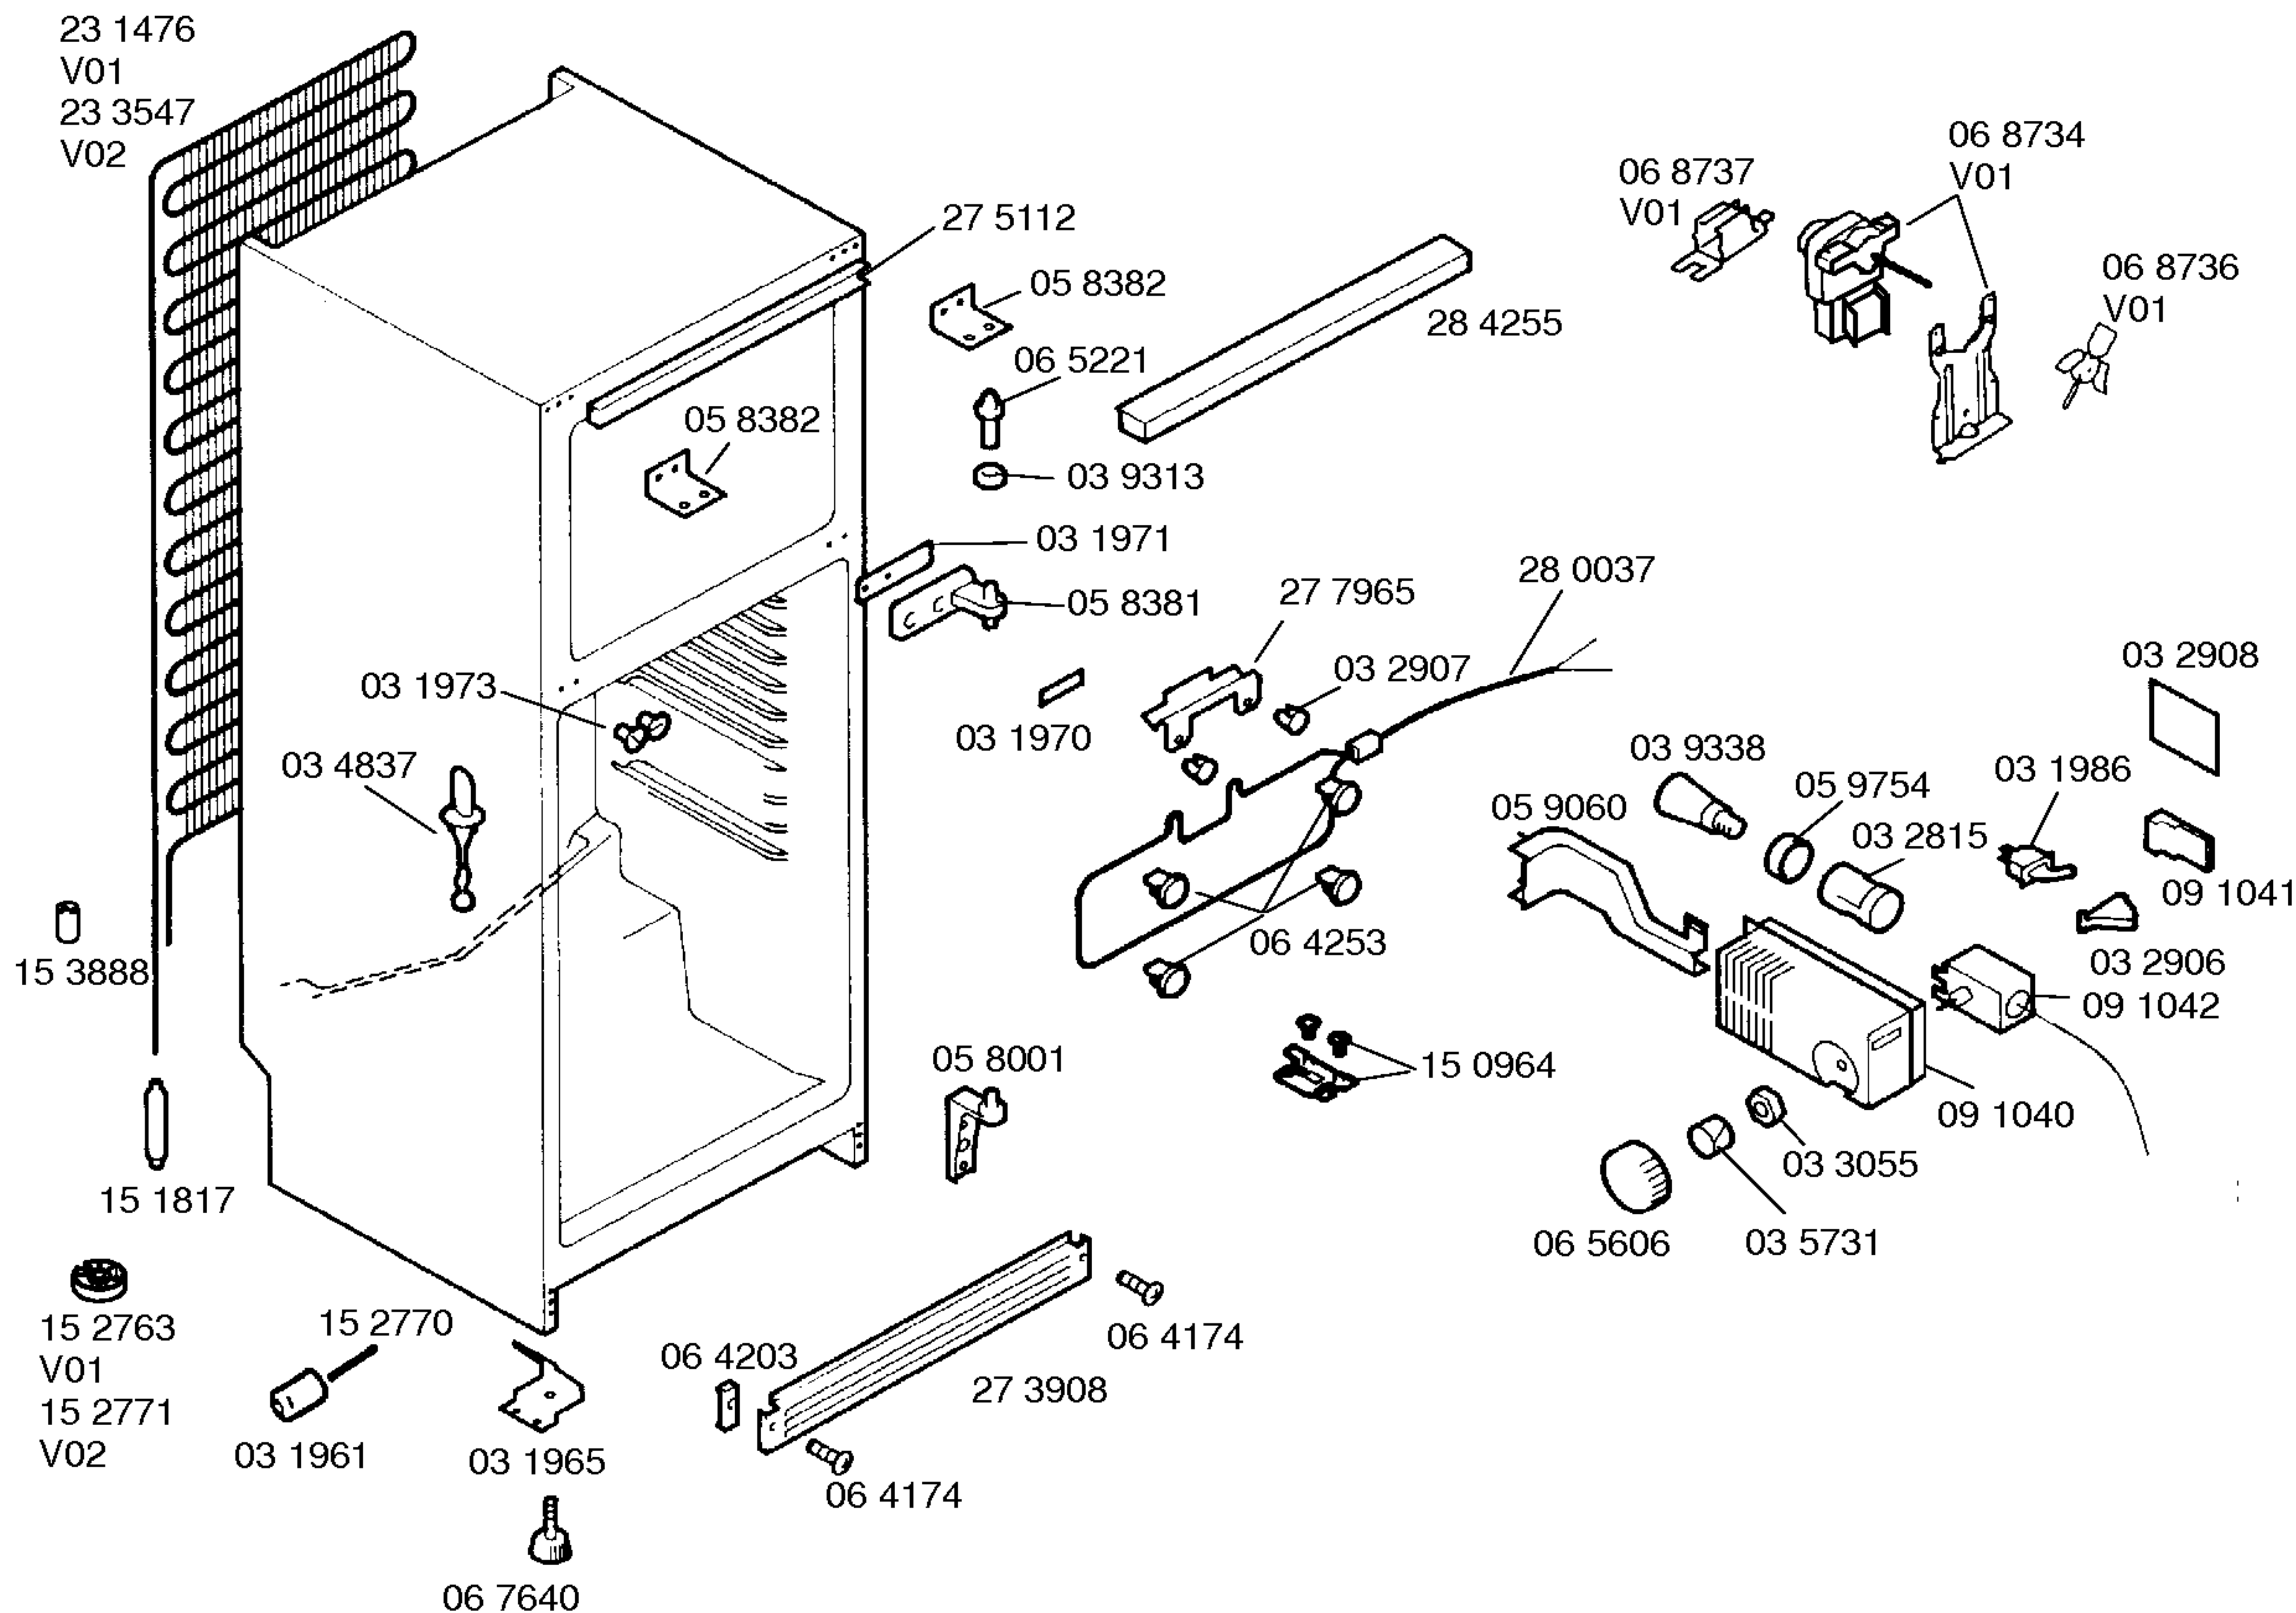

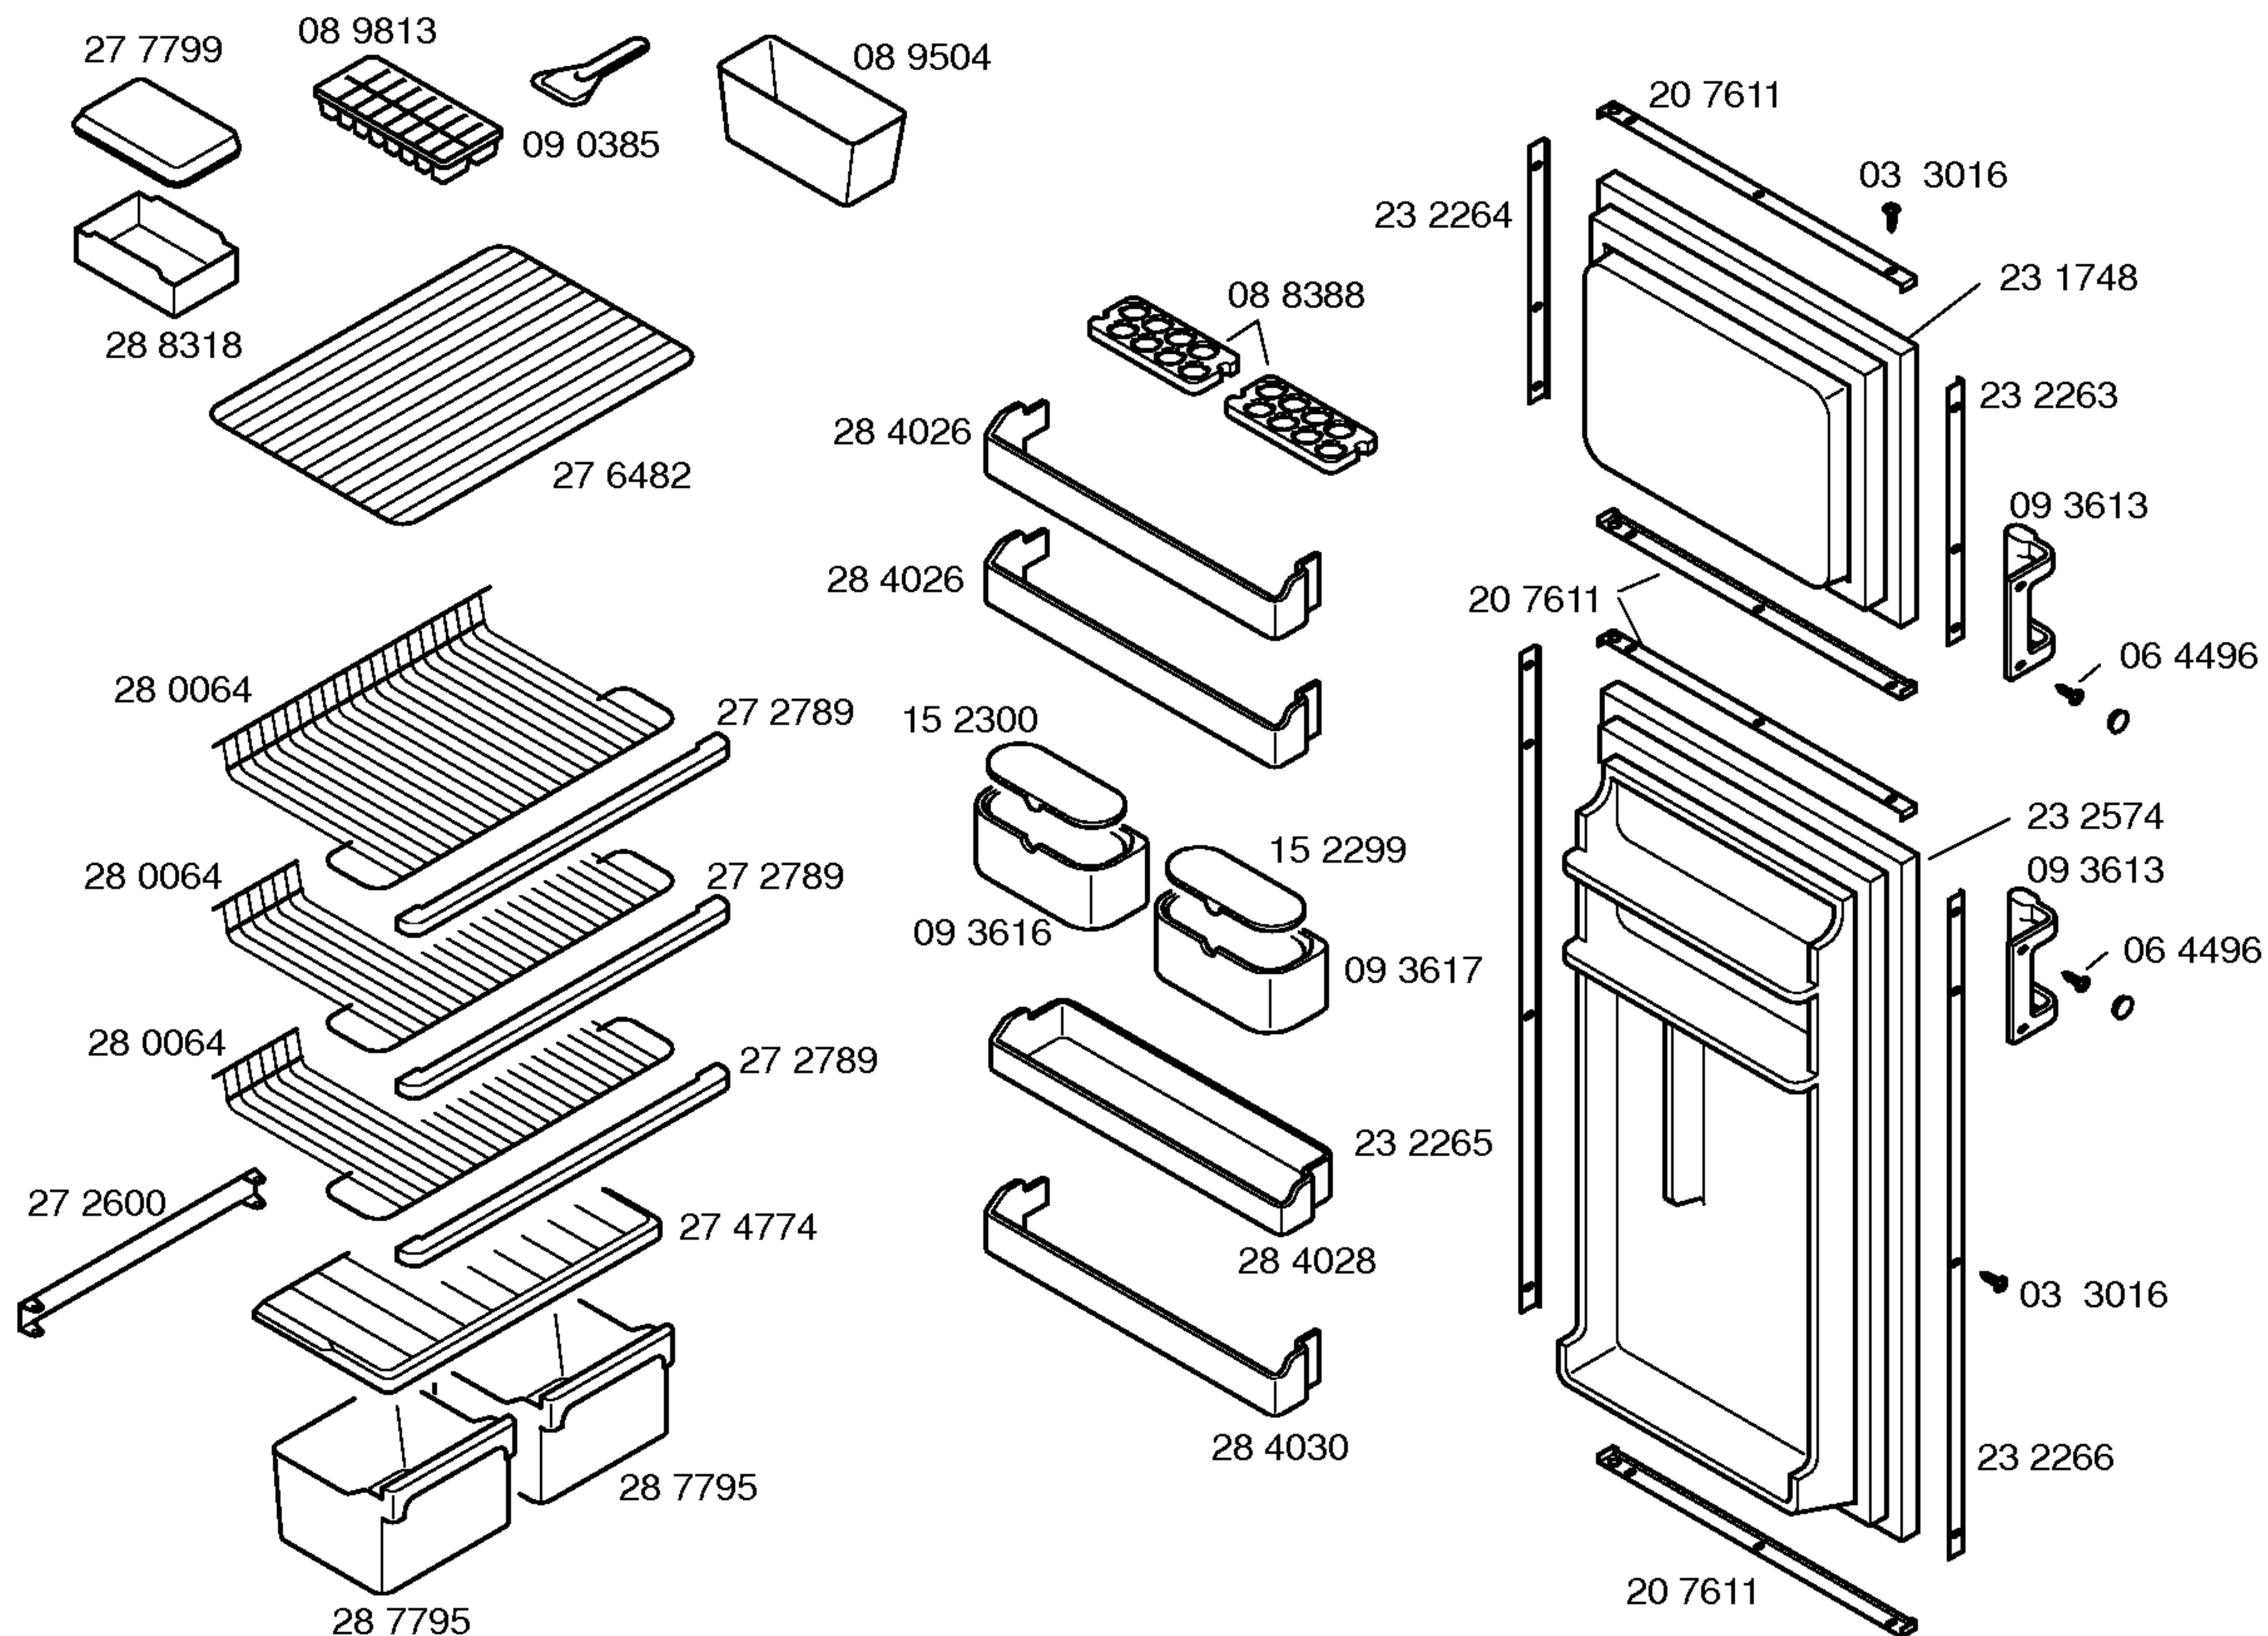

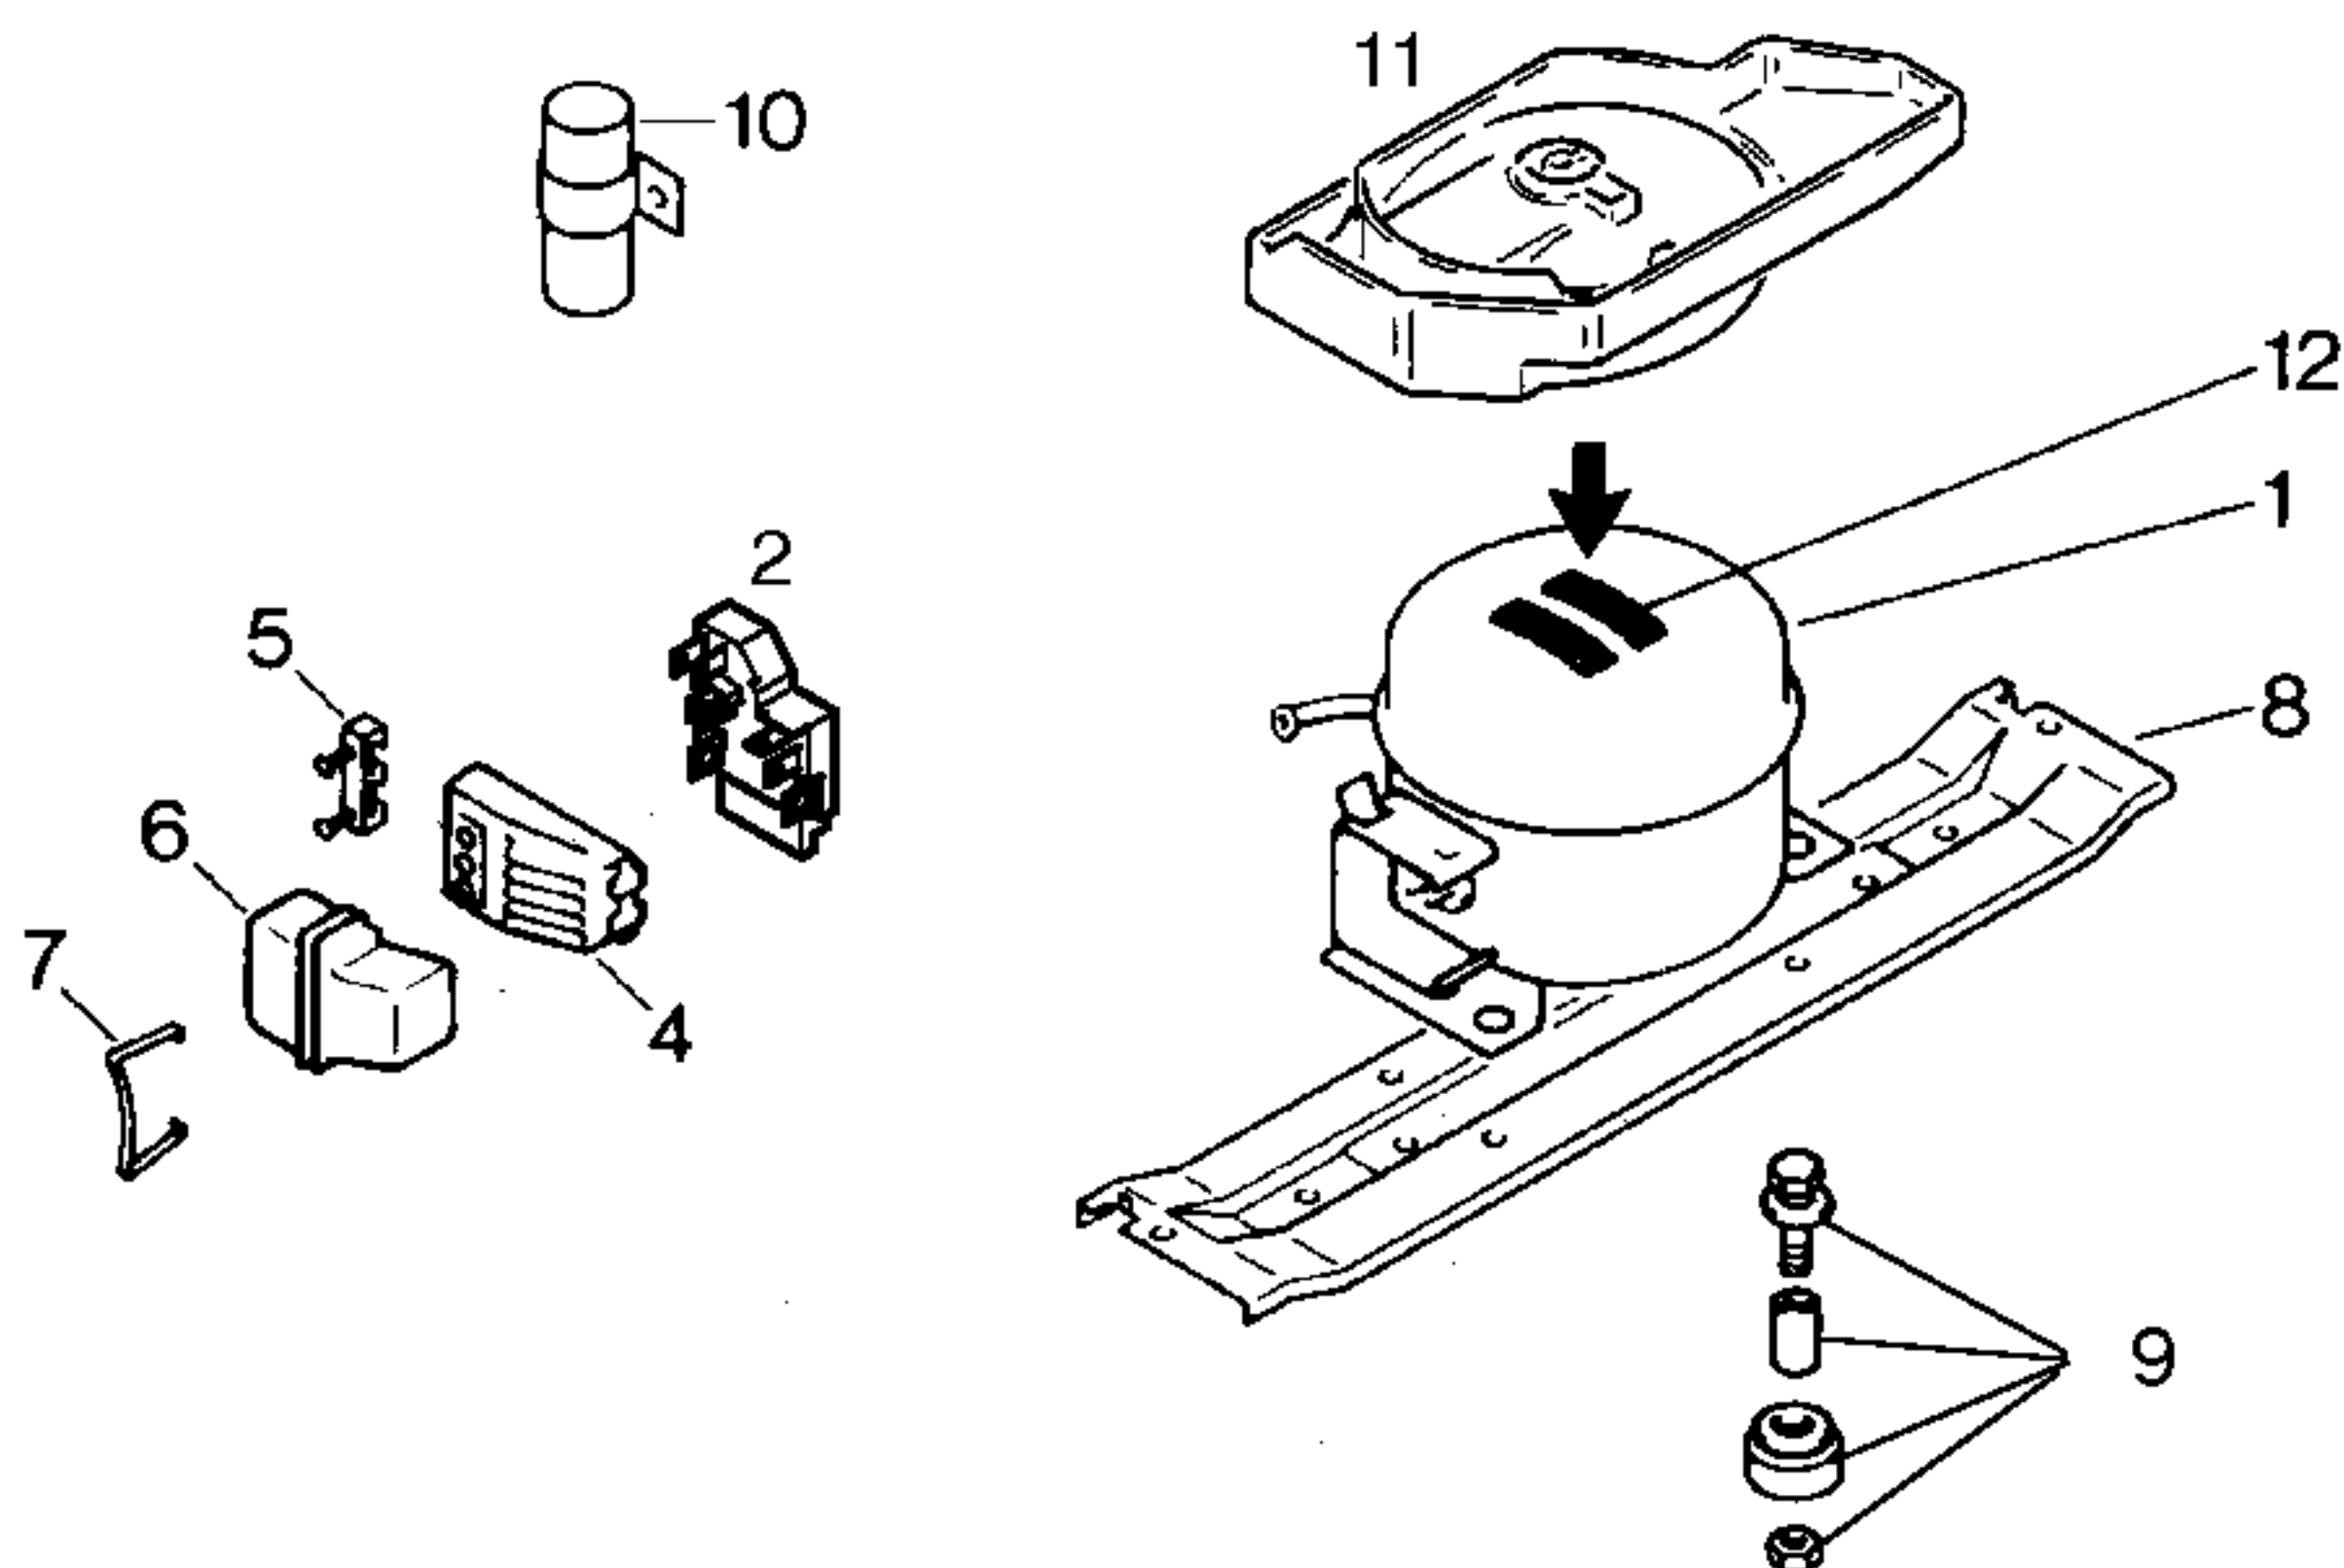

Pos.	KÜHLGERÄTE	KHÜLGERÄTE
	ZEM	U. HERMÉT.
	GL90AA	GL90AA
1	14 1383	14 1360
2	15 5308	15 4851
3		
4		
5		
6		
7		
8	28 9409	28 9409
9	05 0166	05 0166
10		
11	09 6332	09 6332
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS					
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo		ZEM GL90AA	U. Hermét. GL90AA		
Förderleistung/Delivery/Debit/Aspiración l/h					
Anlaufstrom/Staring current/Cour.démarrage/Int.arranque A		12,8	12,8		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		9,2	9,0		
Hi/aux.		22,8	22,4		
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo			RANCO K52-L156		
Reglerstellung/Position/Conexión			MÁX.-MÍN.		
Schaltwerte/Switching values/ ..ein/conex. °C			+3,5° +6		
Valeurs de commutation/Desconex. ..aus"/descon.			+4° +14°		
(..abtaven' od) ..alarm'					
Füllmenge/Fill. quantily/Charge/Carga 134a	g	230	230		
AnschluBwert/Comm. load/puiss. Connect./Potenc.	W	184	184		
Heizung/Heater/Chauflage/Resistenc.descong.					
Widerstand/Resistance/Resistencia	Ohm				
Leistung/Power/Puissance/Potencia	W				
Ventilador/Blower/Ventilateur/Ventilador					
Widerstand/Resistance/Resistencia	Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula					
Widerstand/Resistance/Resistencia	Ohm				
Spannung/Volare/Tension/Tensión	V				
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador					