




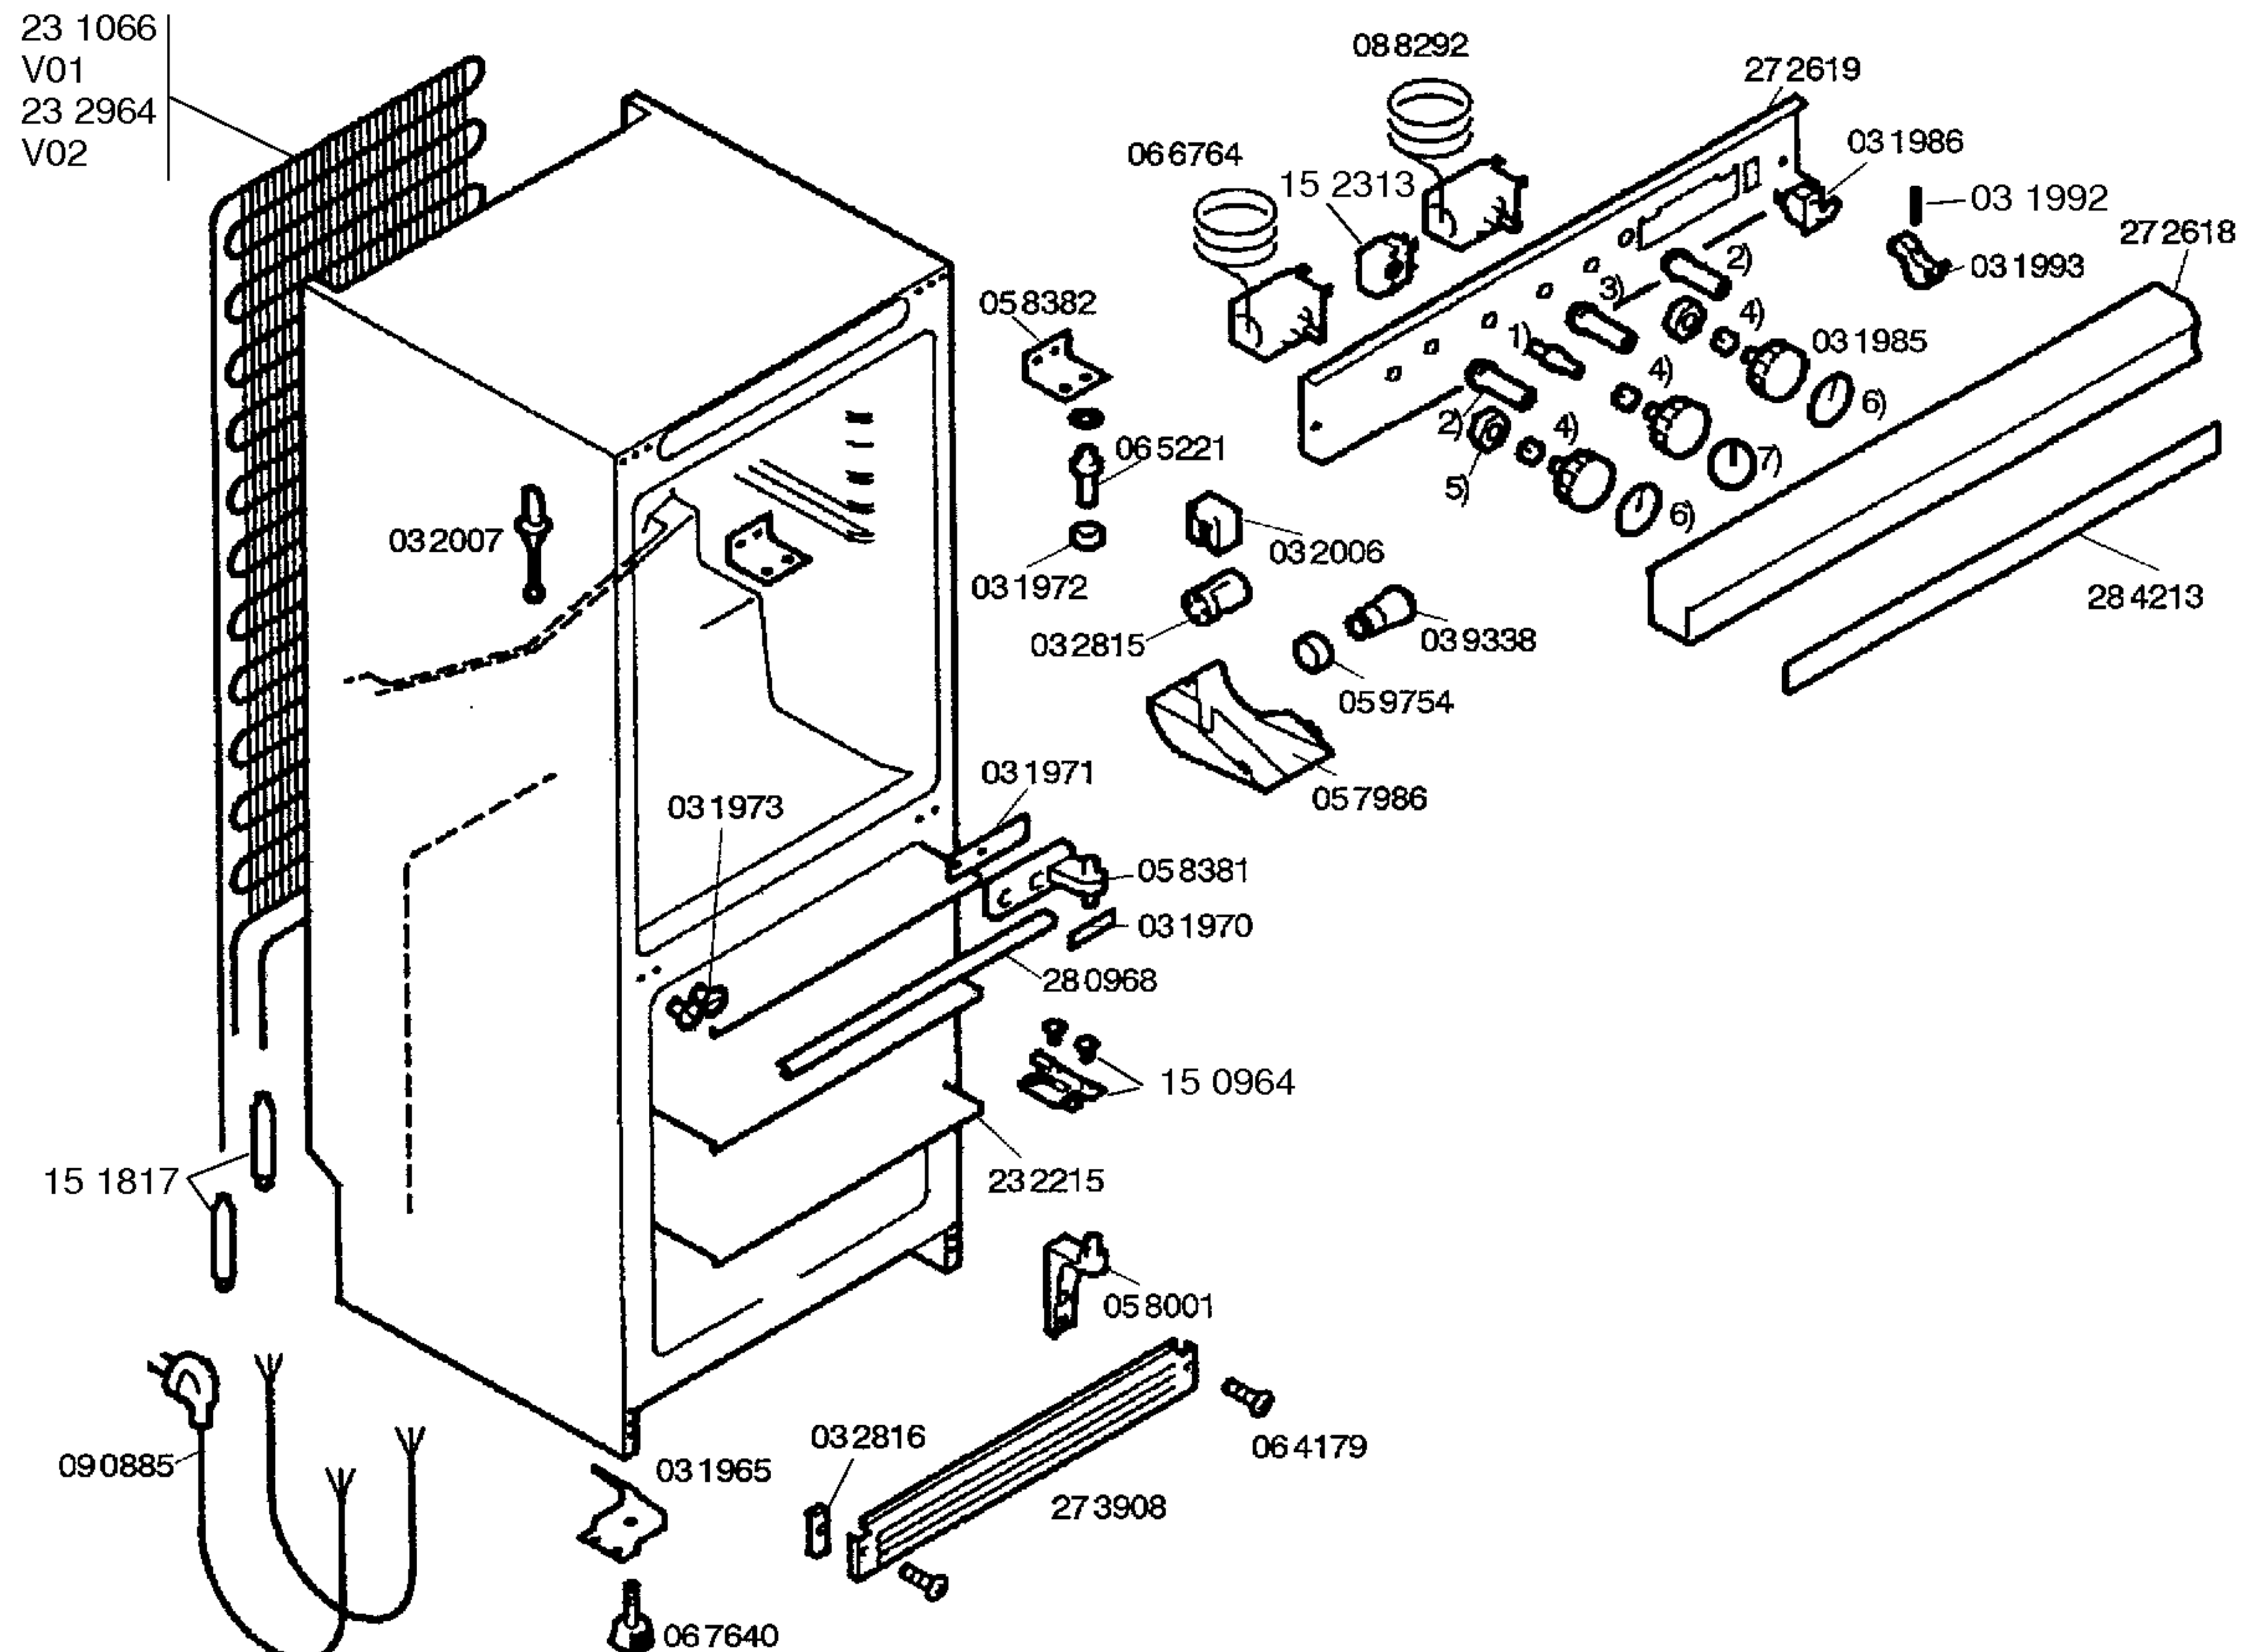


Libro de instrucciones
51 6280
(E,GR)

- 1) 03 1989
- 2) 03 1987
- 3) 03 1988
- 4) 03 5731
- 5) 03 3055
- 6) 03 4020
- 7) 03 4936

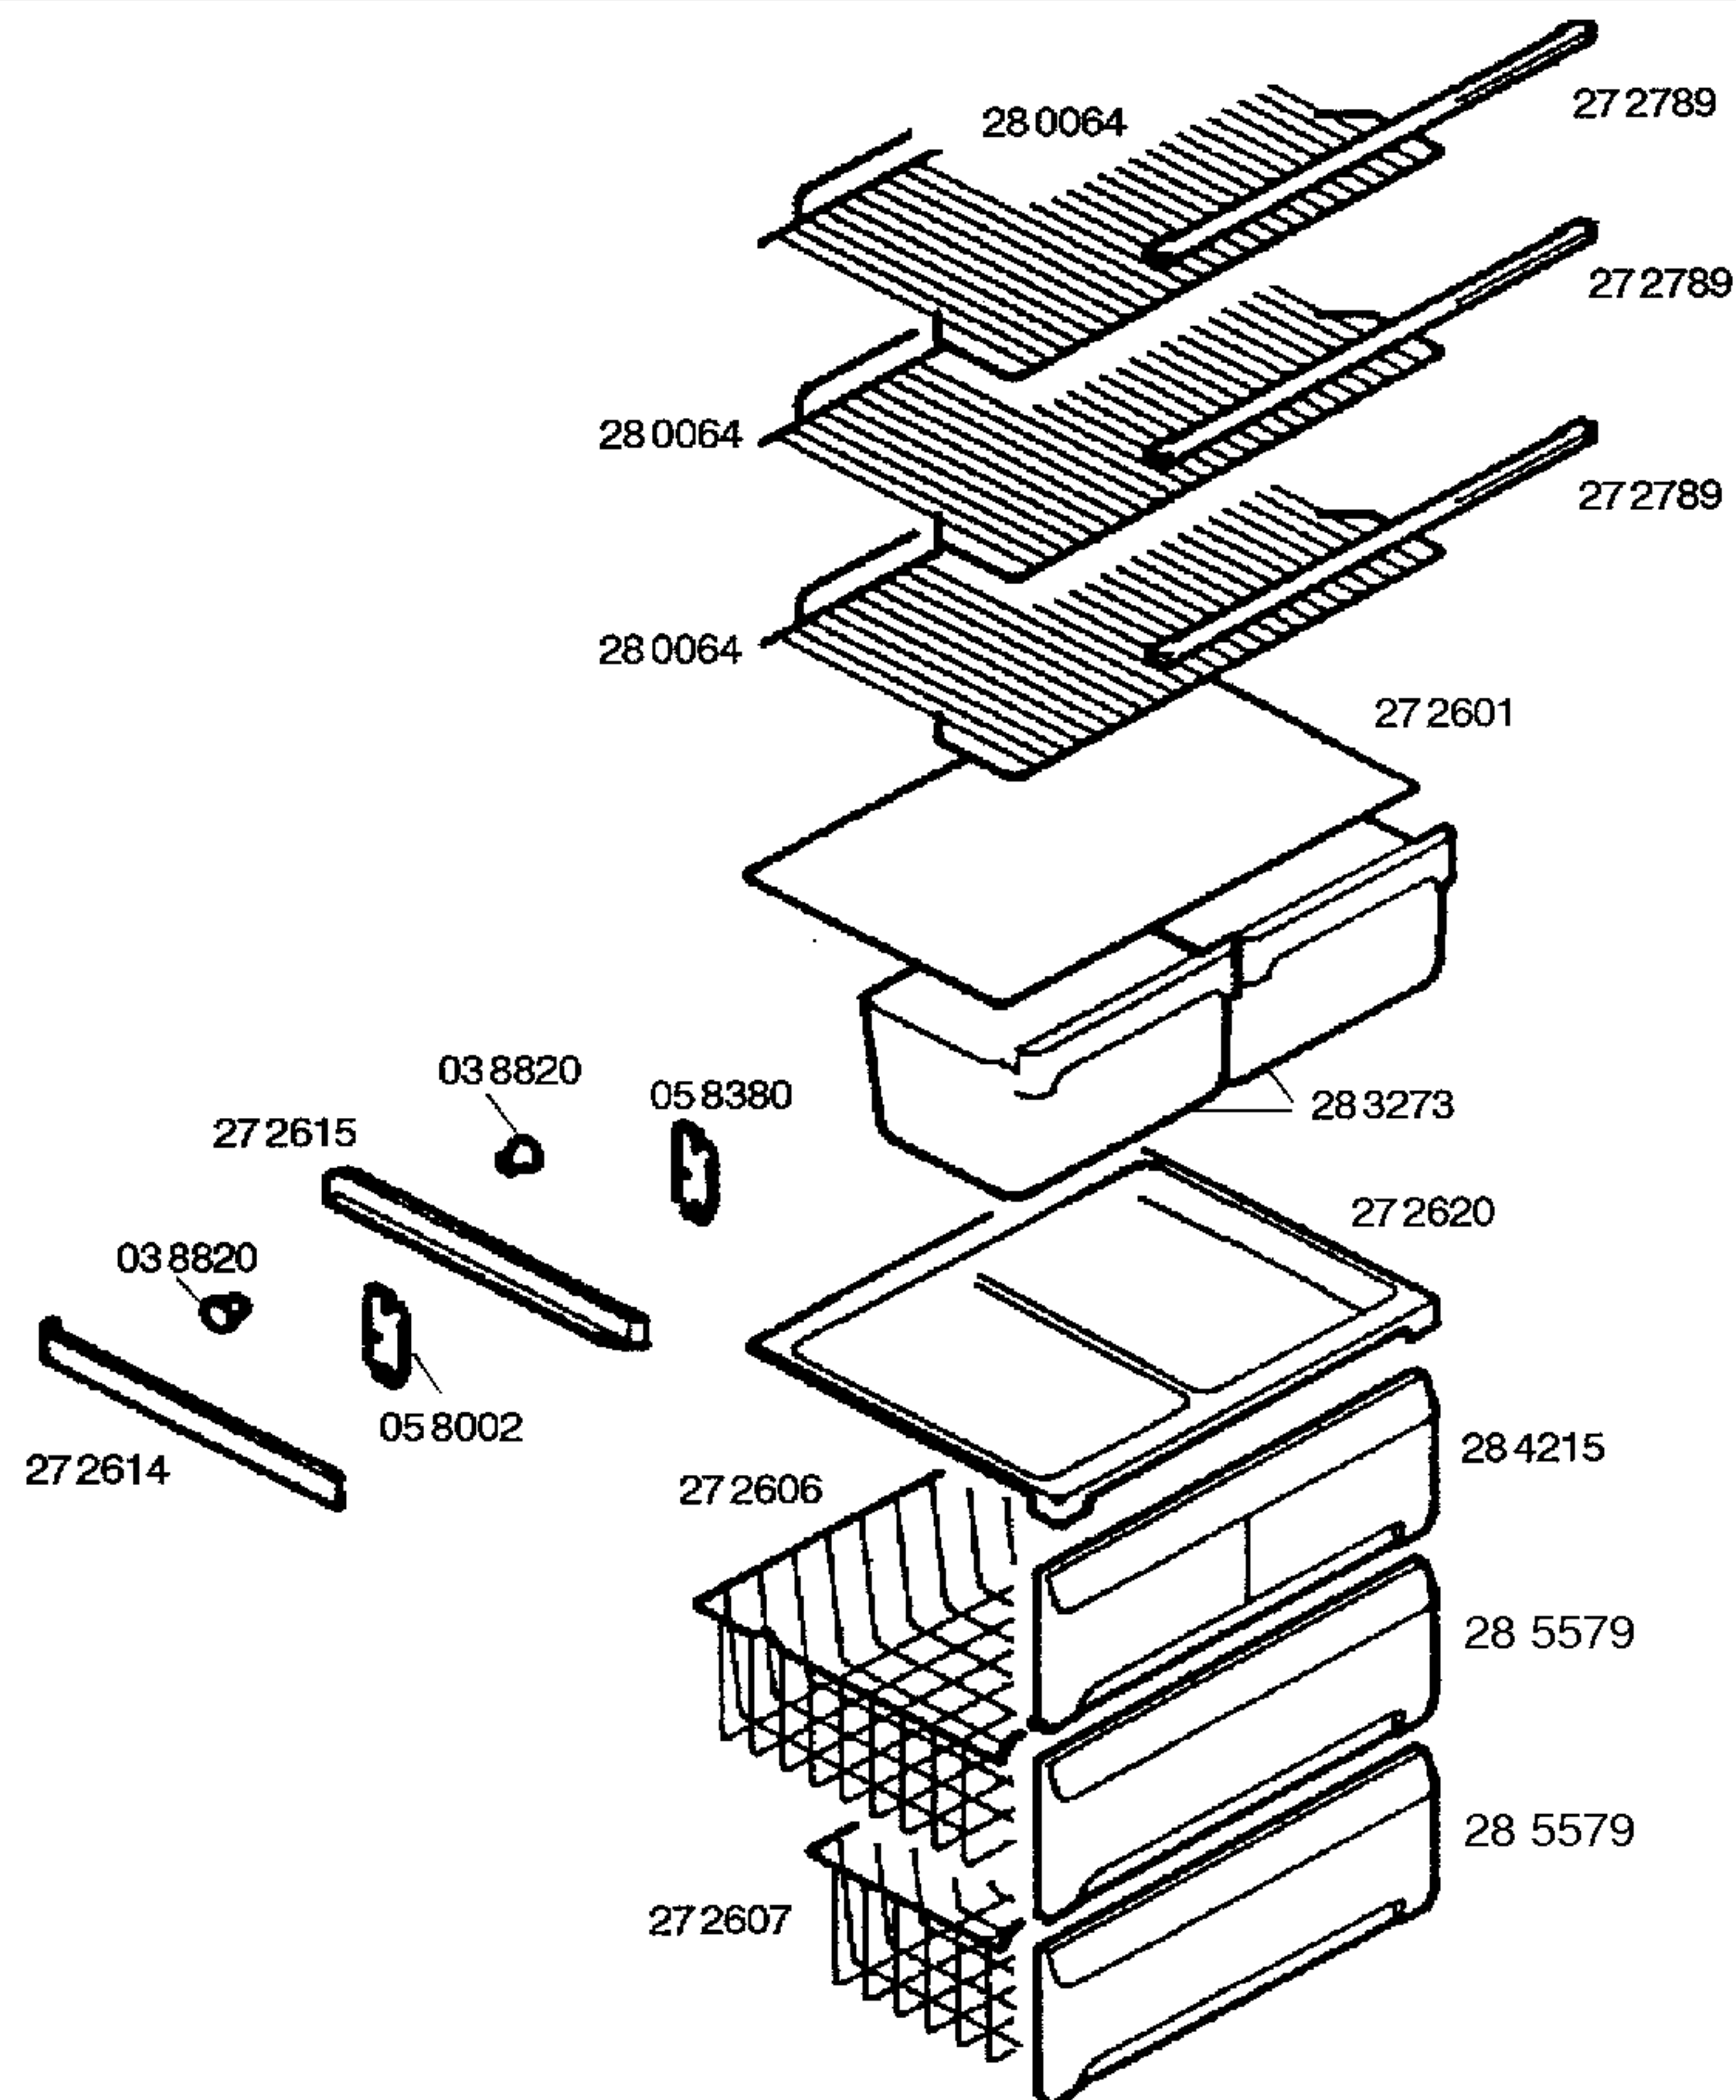

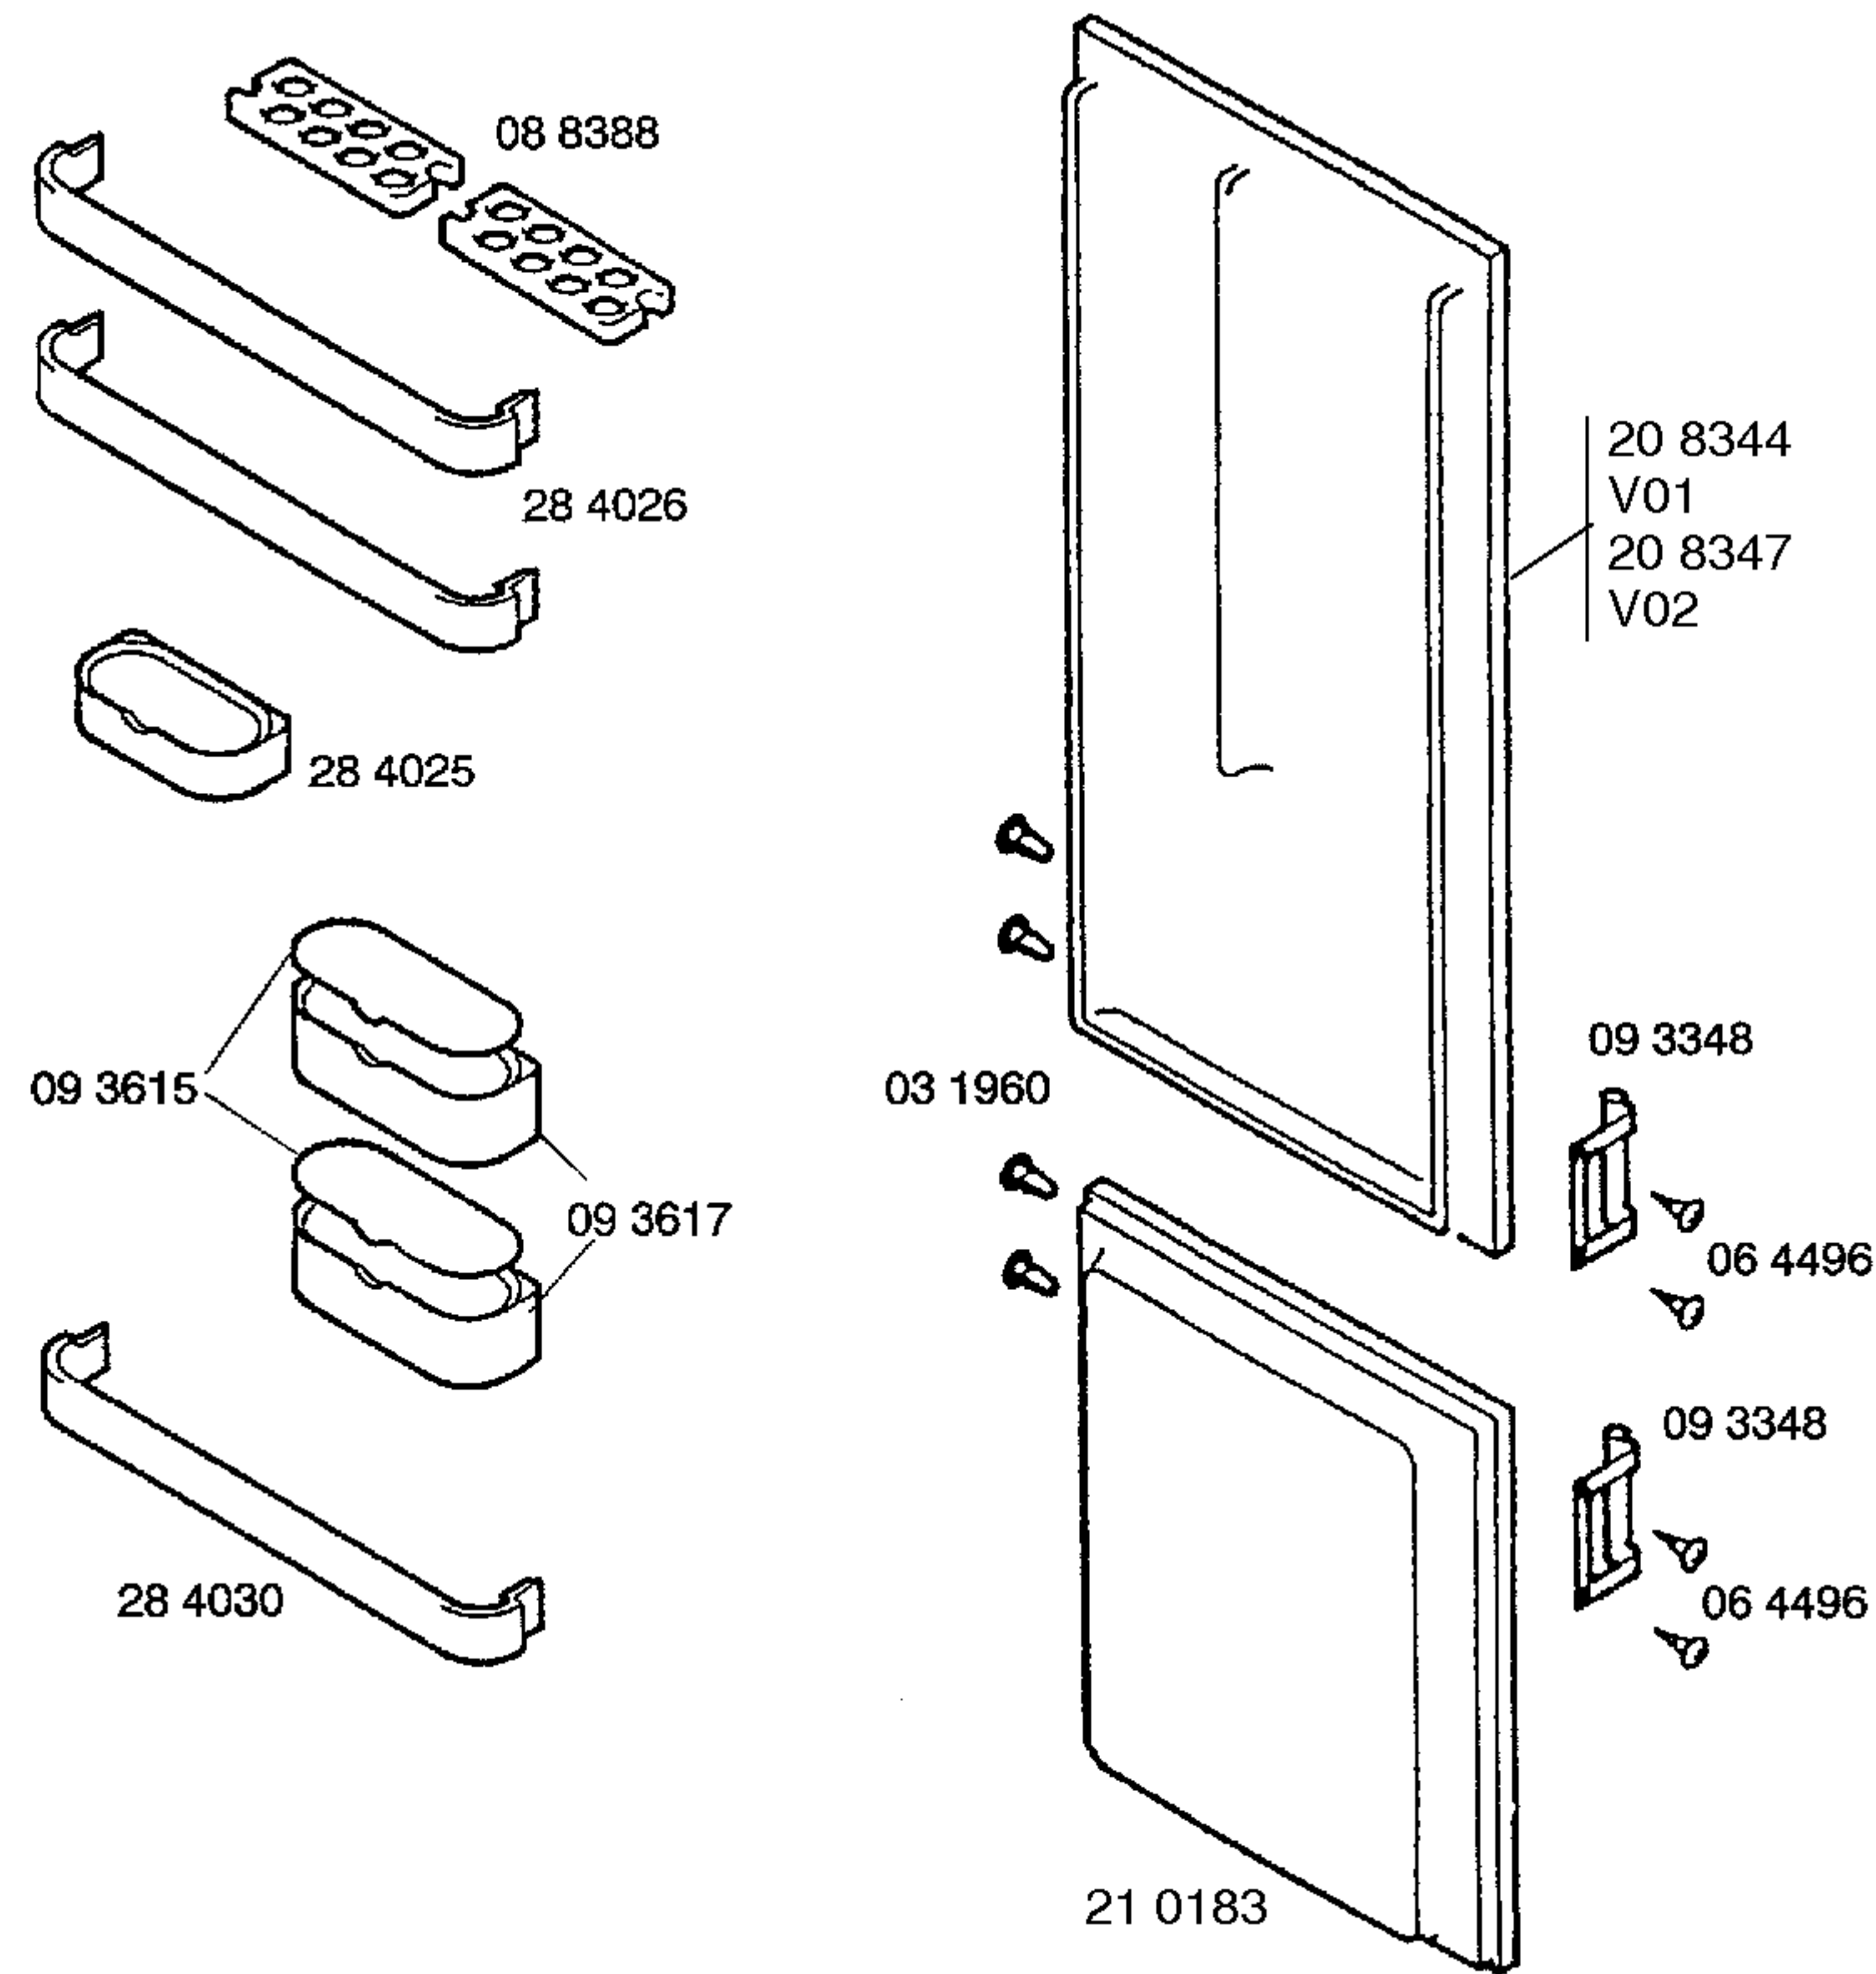

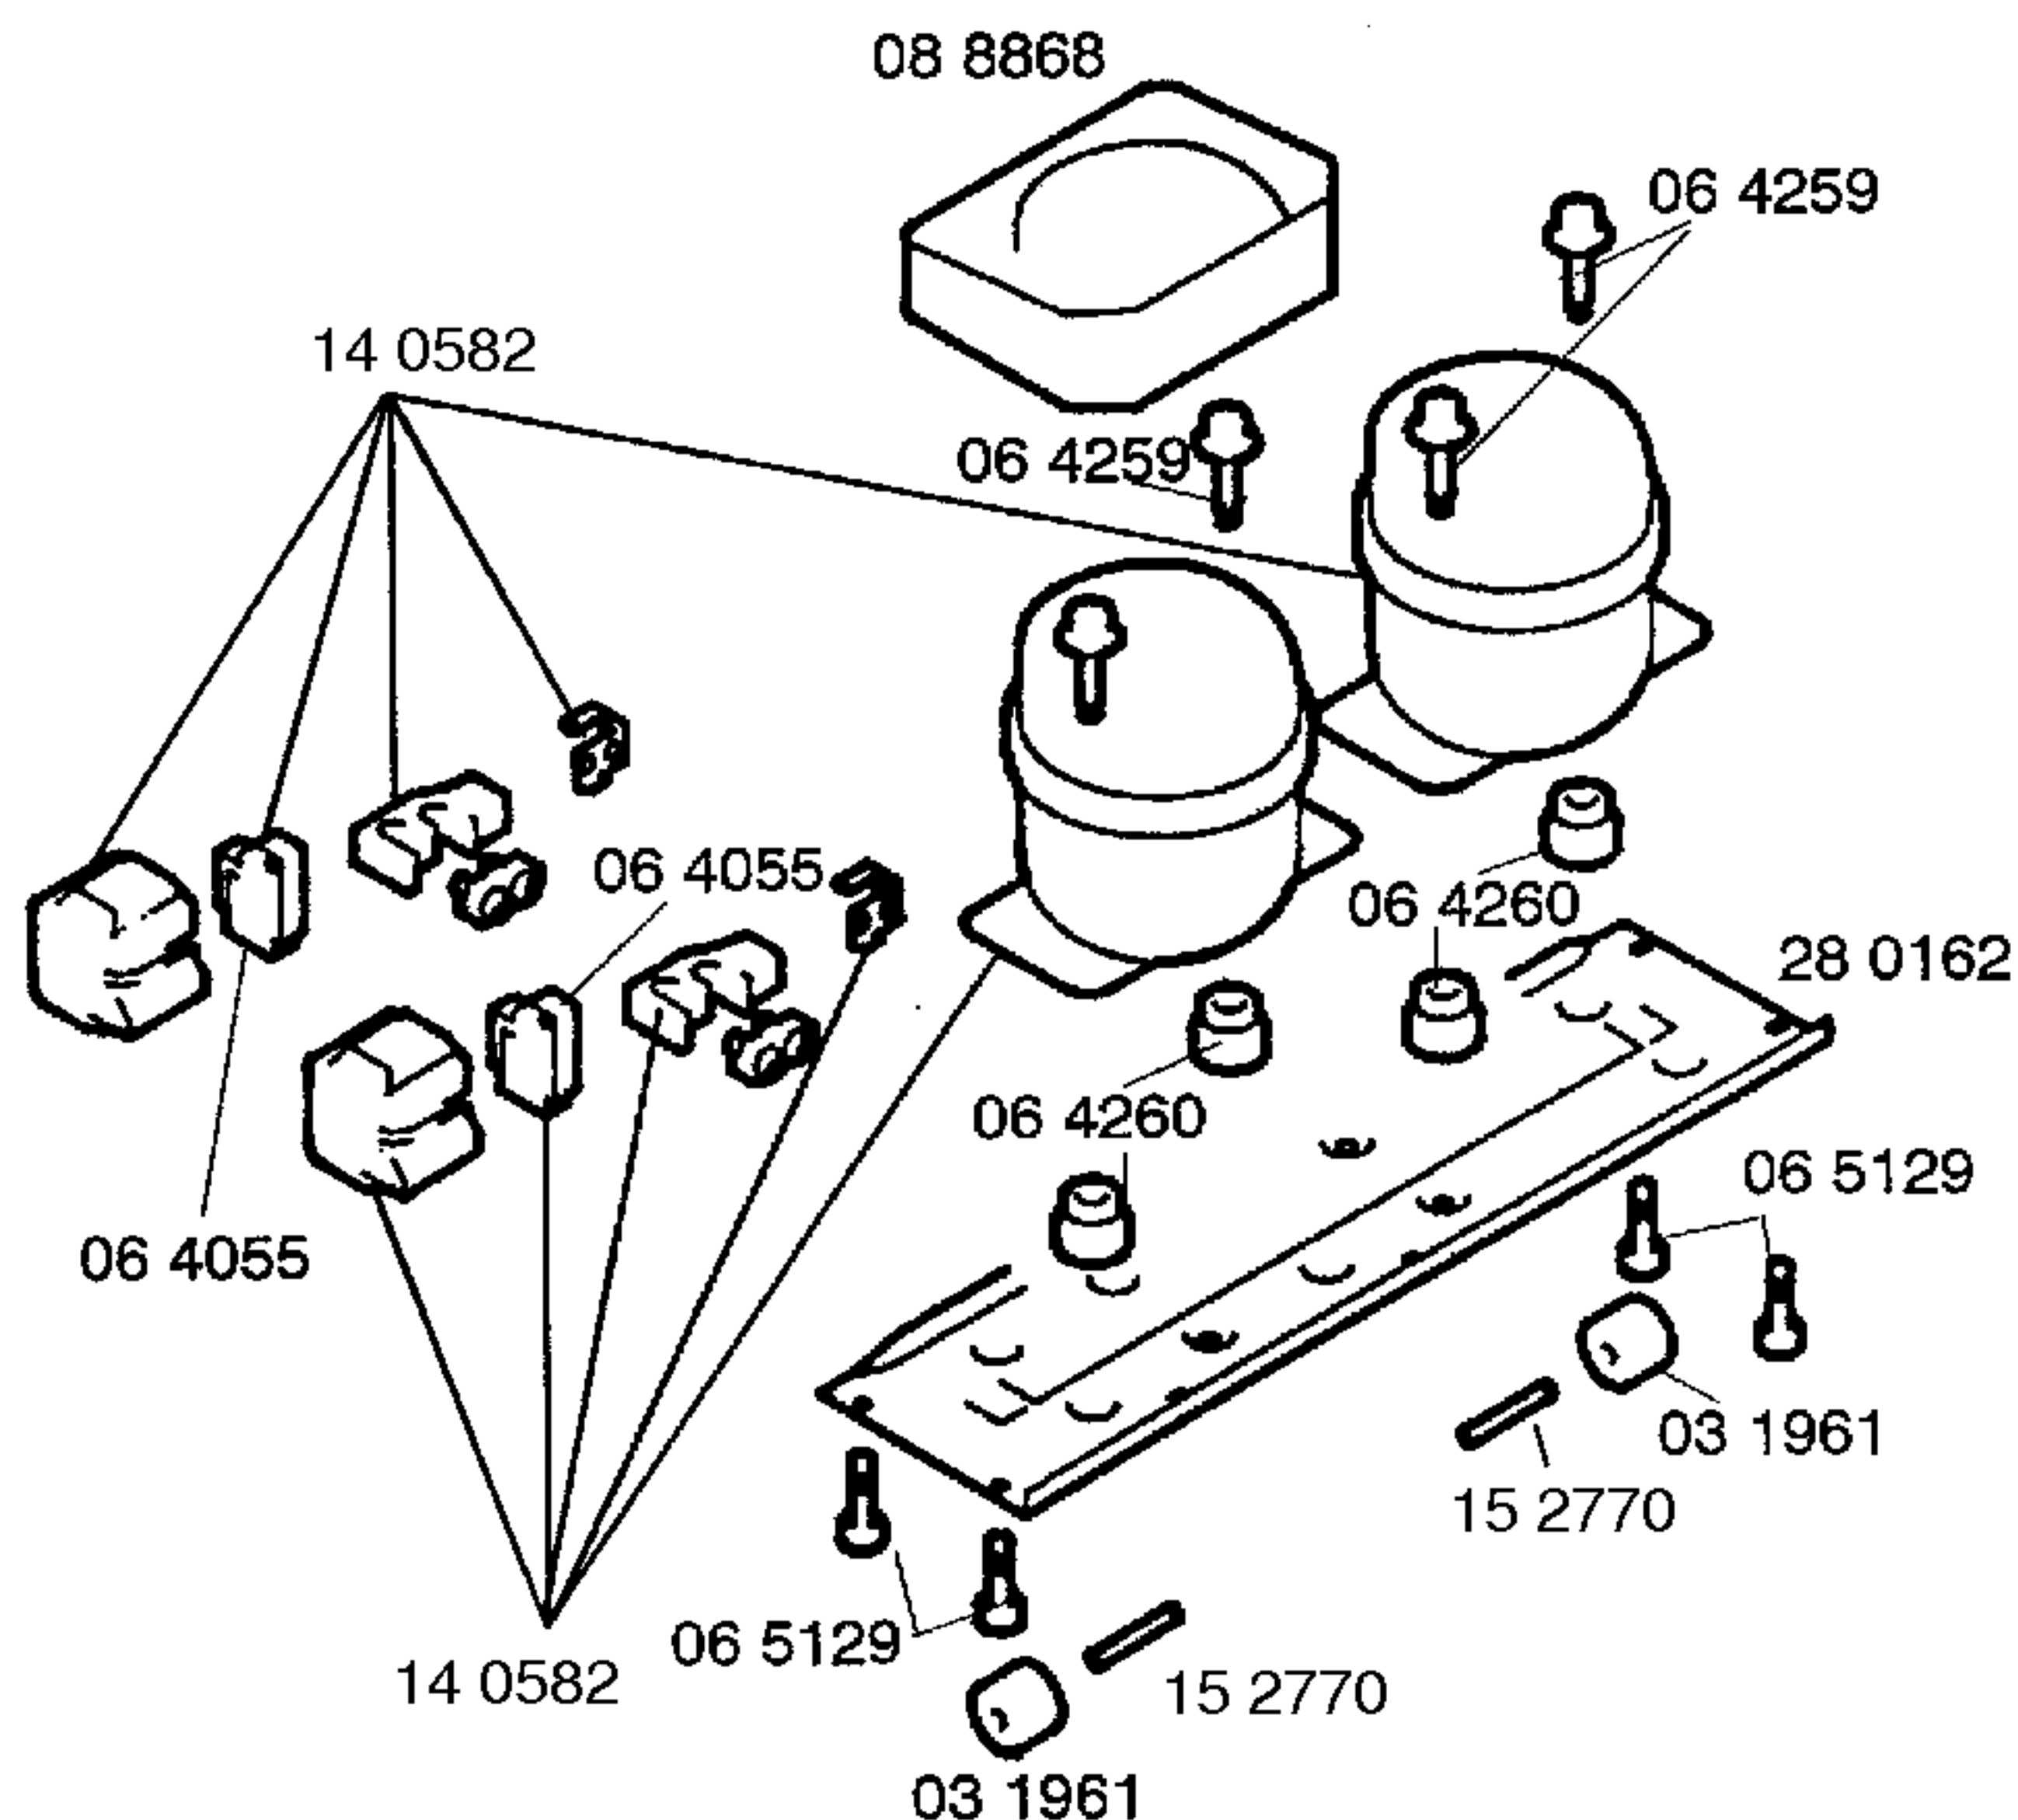
TECHNISCHE DATEN/ TECHNICAL DATA/ DONNE ES TECHNIQUES/ DATOS TECNICOS

Verdichter/ Compressor/ Compresseur/ Compresor	MATSUSHITA	MATSUSHITA
Typ/ Type/ Tipo	SO75LKAA	SO75LKAA
Förderleistung/ Delivery/ Debit/ Aspiración	l/h	
Anlaufstrom/ Starting current/ Cour. démarrage/ Int. arranque	A	
Widerstand/ Resistance/ Resistencia. Ha/main/prin.	Ohm	
Hi/aux.	Ohm	

Temp. Reyler/ Thermostat/ Termostato	ATEA	ATEA
Typ/ Type/ Tipo	MANUAL	MANUAL
Reglerstellung/ Position/ Conexión	+ 6°	- 19°
Schaltwerte/ Switching values/	..ein"/conex. °C	- 13°
Valeurs de commutation/ Desconex.	..aus"/descon.	- 25°
(.. abtaven" od.)	..alarm"	- 35°

Füllmenge/ Fill. quantity/ Charge/ Carga	R12	g	70 F2 65 F1	145
--	-----	---	----------------	-----

Anschlußwert/ Comm. load/ Puiss. Connect./ Potenc.	W	91	91
--	---	----	----

Heizung/ Heater/Chaufrage/ Resistenc. descongel.			
Widerstand/ Resistance/ Resistencia	Ohm		
Leistung/ Power/ Puissance/ Potencia	W		

Ventilator/ Blower/ Ventilateur/ Ventilador			
Widerstand/ Resistance/ Resistencia del ventilador	Ohm		

Magnetventil/ Magnetic valve/ Electrovanne/ Electrovalvula			
Widerstand/ Resistance/ Resistencia	Ohm		
Spannung/ Voltare/ Tension/ Tensión	V		