




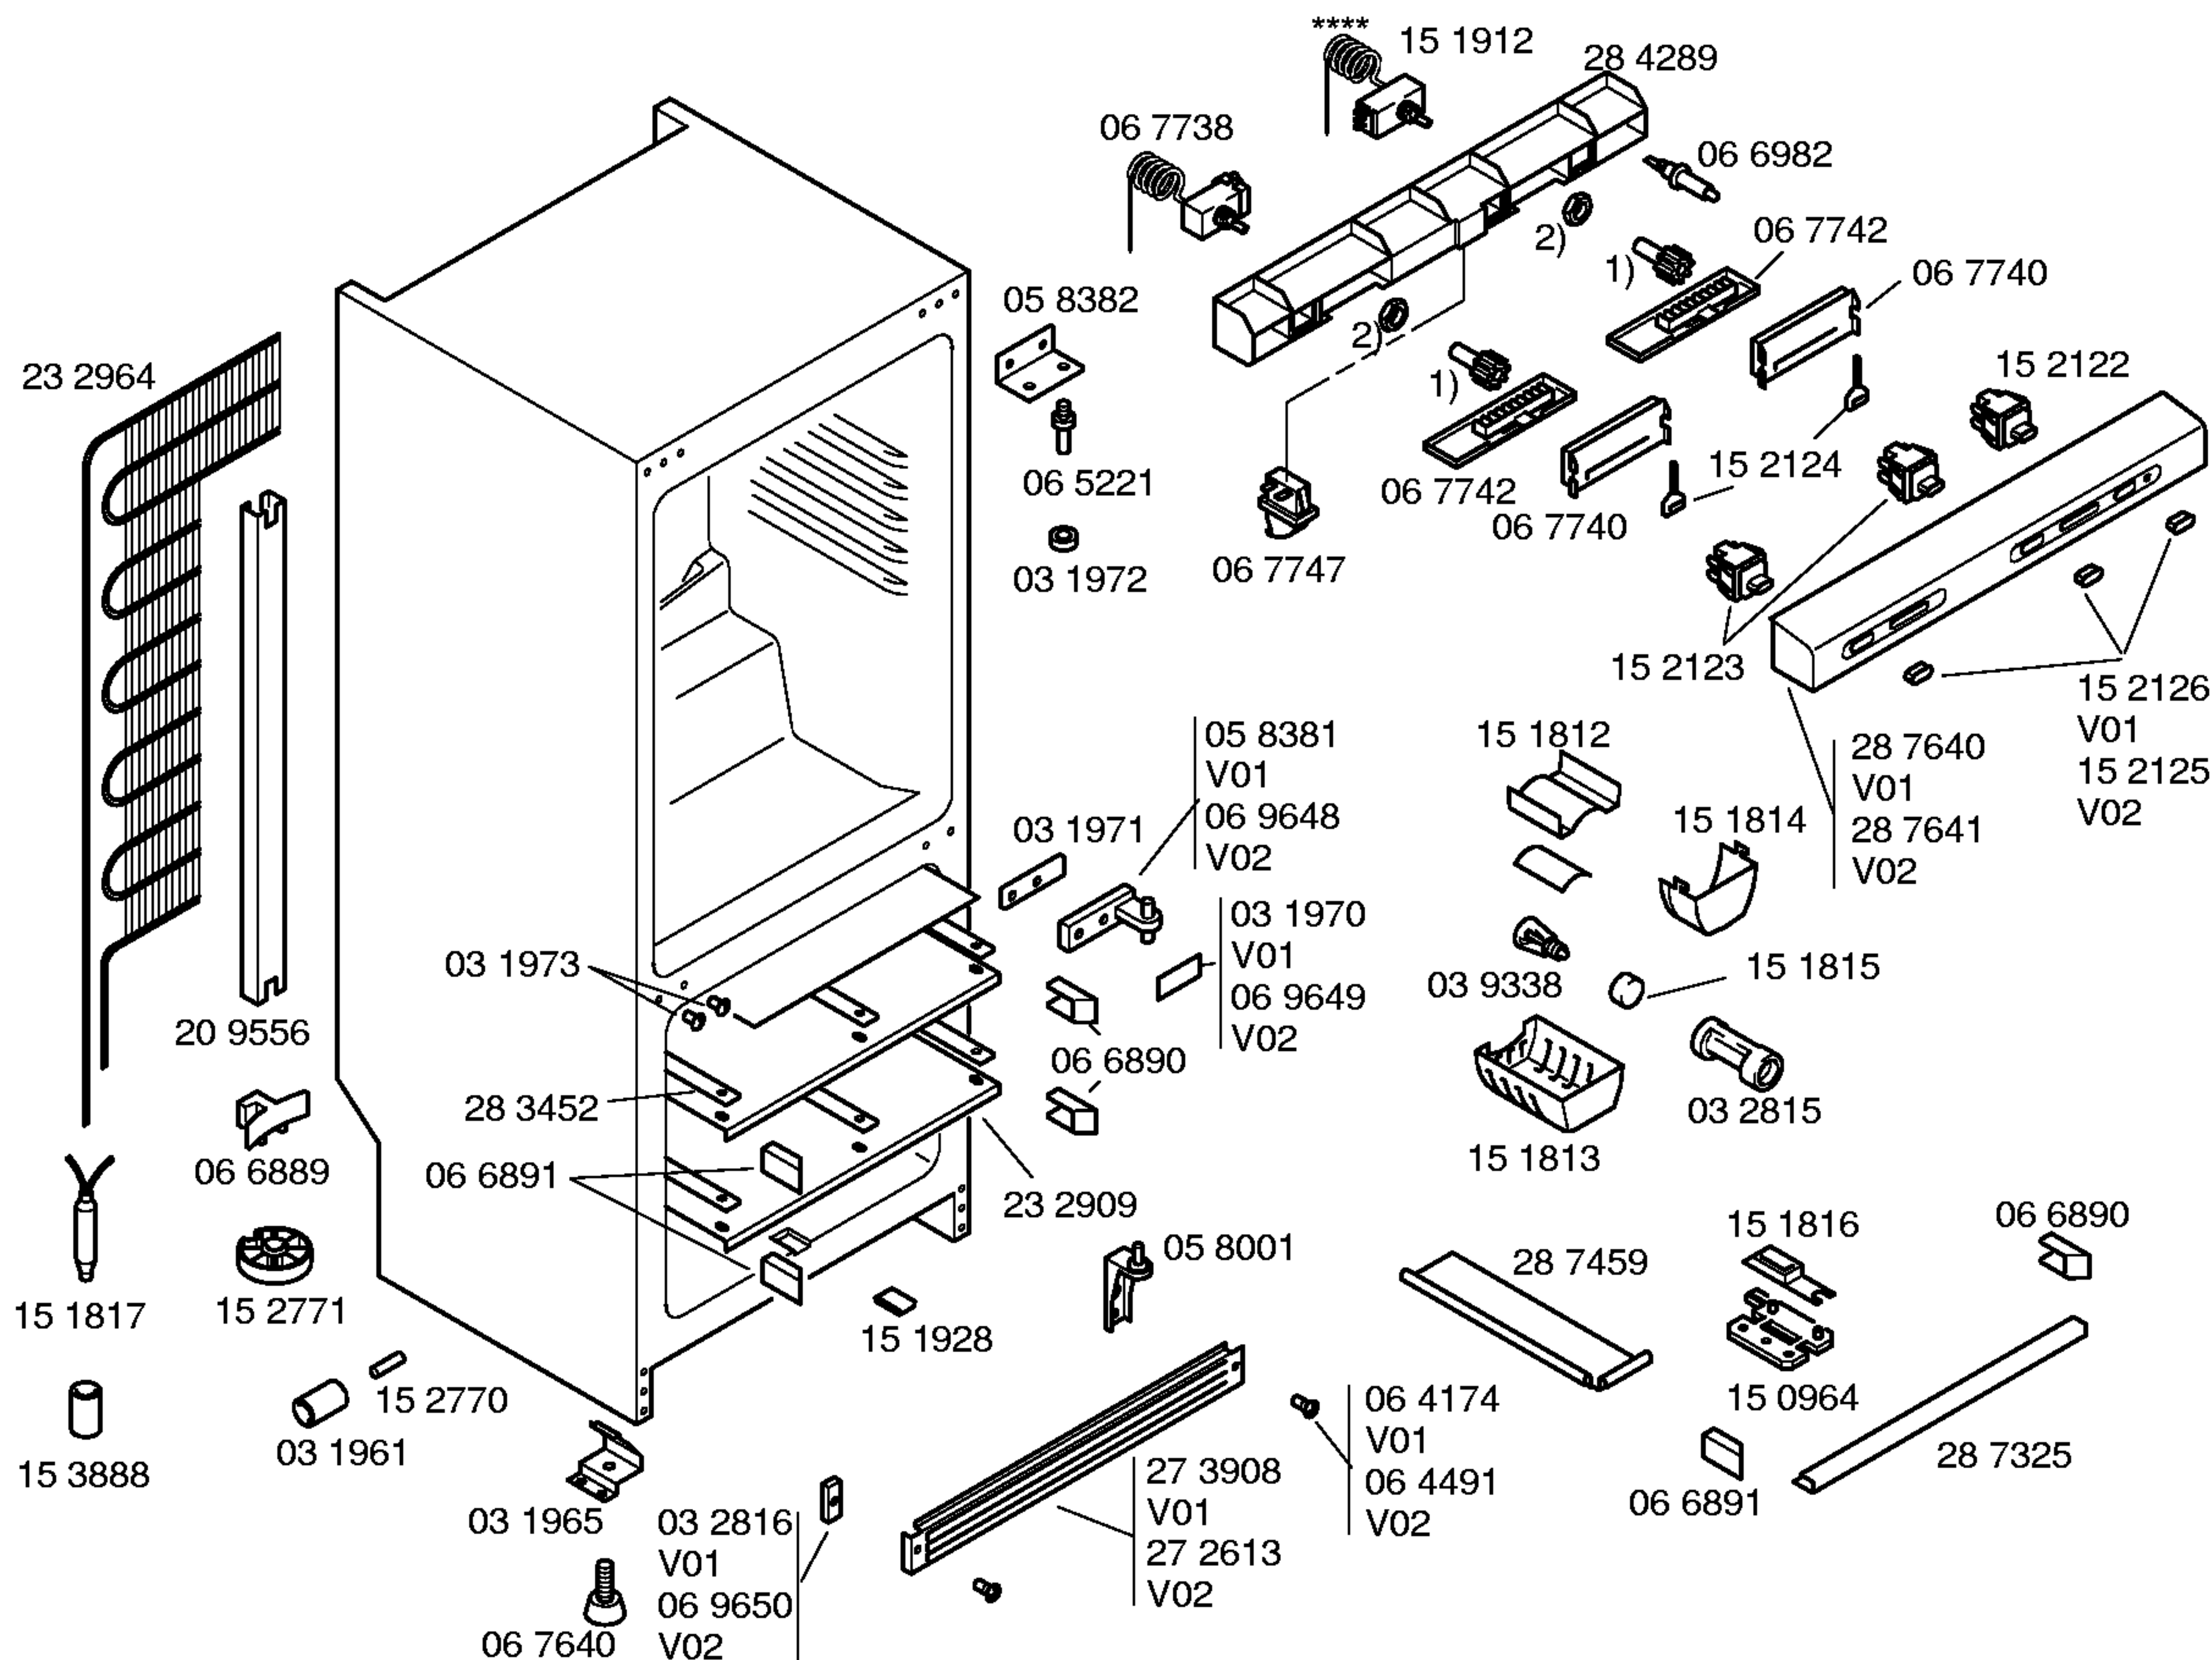

Libro de instrucciones
51 7462
(E, P, GB, F, NL, GR)

1) 06 7746
2) 03 3055

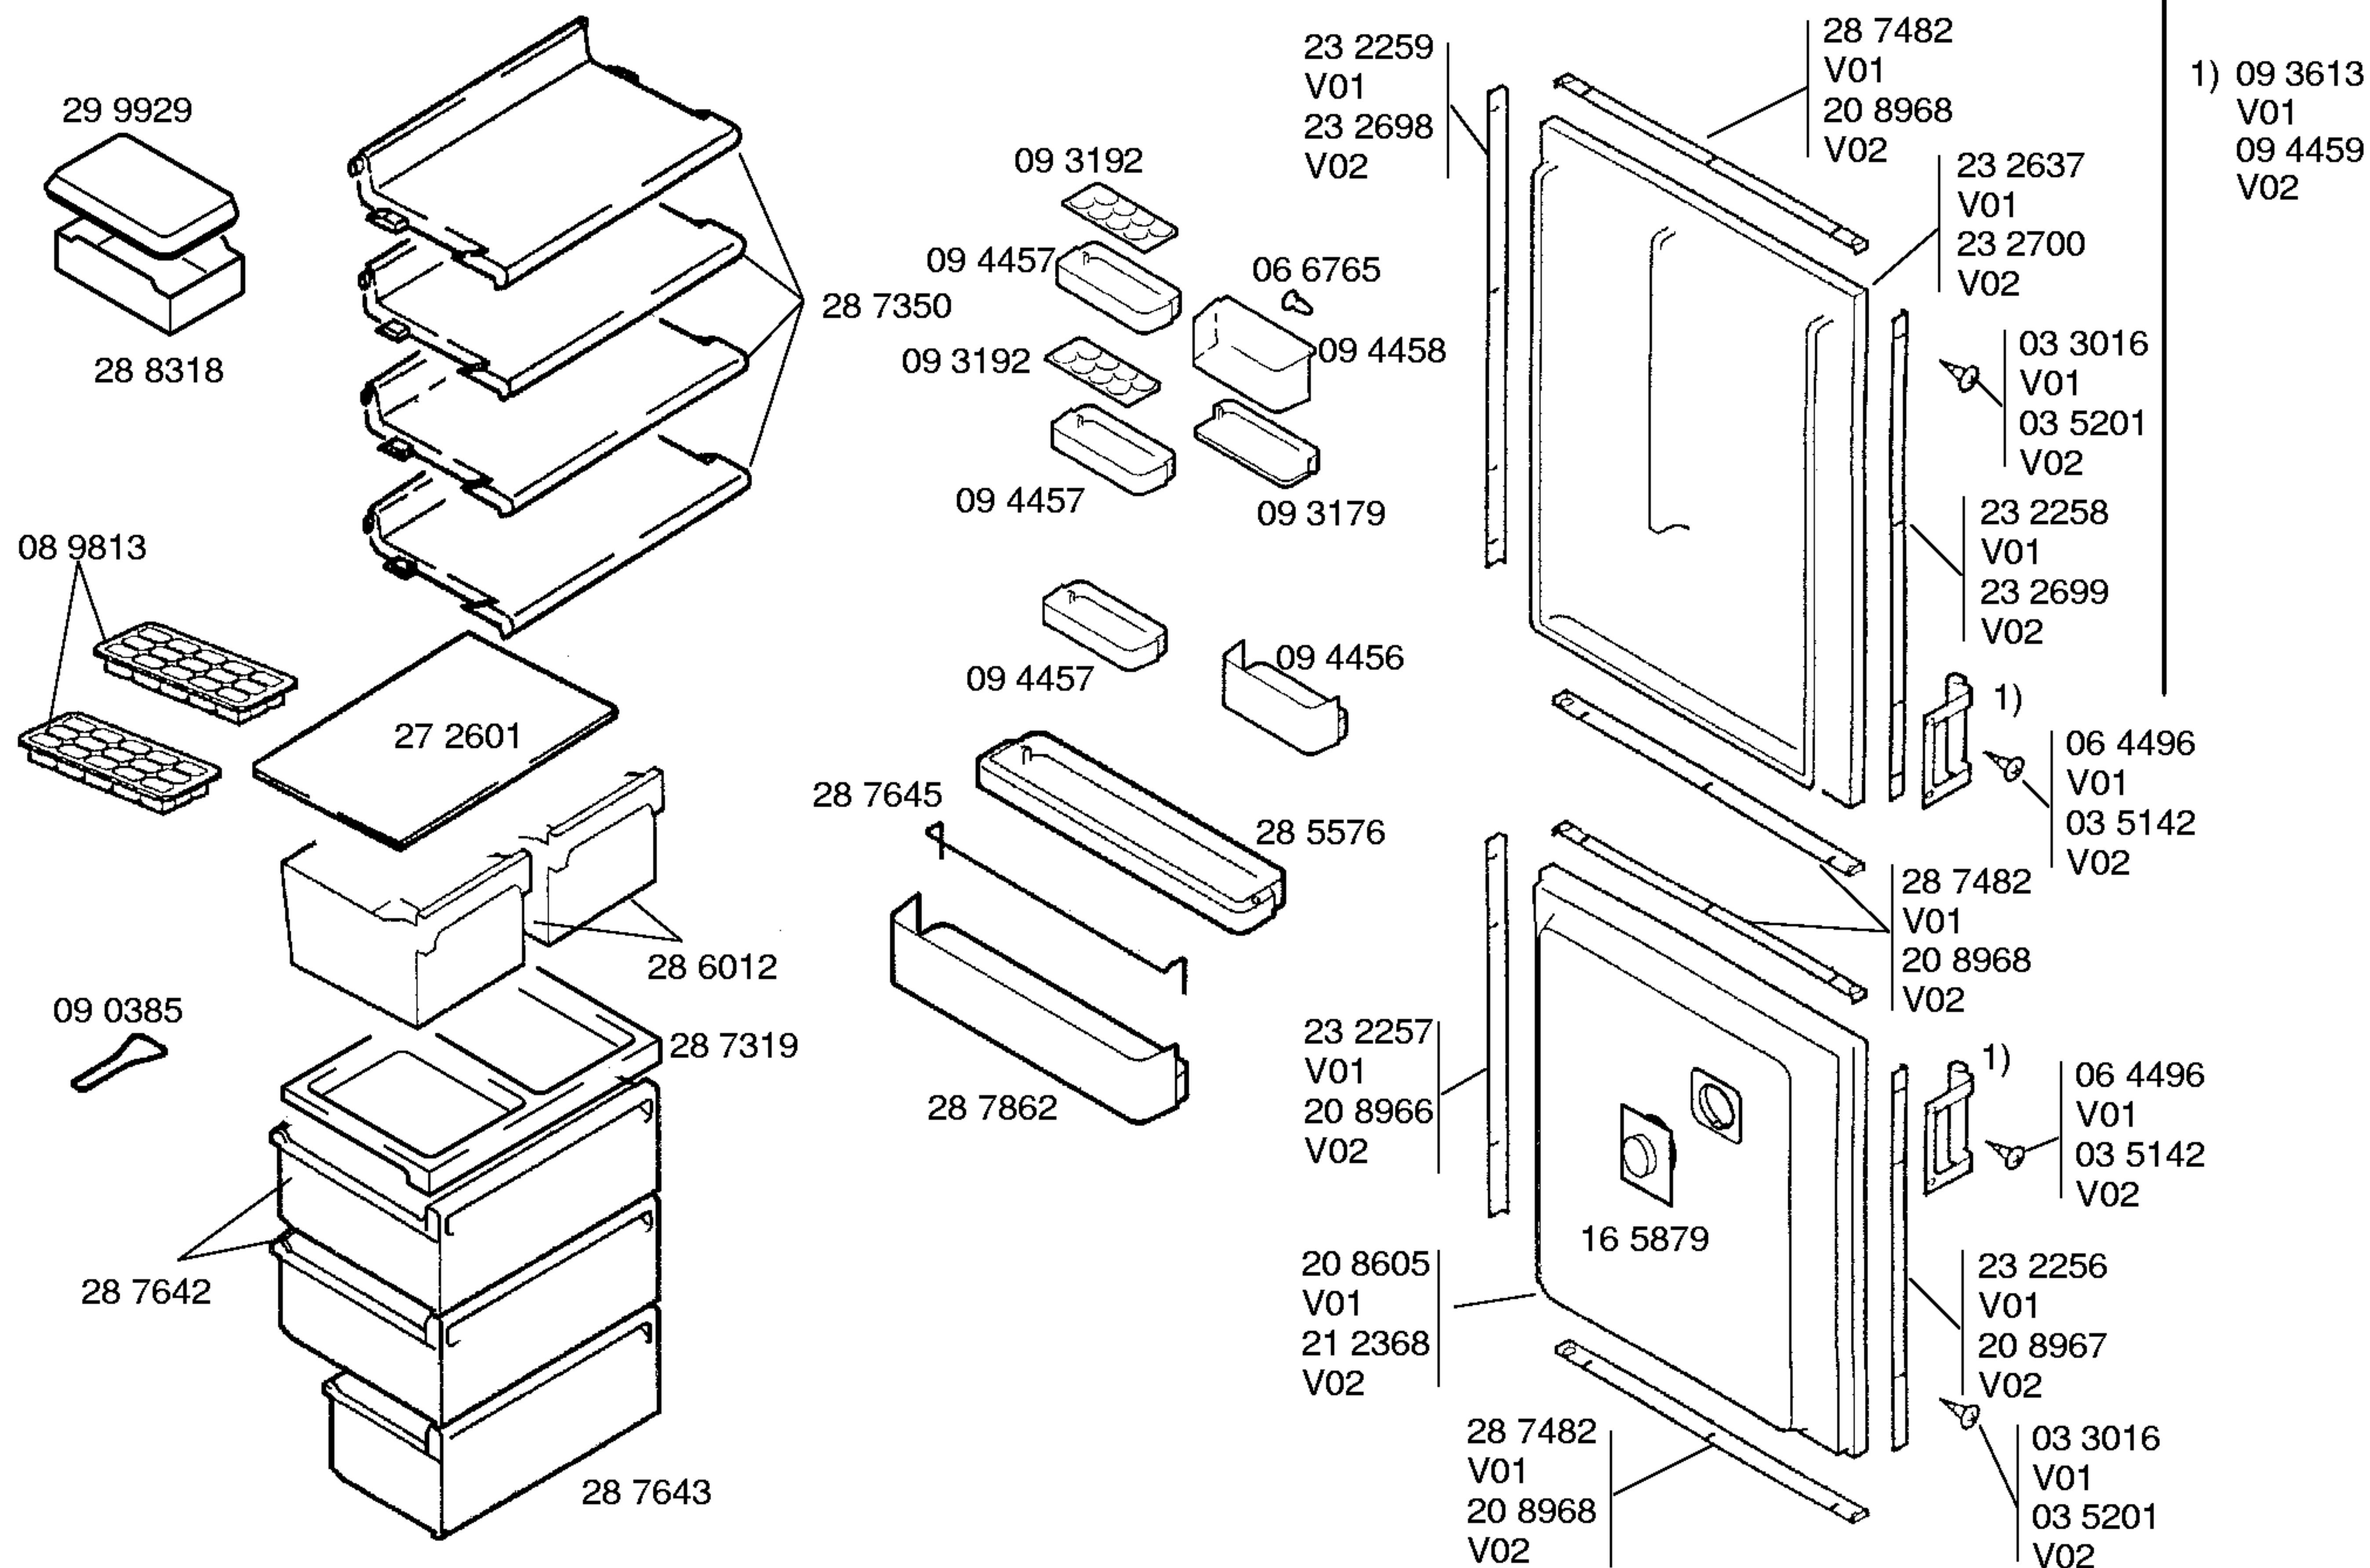

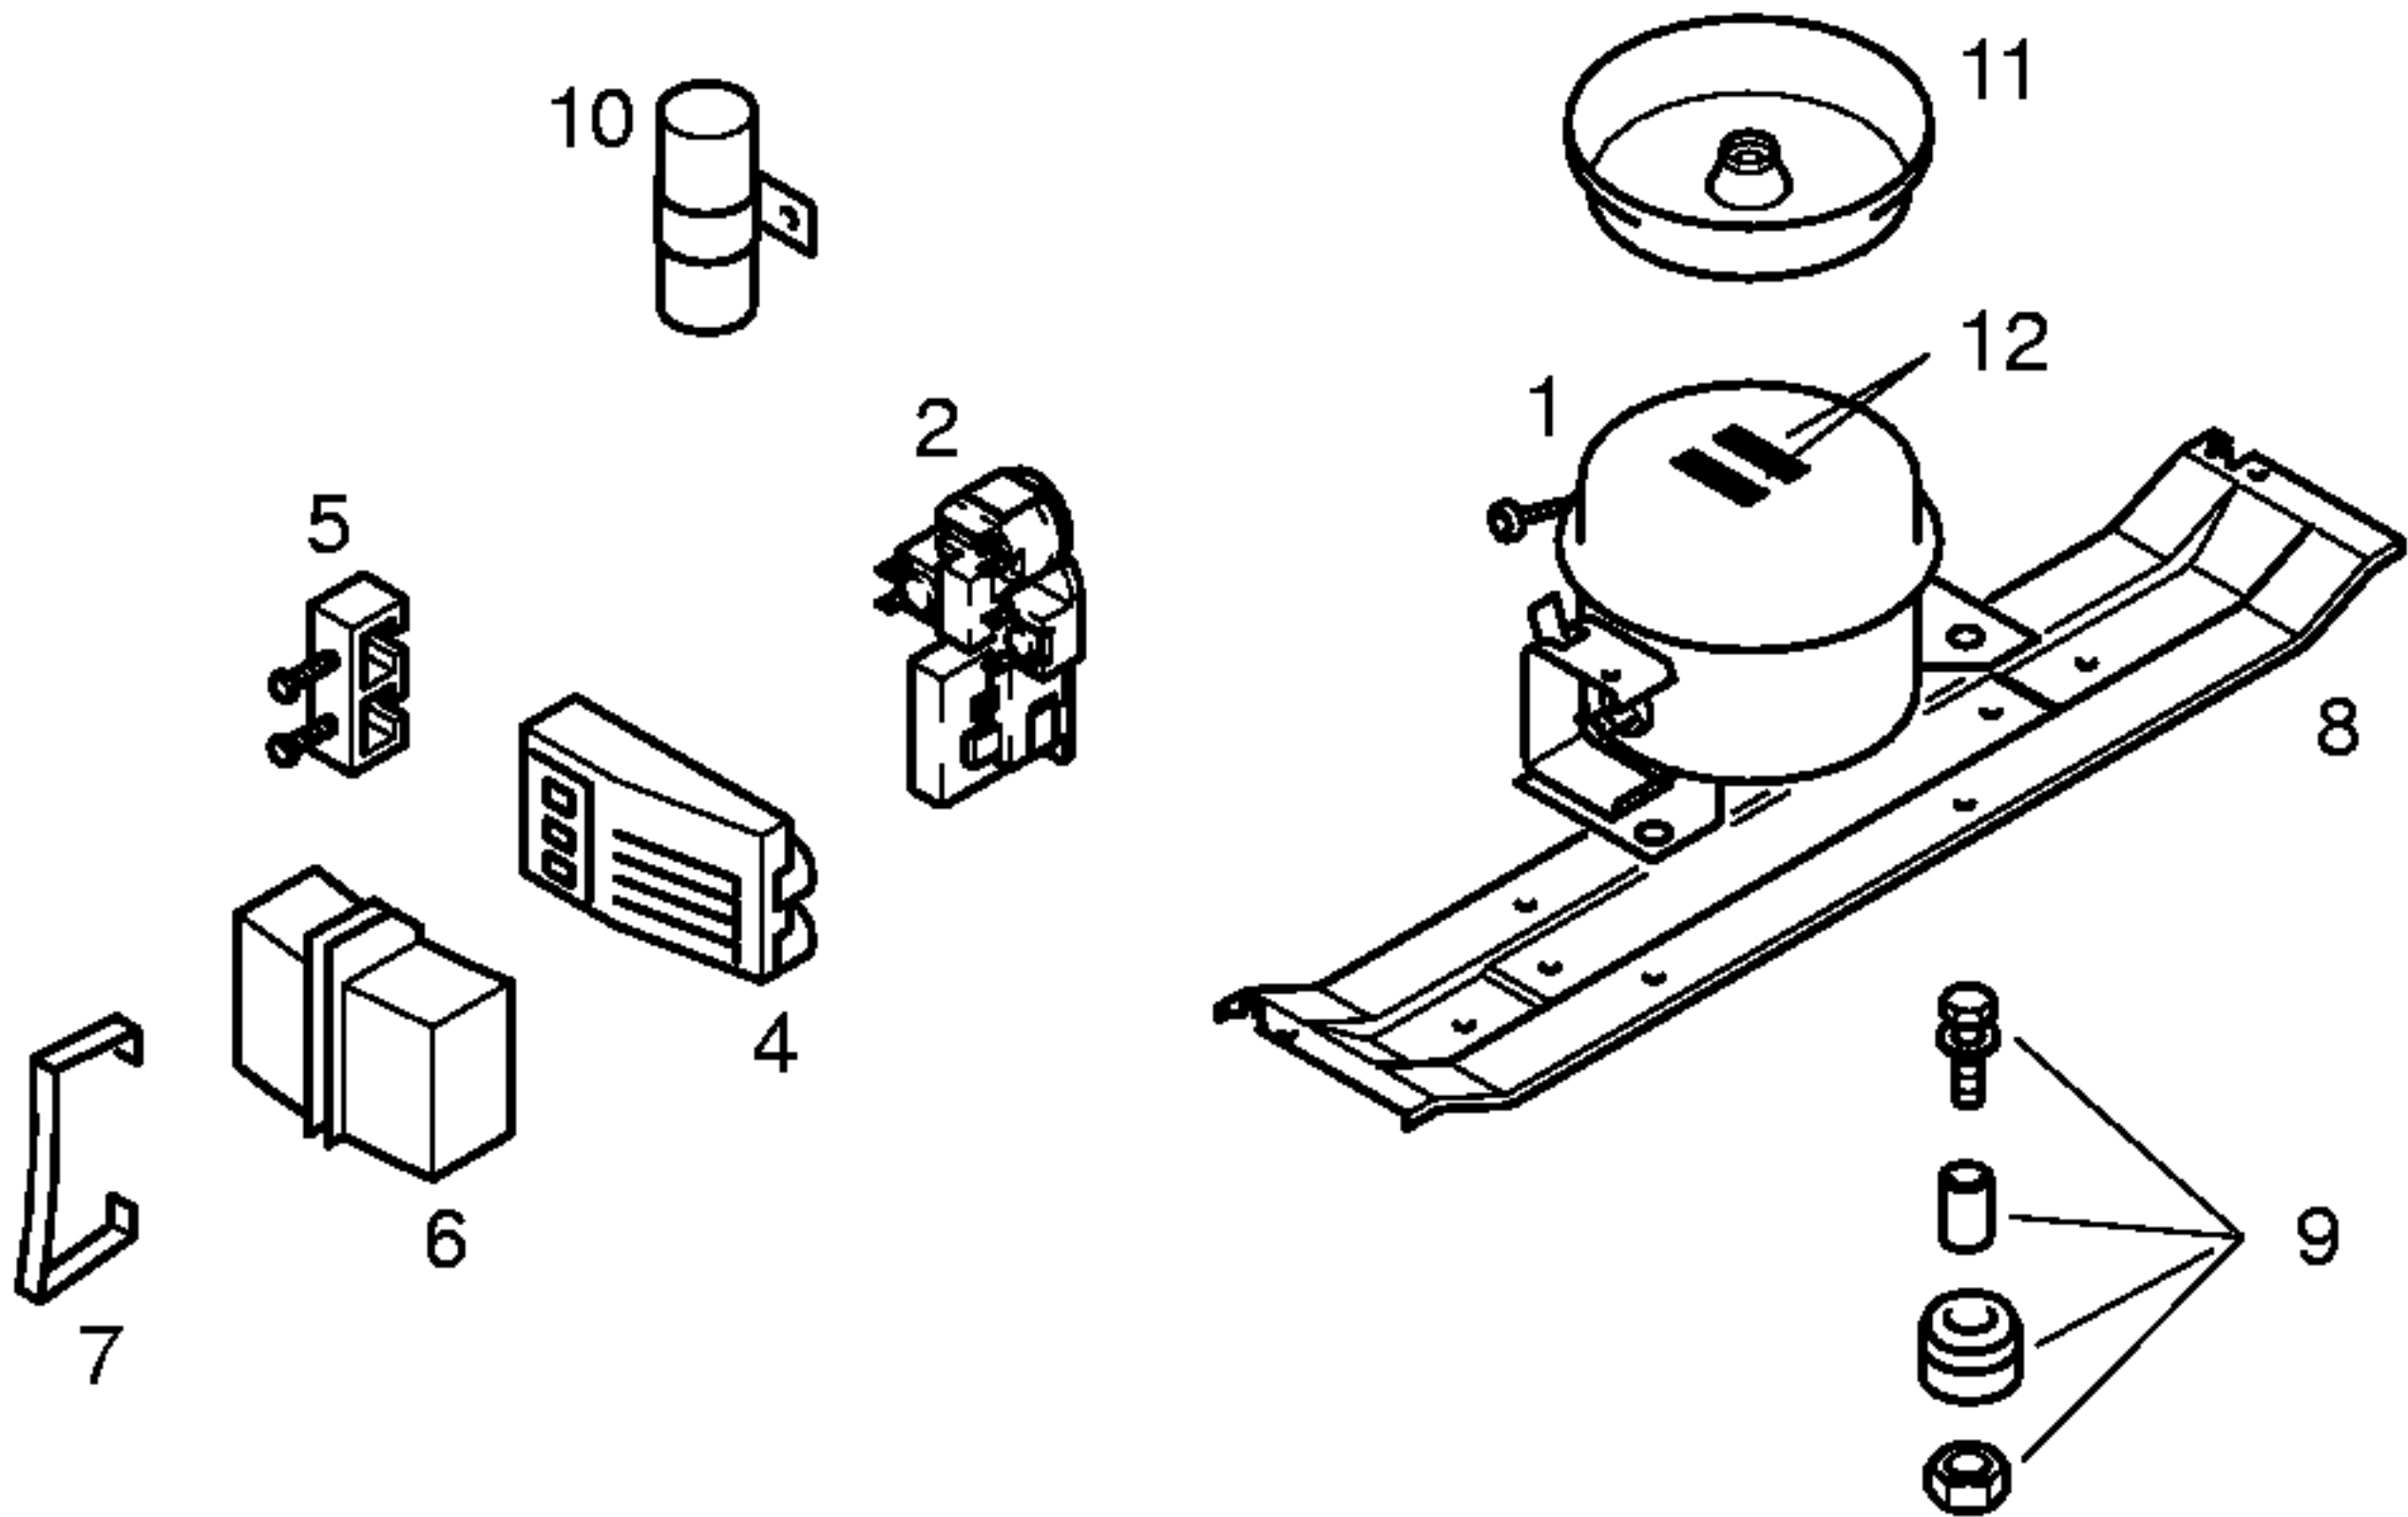

Pos.	****	
	MATSUSHITA SB43C90WA	MATSUSHITA SB48C10WA
1	14 1598	14 1598
2	15 1824	15 1824
3		
4		
5		
6		
7		
8	28 0162	
9	05 0166	05 0166
10		
11	09 5320	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.		Matsushita SB43C90WA	Matsushita SB48C10WA
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'		DANFOSS 077B62 MIN.–MAX +6° –13° –28°	RANCO K54 L1924 MIN.–MAX –14° –24° –21° –31° –15°
Füllmenge/Fill. quantity/Charge/Carga 134a		g	60 140
Anschlußwert/Comm. load/puiss. Connect./Potenc.		W	94 108
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia		Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia		Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volare/Tension/Tensión		Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			