




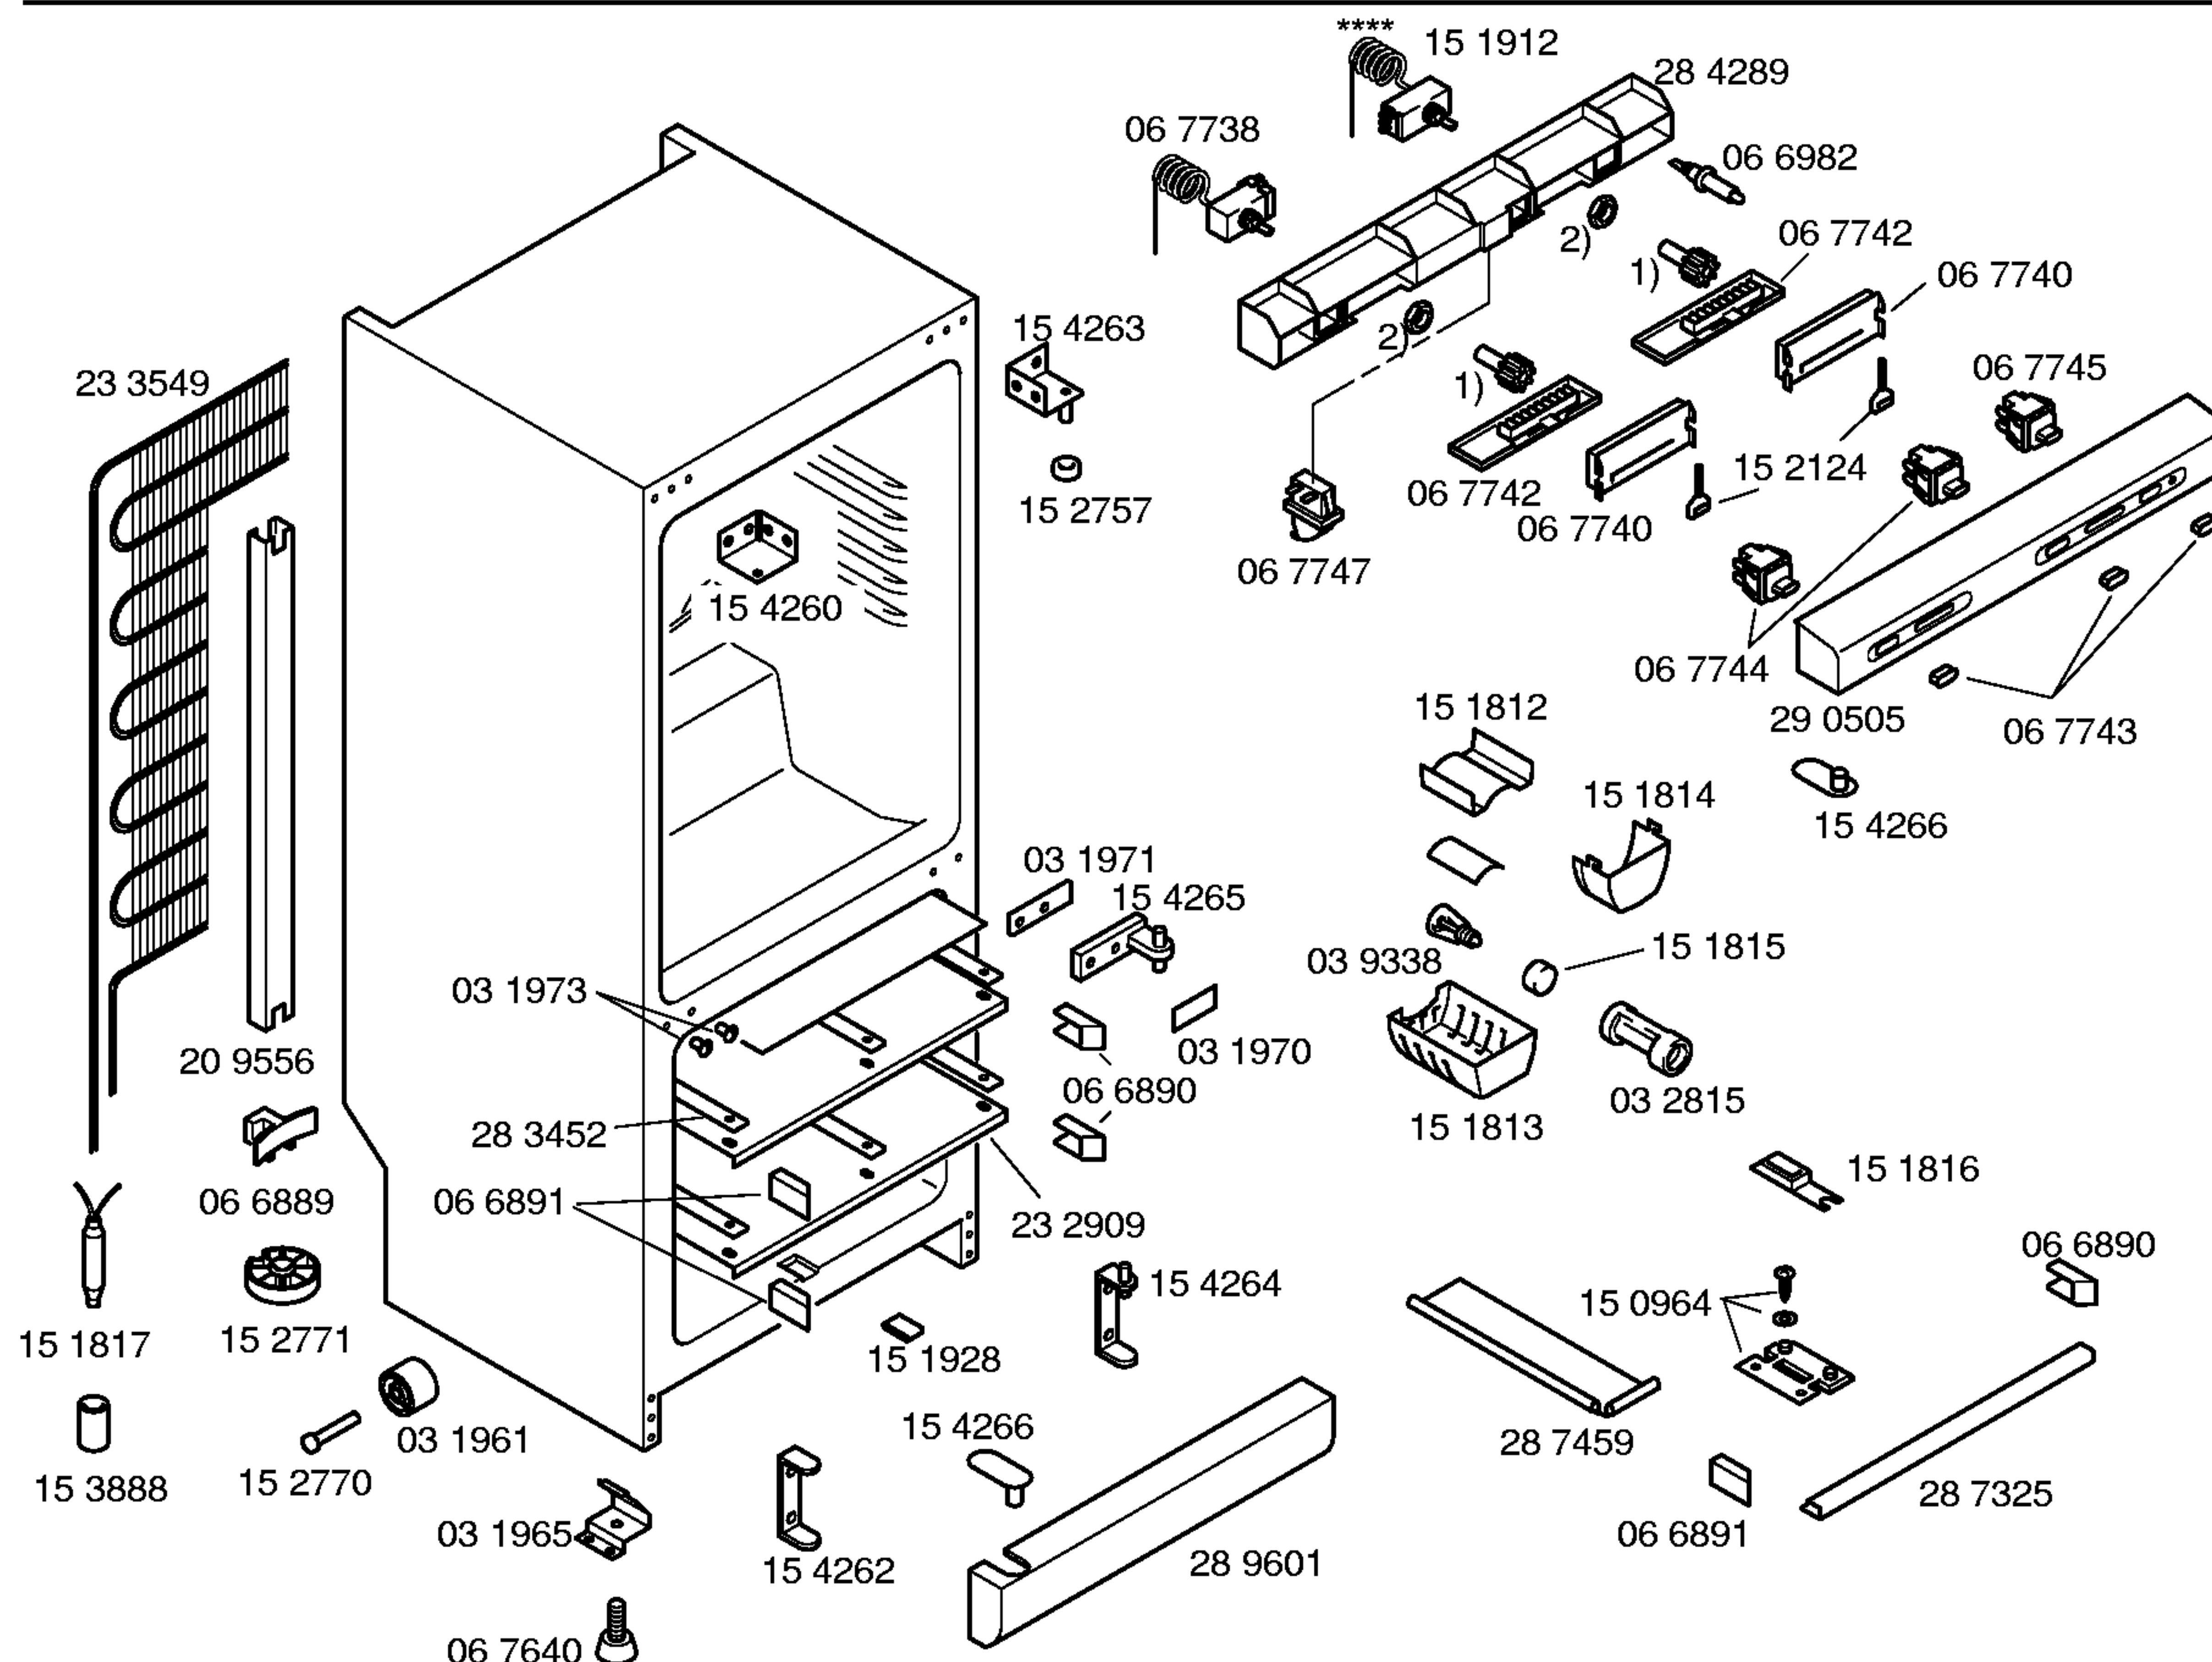

Libro de instrucciones
51 7464
(E,P,GB,,F,NL,GR)

1) 067746
2) 03 3055

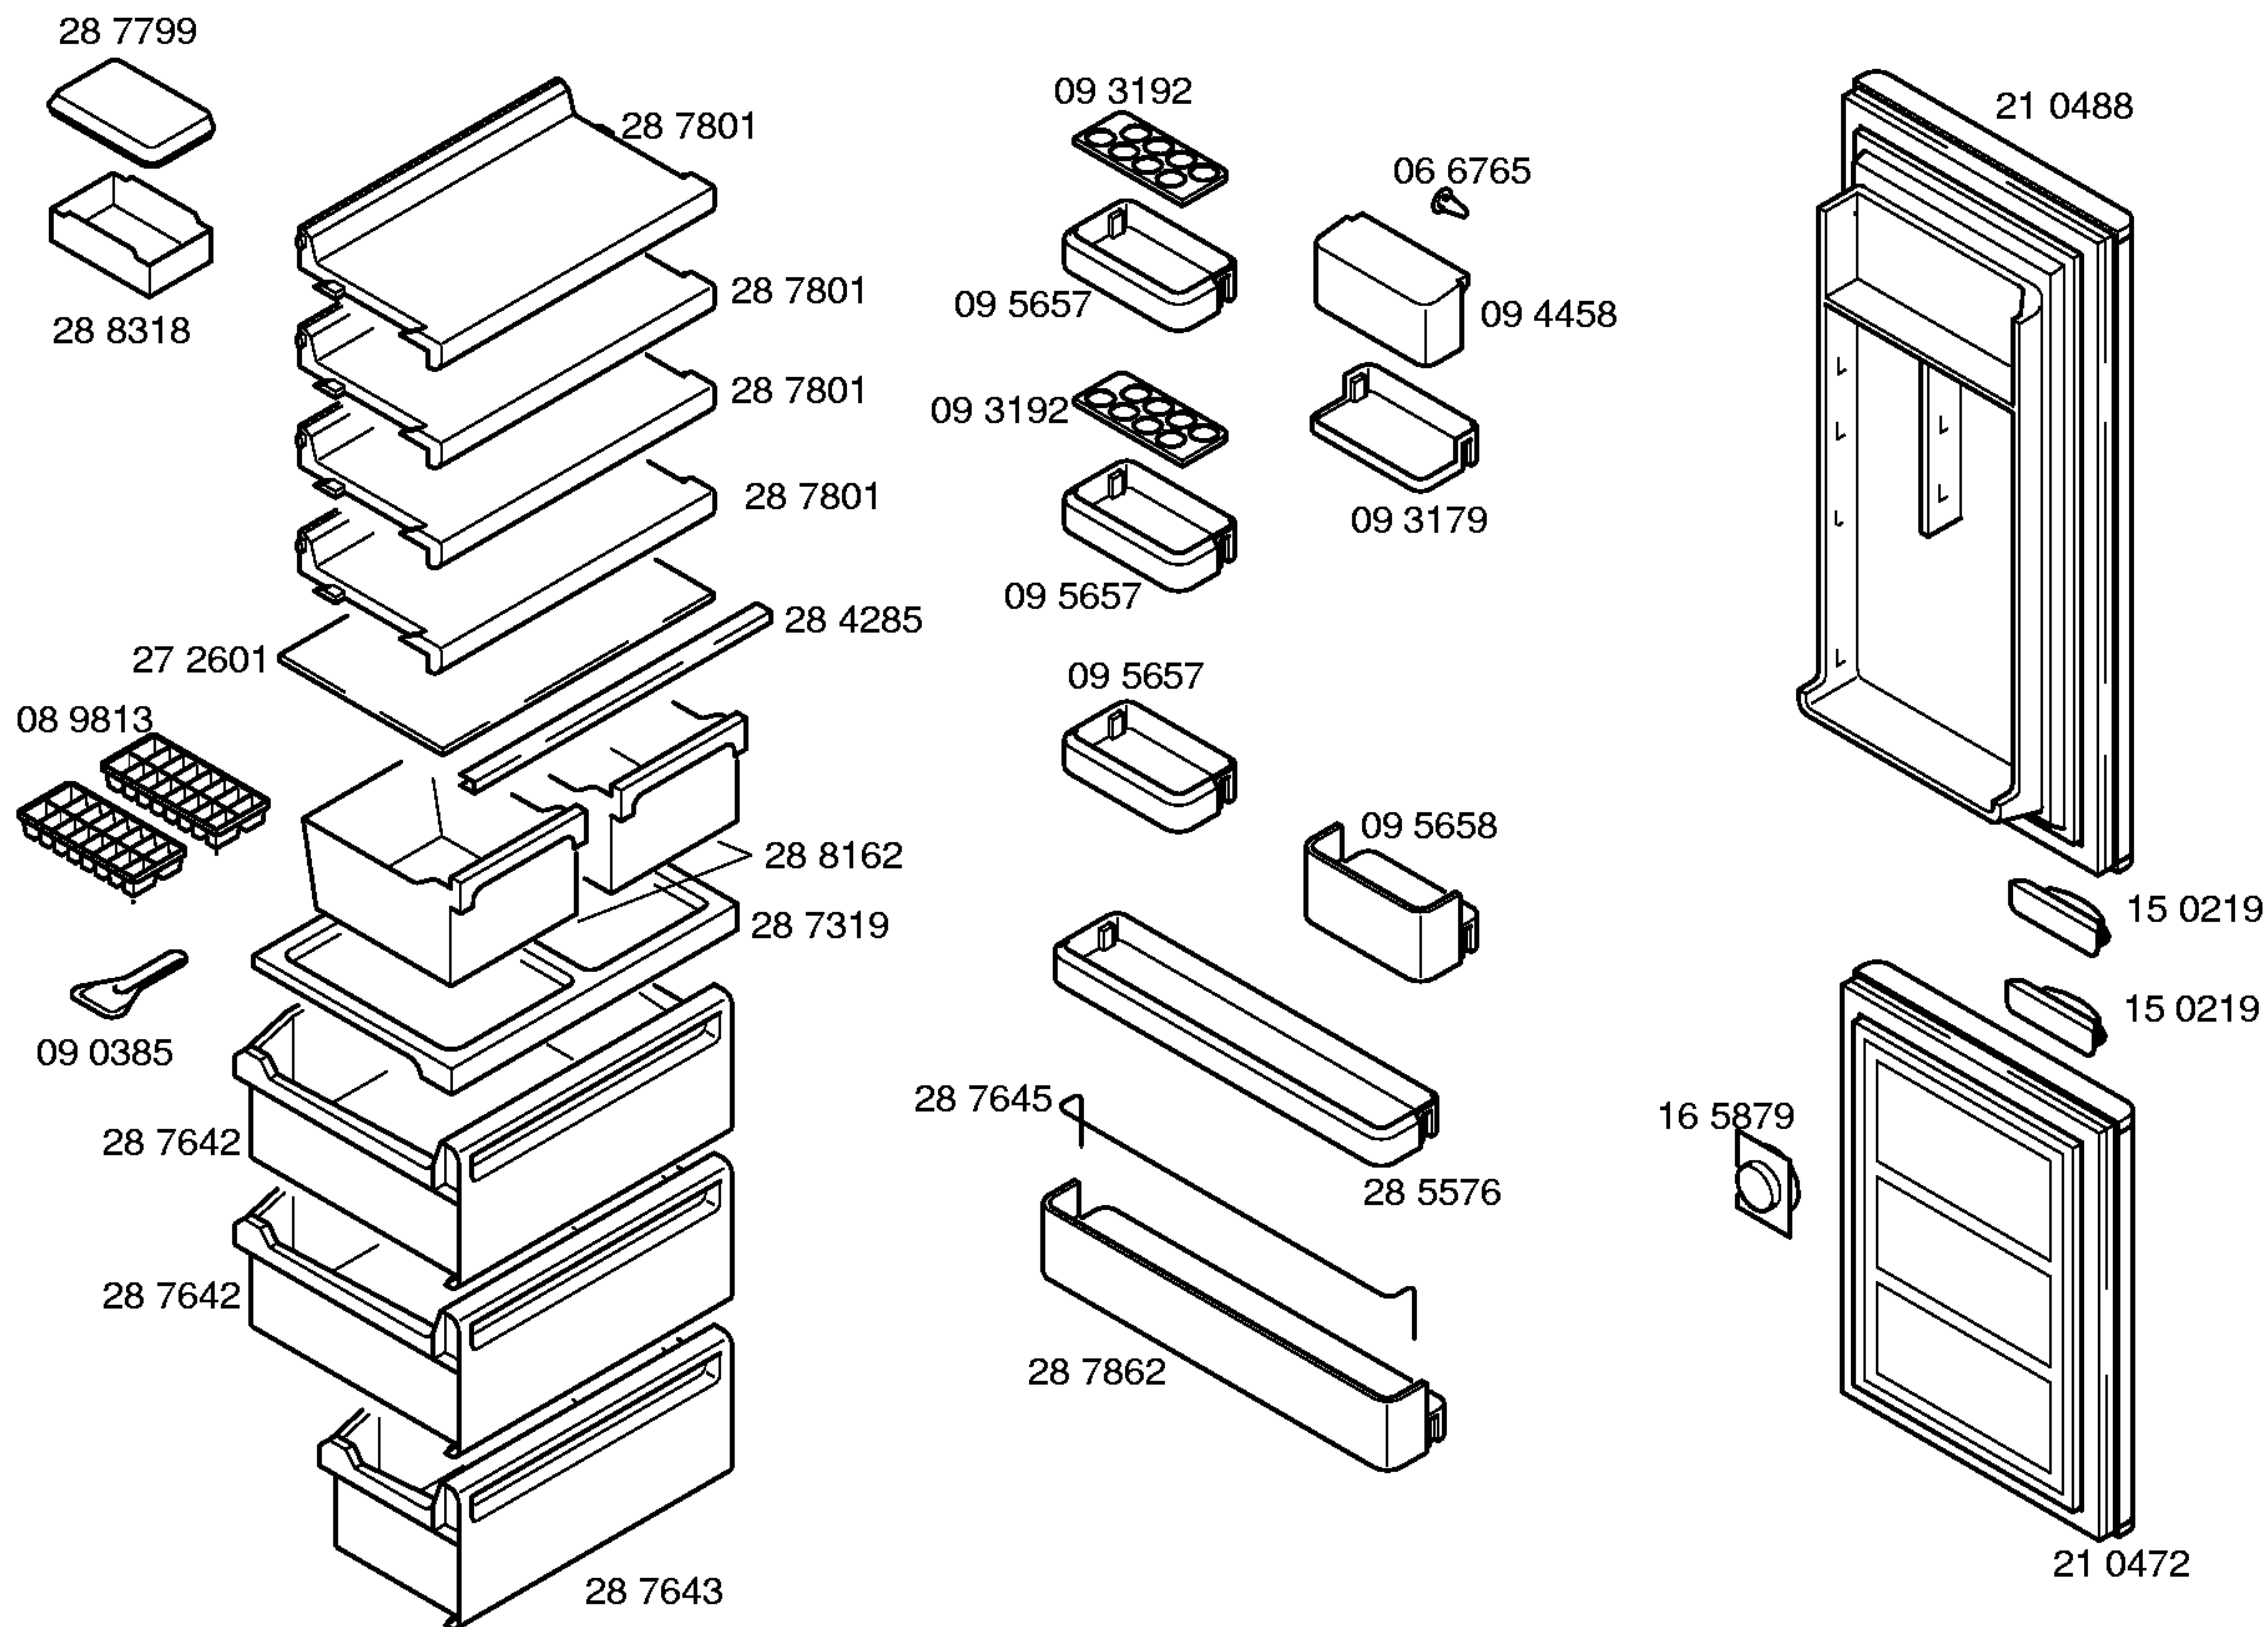

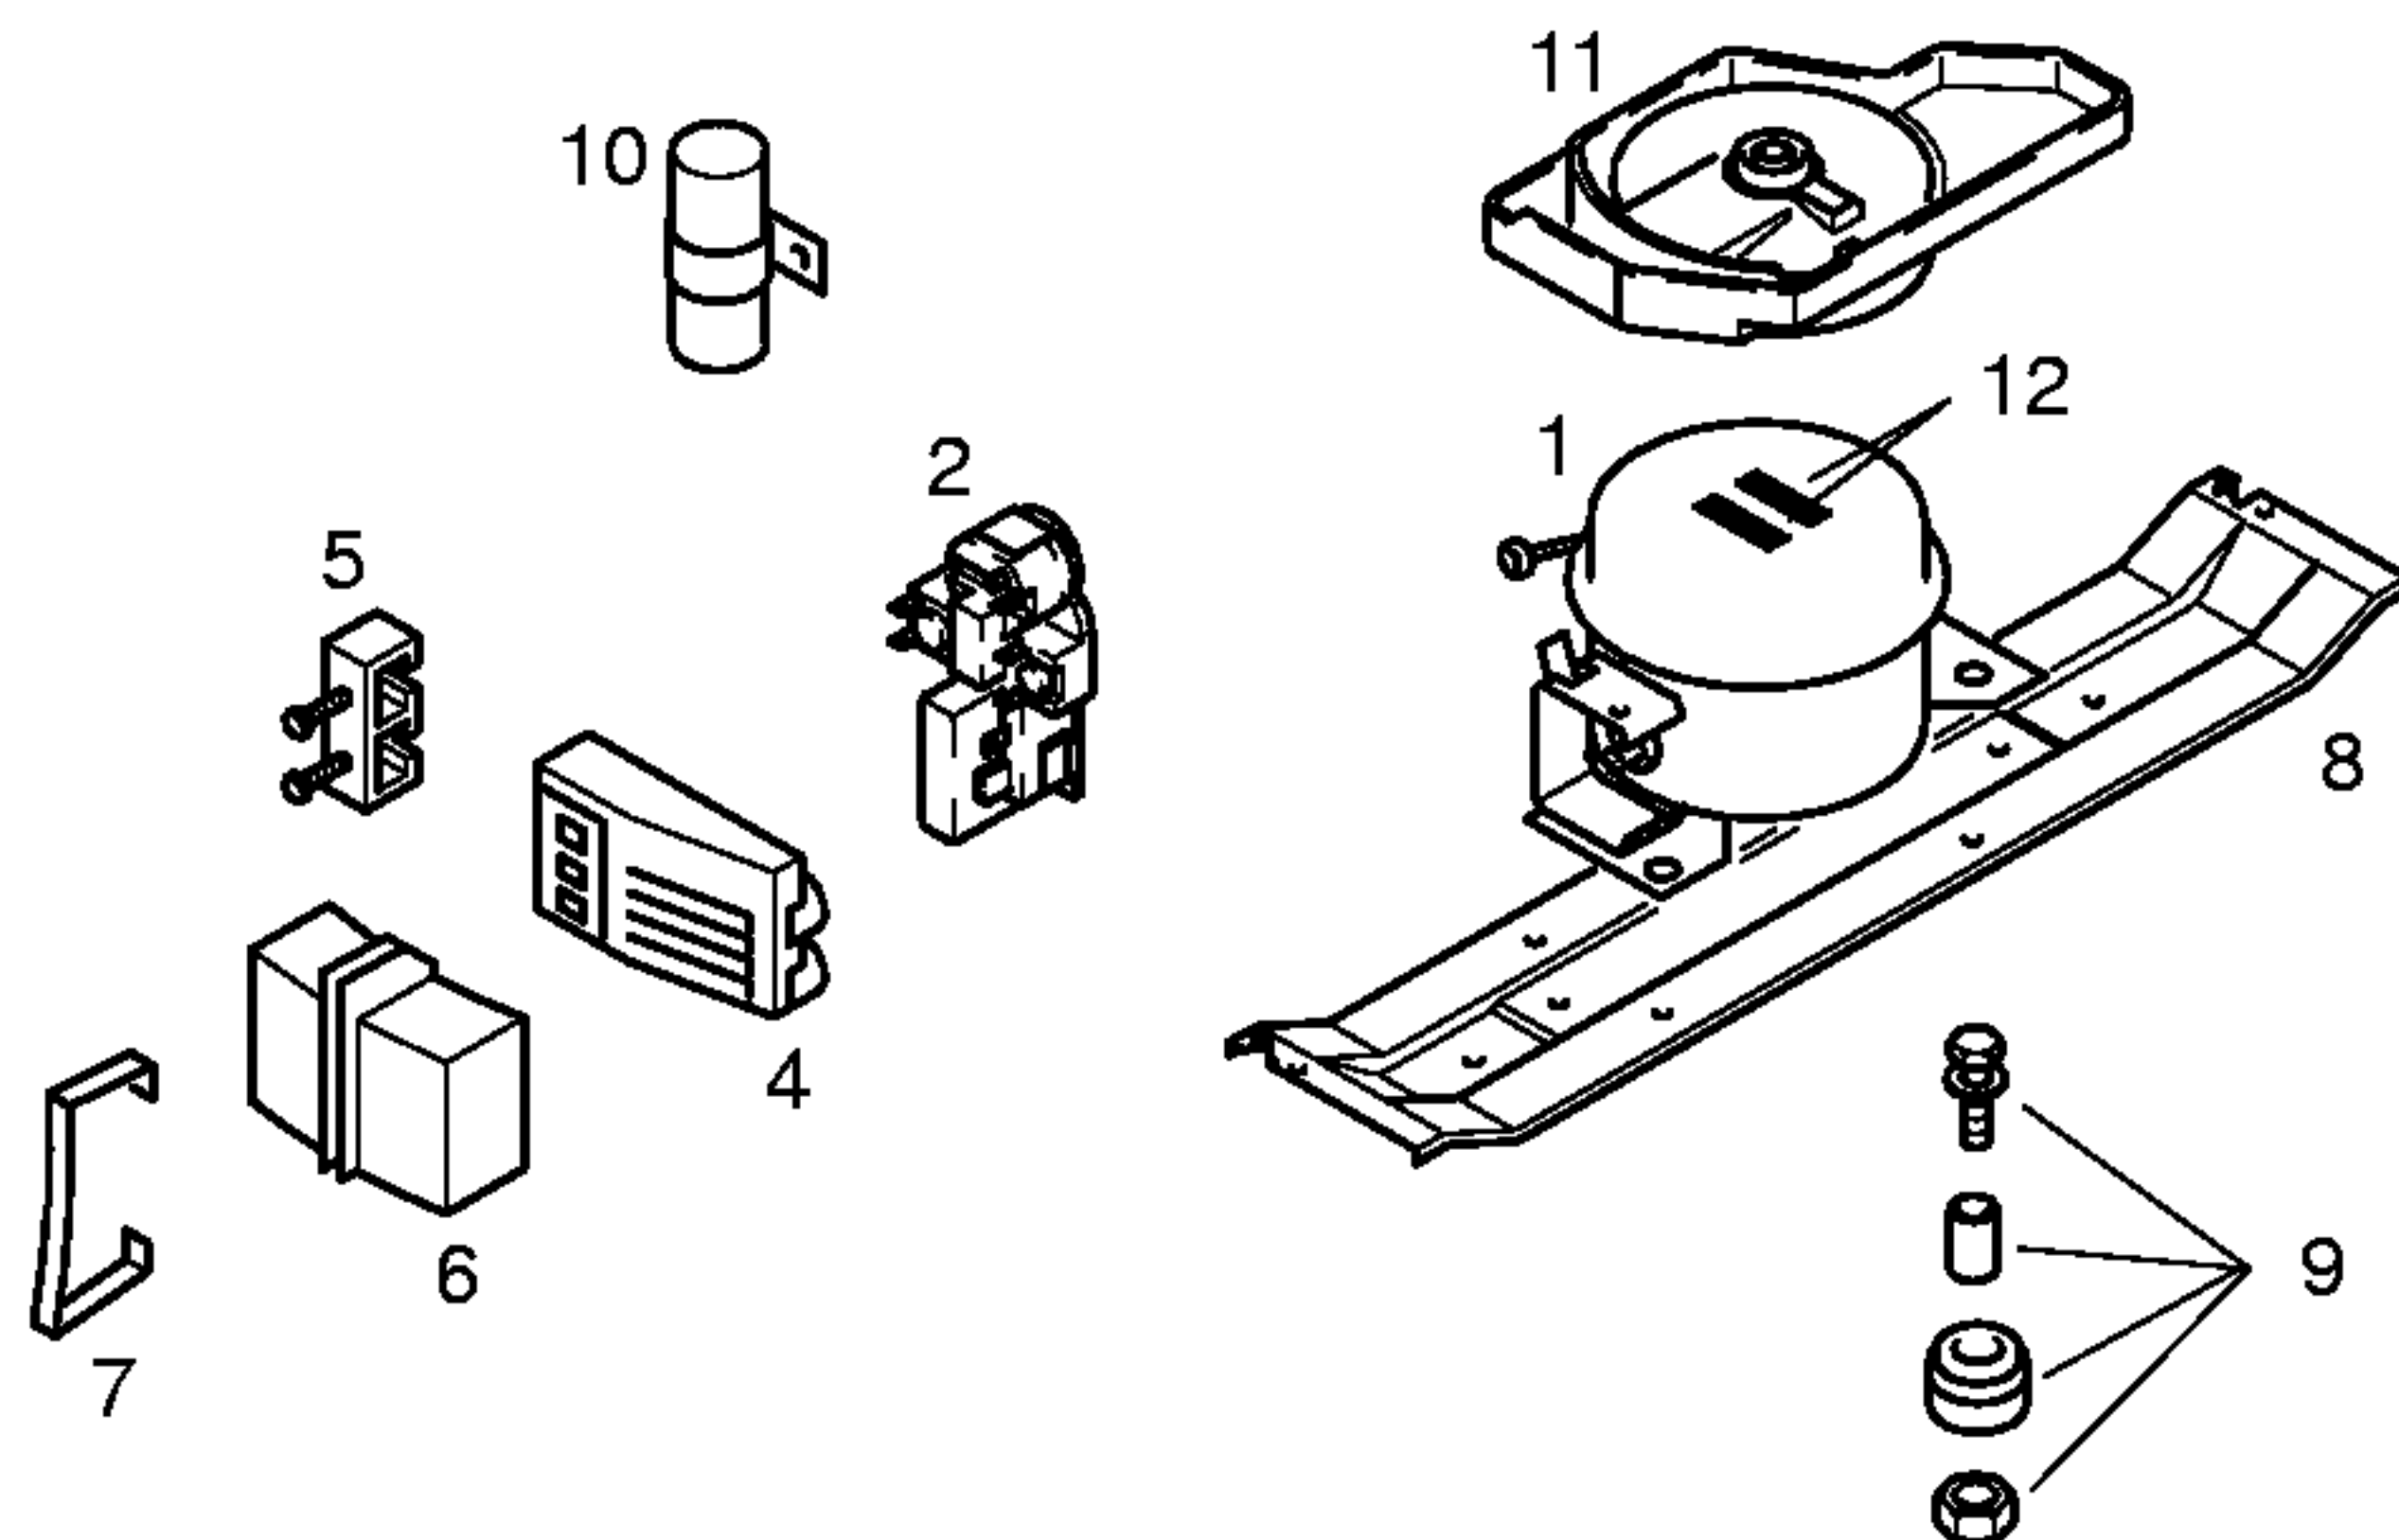

Pos.	U.Hermetica	Danfoss	U.Hermetica	ZEM
1	14 1374	14 1498	14 1374	14 1374
2	15 5130		15 5130	15 5130
3				
4				
5				
6				
7				
8	28 0162	28 0162	28 0162	28 8253
9	05 0166	05 0166	05 0166	05 0166
10				
11	09 6864			
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
		****	****
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	U.Hermetica GL45AA 8,3 21,2 24,3	Danfoss TL5F 4 18,9 15,3	ZEM GL45AA 8,3 21,2 24,3
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ Valeurs de commutation/Desconex. (..abtaven' od)	DANFOSS 077B62 MIN. MAX +6° -13° -28° ..ein/conex.°C ..aus"/descon. ..alarm'	RANCO K54 L1924 MIN. MAX -14° -24 -21° -31° -15°	
Füllmenge/Fill. quantily/Charge/Carga 134a g	60	125	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	87	120	87
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			