

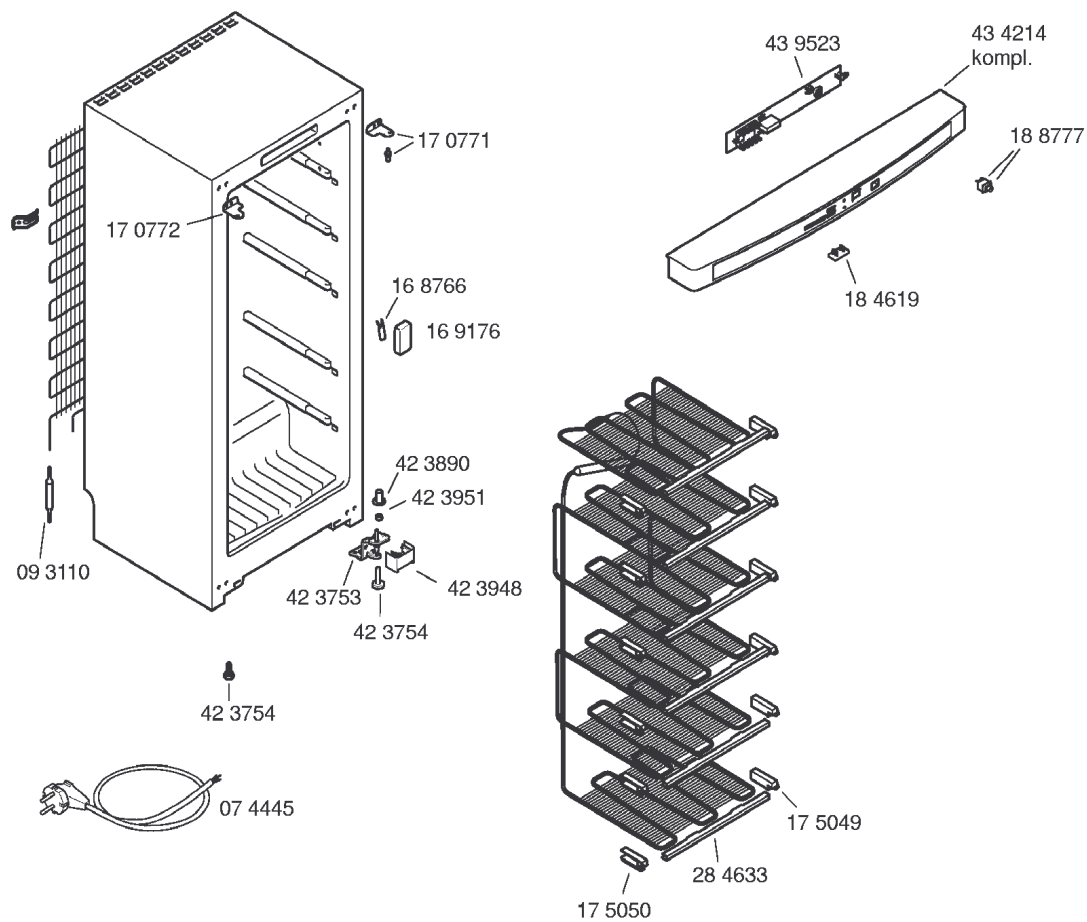


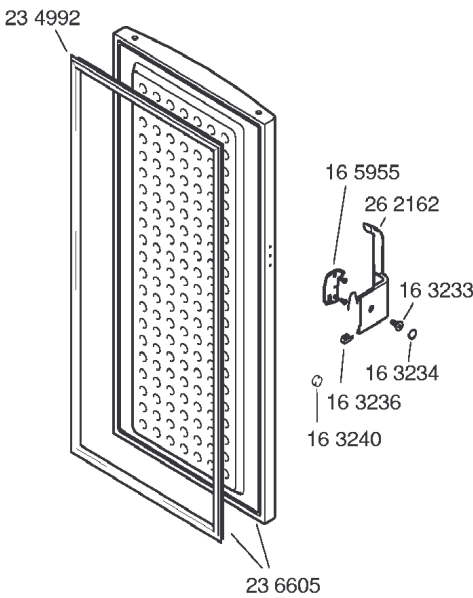


Mat. - Nr. - Konstante
3740
Gebrauchsanweisung
58 6288
(de,en,fr,it,nl)
58 6289
(da,no,fi)
Montageanleitung
58 9231
(
Beistellsatz
42 3948

Mat. – Nr. – Konstante
3740

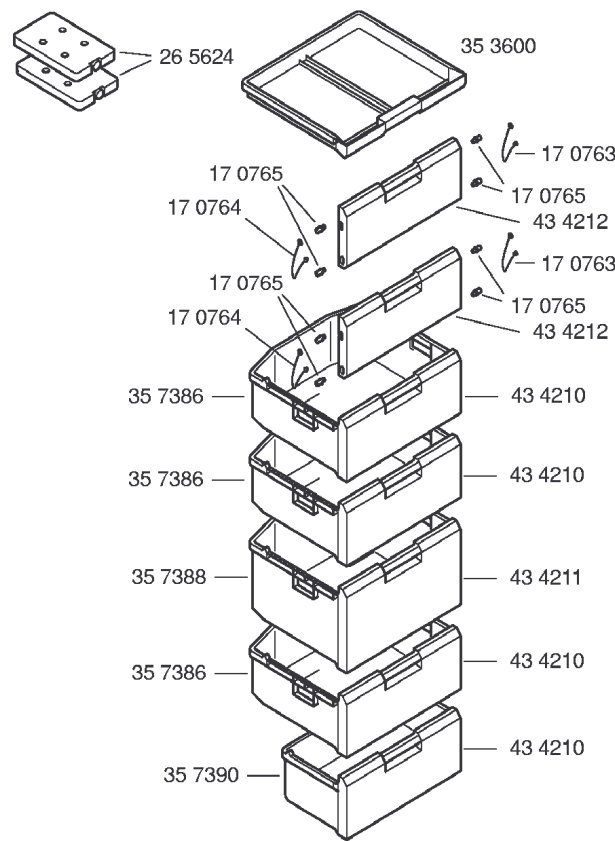

Mat. – Nr. – Konstante
3740

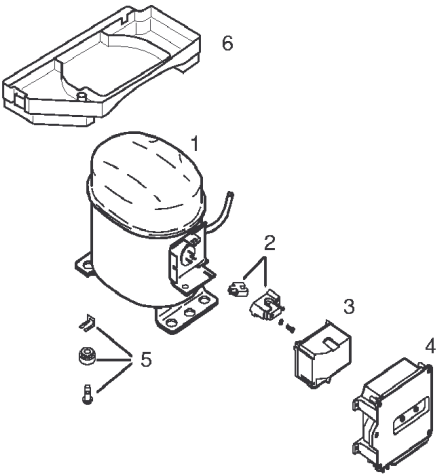

Pos.	V01		
	Zanussi		
	HQT 99RSA		
1	14 3717		
2	17 5277		
3	17 5276		
4	49 1865		
5	05 0166		
6	43 6749		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Zanussi		
Typ/Type		HQT 99RSA		
Förderleistung/Delivery/Débit		l/h	1250	
Anlaufstrom/Starting current/Cour de démarrage		A	1,5	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	14,3
		Hi/aux	Ω	14,3
Temp.-Regler/Thermostat				
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)		„ein“	°C	
		„aus“		
		„alarm“		
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	66	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild