


51 4080
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)


1) 08 7311

2) 08 7312

3) 11 9078

4) 11 9079

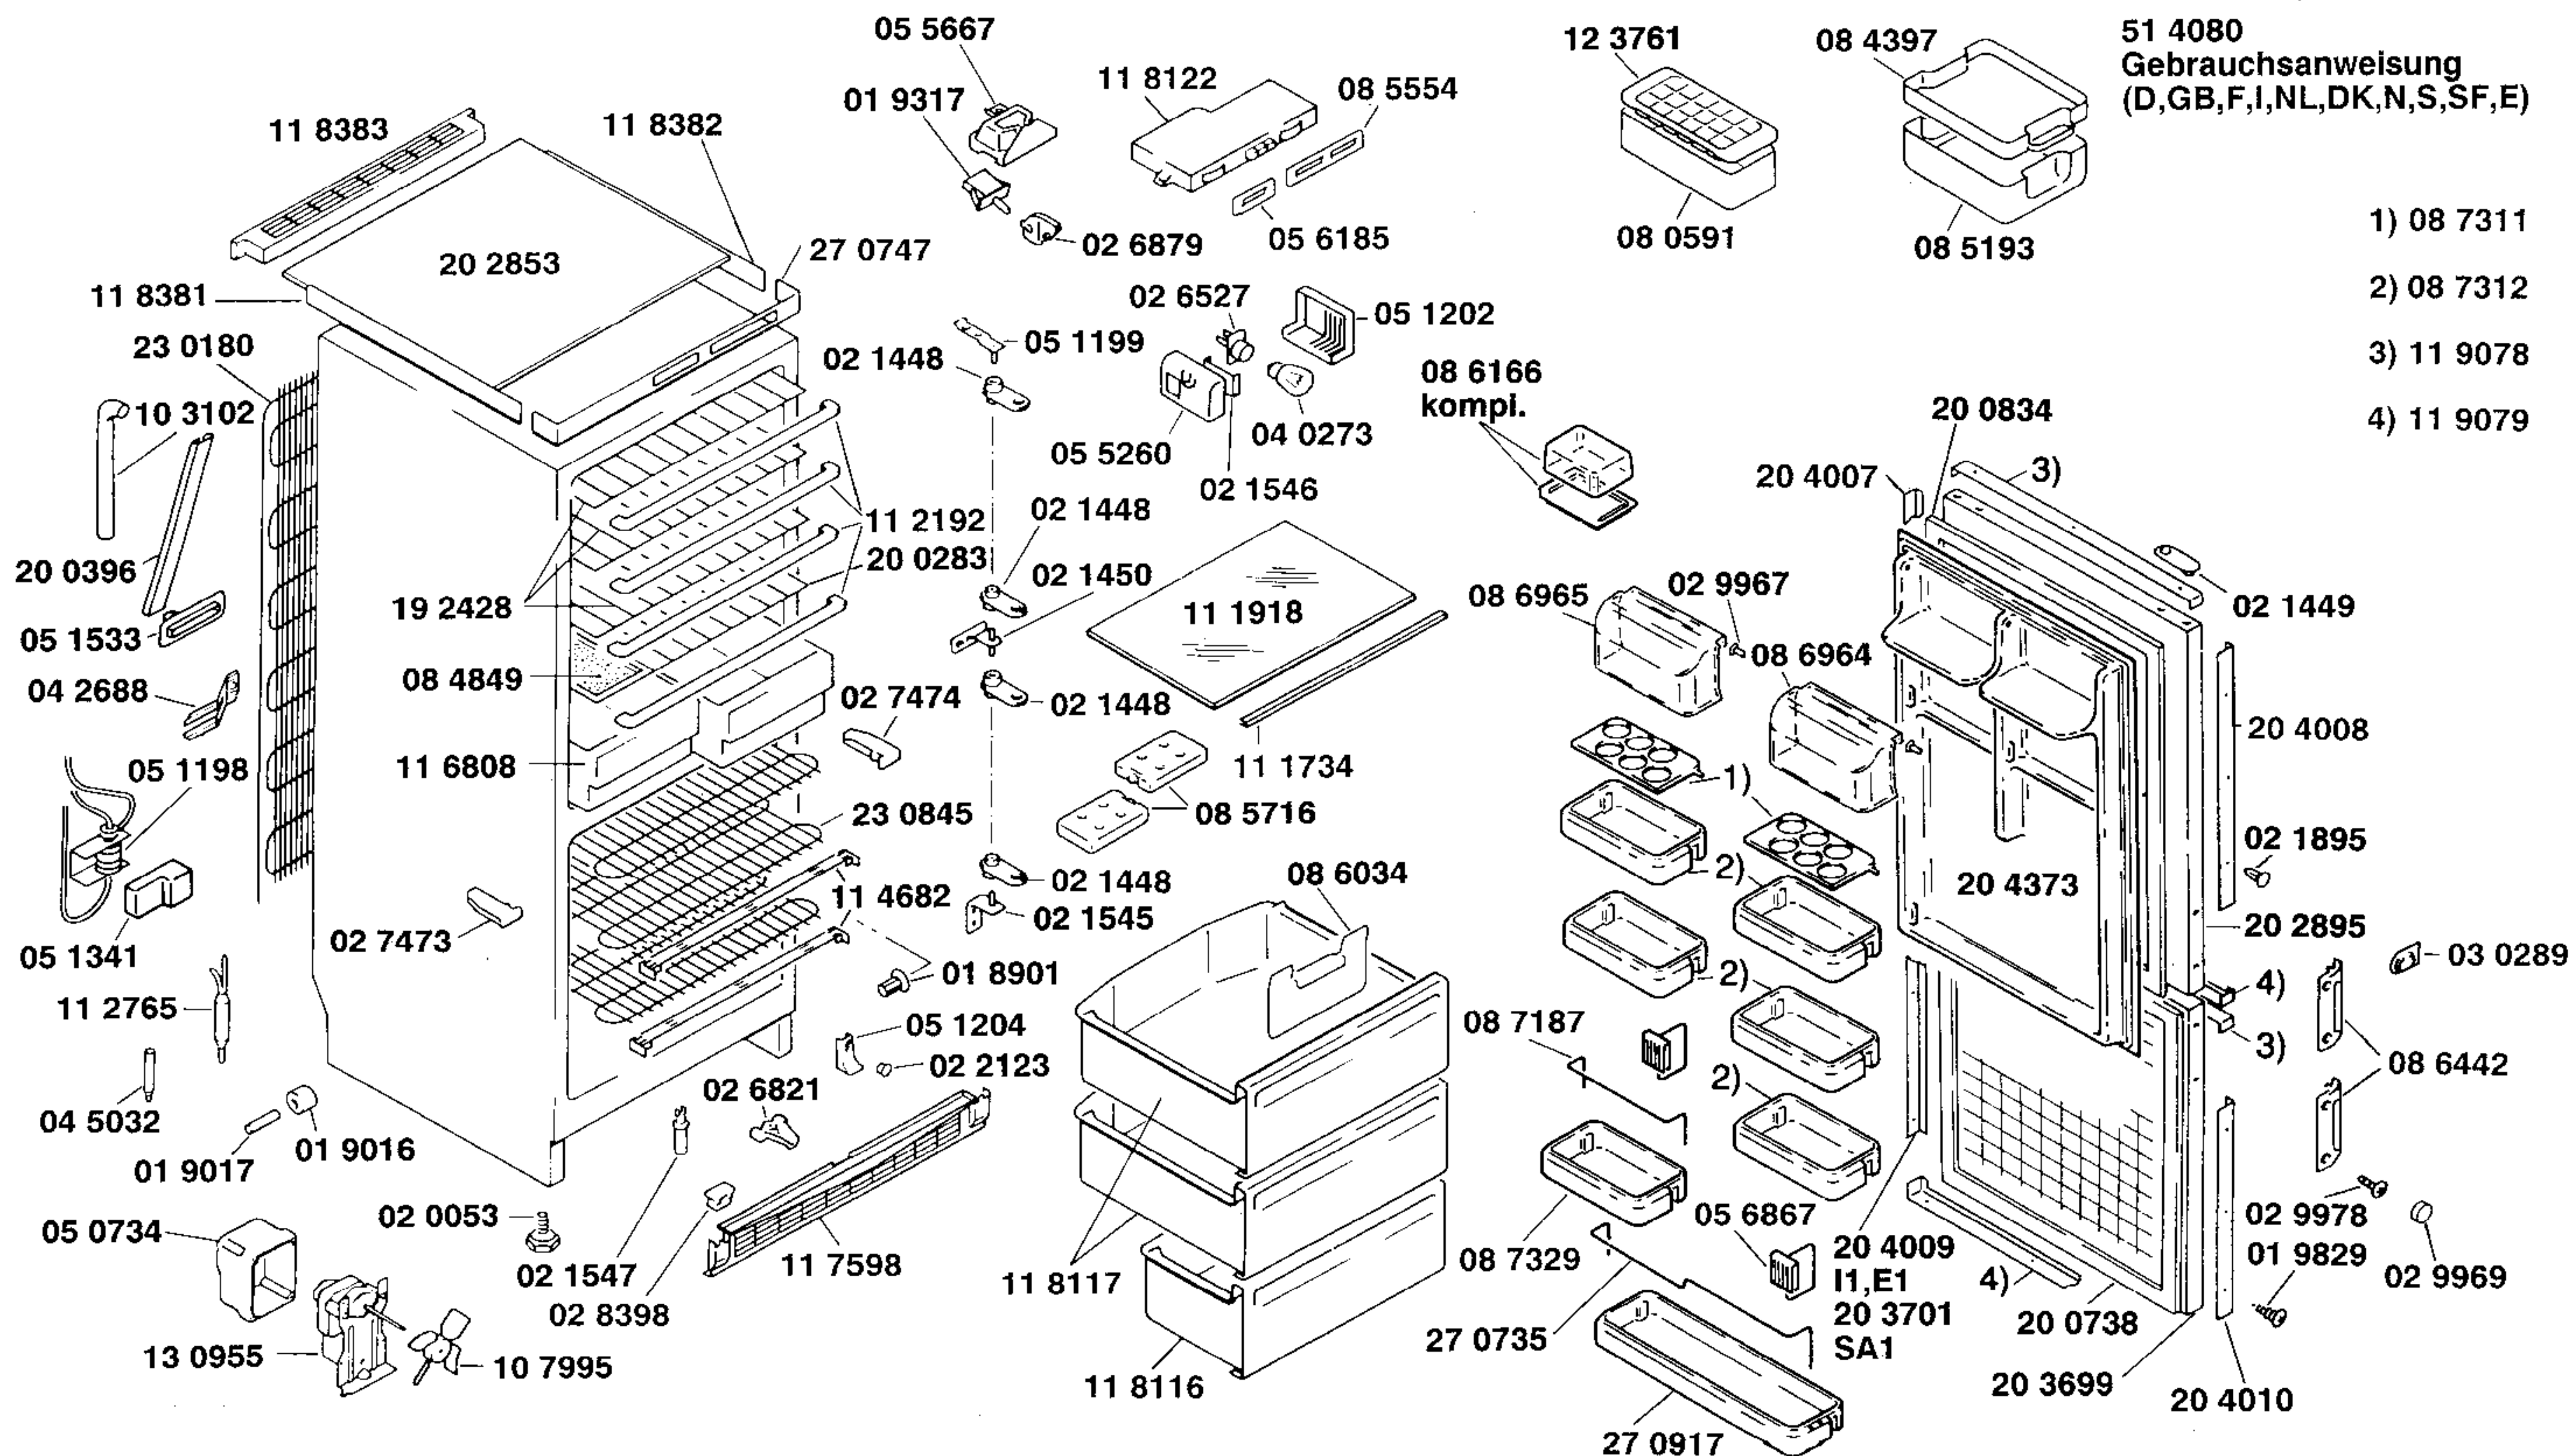

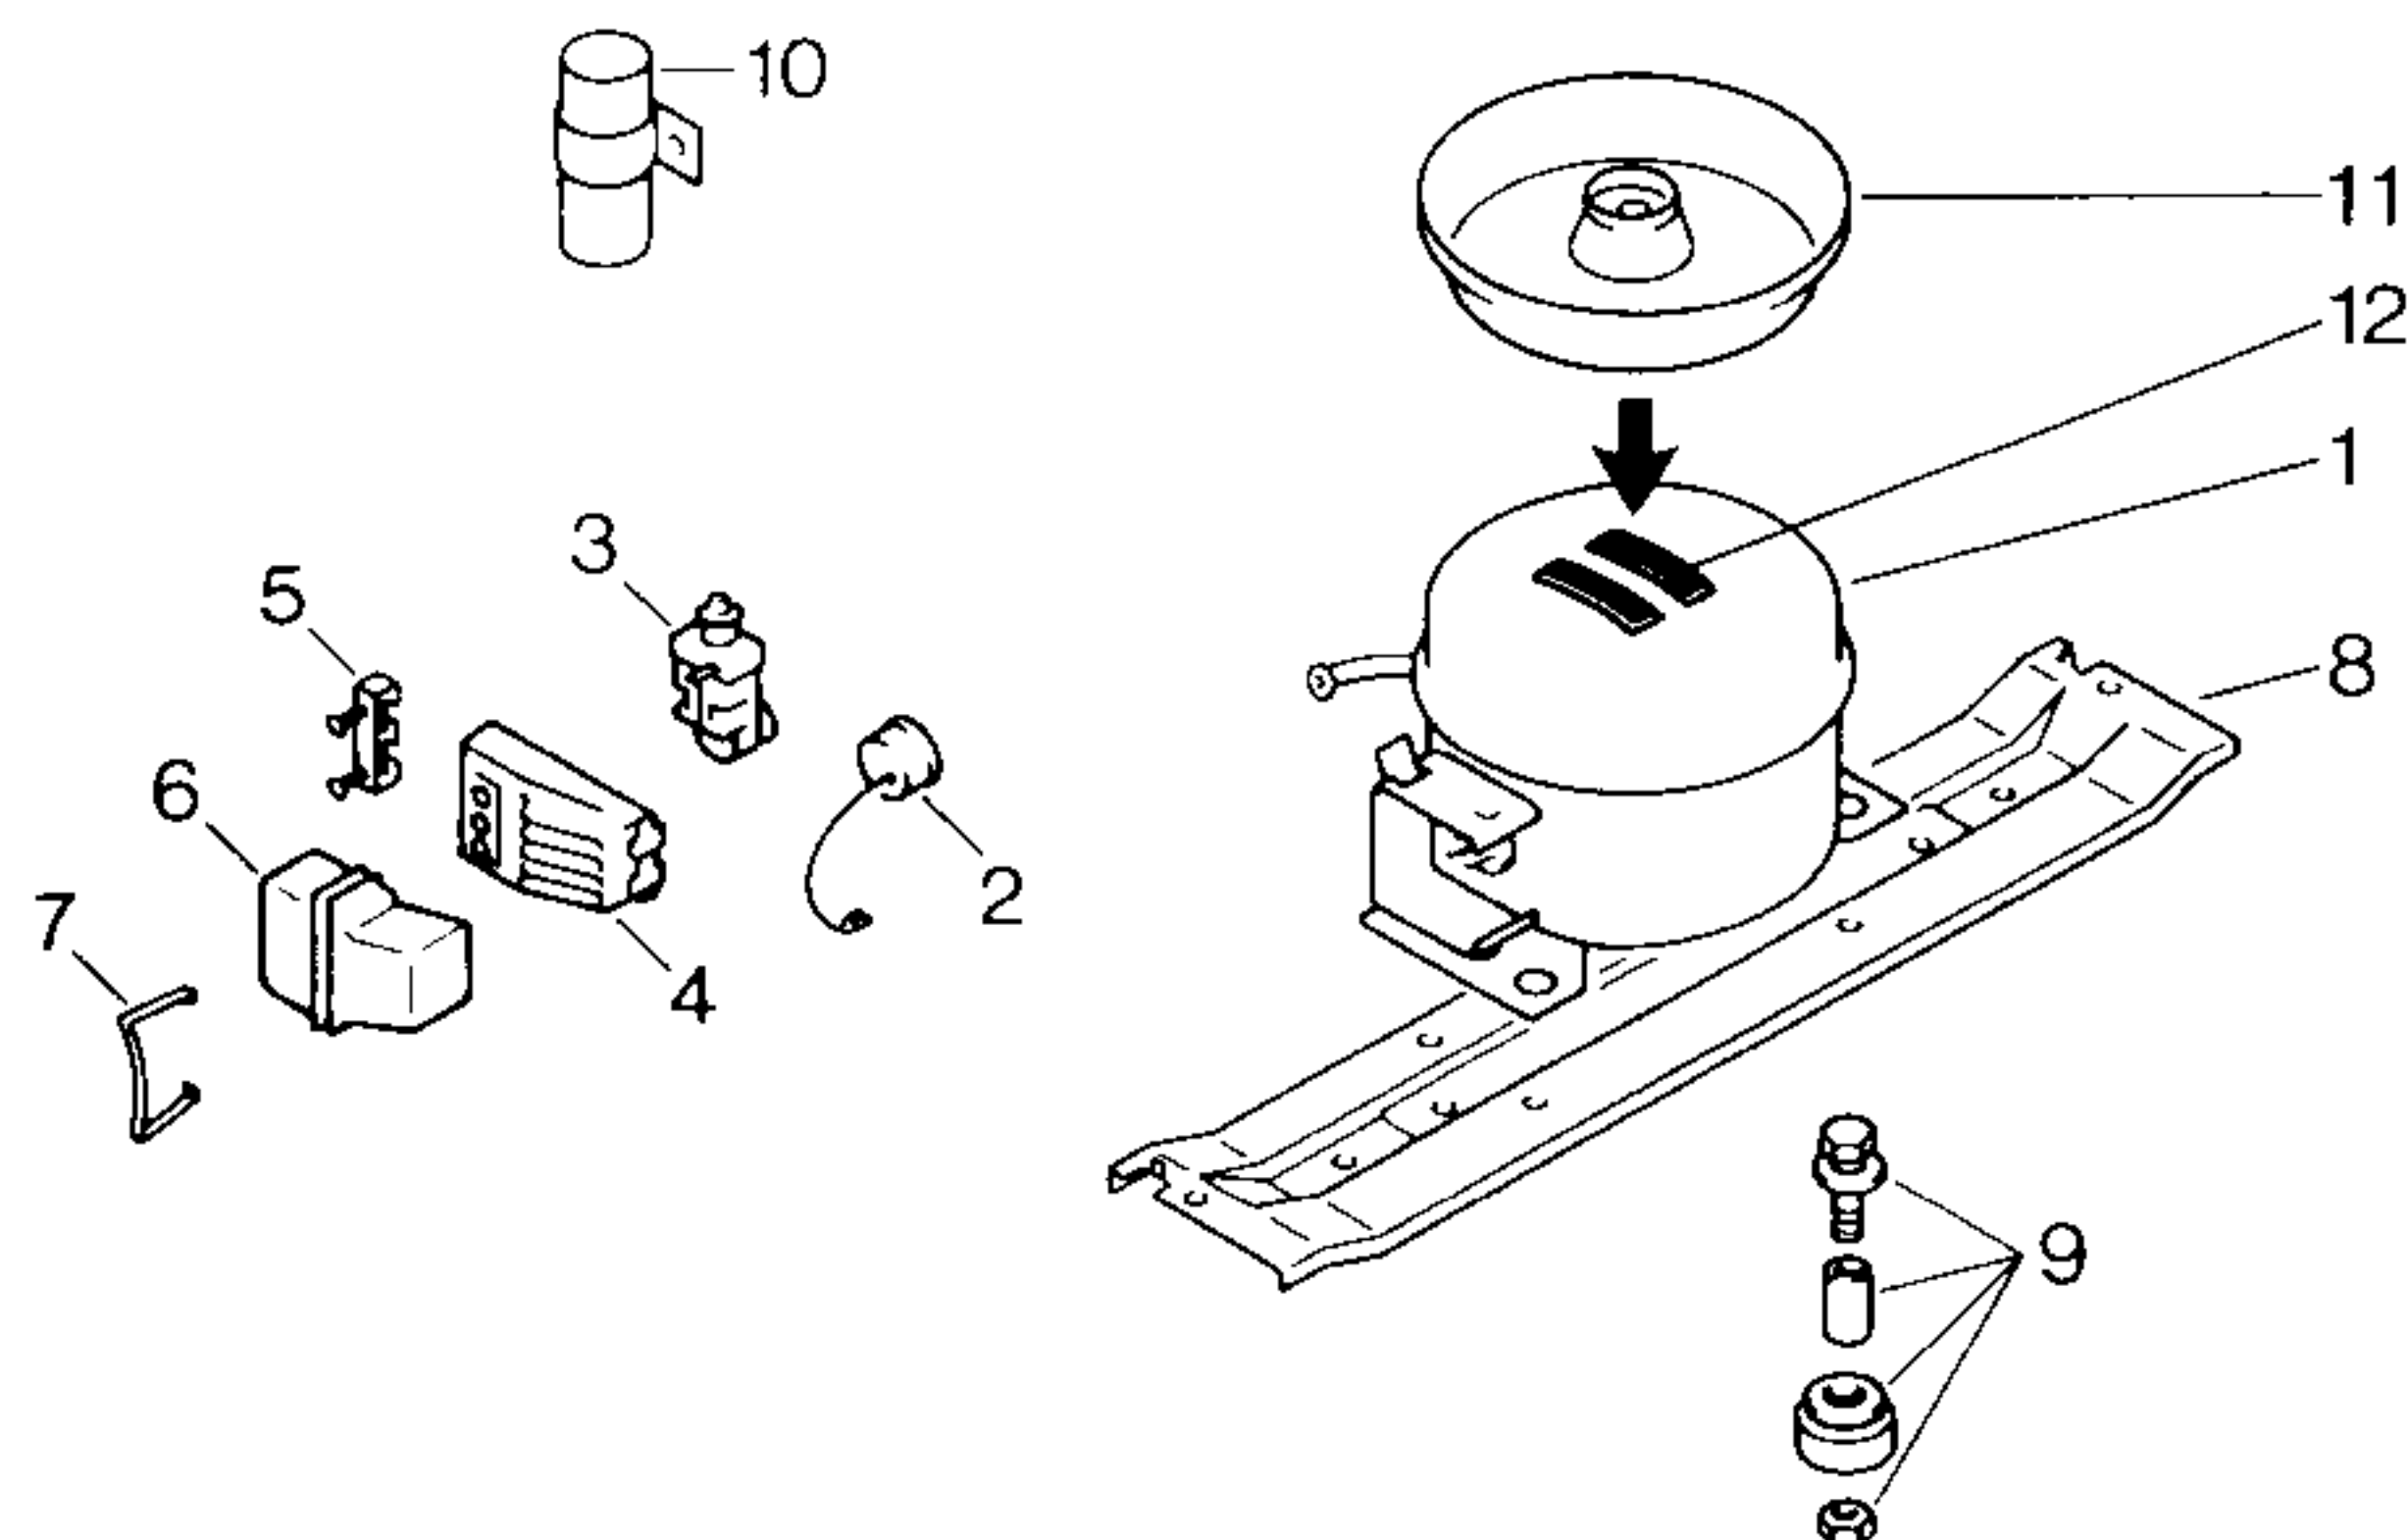

Pos.		
	Aspera	
	BY 1116 A	
1	14 0405	
2	02 6559	
3	02 2342	
4	05 1748	
5		
6	05 1746	
7	02 2339	
8	11 1919	
9	05 0166	
10		
11	08 5091	
12	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Aspera			
Typ/Type		BY 1116 A			
Förderleistung/Delivery/Débit		l/h	1450		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,9		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	11,7		
		Hi/aux Ω	37,7		
Temp.-Regler/Thermostat		Rafi "KS" elektronik		Rafi "GS" elektronik	
Typ/Type		kalt warm		kalt warm	
Reglerstellung/Position					
Schaltwerte/Switching values/		„ein“	°C	+ 6	+ 15
Valeurs de commutation		„aus“		+ 5	+ 14
(„abtauen“ od.)		„alarm“		+ 5	+ 5
				- 24	- 17
				- 26	- 18
				- 14	- 14
Füllmenge/Fill.quantity/Charge		R12	g	180	
Anschlußwert/Conn.load/Puiss. connectée		W	150		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	190		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω	10600		
Spannung/Voltage/Tension		V	295		