


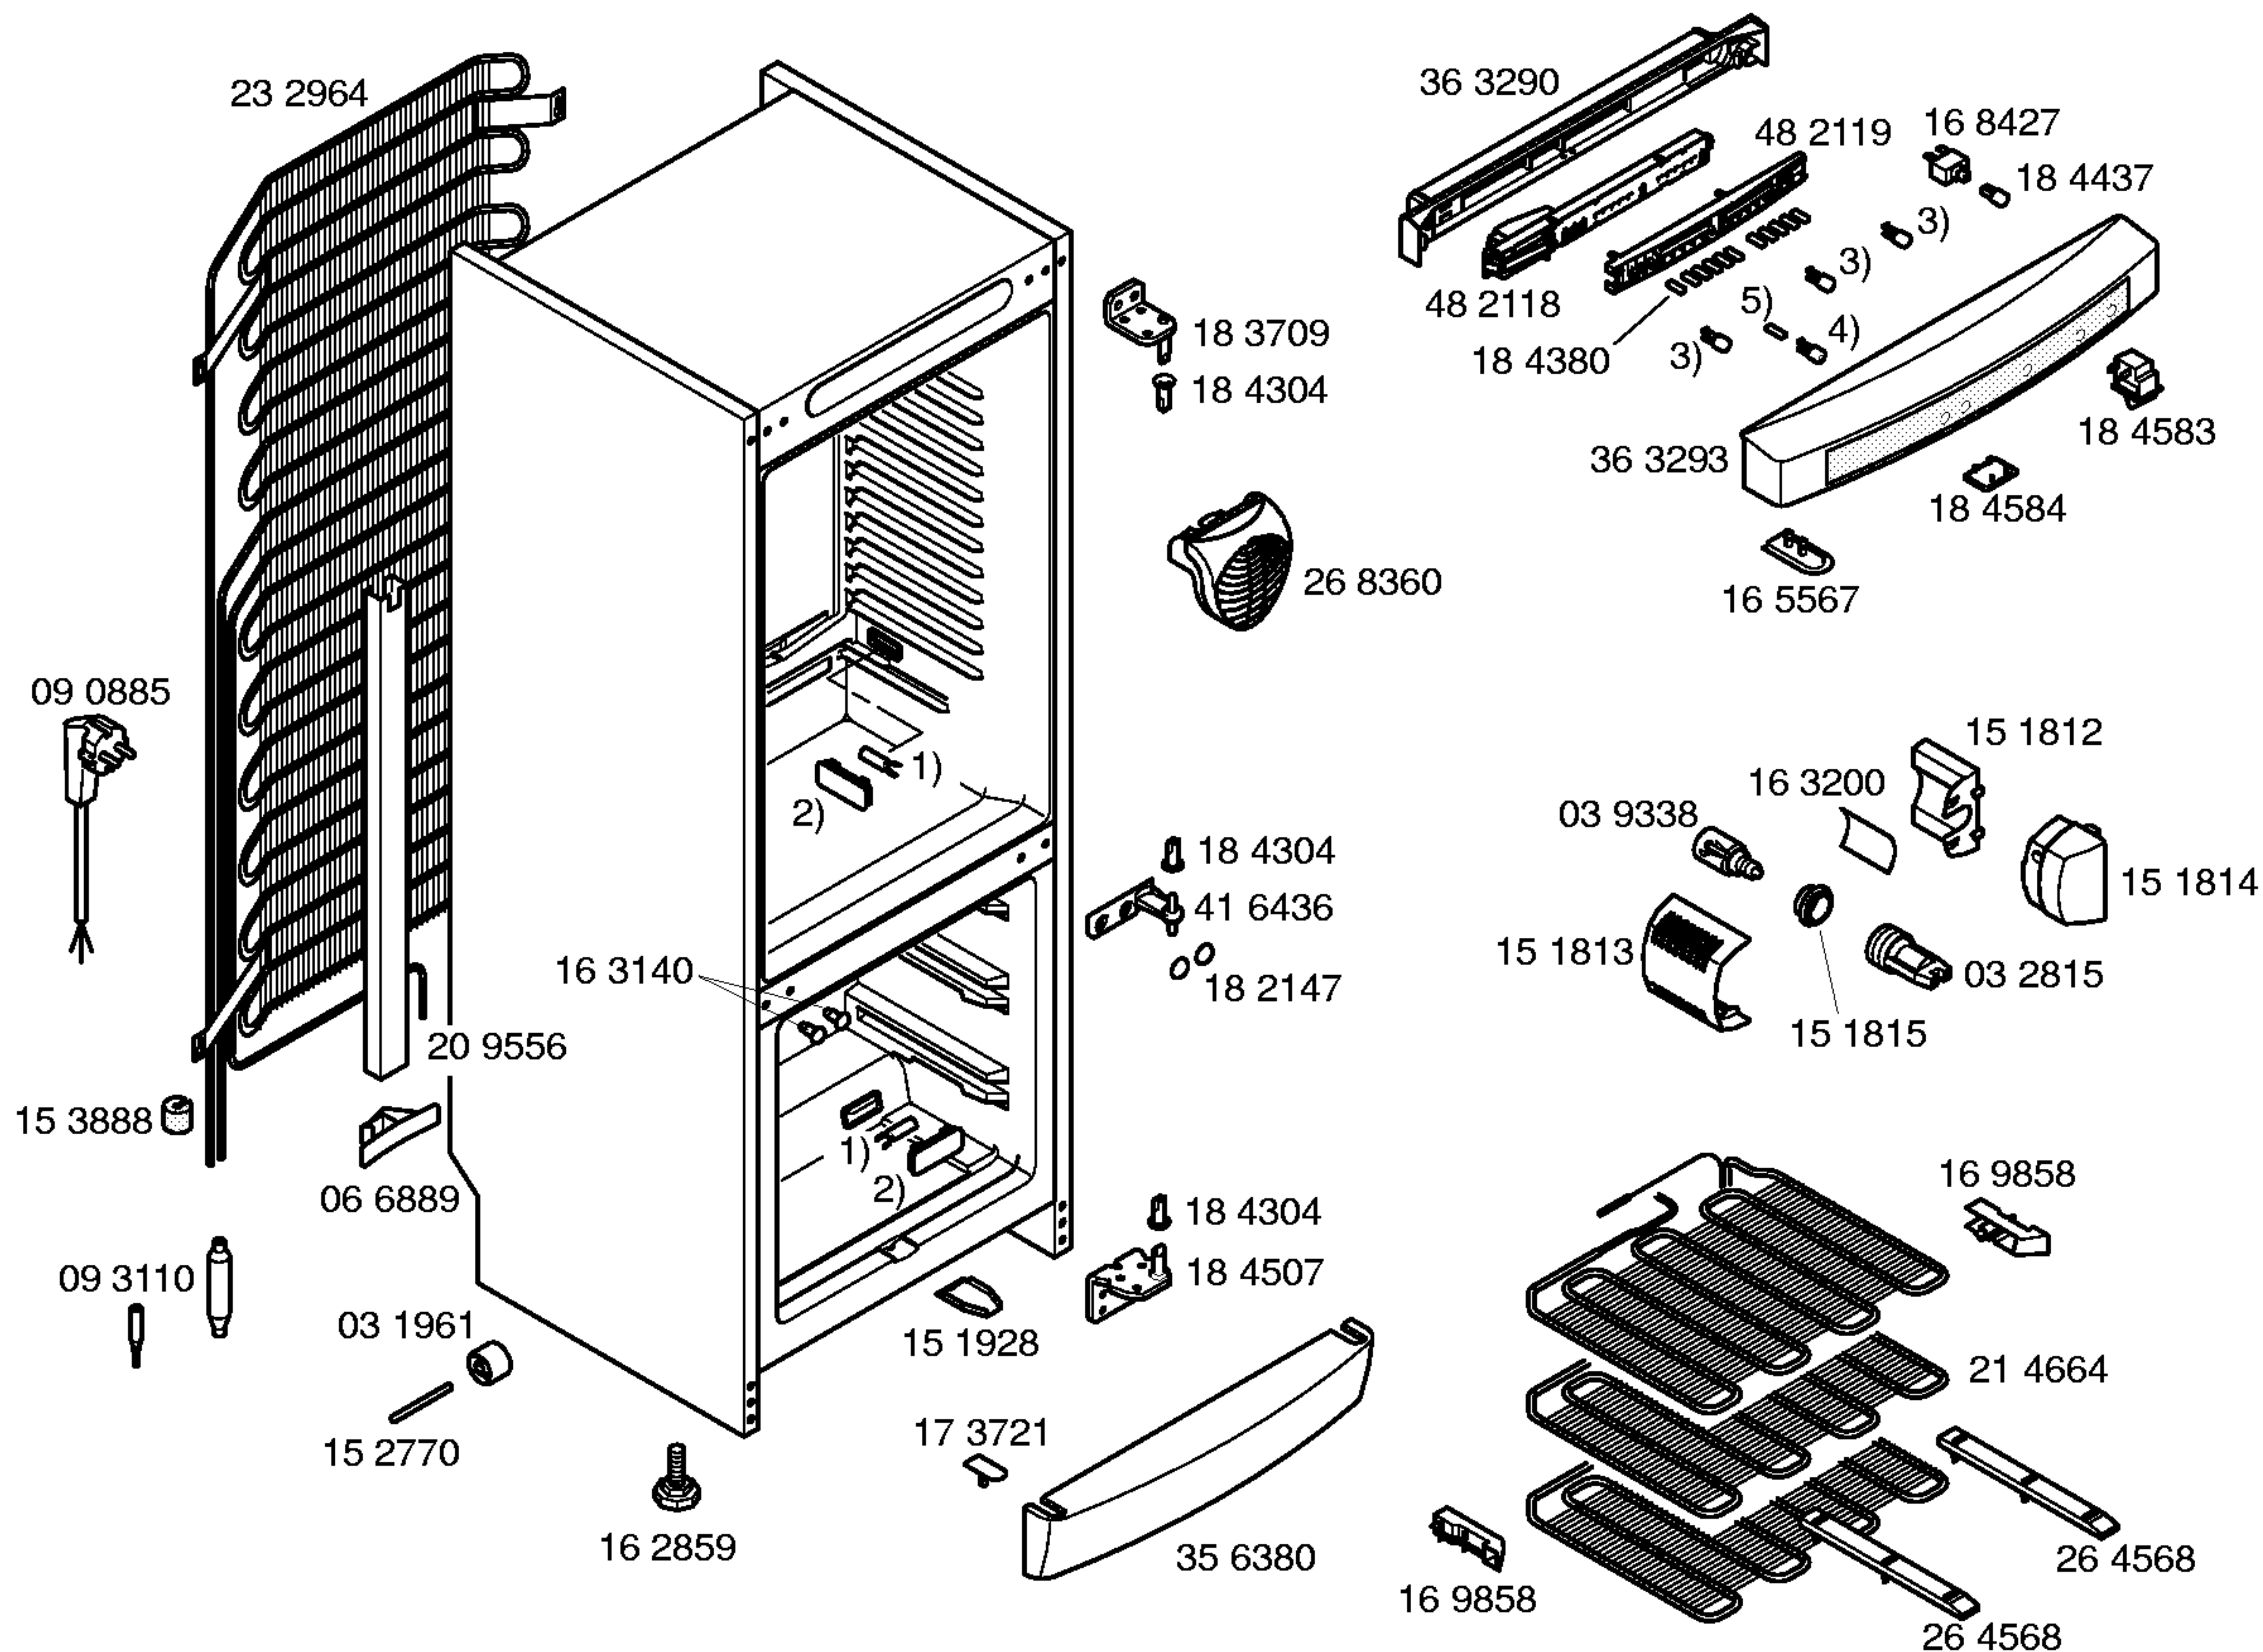



Ident – Nummern – Konstante	
3740	

Gebrauchsanweisung
52 9594
(de,en,fr,es,it,pt,el)
52 9595
(sv,no,fi,da)
52 9596
(ru,ro)

Montageanweisung
52 4888
(de,en,fr,nl,es,it,pt,el,pl,
sv,no,fi,da,ru)

- 1) 16 8766
Rep. Satz
- 2) 16 9176
- 3) 18 4425
- 4) 18 4427
- 5) 18 4433

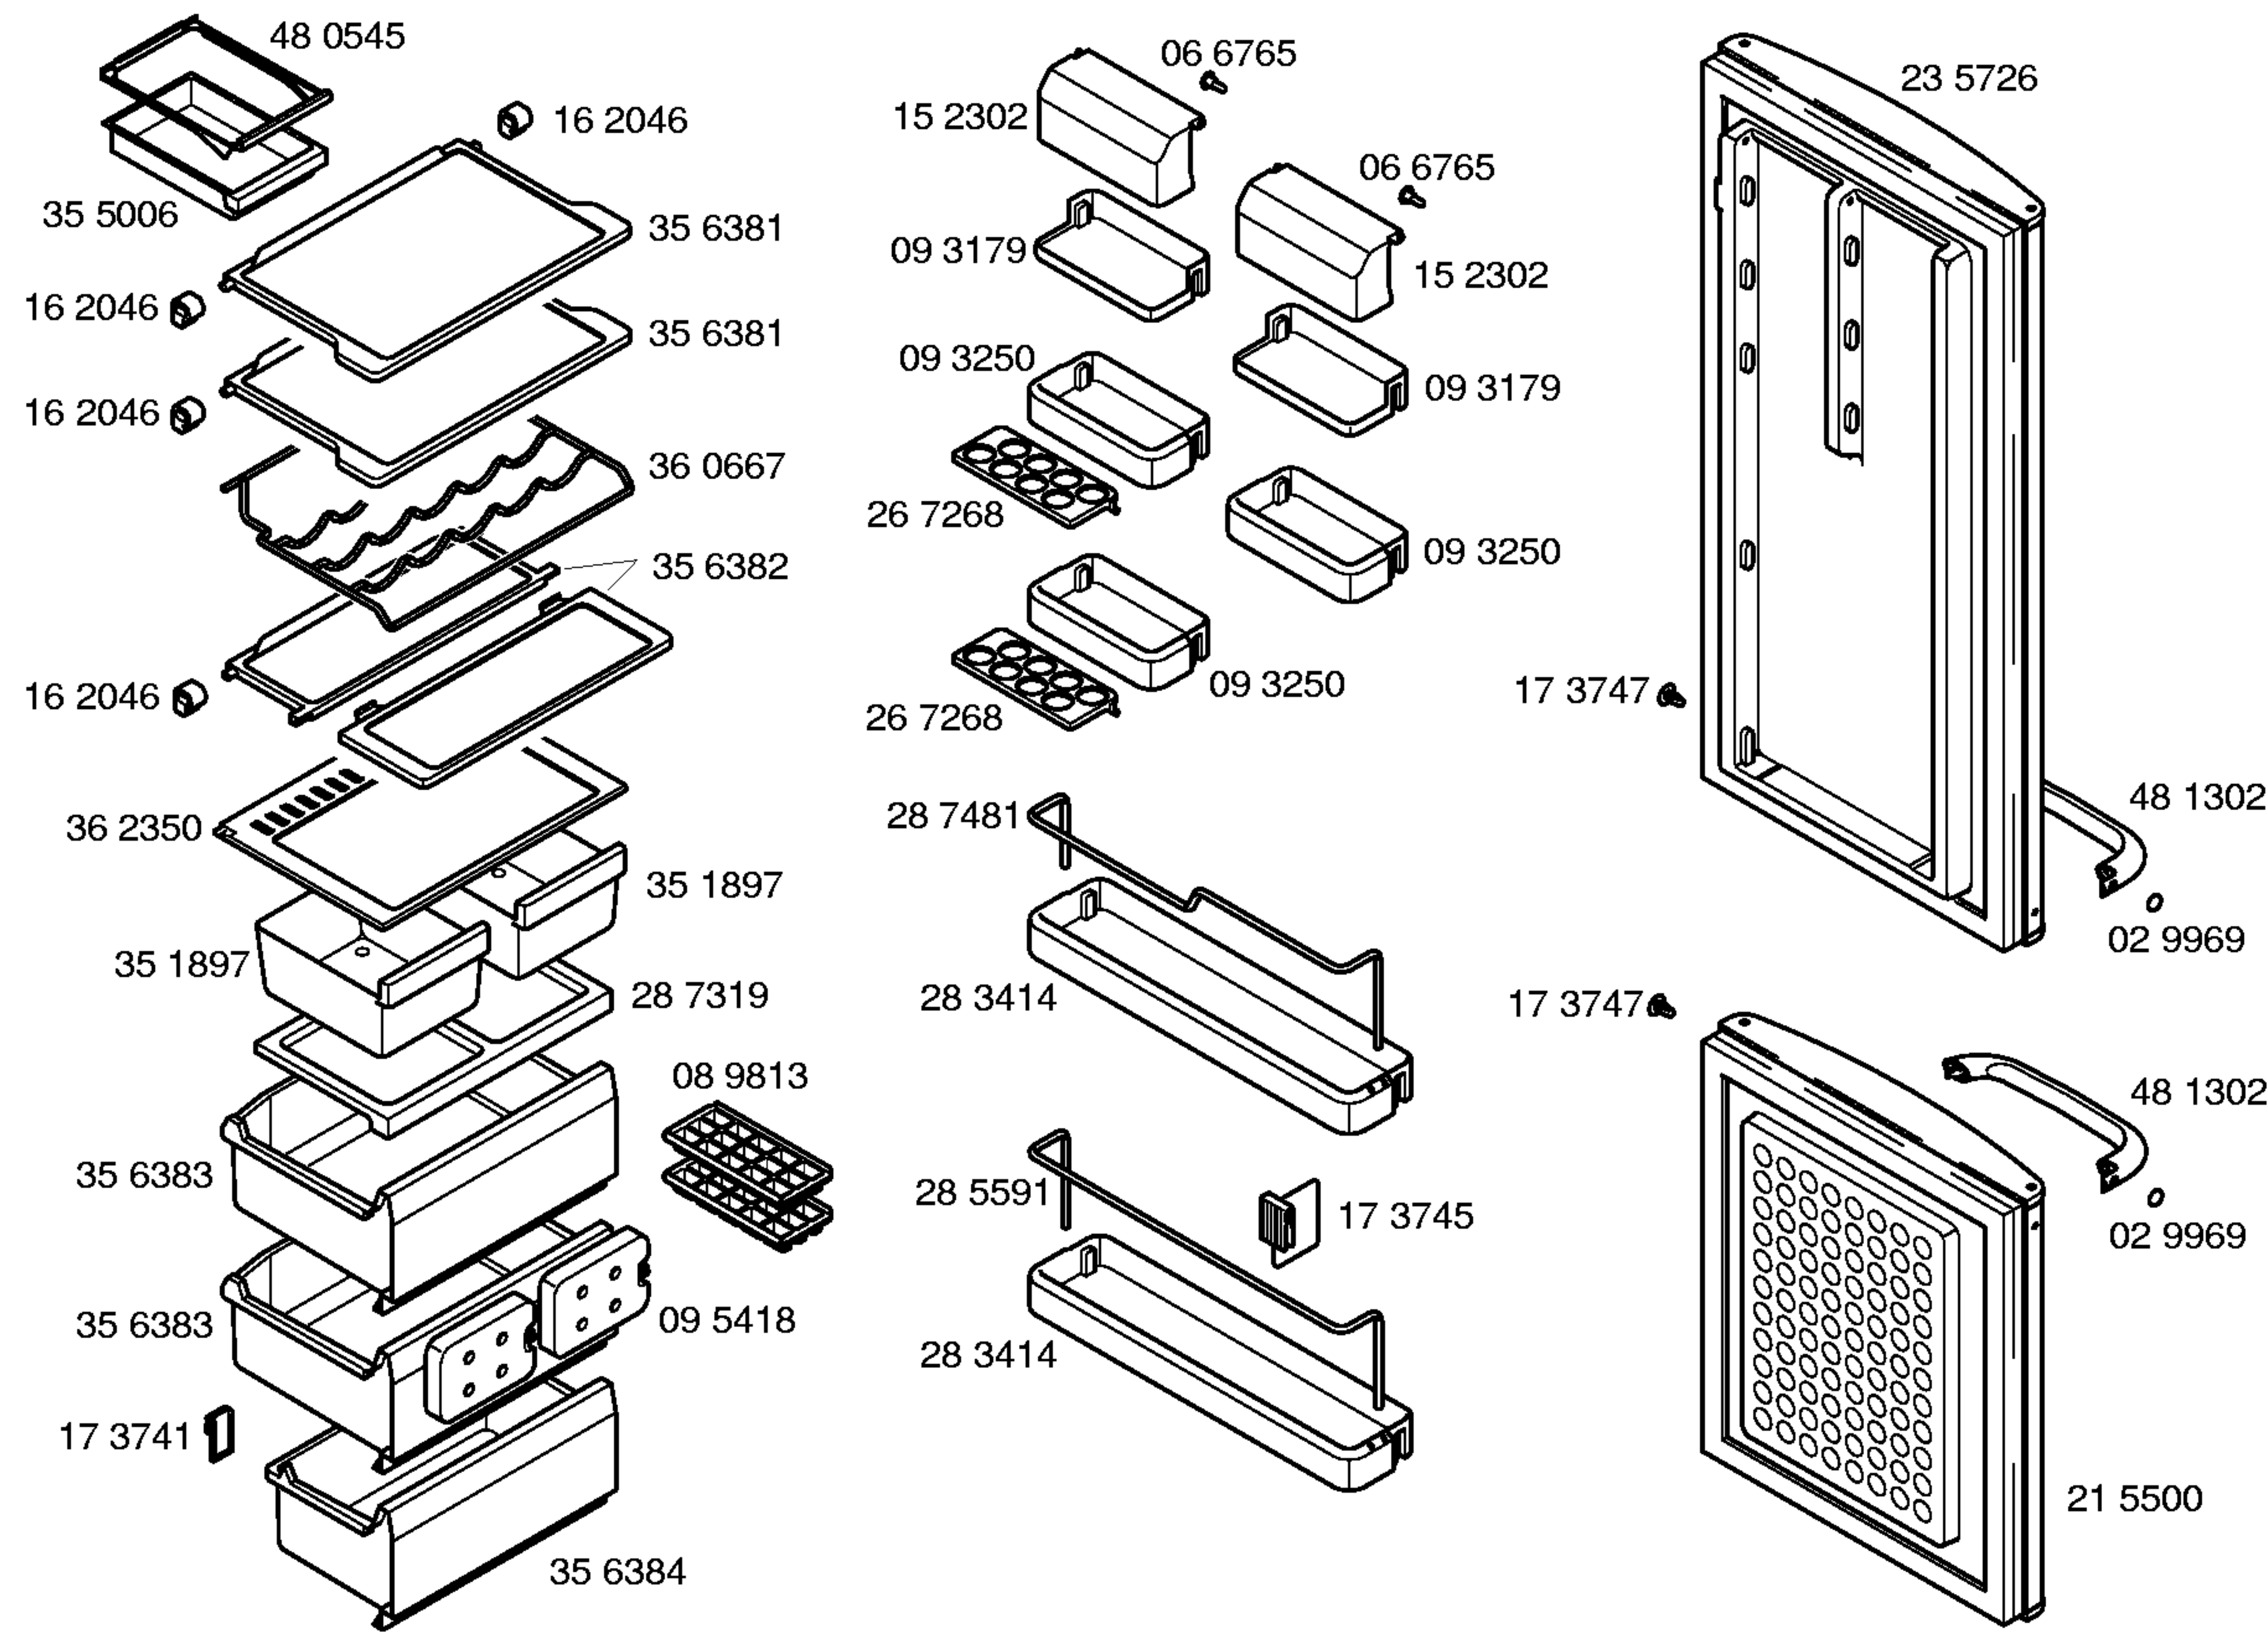

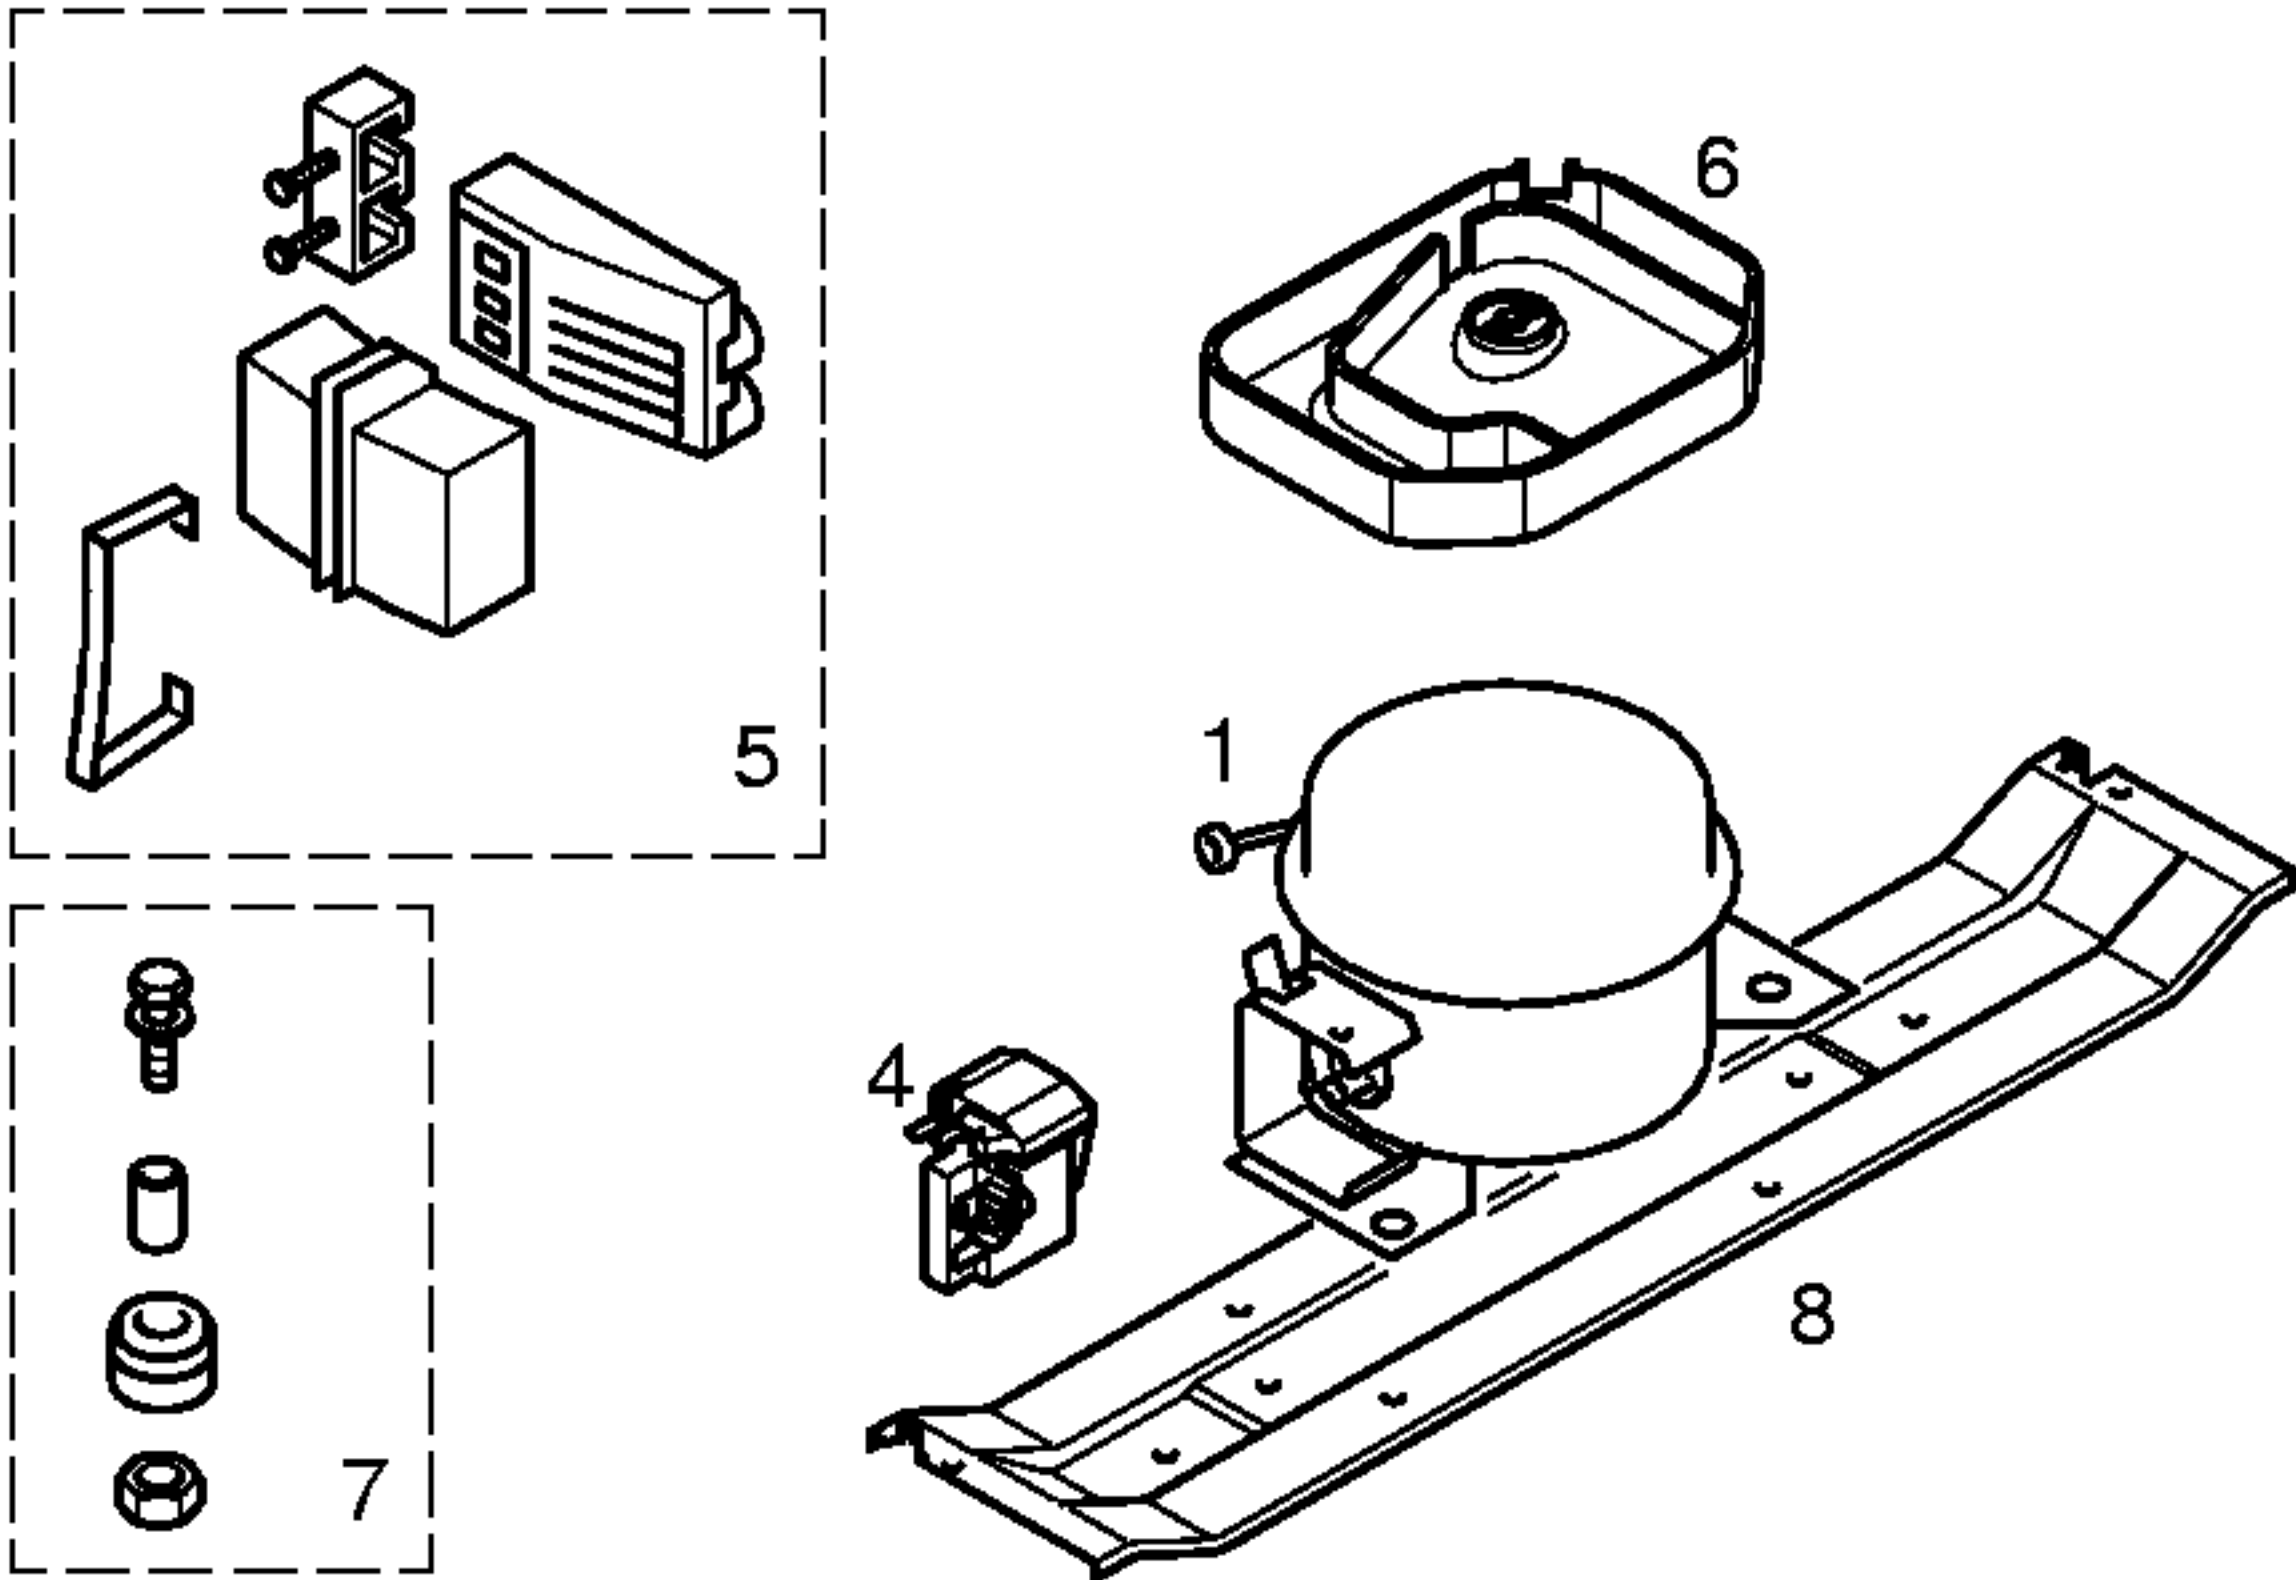

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS			
		V01	V02
Verdichter/Compressor/Compresseur/Compresor	LG	LG	Aspera
Typ/Type/Tipo	NDA62NAEG	NDA69NAEG	EMT40-CLP
Förderleistung/Delivery/Debit/Aspiración l/h			
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	0,48	0,50	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	35,21	35,21	
Hi/aux. Ohm	21,49	21,49	
Temp.Reyler/Thermostat/Termostato	Electronic KS	Electronic GS	
Typ/Type/Tipo	E2000-K	E2000-K	
Reglerstellung/Position/Conexión	MIN. MAX.	MIN.	MAX.
Schaltwerte/Switching values/ ..ein/conex. °C	11 1	-12,5	-24'5
Valeurs de commutation/Desconex. ..aus"/descon.°C	10 0	-14	-26
(..abtaven' od) ..alarm' °C			
Verdampfersensor/Evaporator sensor/Sonda evaporador			
Schaltwerte/Switching values/ ..ein/conex. °C	4 4		
Valeurs de commutation/Desconex. ..aus"/descon.°C	— —		
Füllmenge/Fill. quantily/Charge/Carga R600a. g	*	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	83	90
Heizung/Heater/Chaufrage/Resistenc.descong. Ohm			
Widerstand/Resistance/Resistencia W			
Leistung/Power/Puissance/Potencia			
Ventilador/Blower/Ventilateur/Ventilador Ohm			
Widerstand/Resistance/Resistencia			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Ohm			
Widerstand/Resistance/Resistencia V			
Spannung/Voltage/Tension/Tensión			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características