Ident – Nummern – Konstante
3740

Gebrauchsanweisung

52 9594

(de,en,fr,es,it,pt,el)

52 9595

(sv,no,fi,da)

52 9596

 (ru, ro)

Montageanweisung

52 4888

(de,en,fr,nl,es,it,pt,el,pl,
sv,no,fi,da,ru)

1) 16 8766


Rep. Satz


2) 16 9176

3) 18 4425

4) 18 4427

5) 18 4433

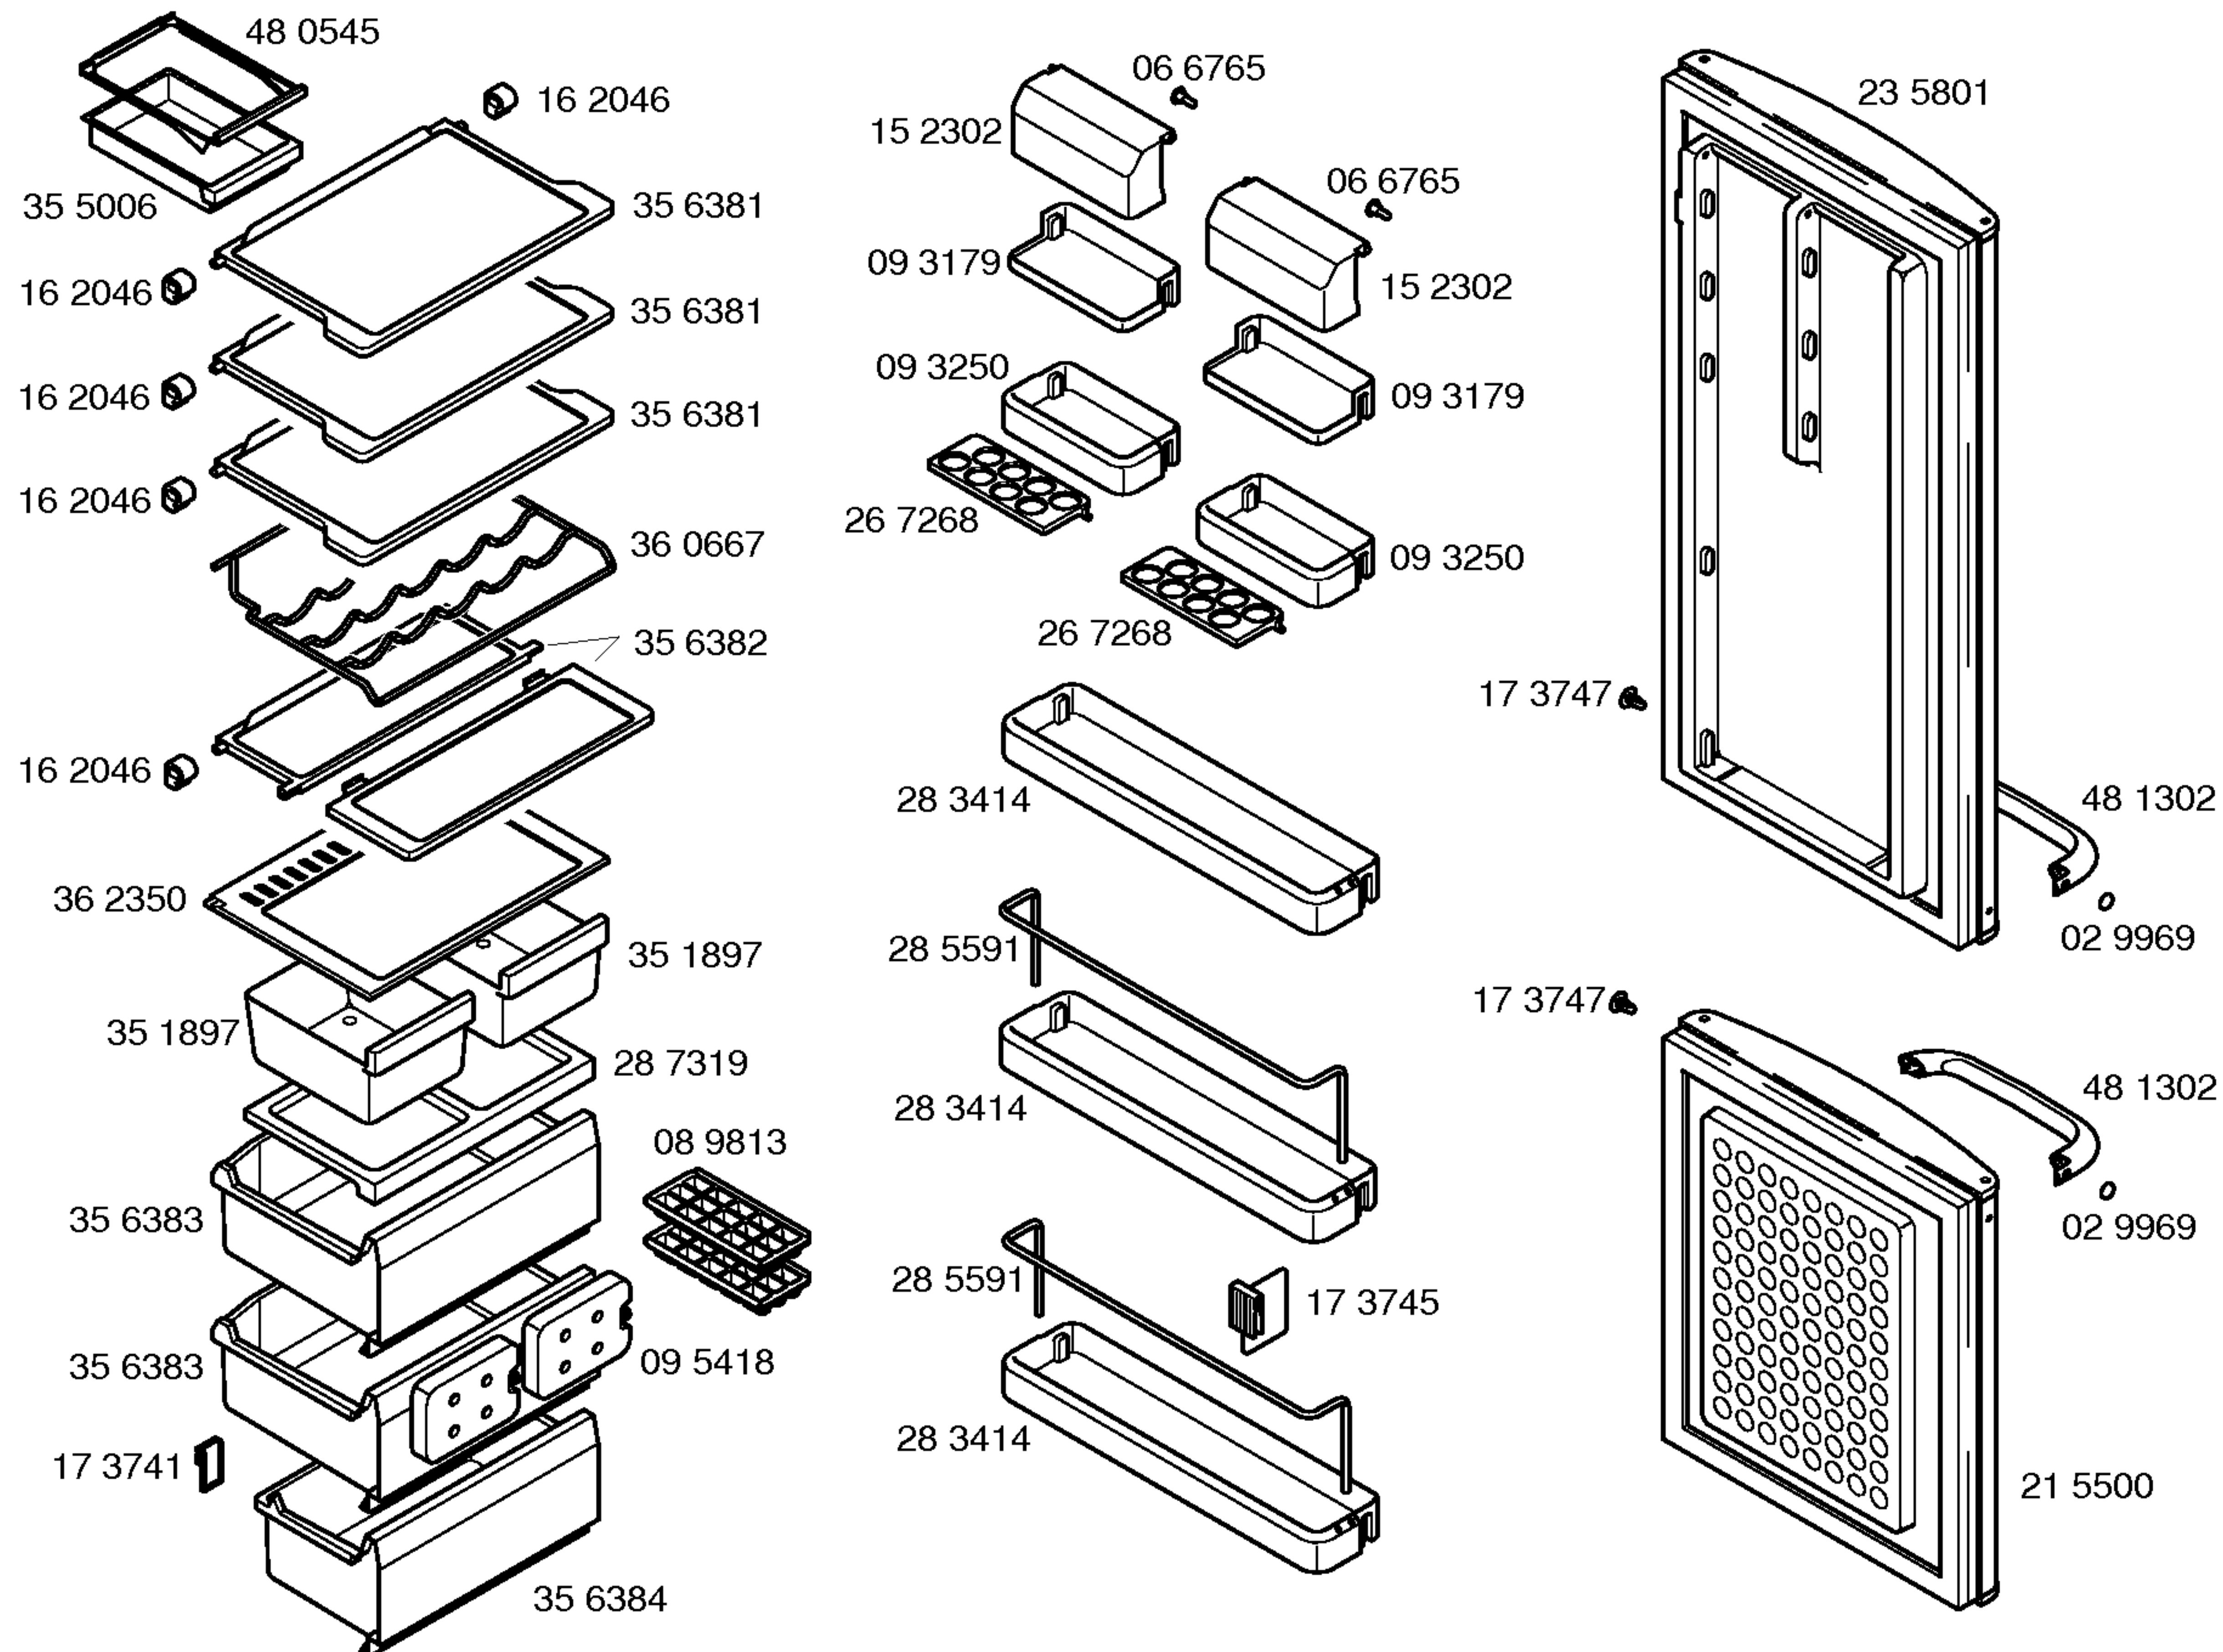

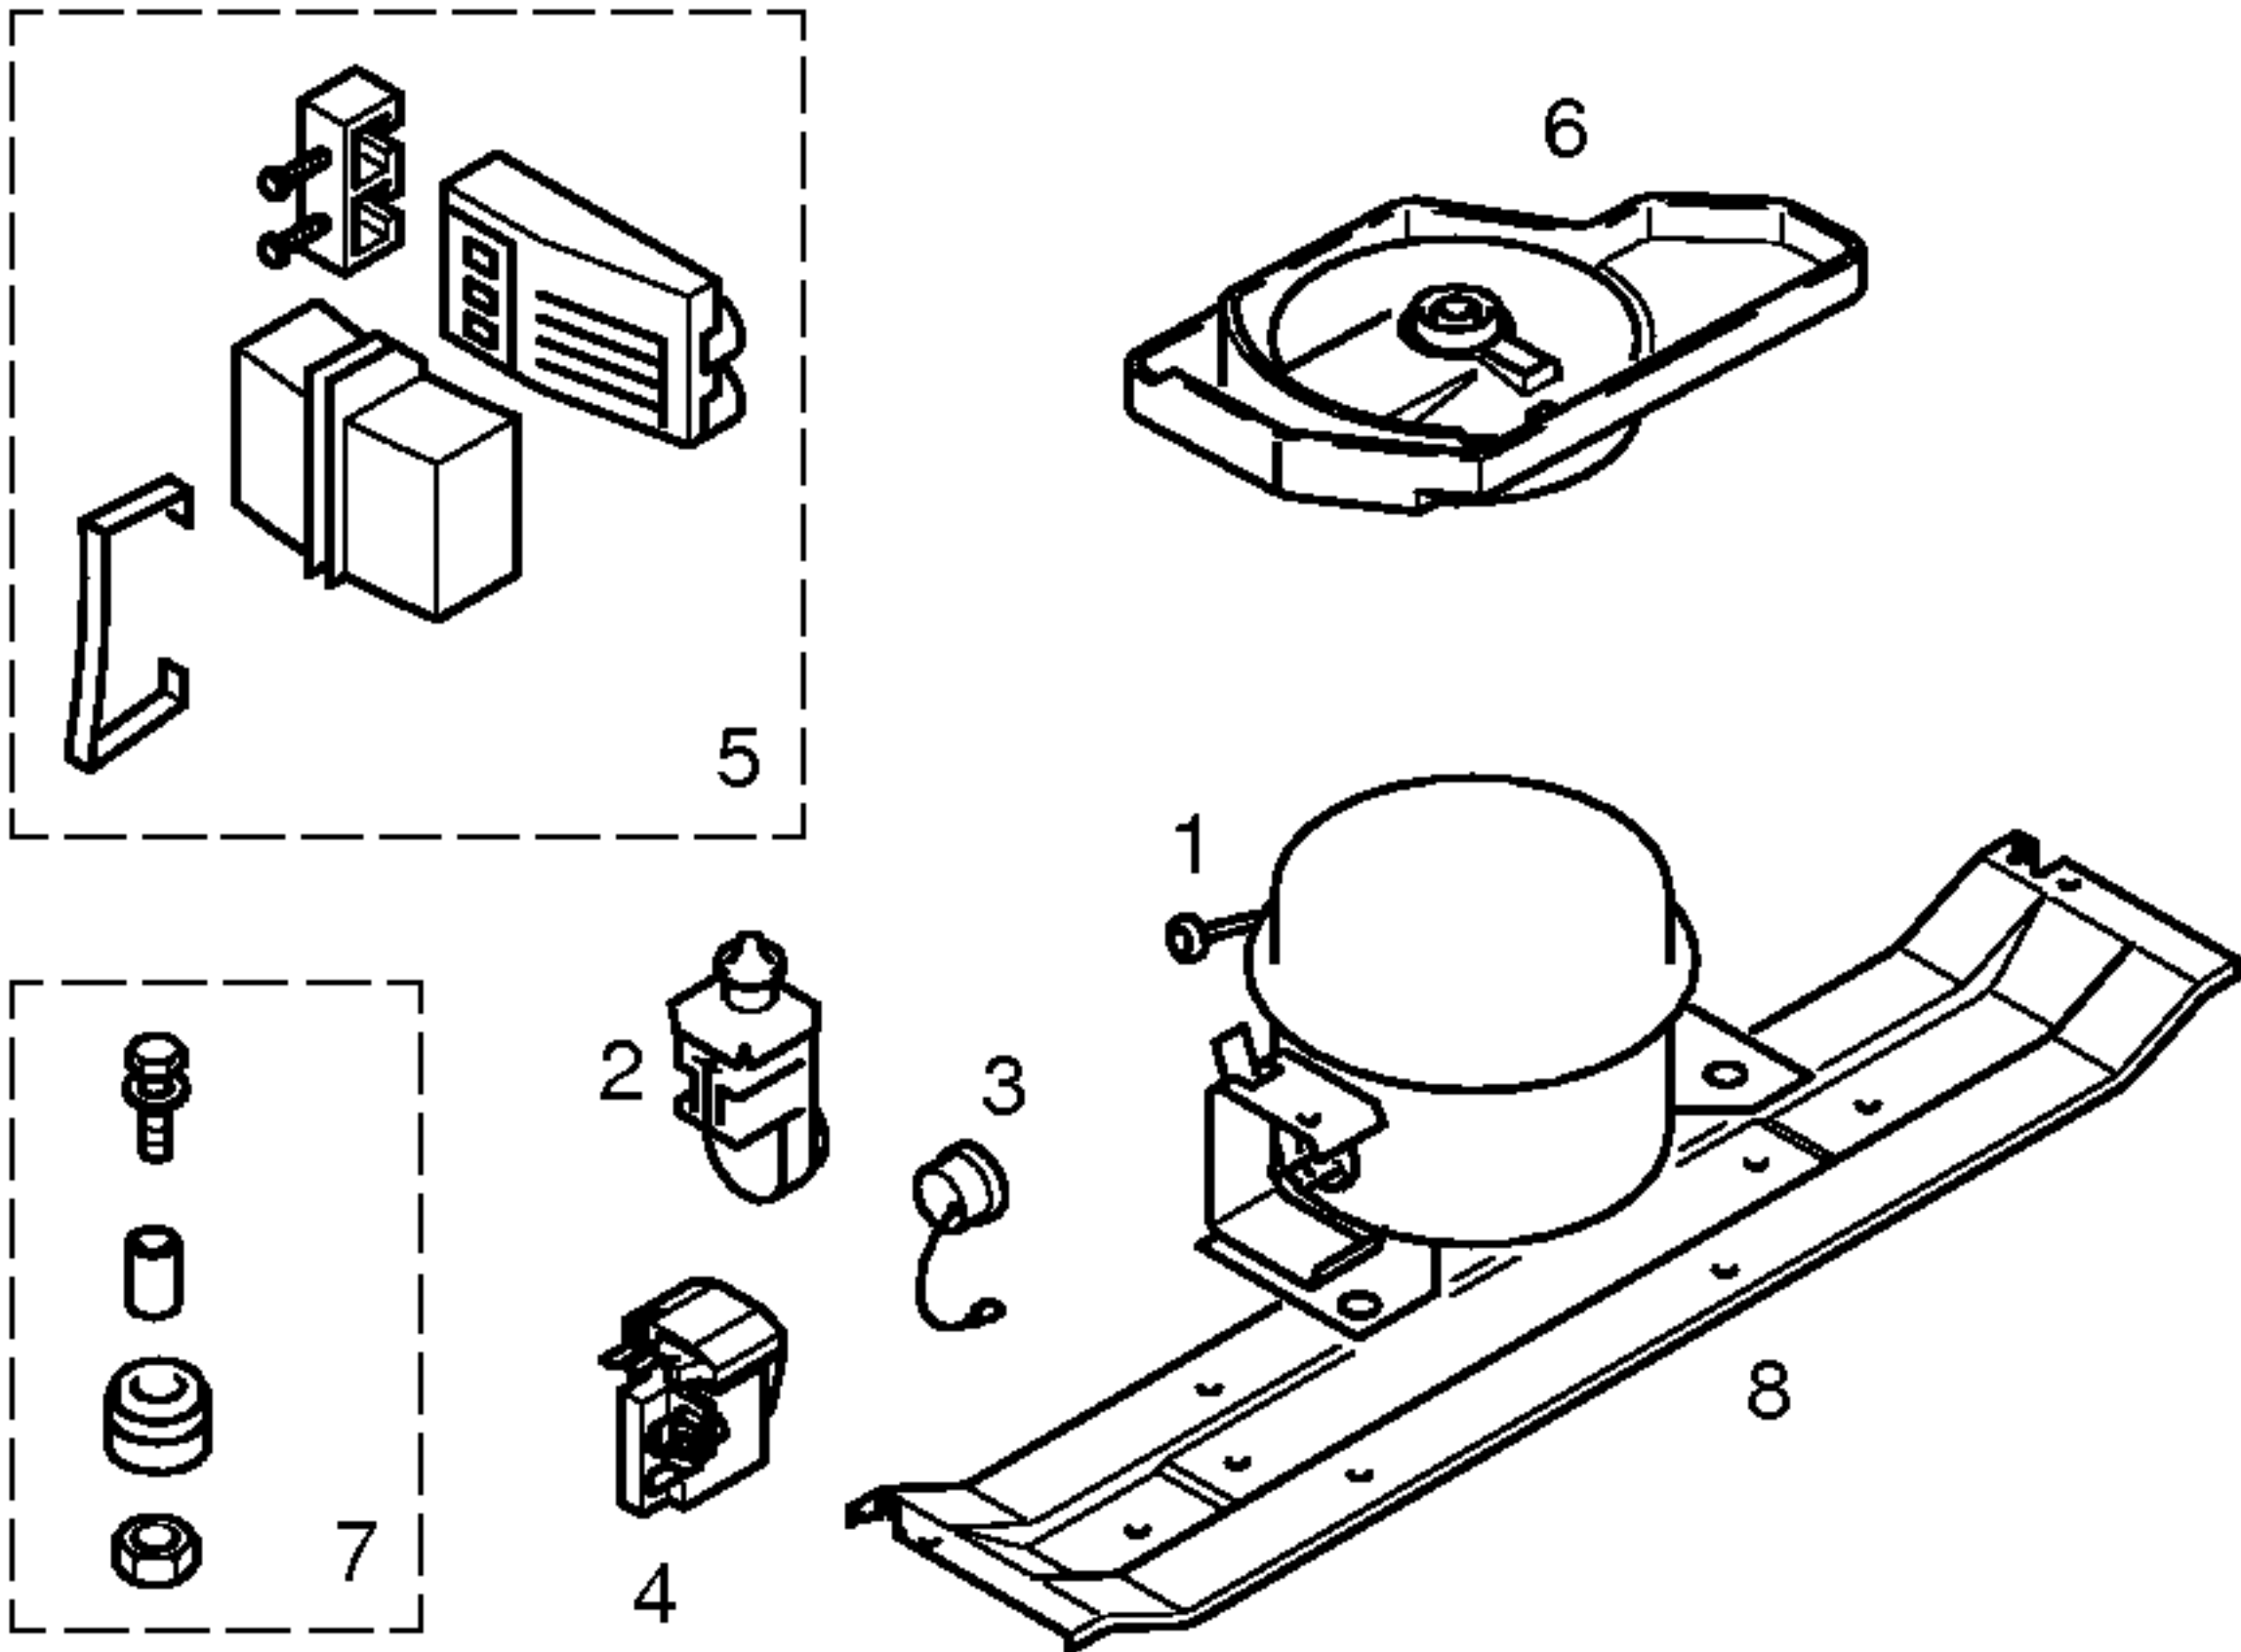

Pos.	****			
	Aspera	Gold Star		
	BPK1072Y	ND69NAEG		
1	14 2000	14 2001		
2	15 4315			
3	17 3748			
4		17 1011		
5				
6	26 4123			
7	05 0166	05 0166		
8	28 8253	28 8253		
9				
10				
11				
12				
13				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS		

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux. Ohm	Aspera BPK1072Y 0,47 33,10 38,20	GoldStar ND69NAEG
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. °C (..abtaven' od) ..alarm' °C Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. °C	Electronic. KS E2000 Komfort MIN. MAX. 11°C 1°C 10°C 0°C 4°C 4°C — —	Electronic. GS E2000 Komfort MIN. MAX. -12,5°C -24'5°C -14°C -26°C
Füllmenge/Fill. quantily/Charge/Carga R600a. g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	79	83
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características