



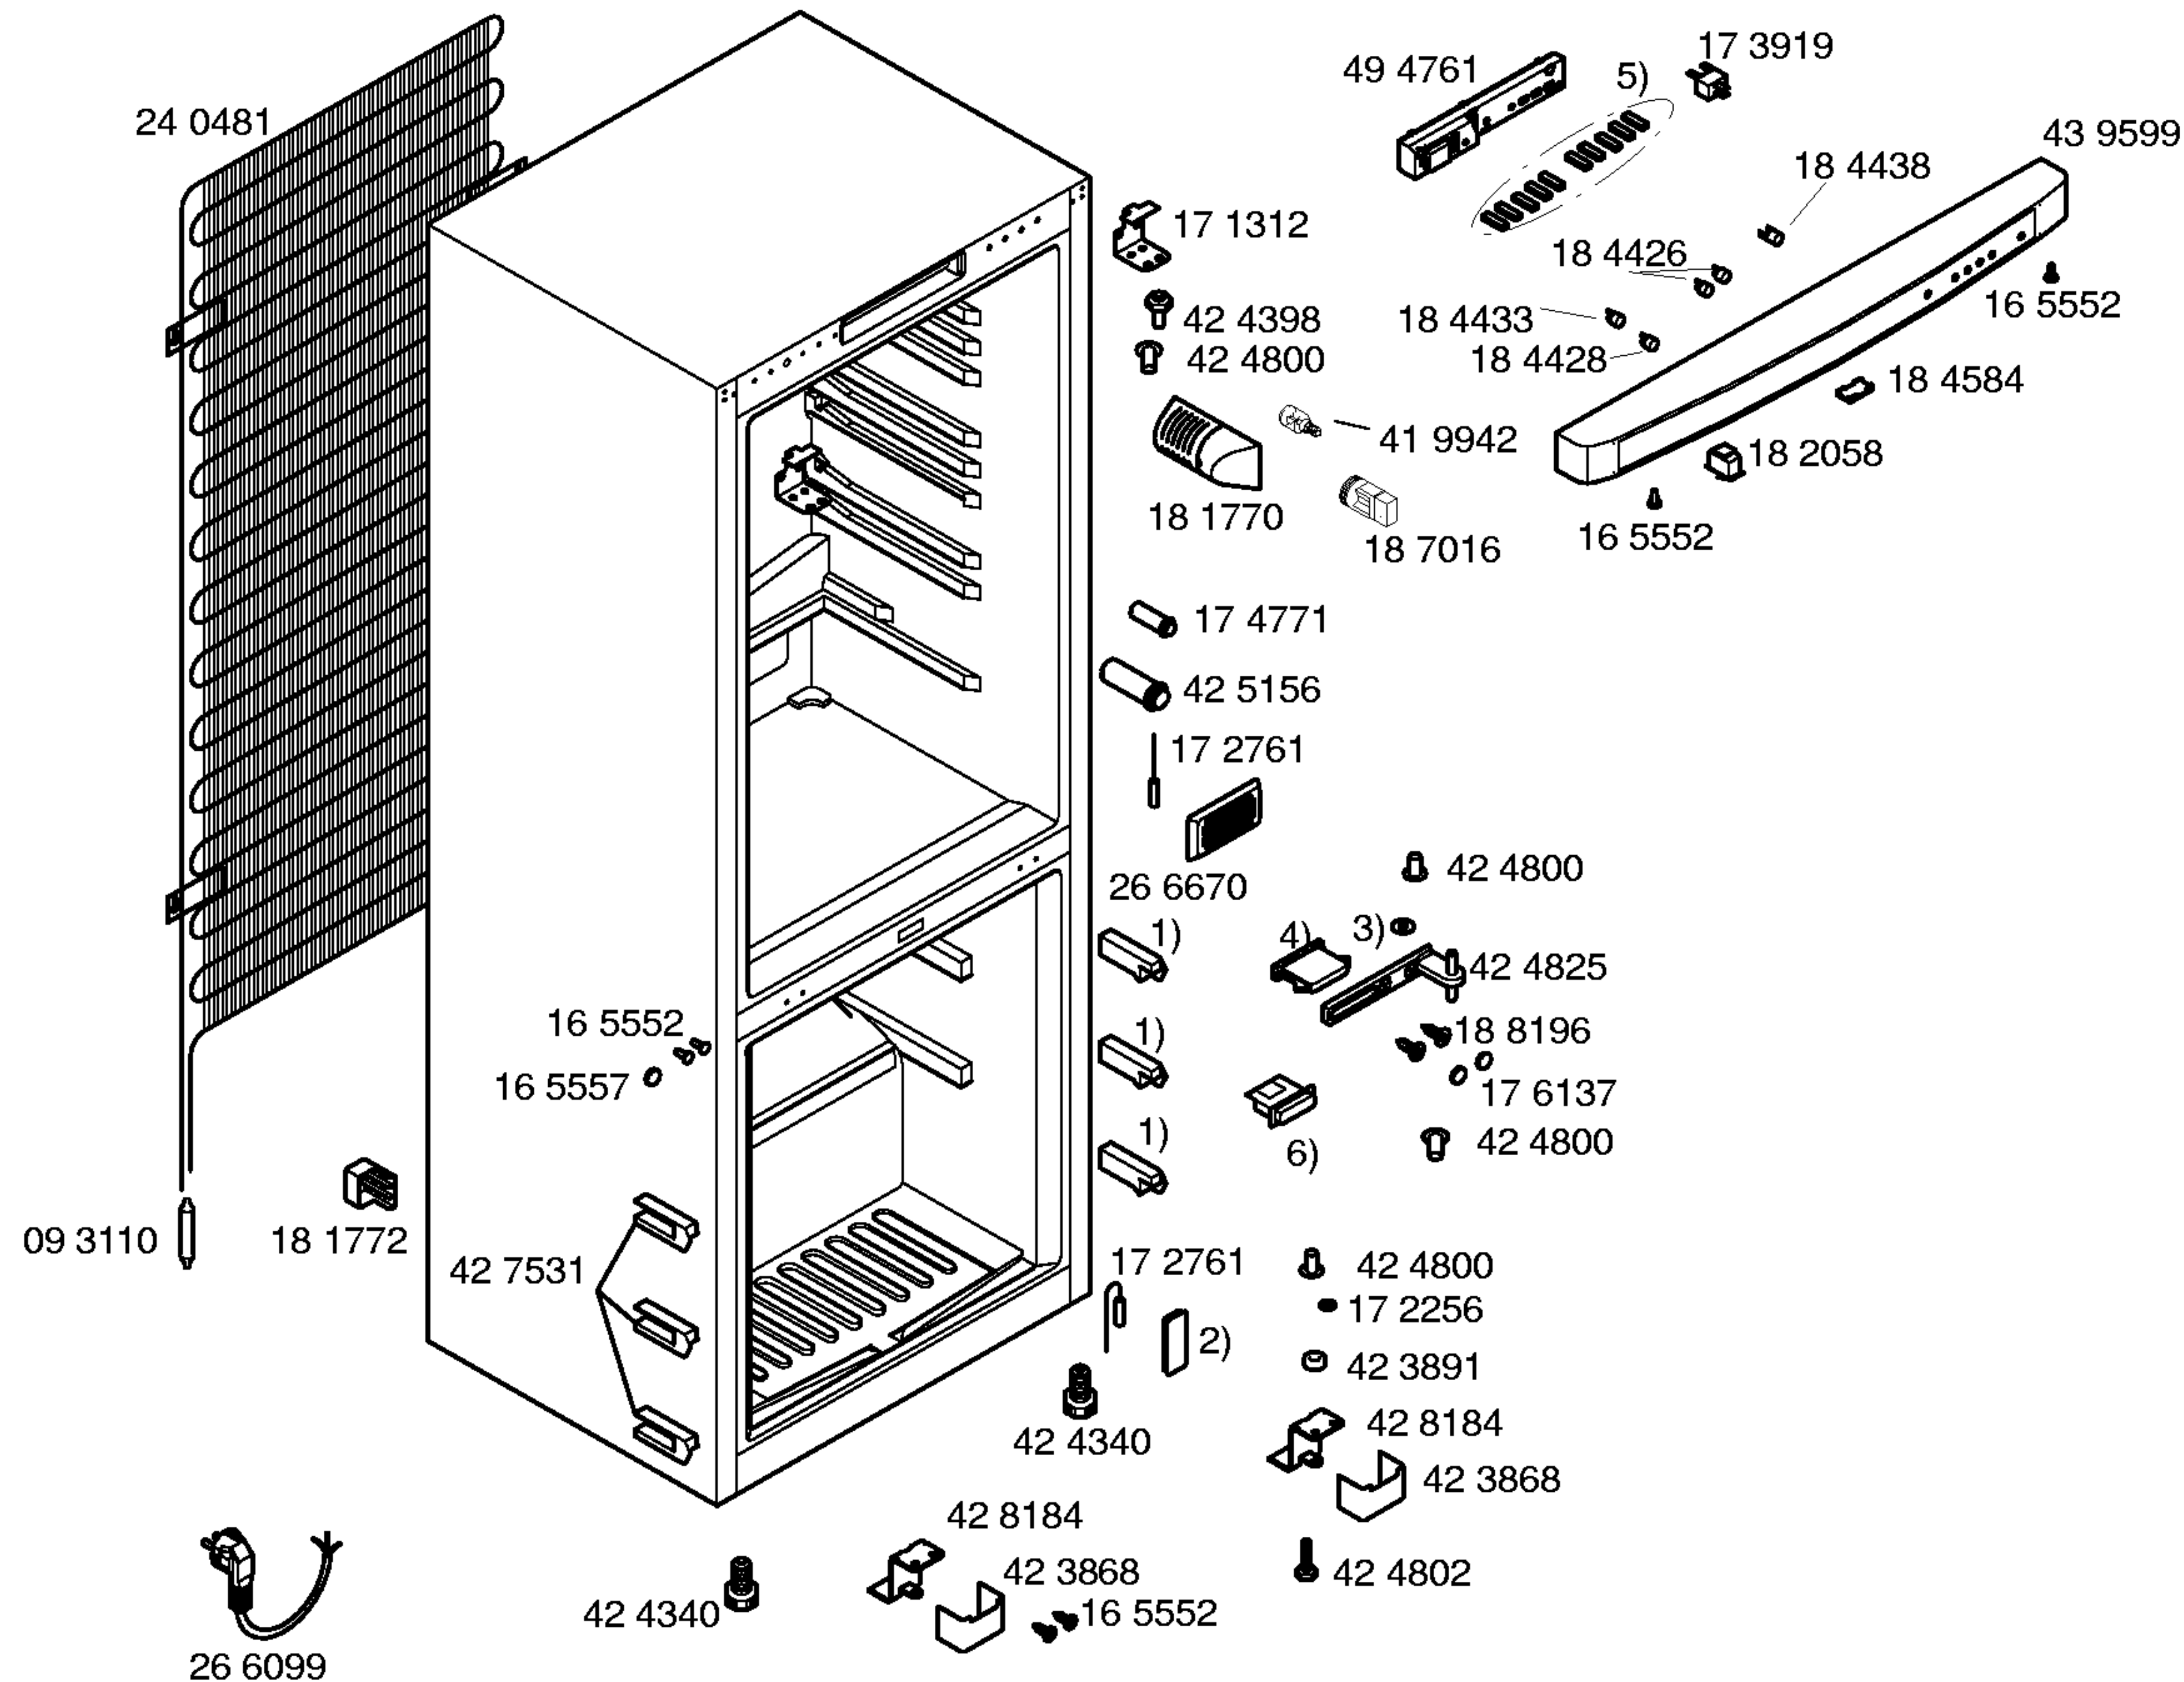

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
59 0991
(DE,GB,ES,PT,IT)

- 1) 17 2579
- 2) 17 2293
- 3) 17 2256
- 4) 41 8128
- 5) 18 4380
- 6) 41 7908

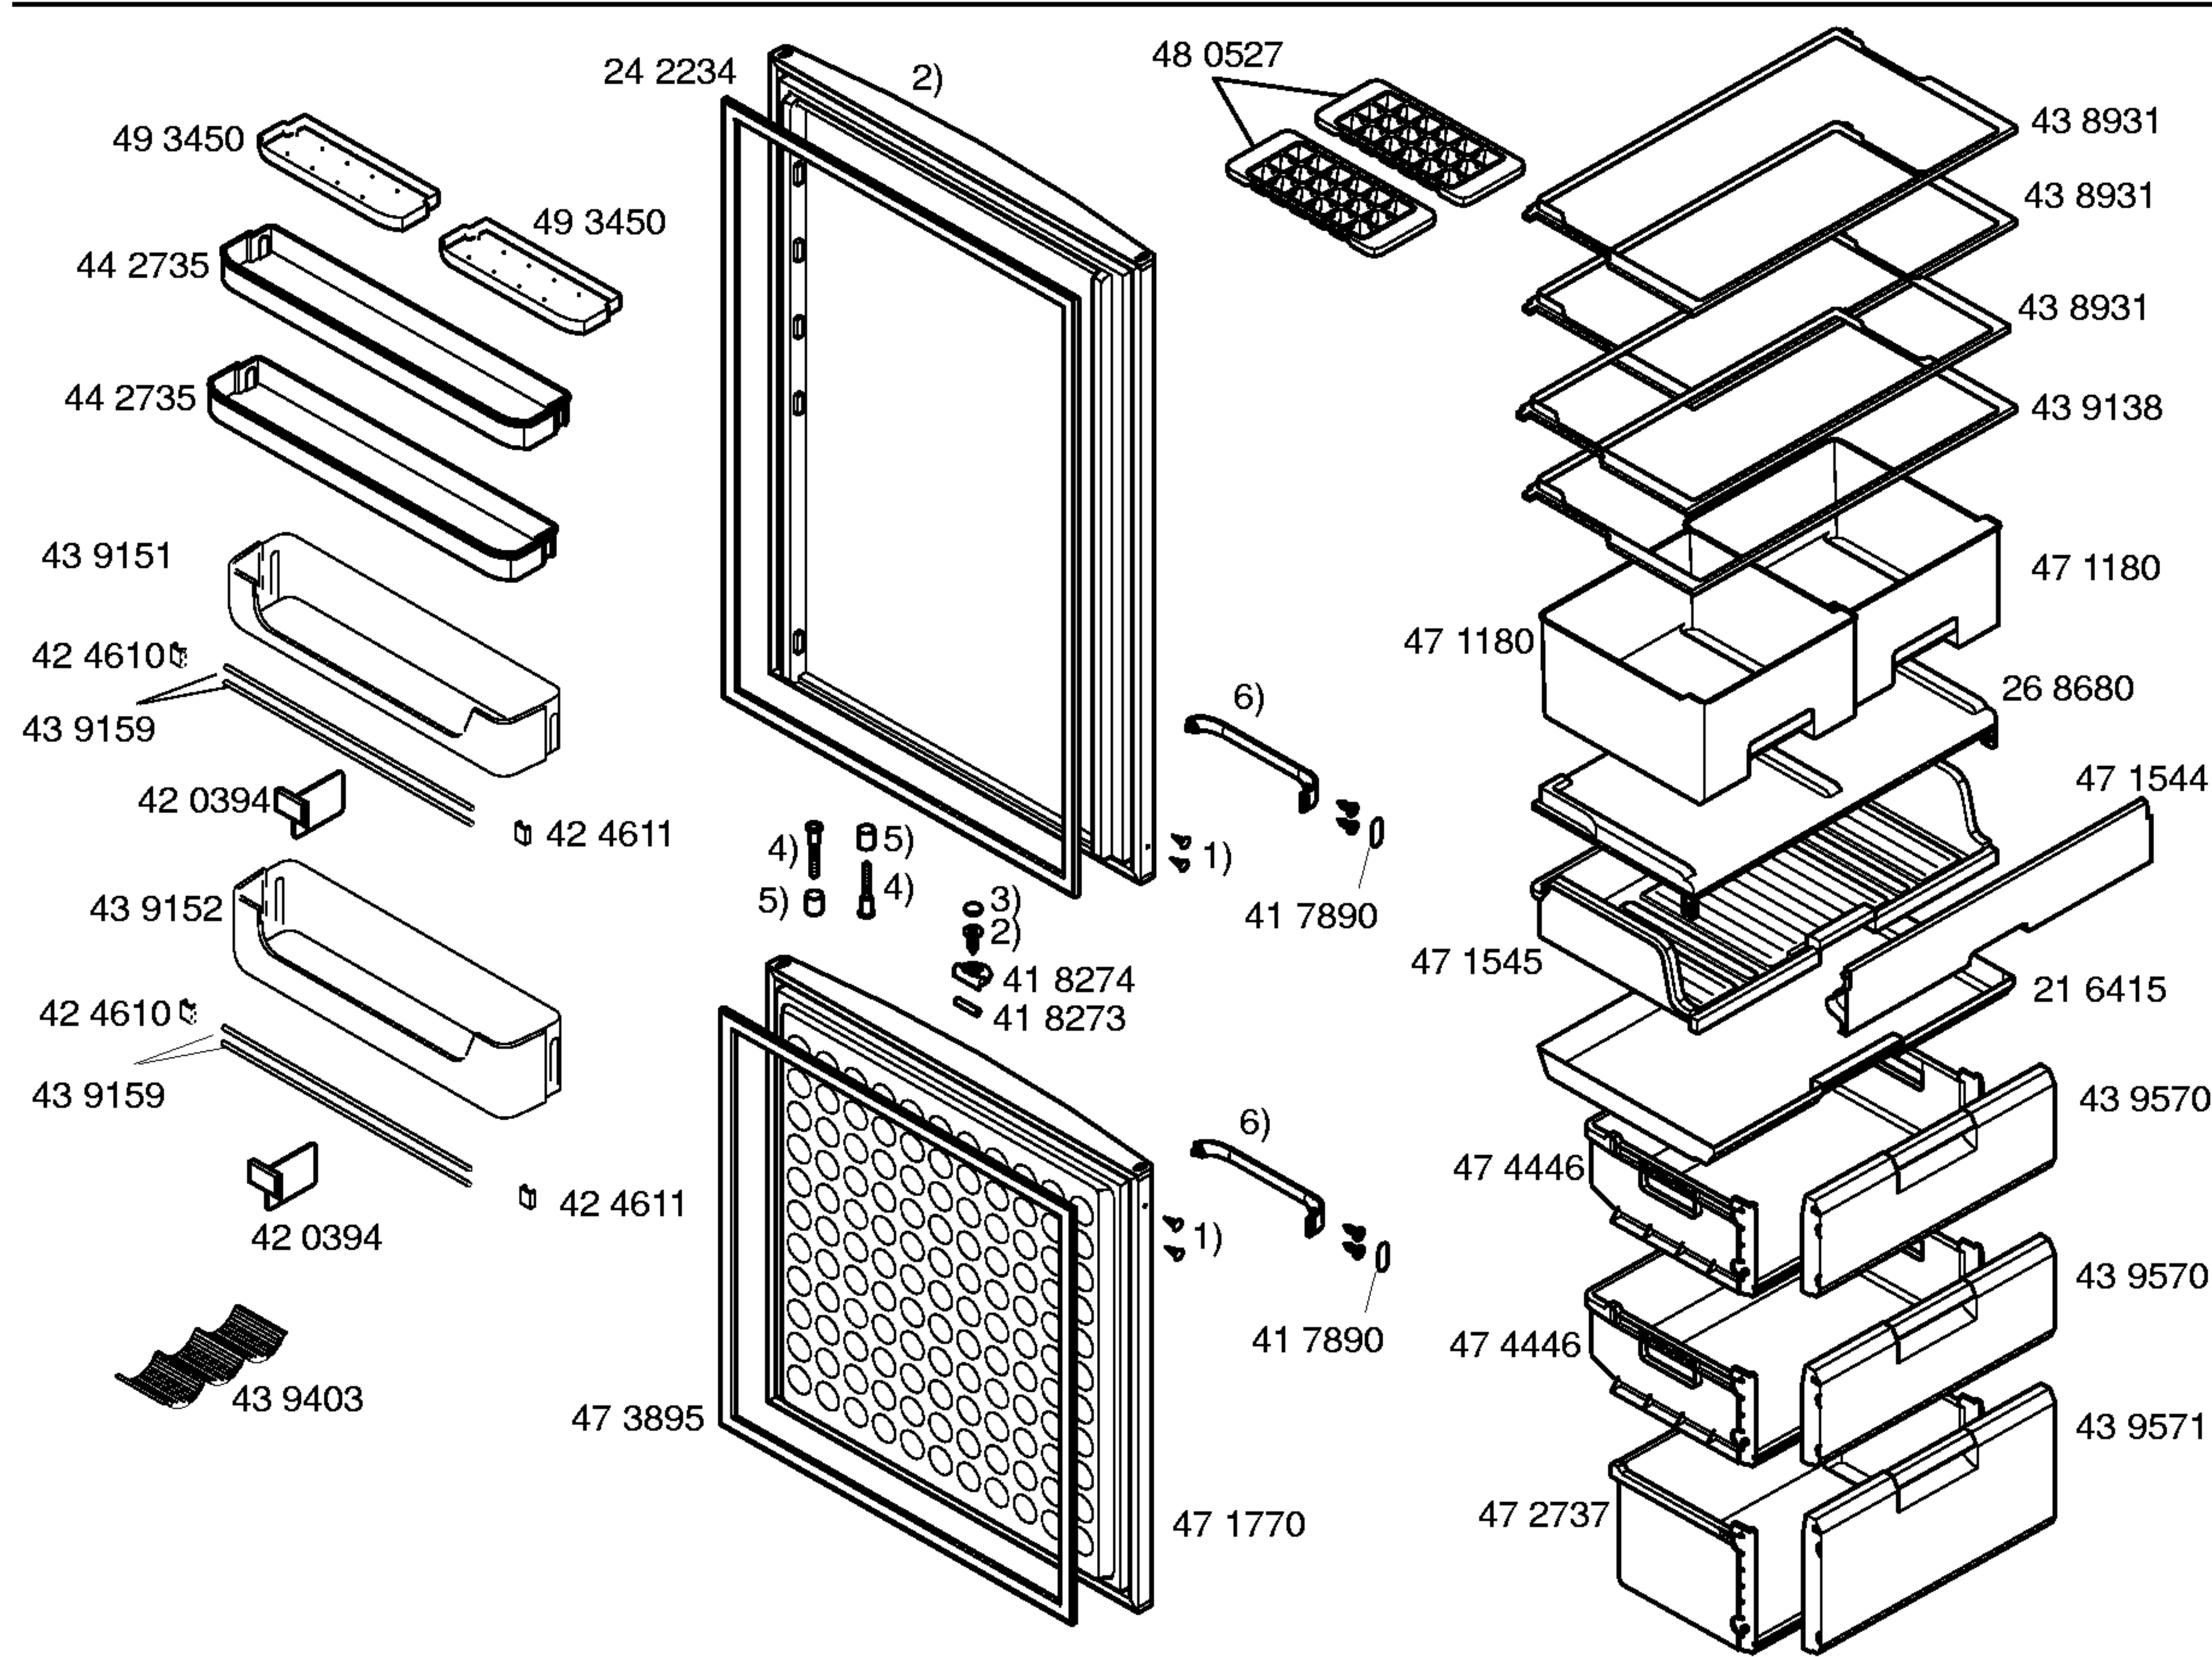



Mat. - Nr. - Konstante
3740

- 1) 06 0083
- 2) 47 6253
- 3) 16 5557
- 4) 18 8194
- 5) 18 8188
- 6) 36 9547

Mat. – Nr. – Konstante
3740

1) 43 2966

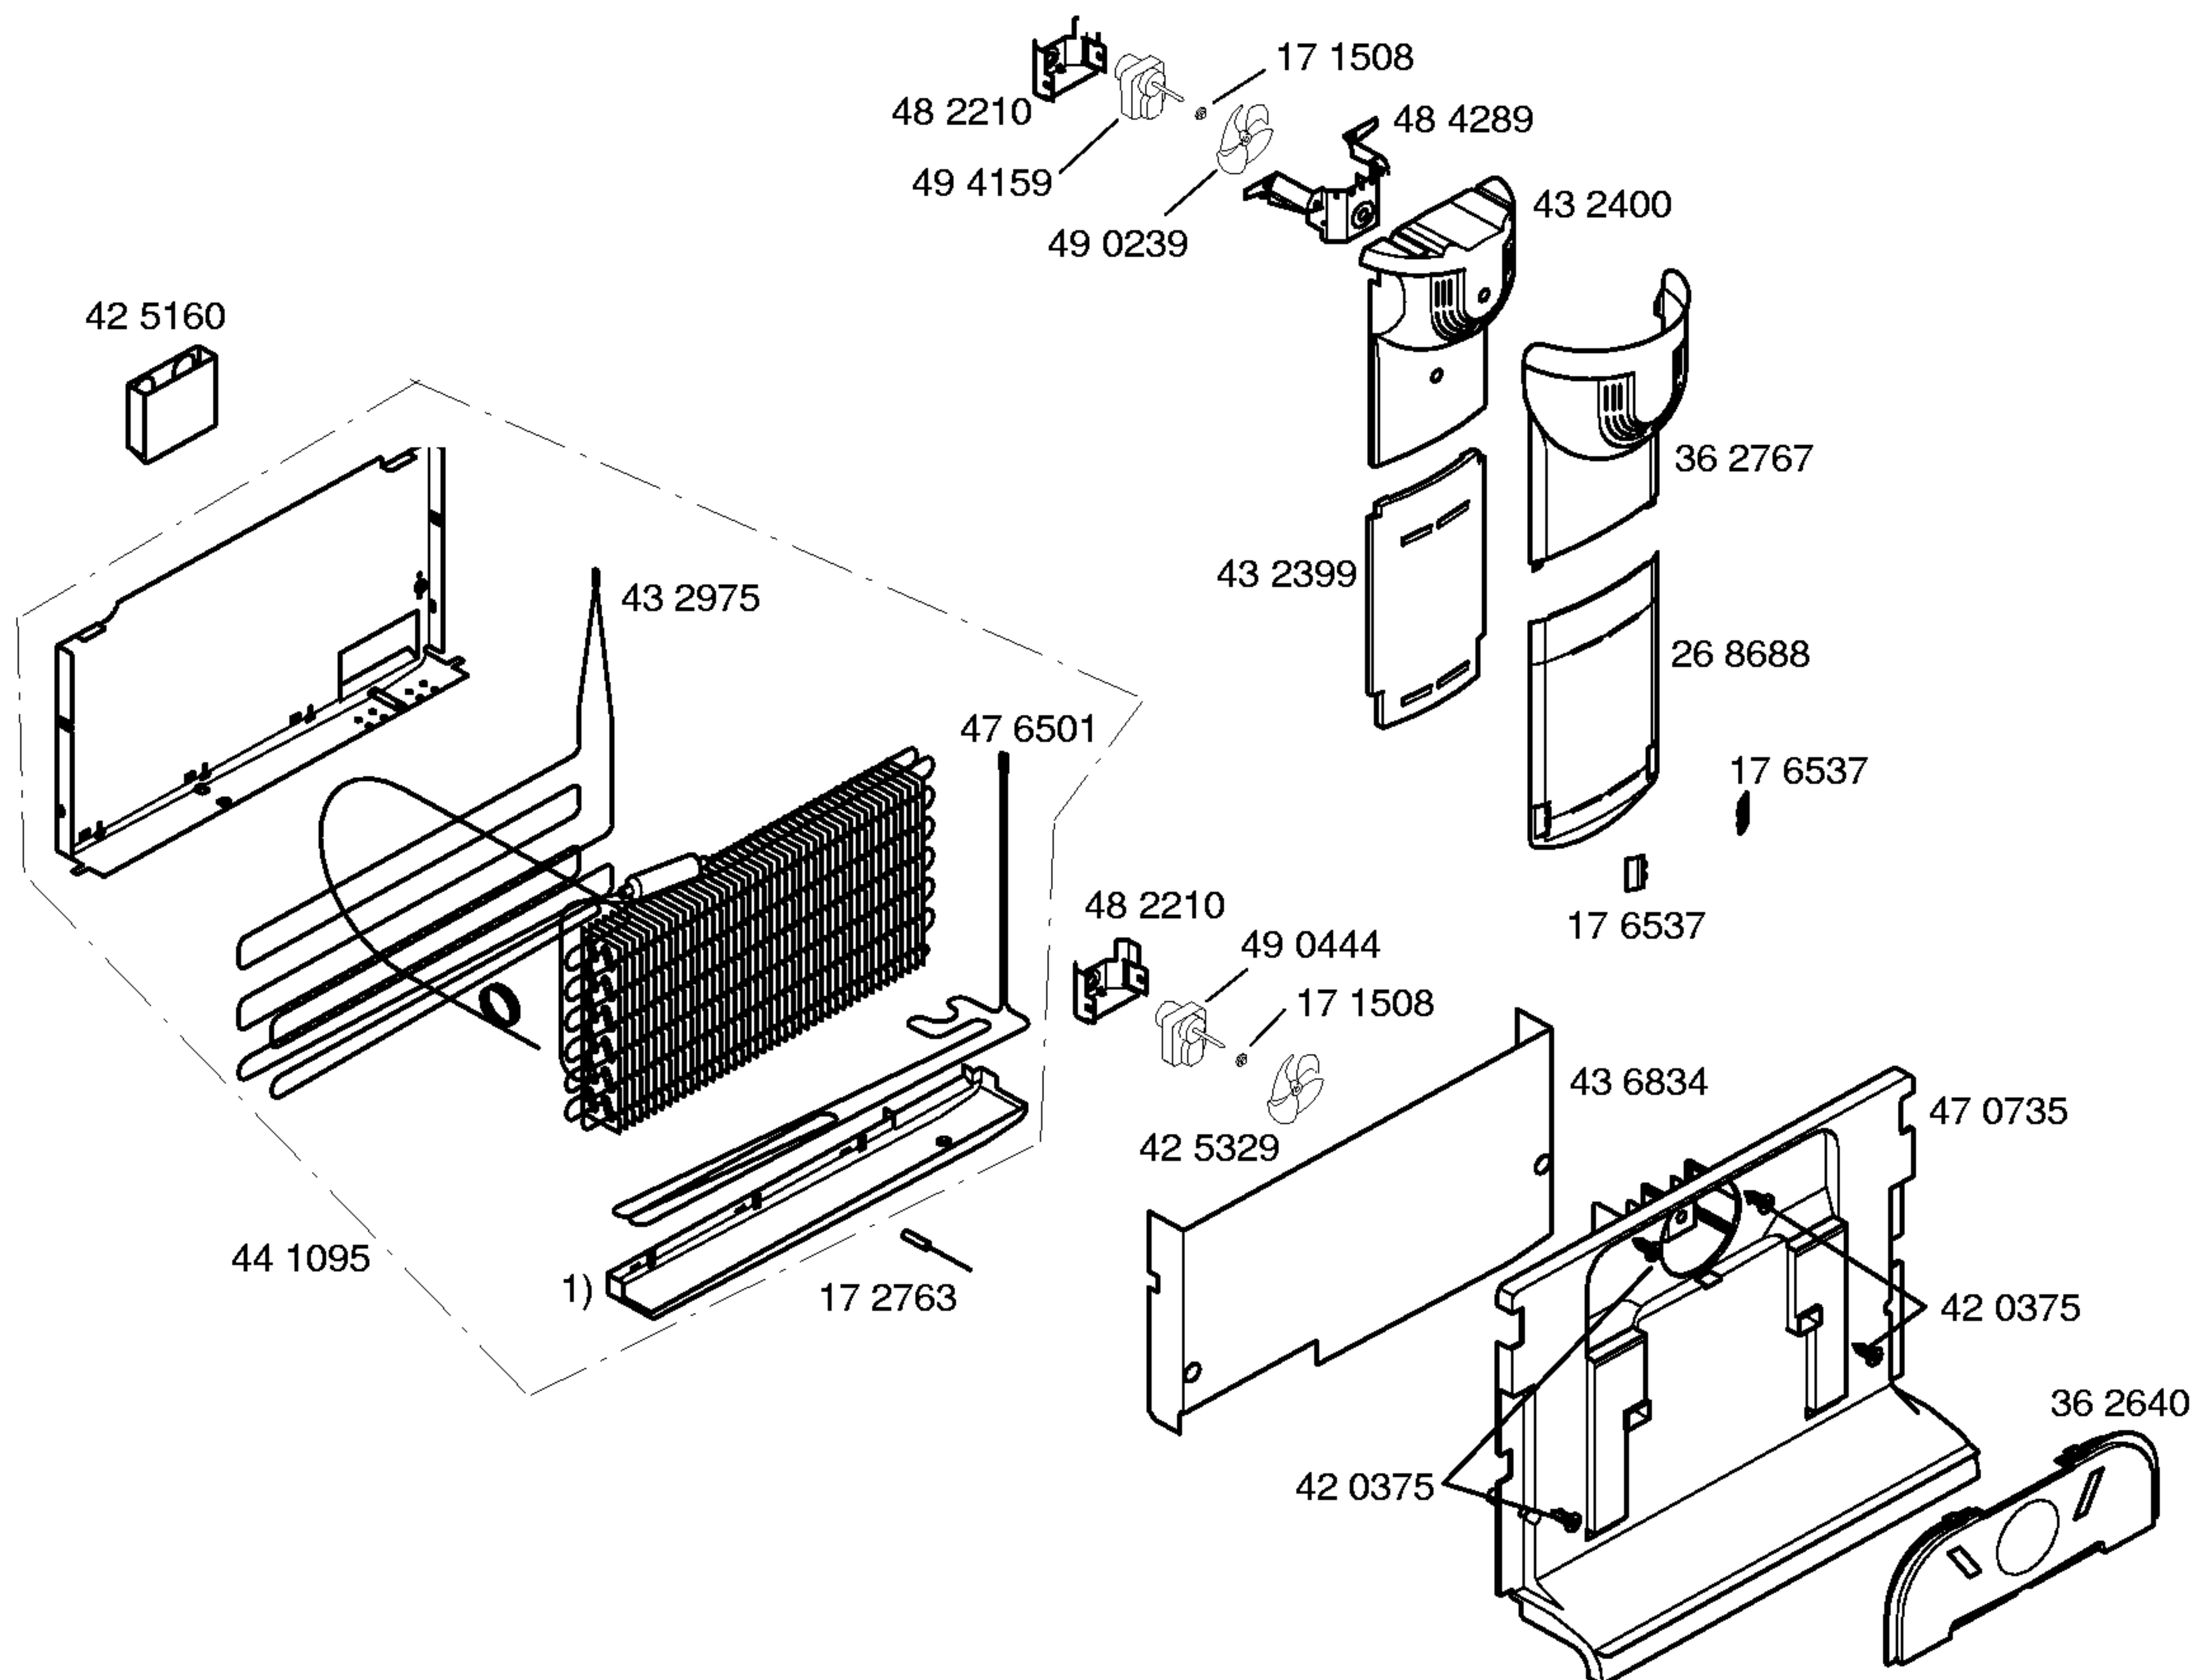

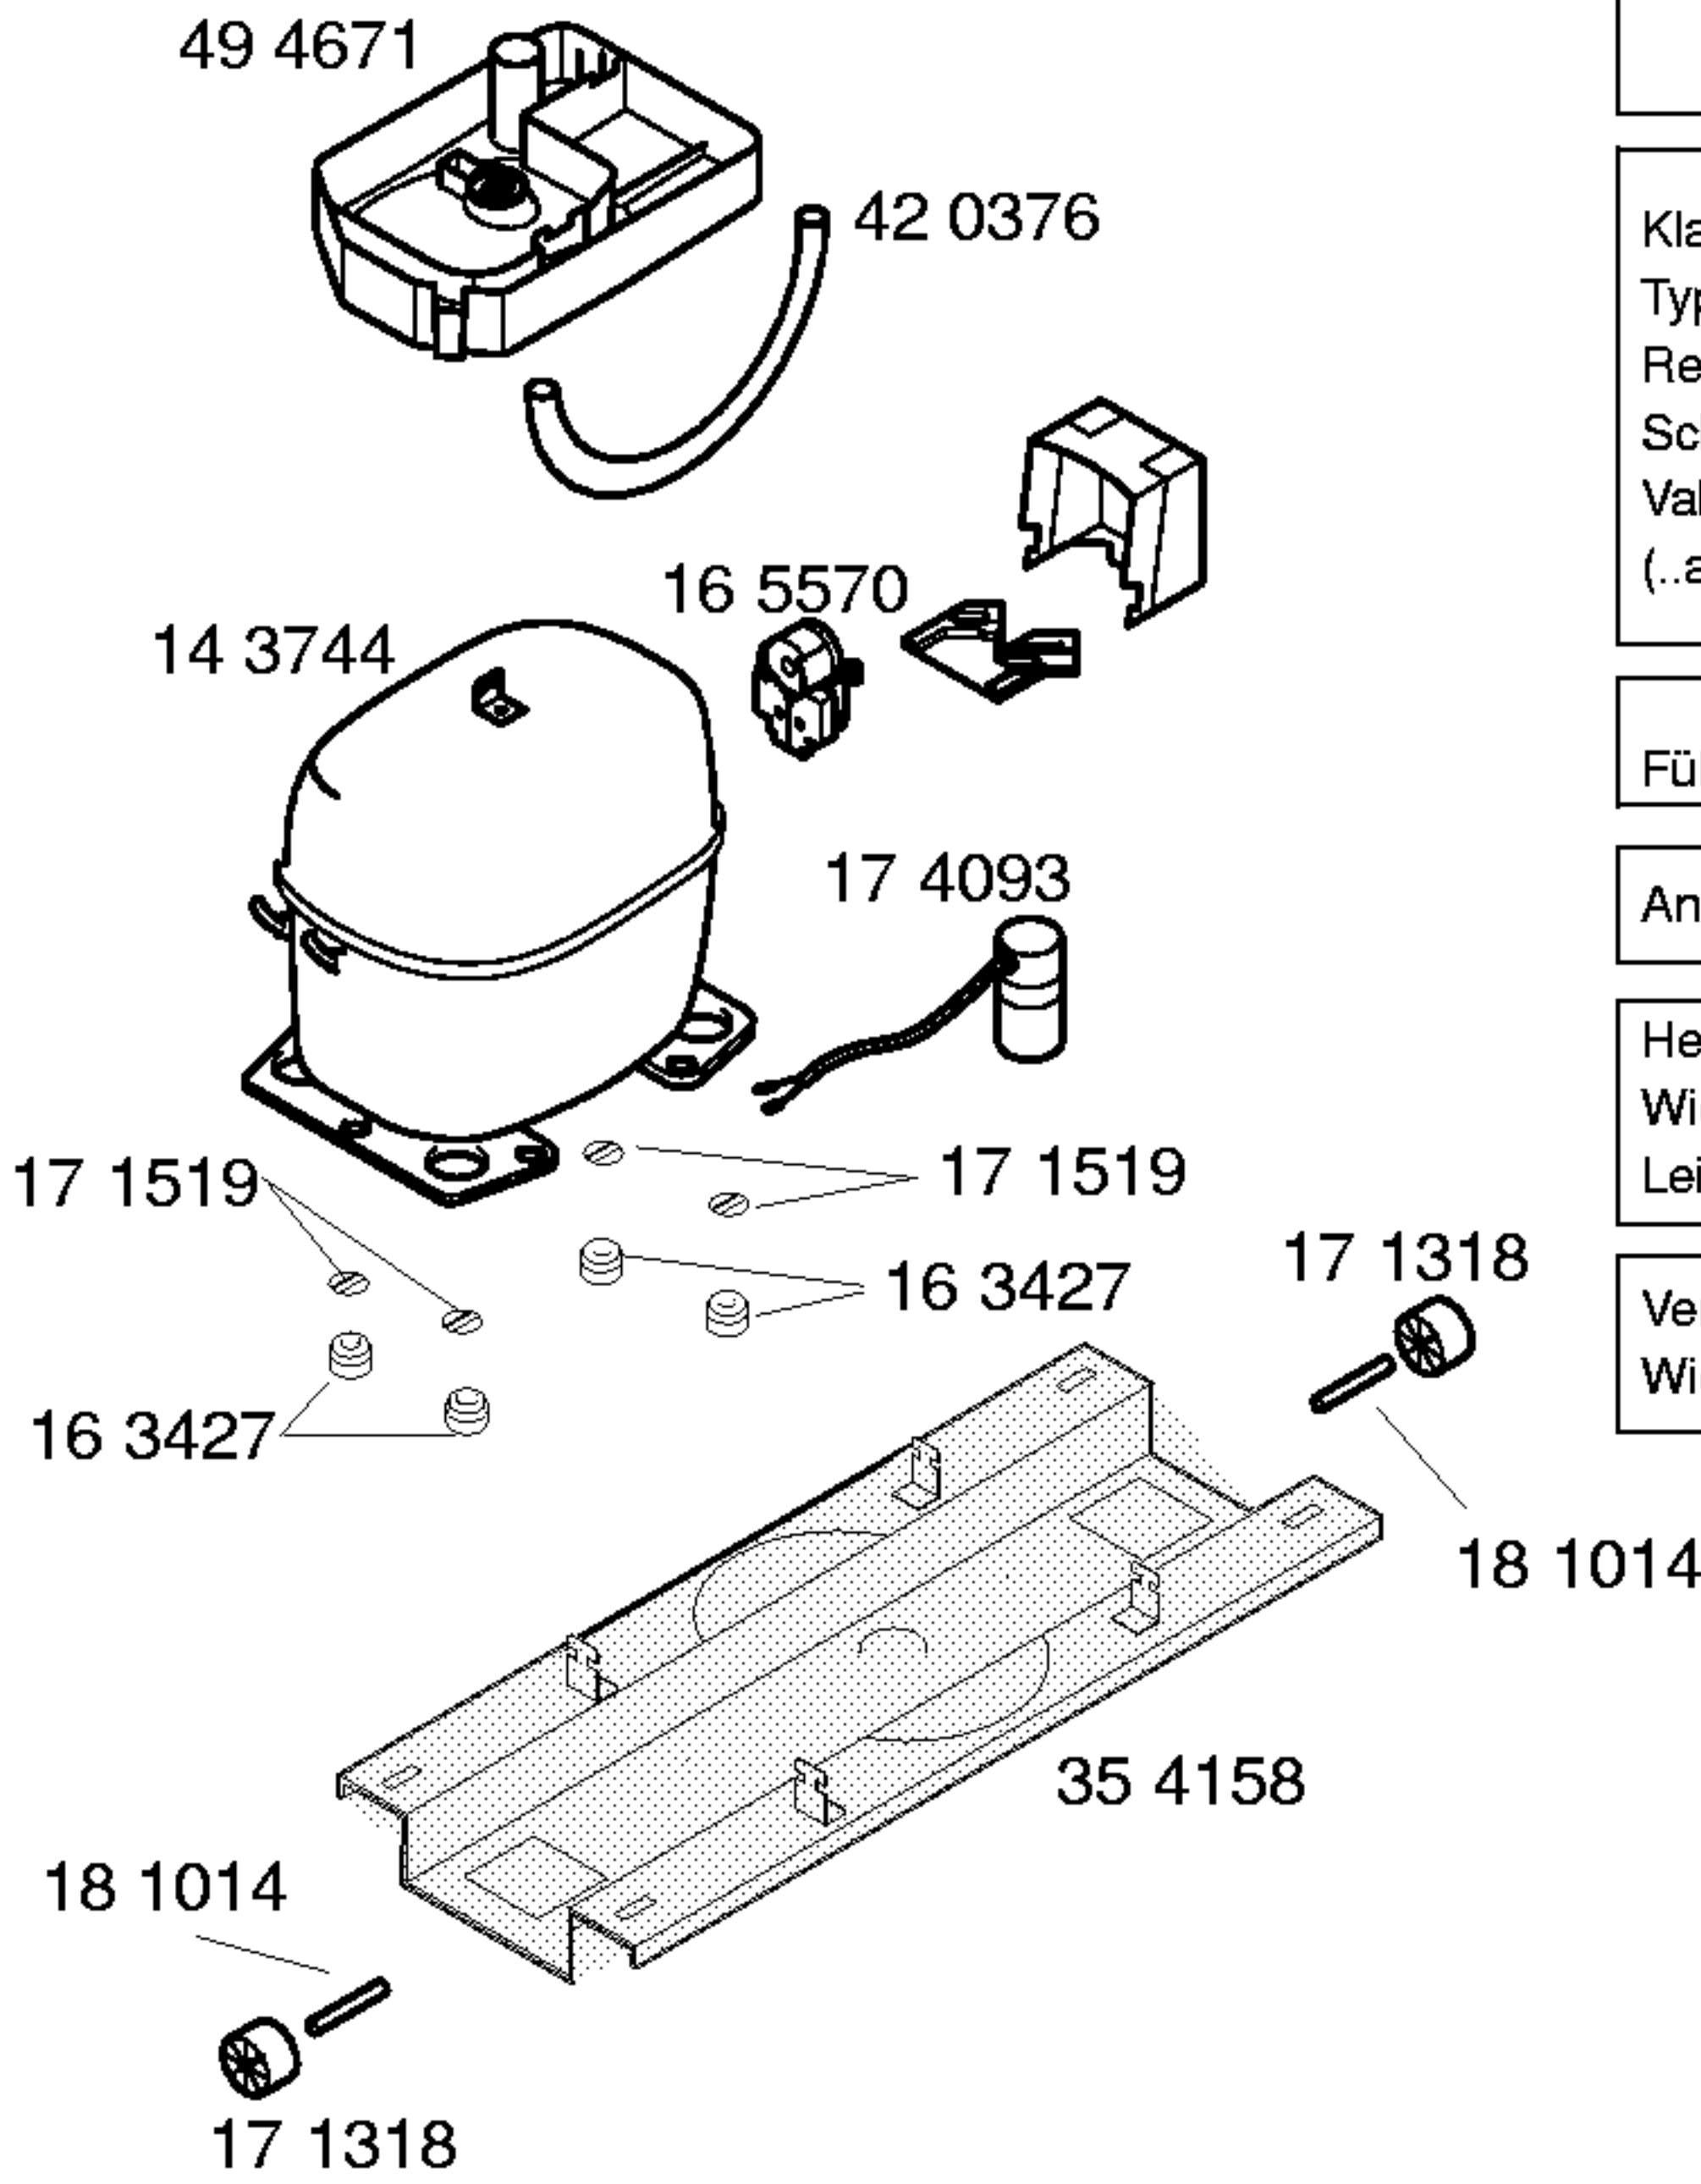

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NLX15 KTK		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g	45		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KΩ Leistung/Power/Puissance/Potencia W		81	4
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KΩ		Verdampfer	

Mat. – Nr. – Konstante
3740