



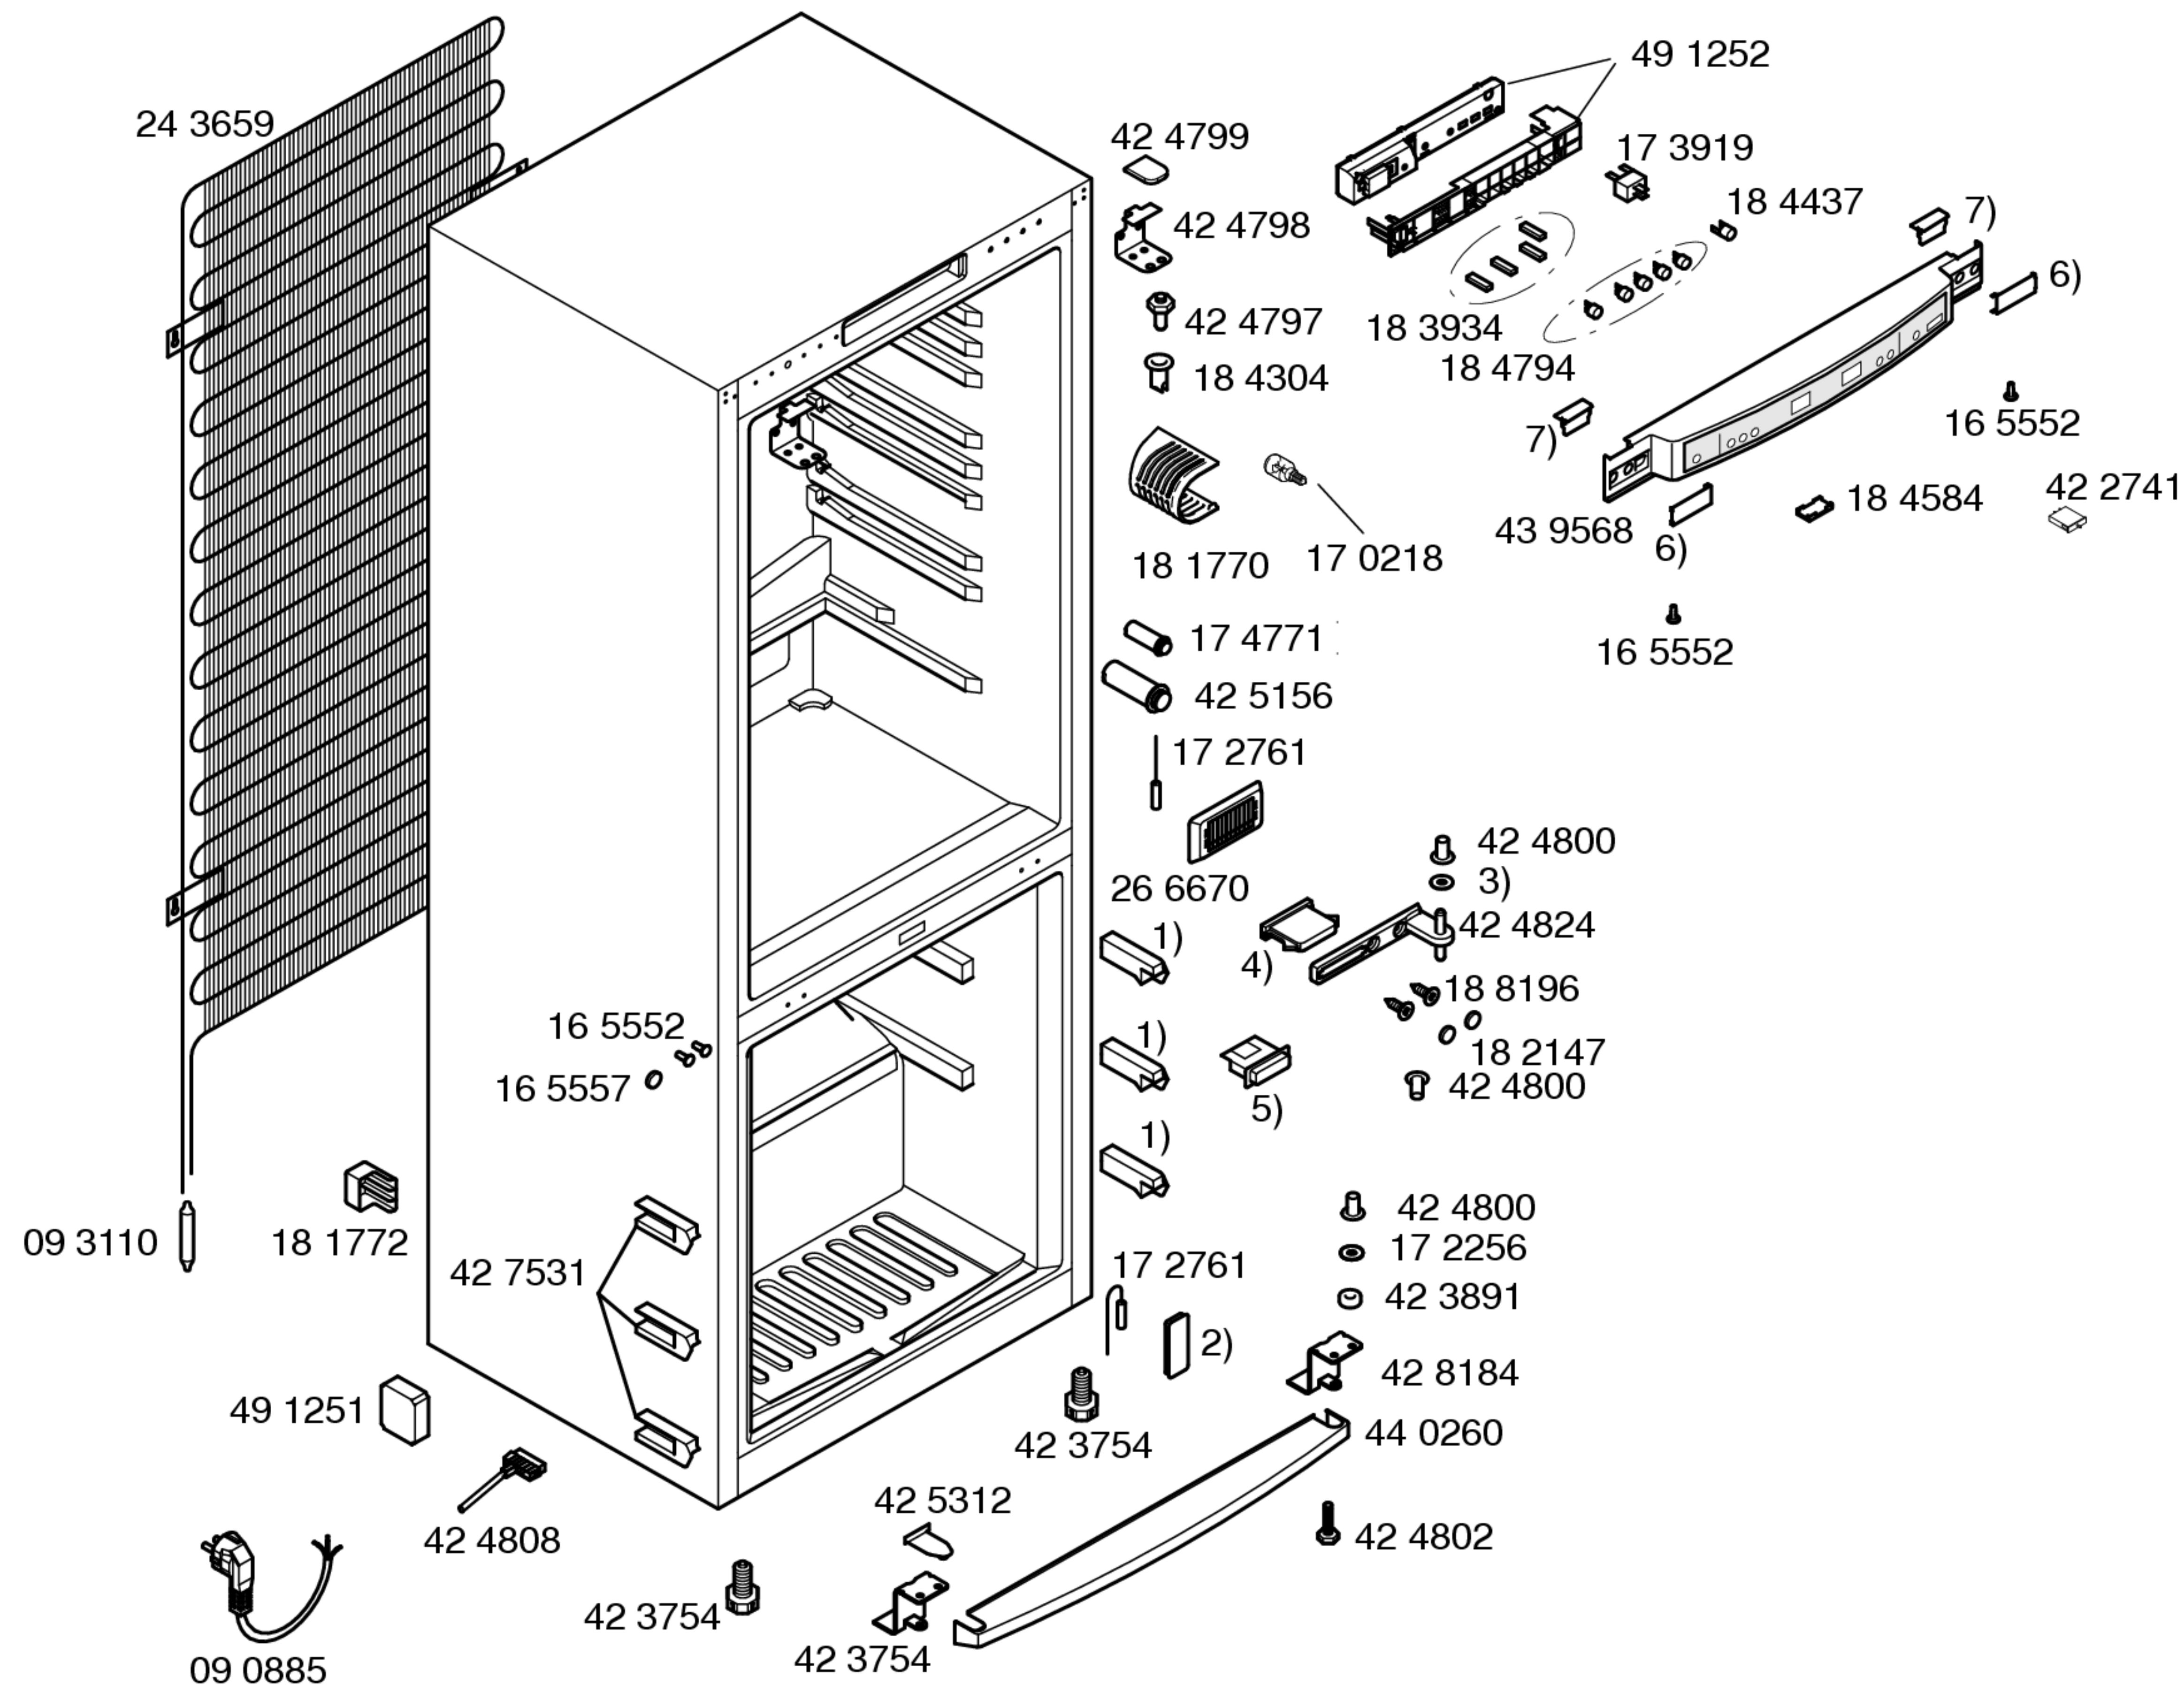

Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
69 3531
(DE,GB,ES,PT,IT)

- 1) 42 7532
- 2) 17 2293
- 3) 17 2256
- 4) 41 8128
- 5) 41 7908
- 6) 42 0864
- 7) 42 0867
- 8) 42 0866

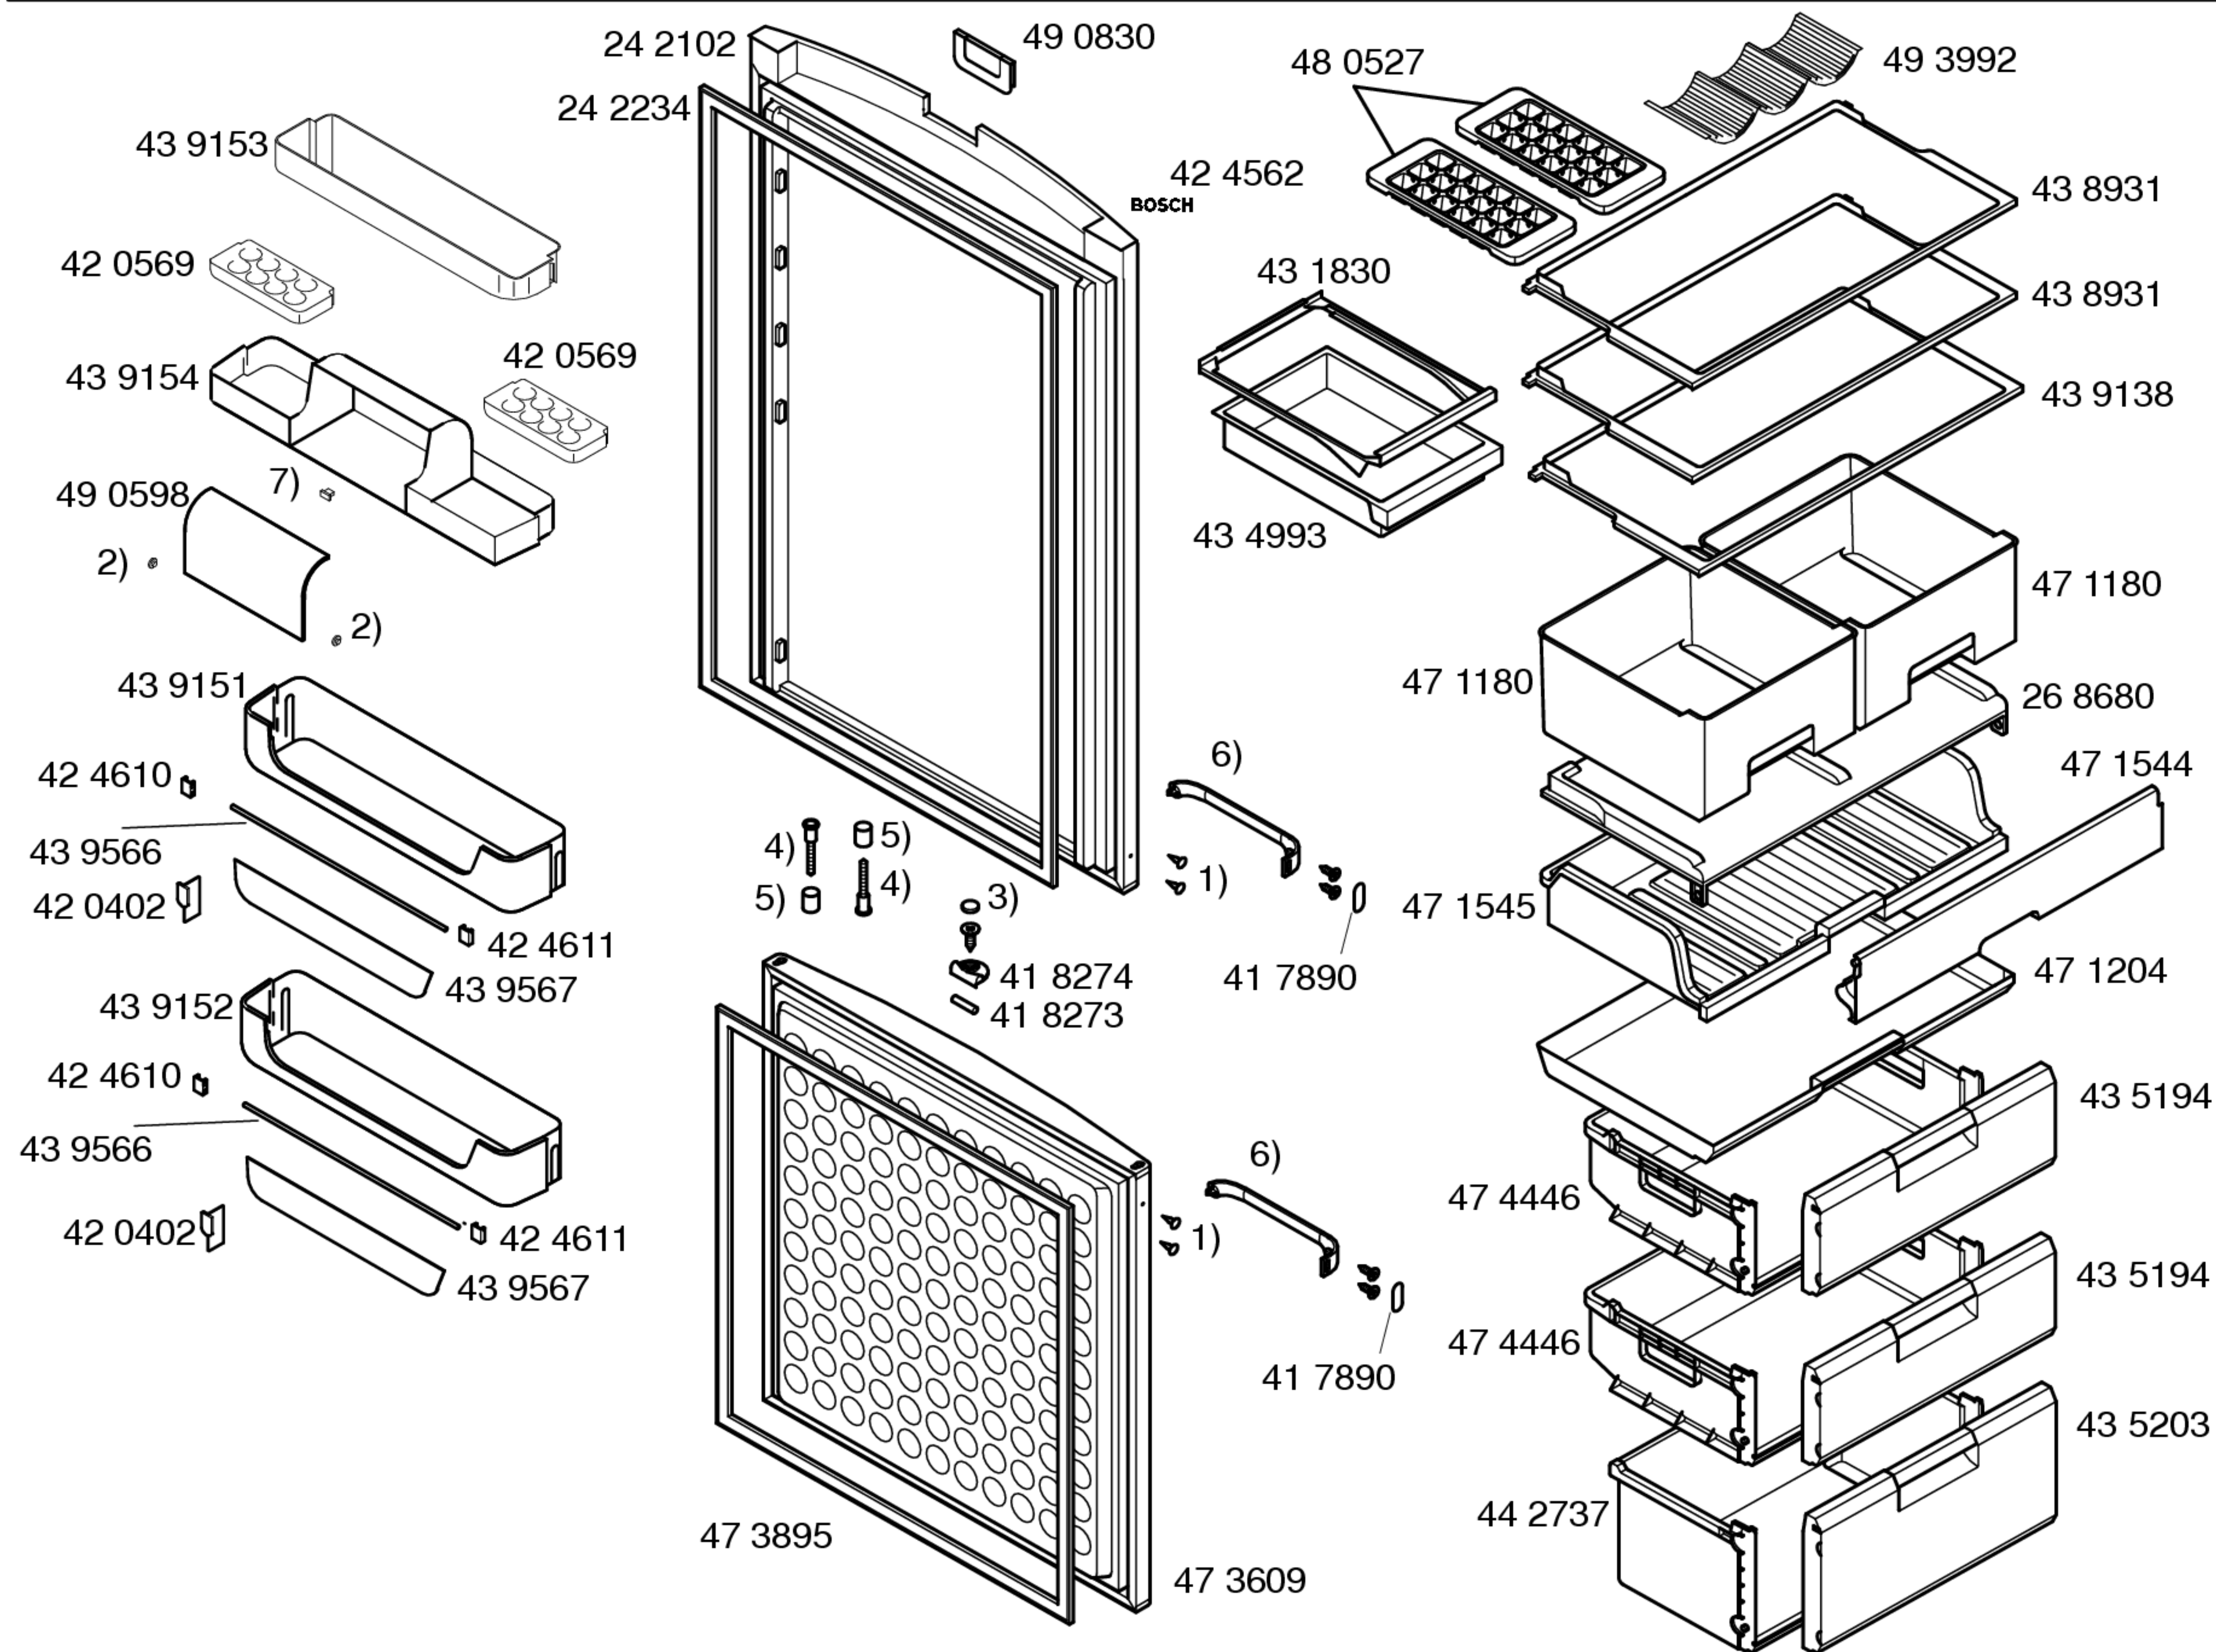


Mat. – Nr. – Konstante
3740

- 1) 06 0083
- 2) 42 0568
- 3) 16 5557
- 4) 18 8194
- 5) 18 8188
- 6) 49 0831
- 7) 42 0751

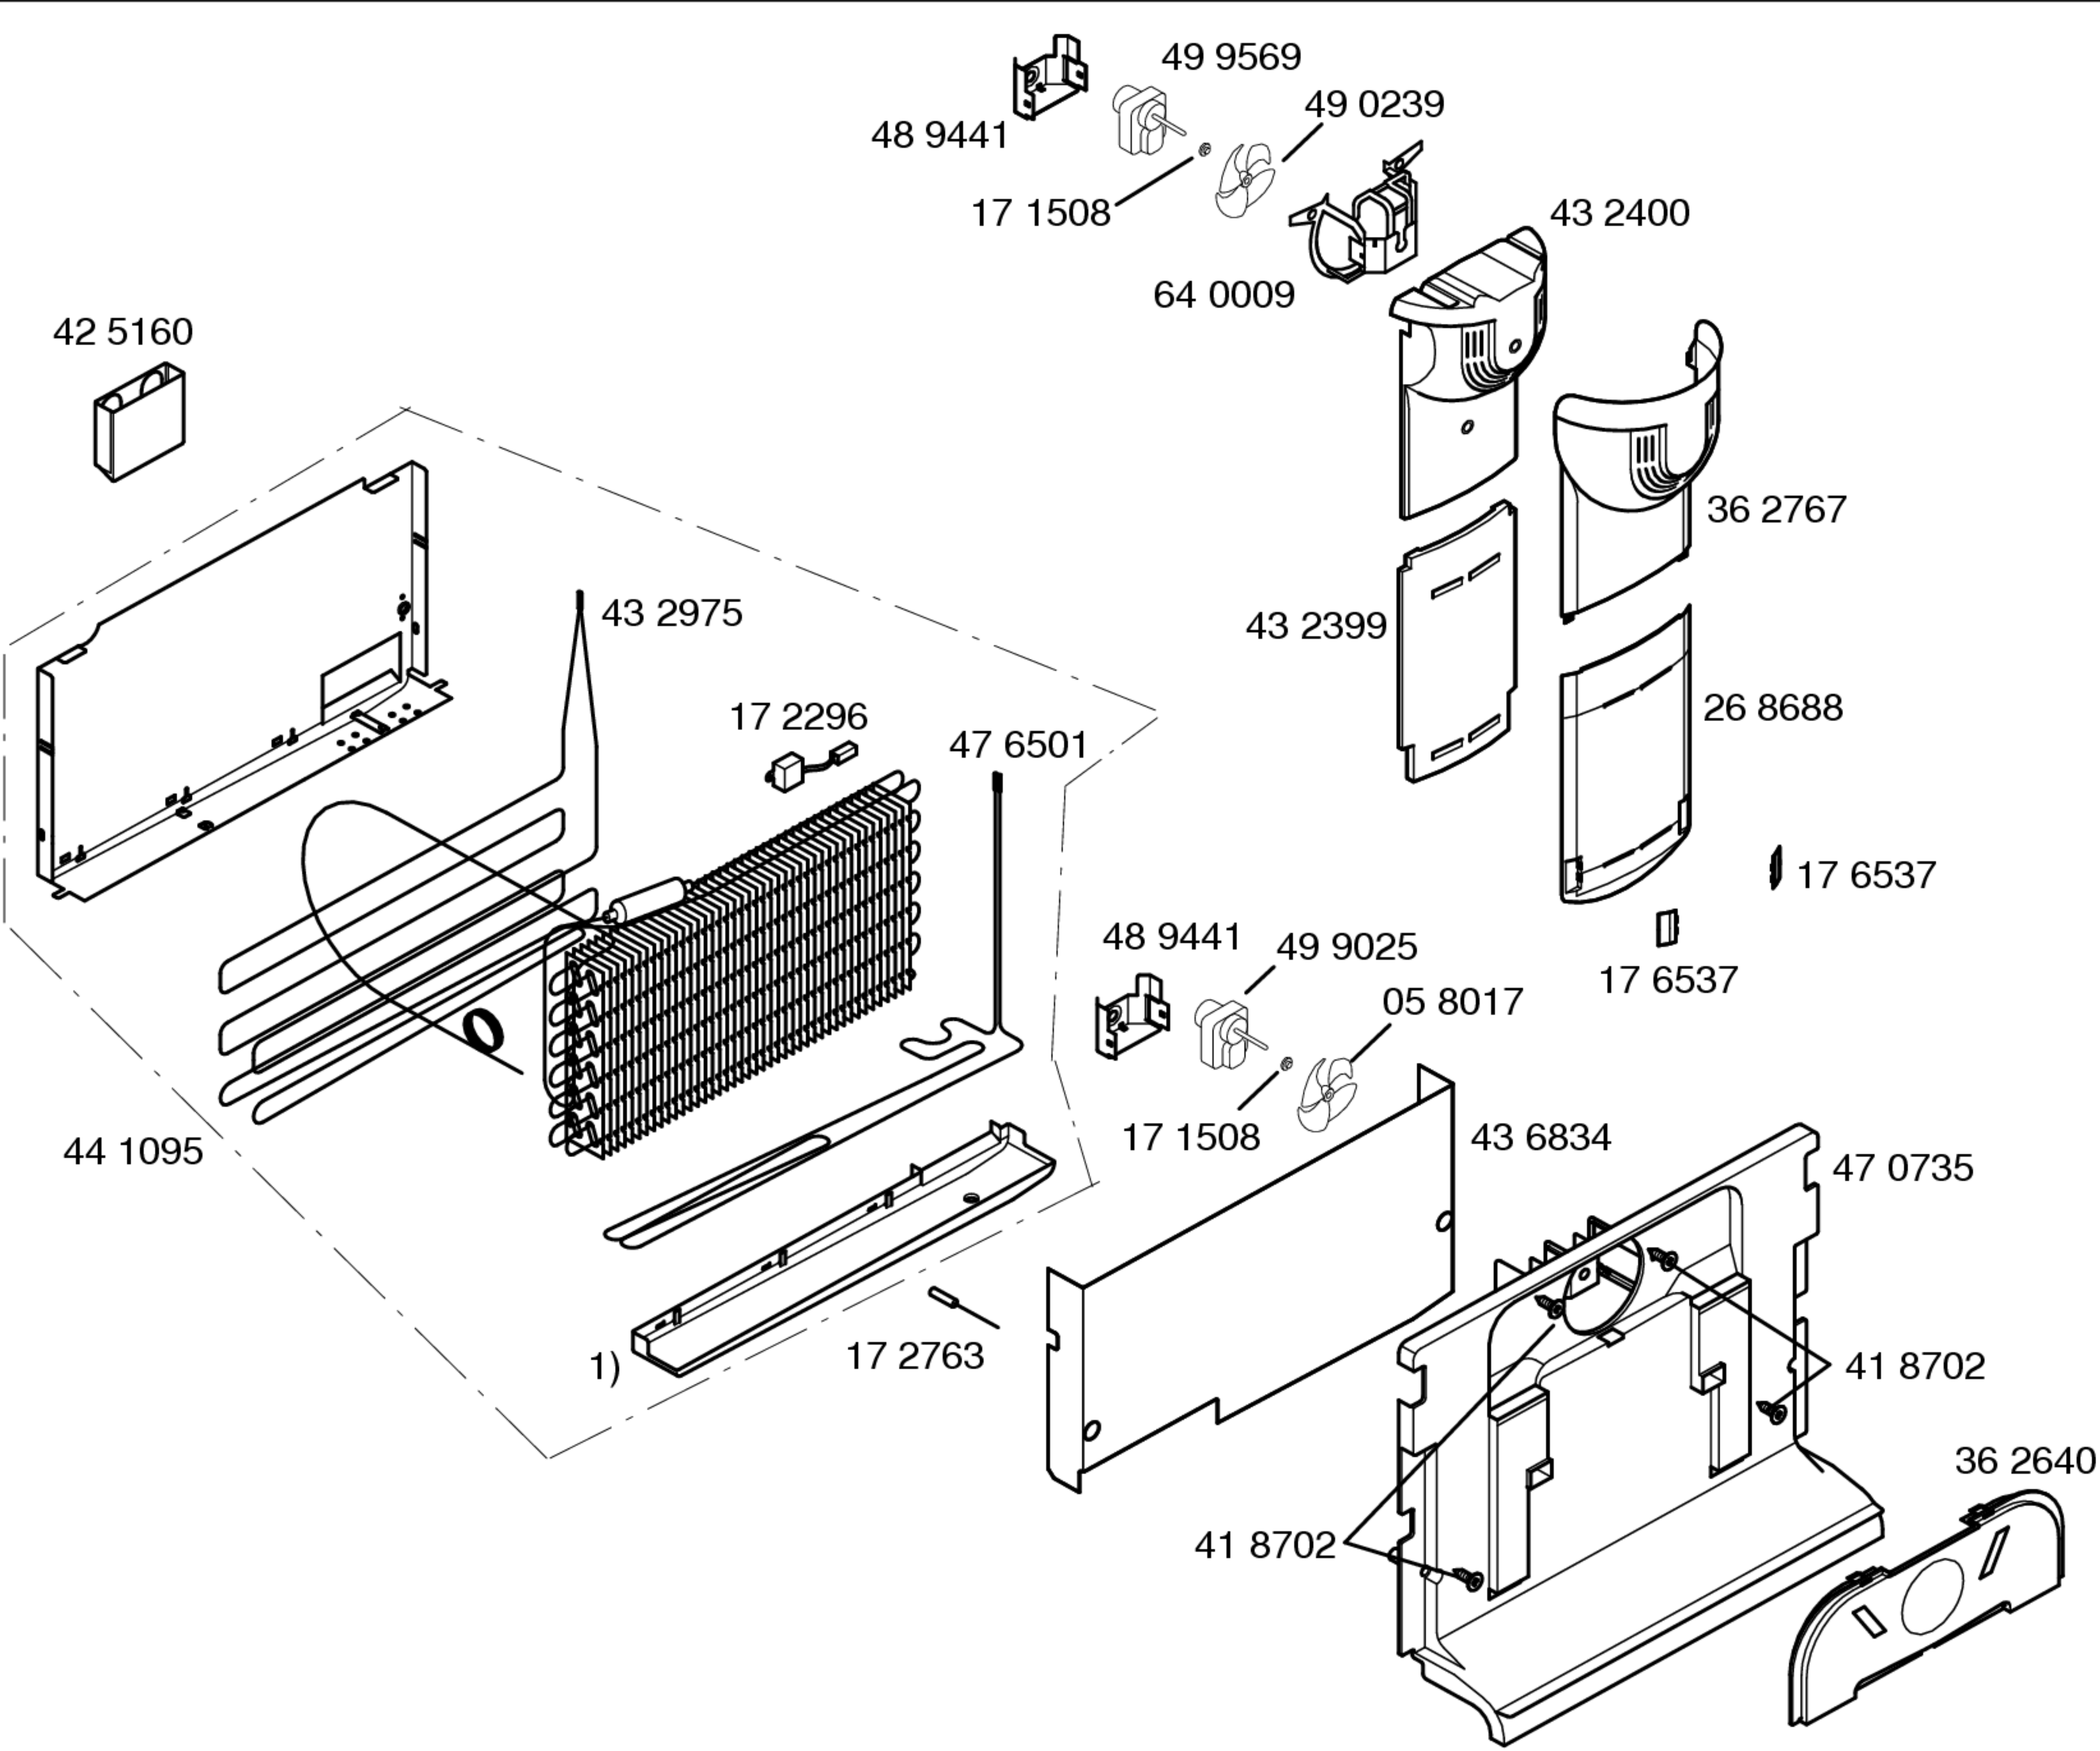

Mat. – Nr. – Konstante
3740

1) 43 2966

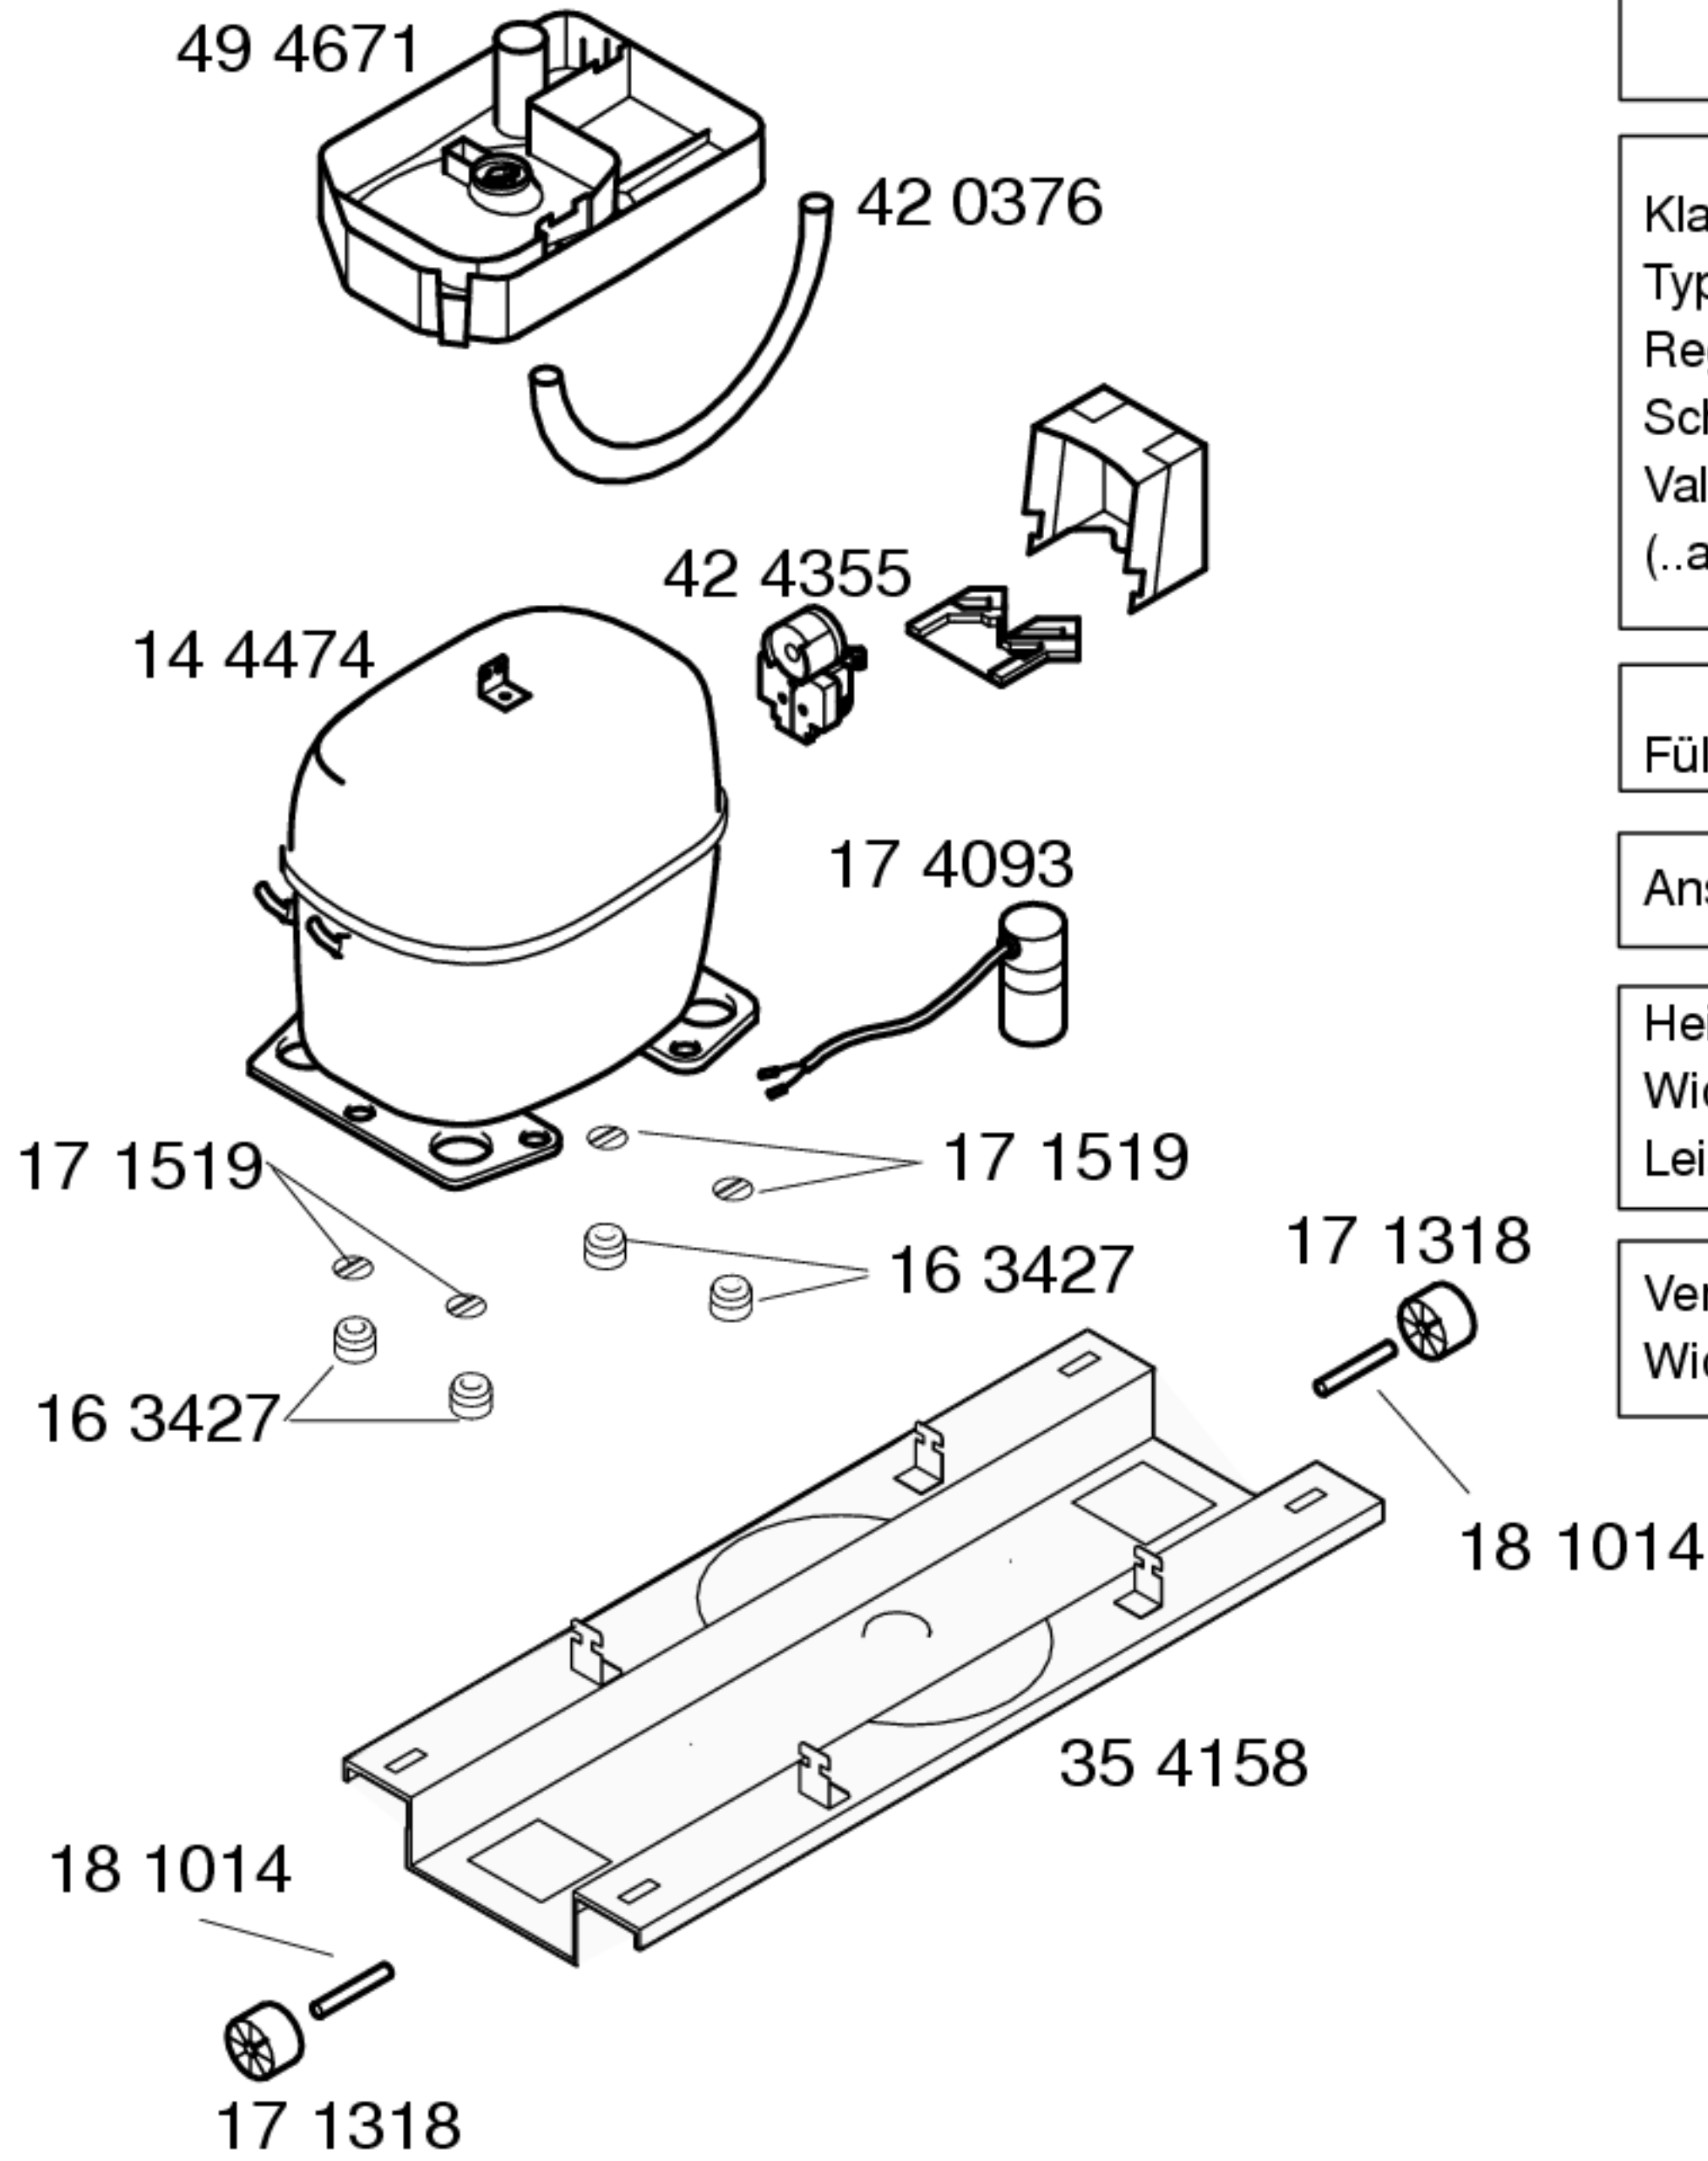

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NLX11 KK2		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g	49		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	KΩ W	Verdampfer 267	Ablaufrinne 81
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	KΩ		

Mat. – Nr. – Konstante
3740