



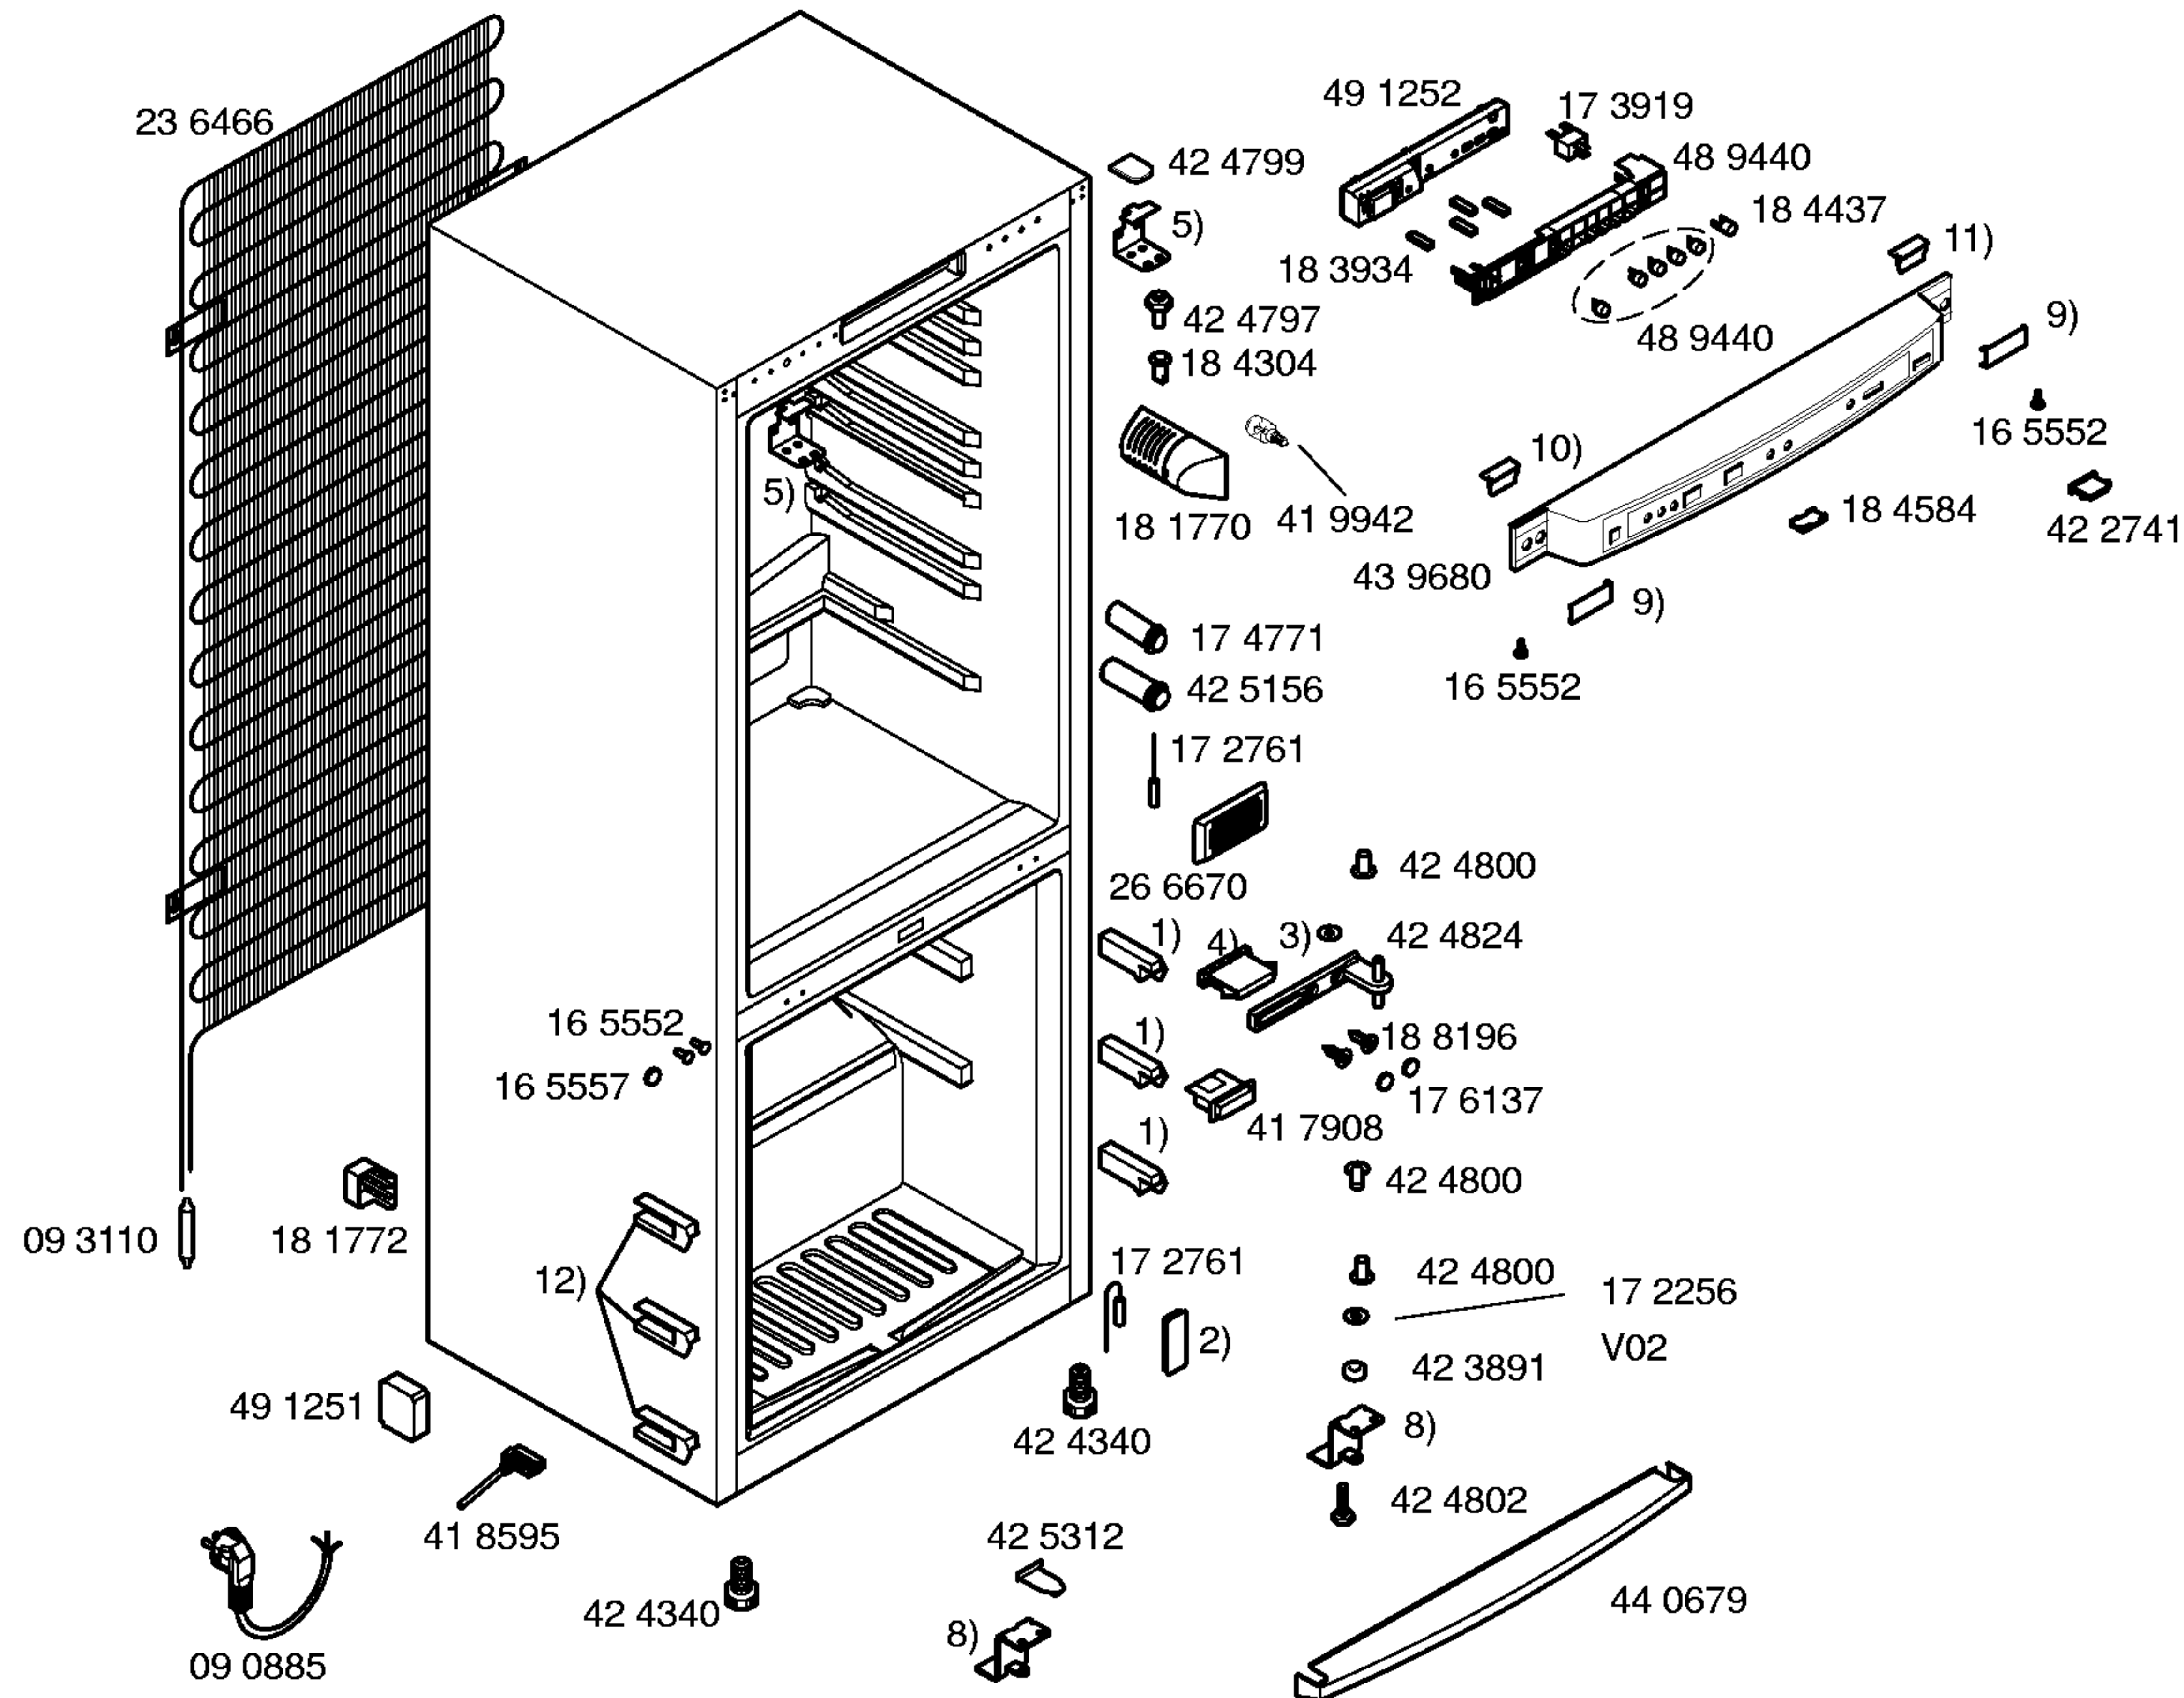

Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
59 1267
(DE,GB,ES,PT,IT)

- 1) 17 2579
V01
42 7532
V02
- 2) 17 2293
- 3) 17 2256
- 4) 41 8128
- 5) 42 4798
- 6) 41 7908
- 7) 42 4799
- 8) 42 4801
V01
42 8184
V02
- 9) 42 0864
- 10) 42 0866
- 11) 42 0867
- 12) 17 2578
V01
42 7531
V02

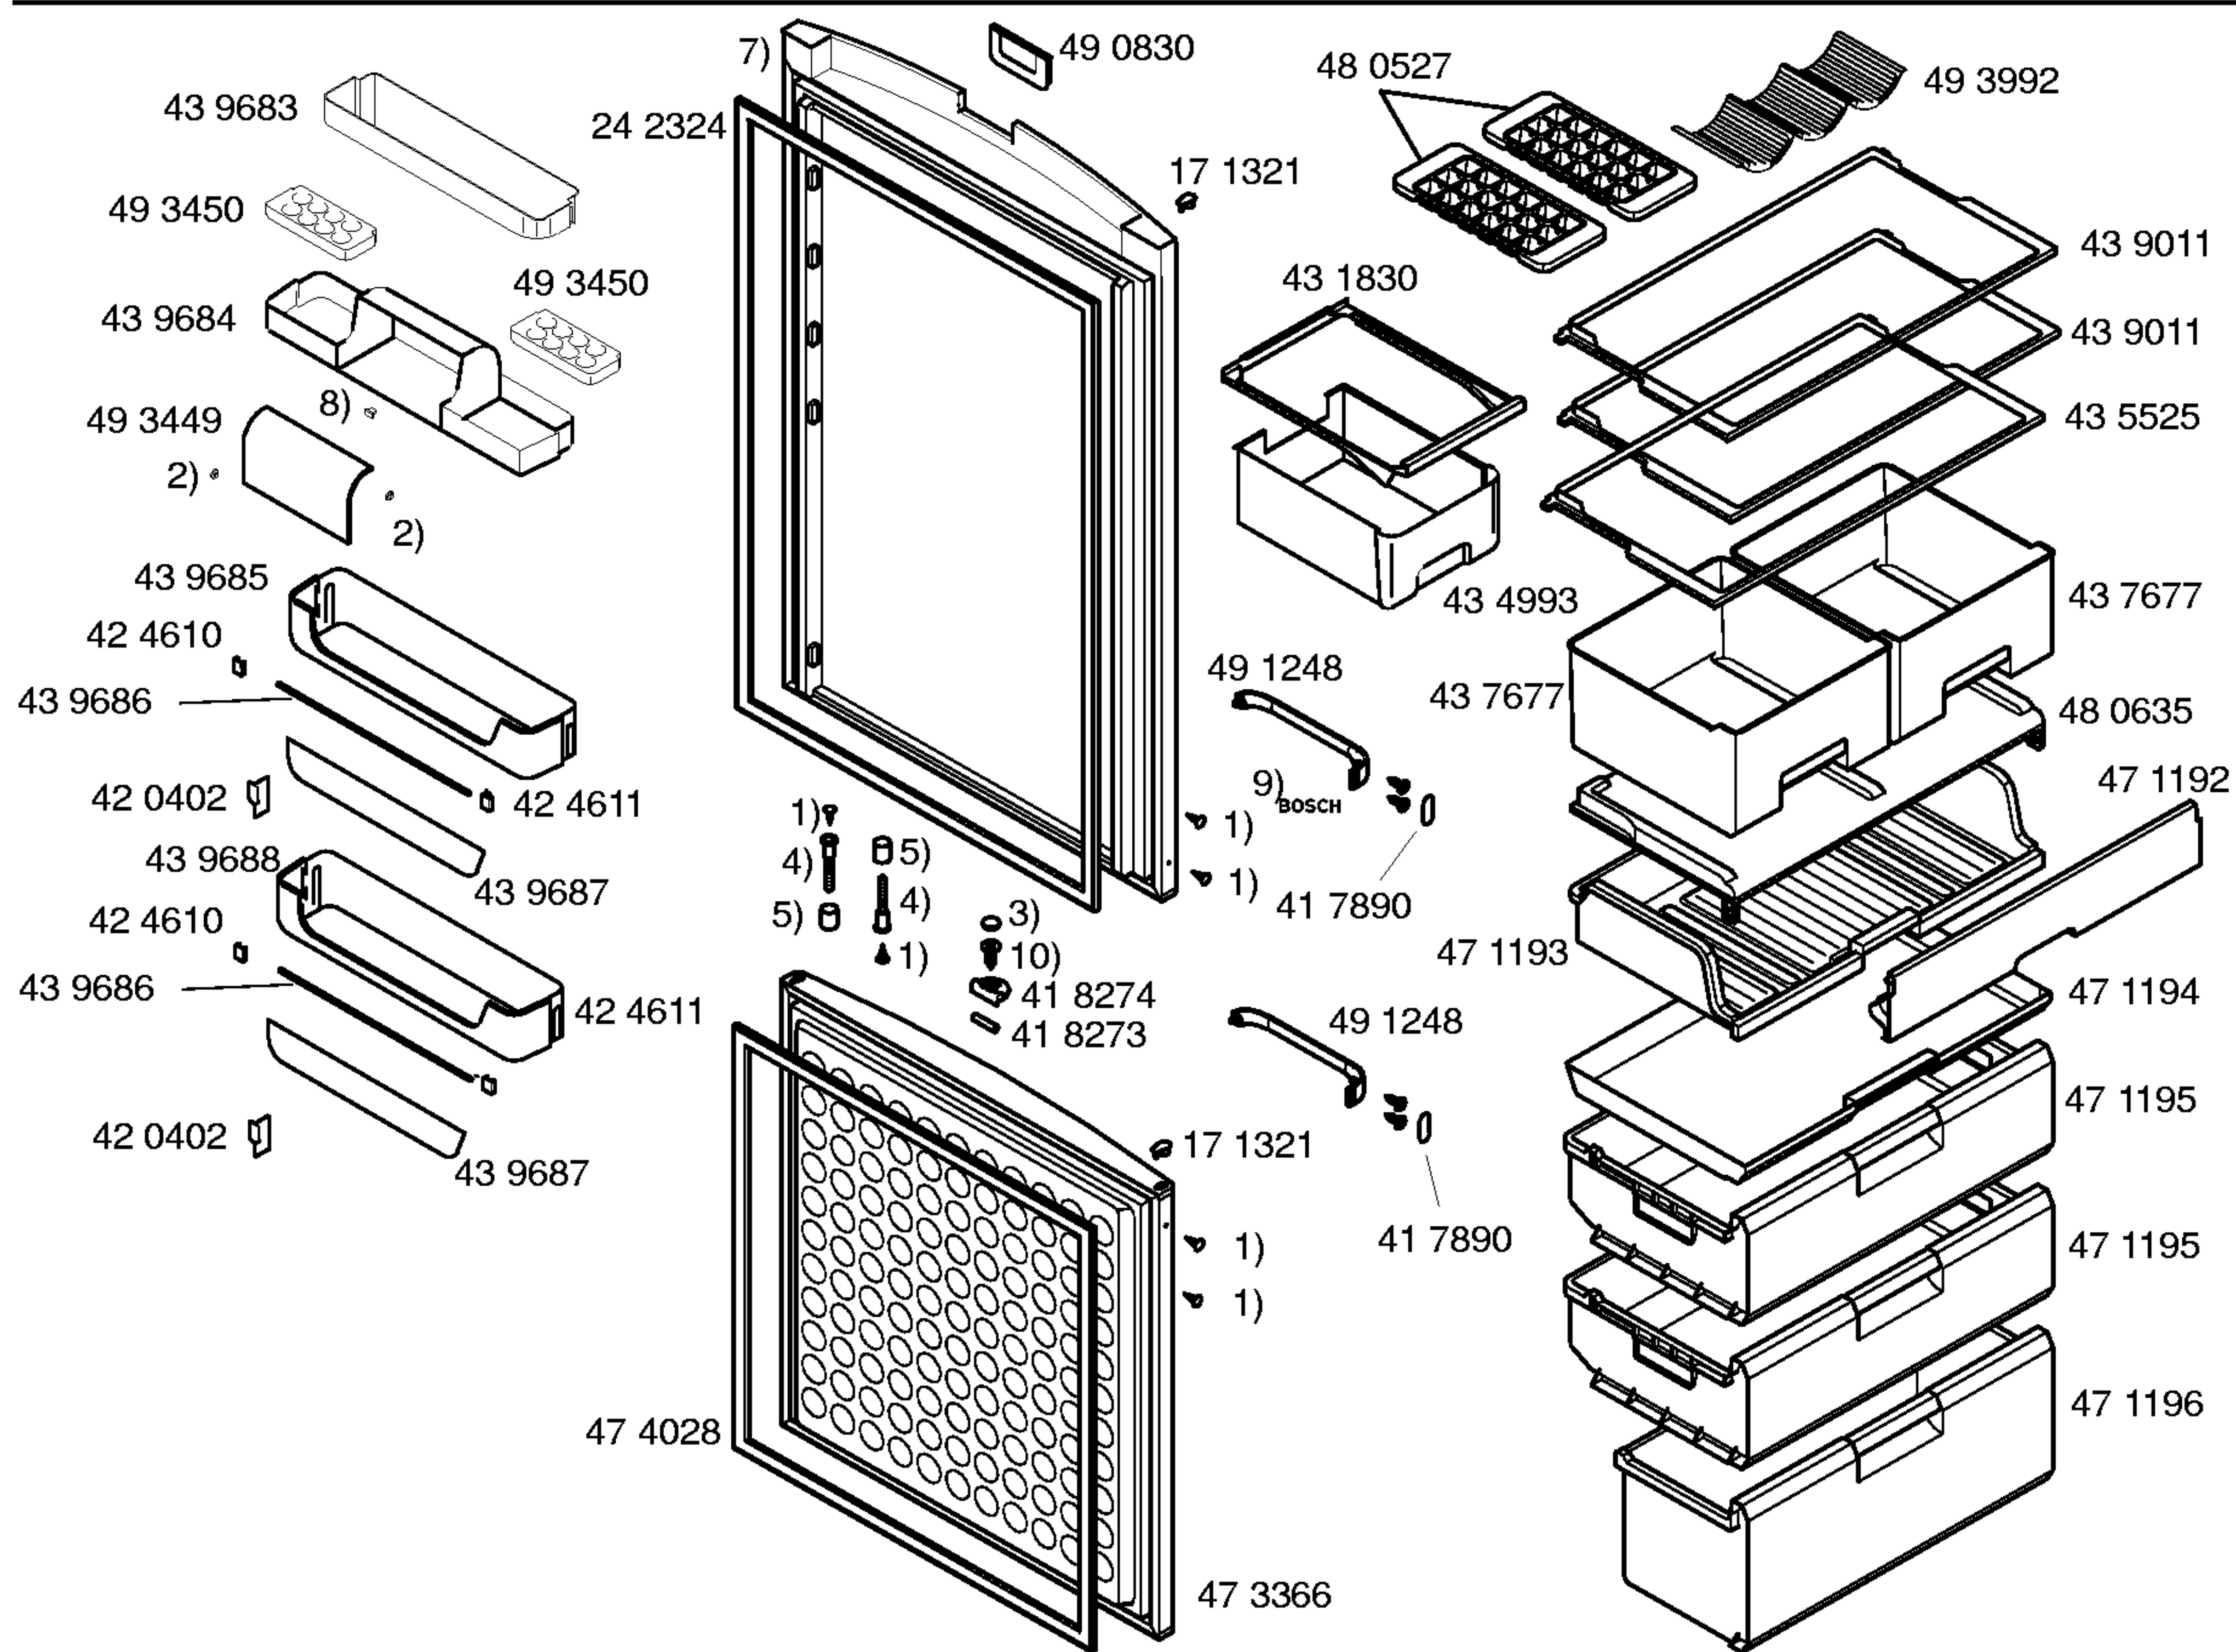


Mat. - Nr. - Konstante
3740

- 1) 06 0083
- V01
- 17 3747
- V02
- 2) 42 0568
- 3) 16 5557
- 4) 18 8194
- 5) 18 8188
- 6) 49 1248
- 7) 24 1855
- 8) 42 0751
- 9) 42 4562
- 10) 42 4686

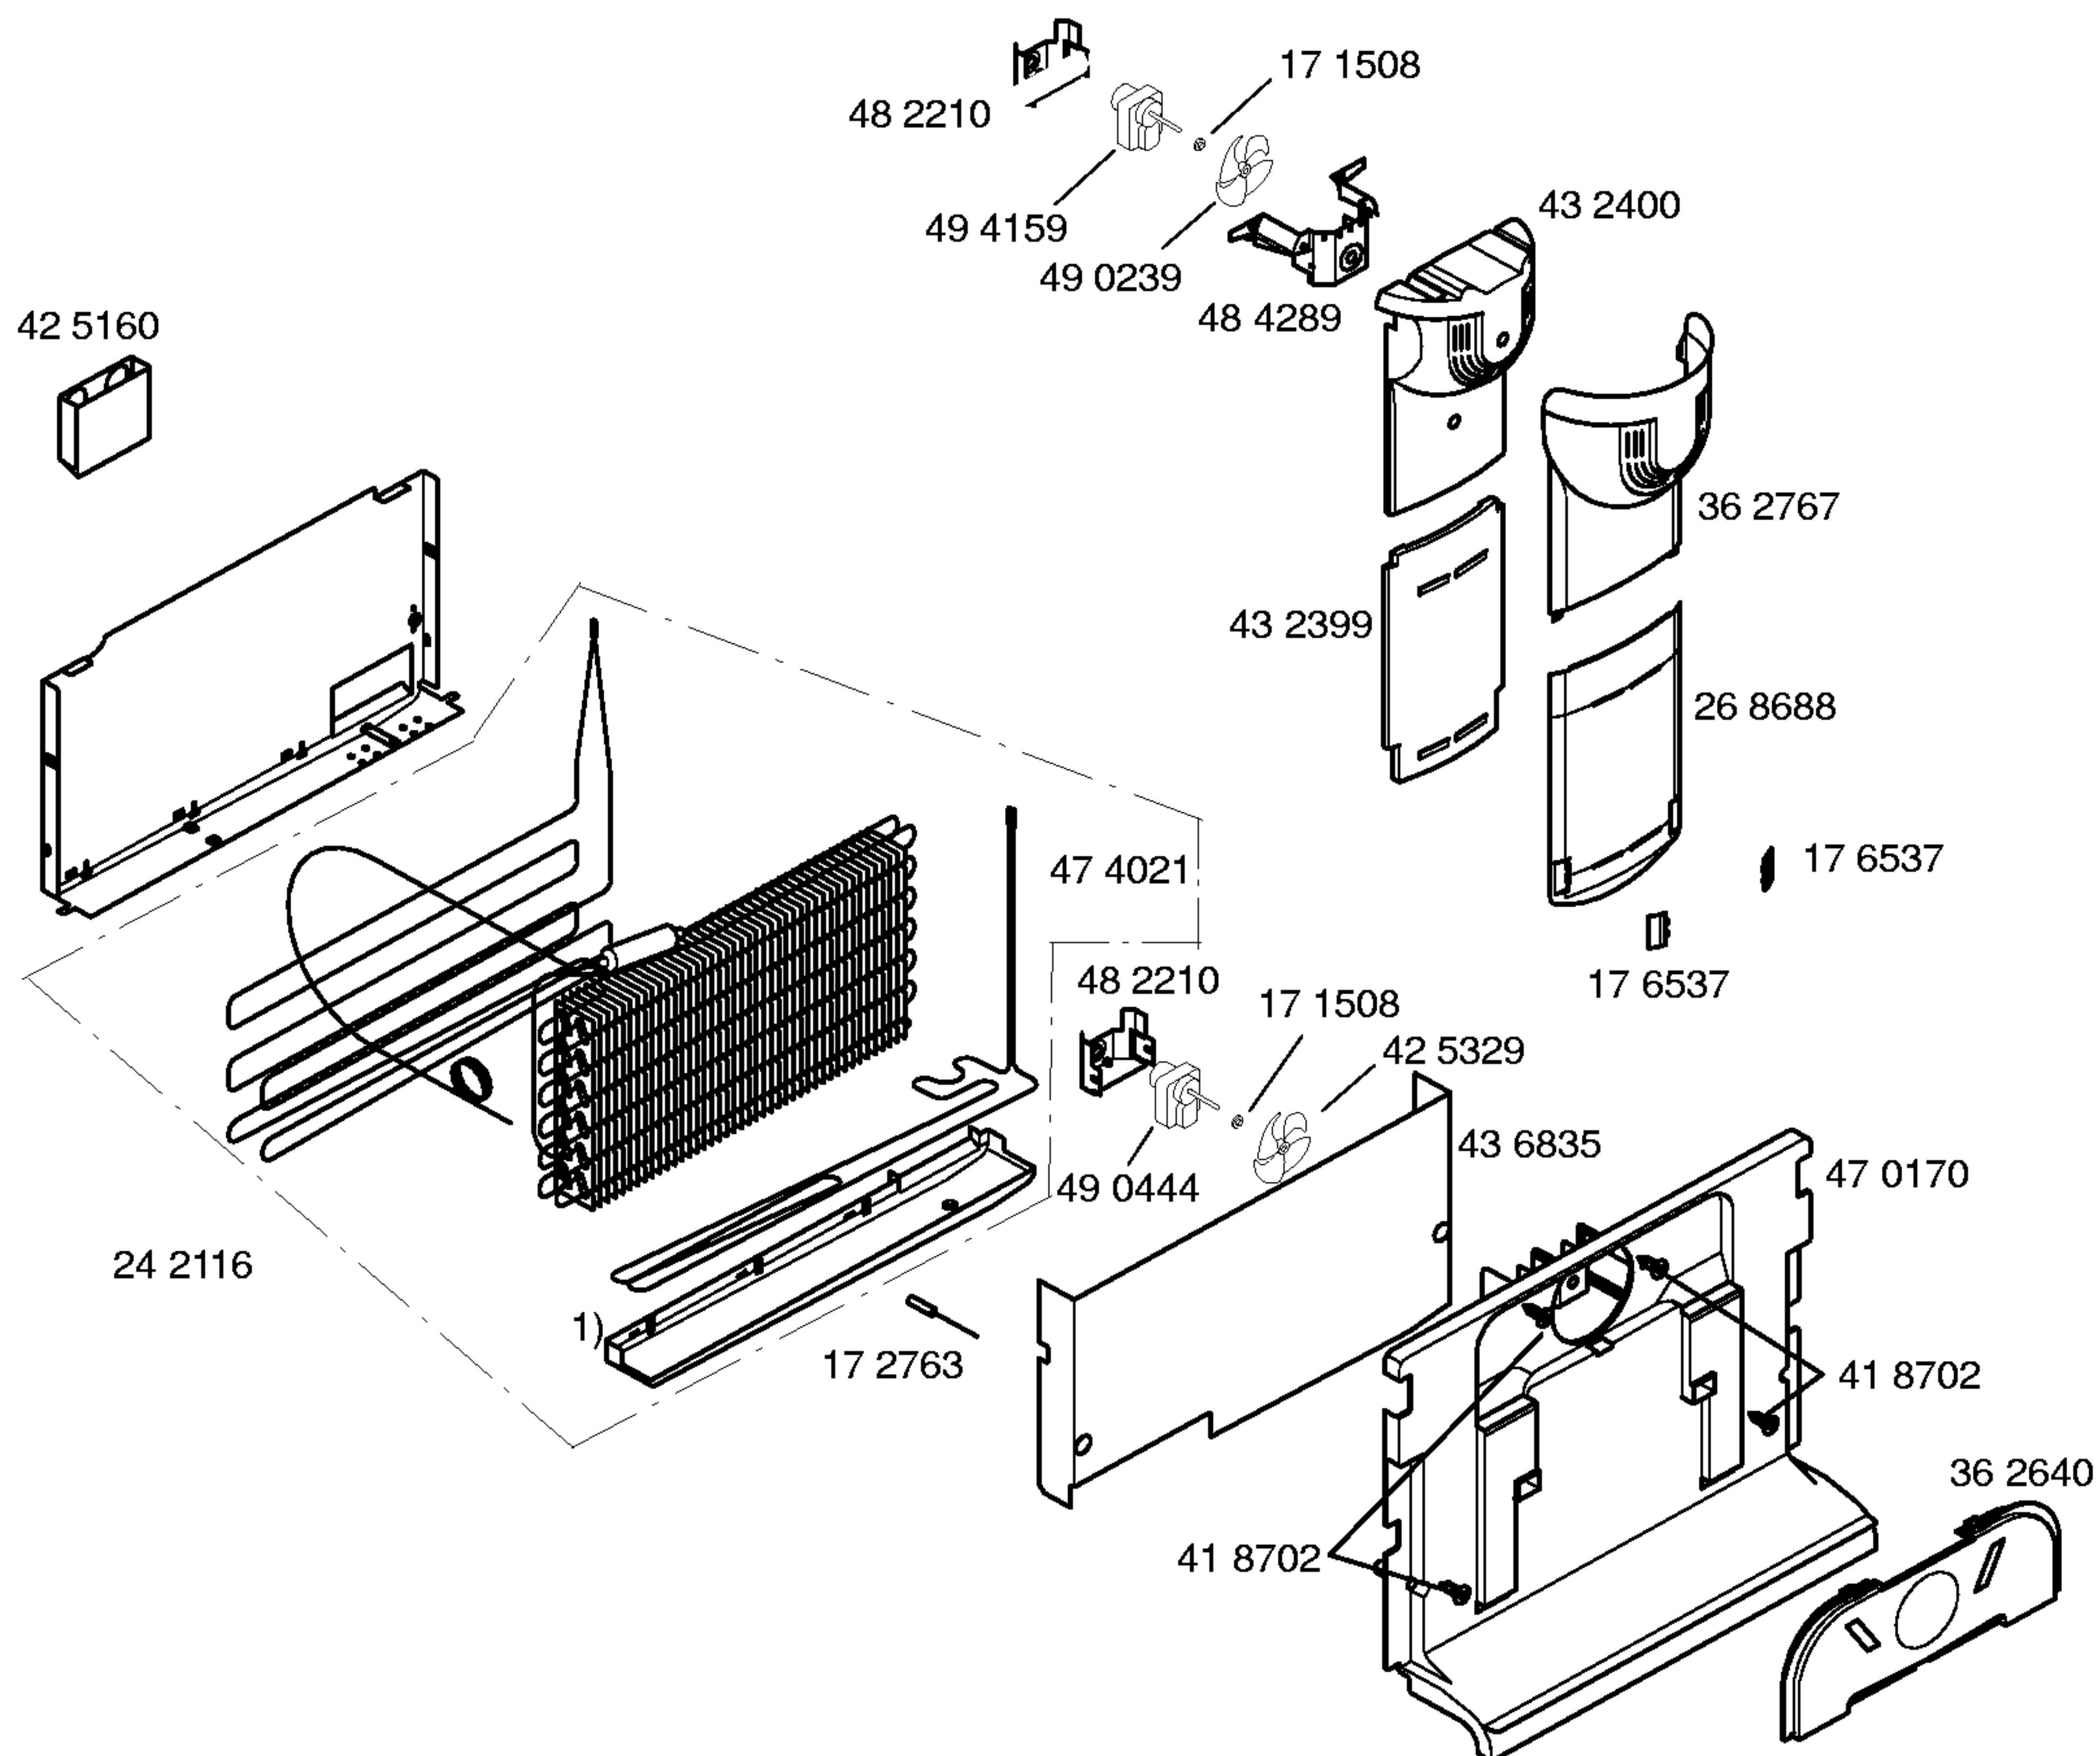

Mat. – Nr. – Konstante
3740

1) 43 2396

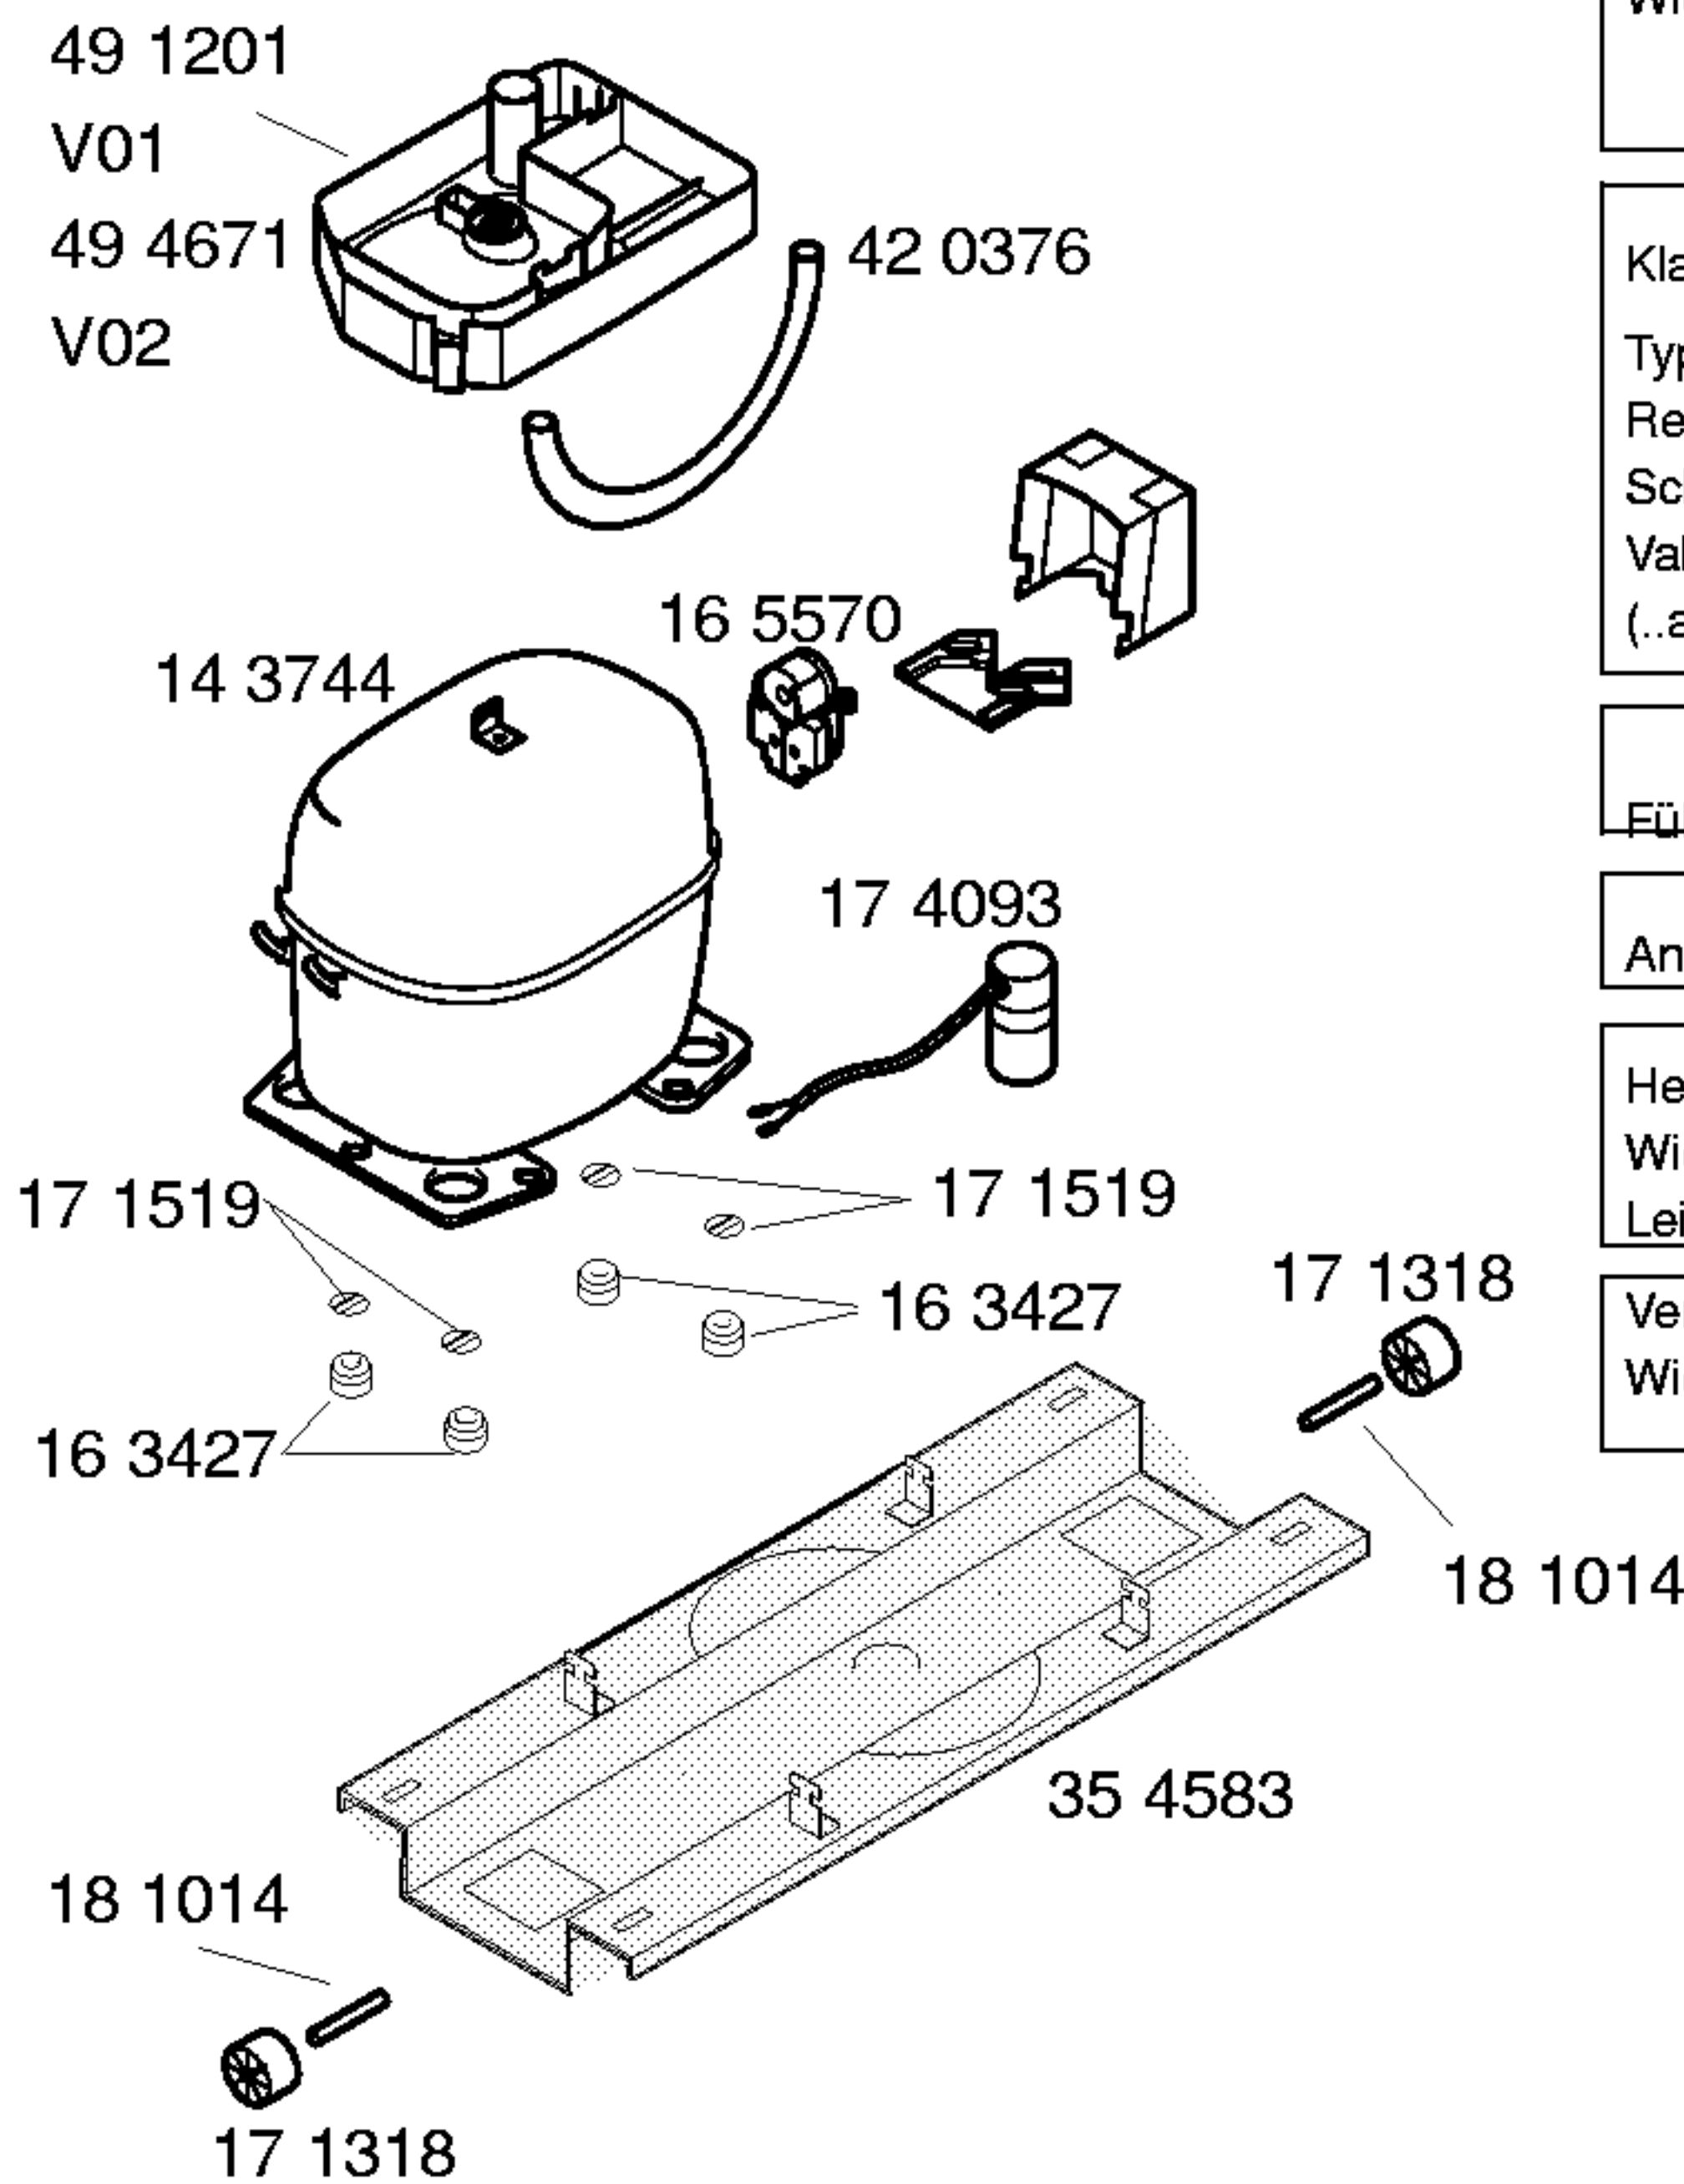

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NLX15KK		
Klape Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantity/Charge/Carga R600	g	65	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KΩ Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KΩ			

Mat. – Nr. – Konstante
3740