

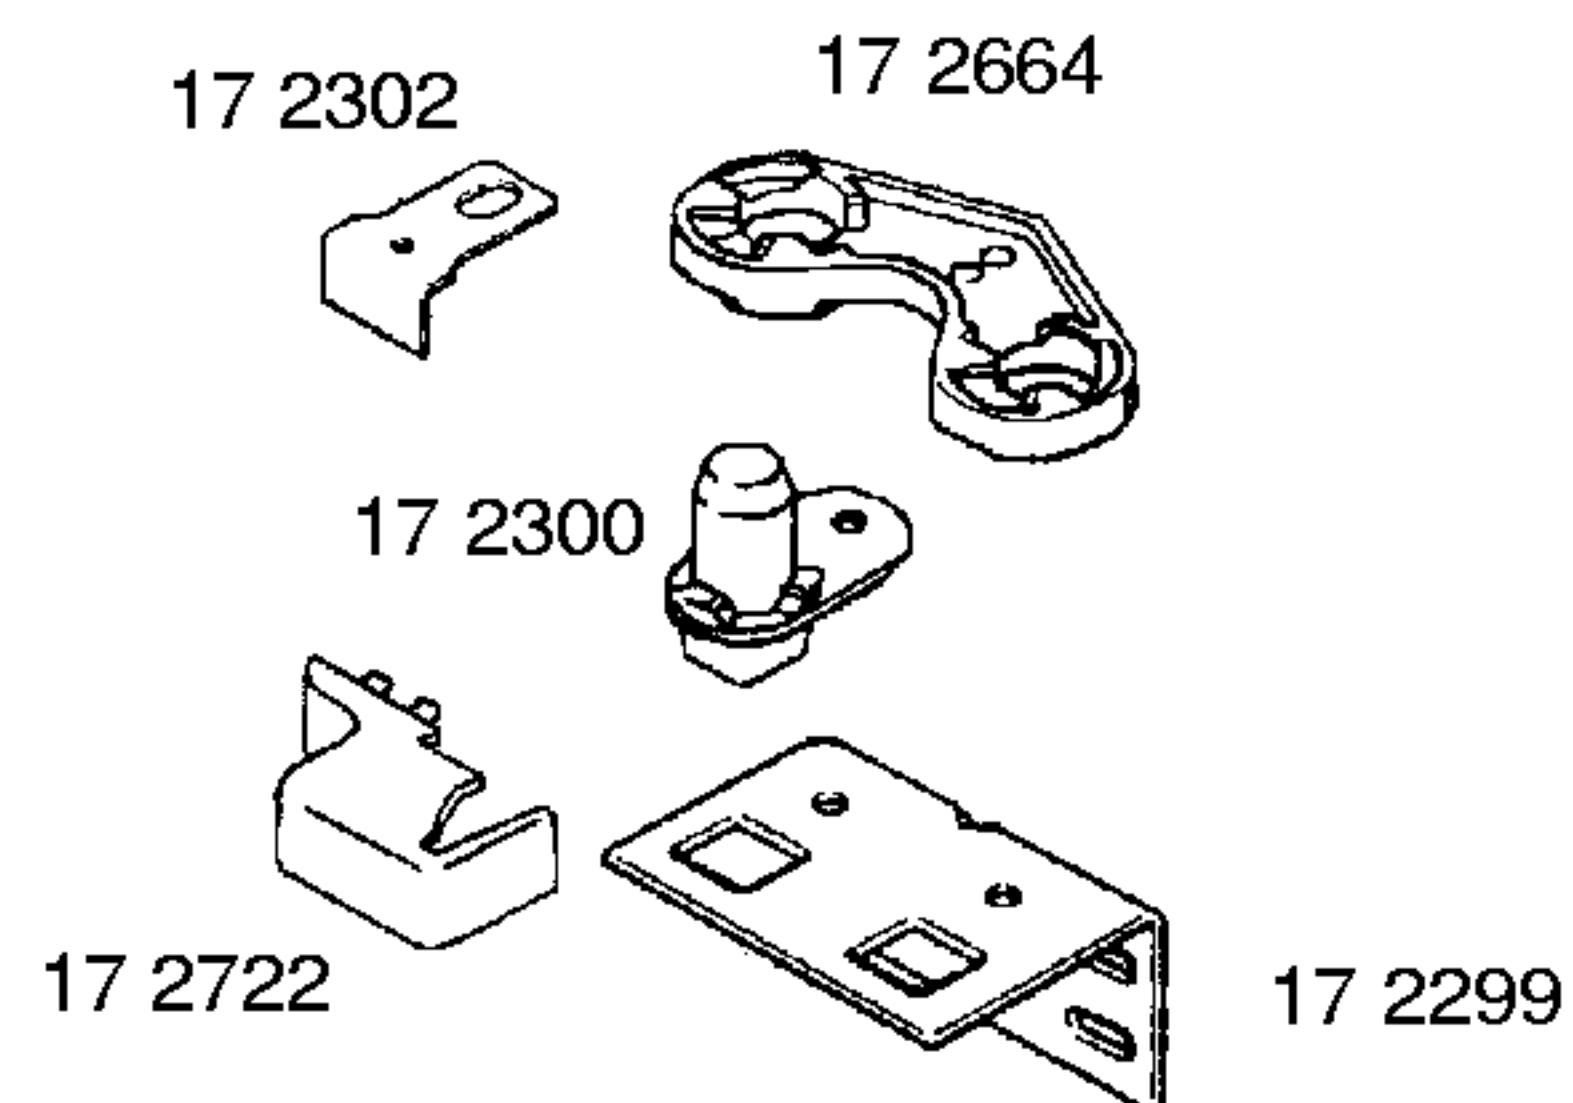
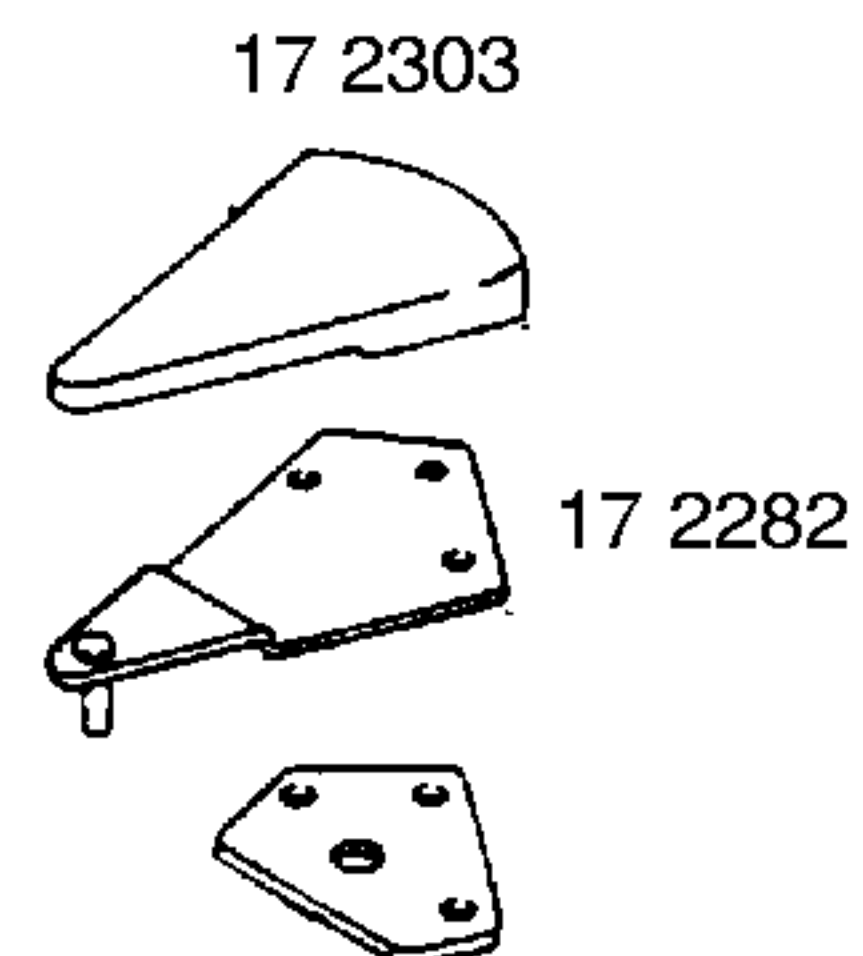


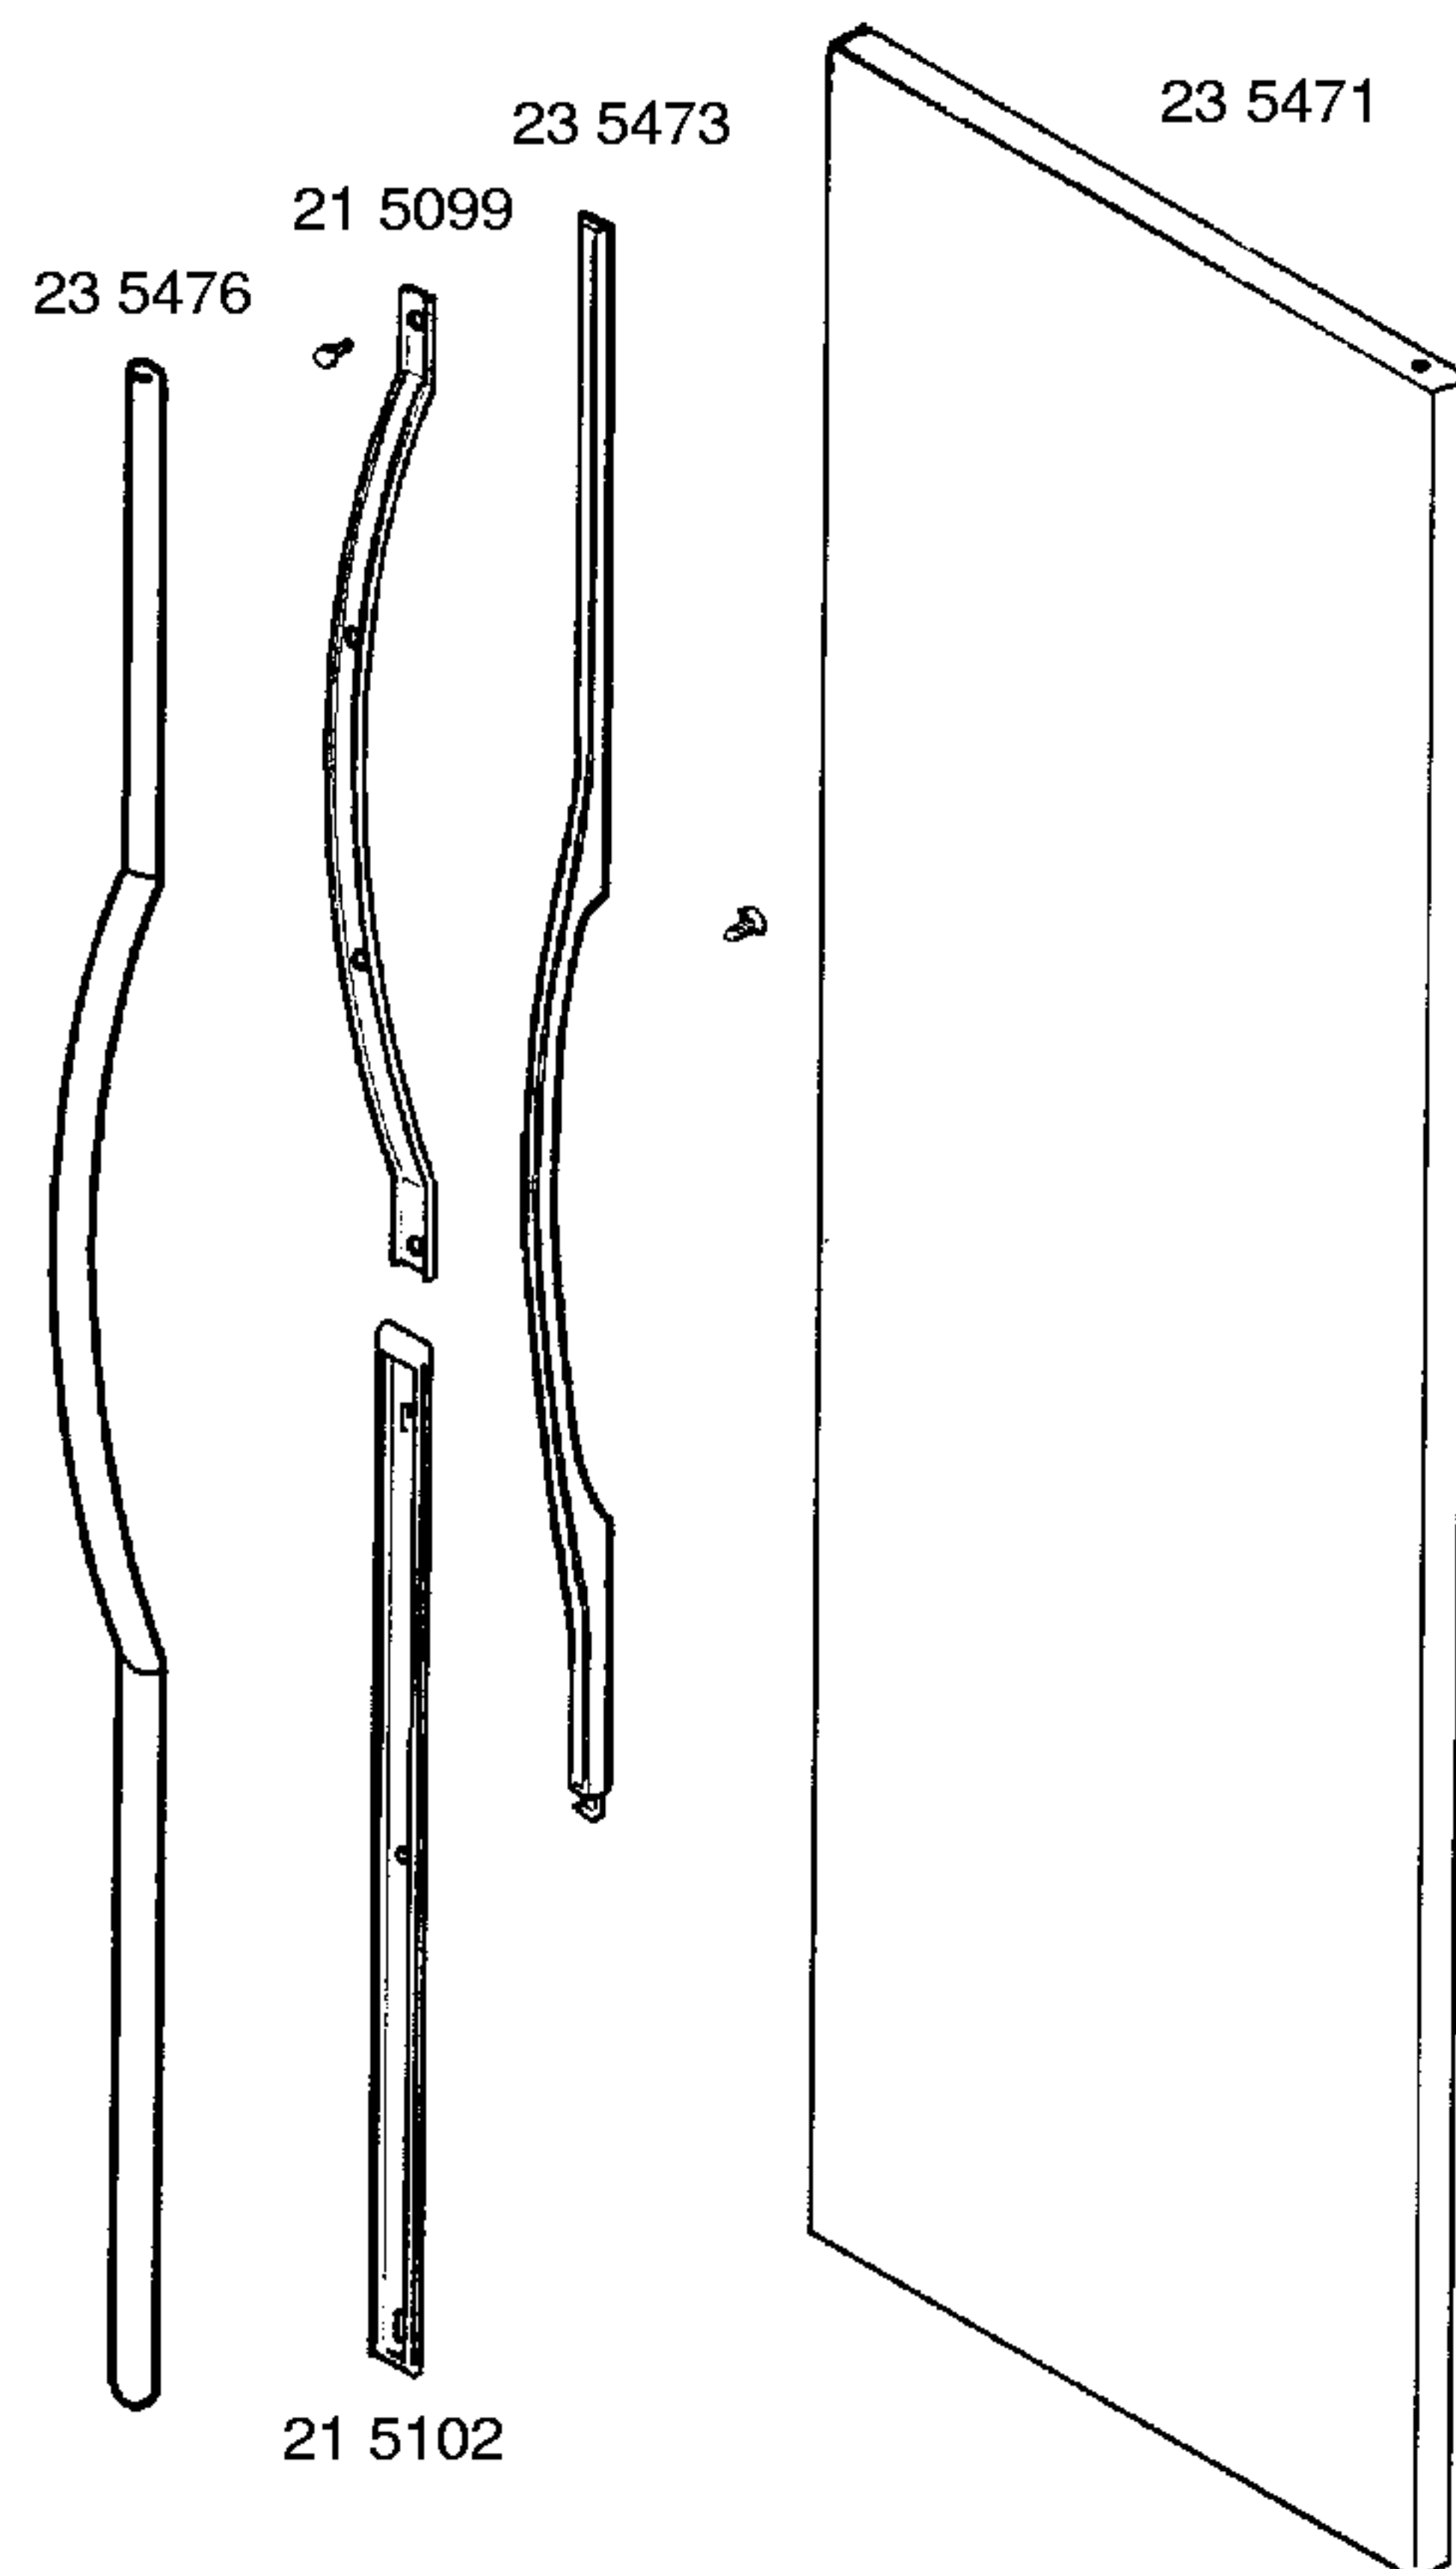

Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
52 3819
(D,GB,F,I,NL,E,P,GR,SE)
Montageanleitung
52 3822
(D,GB,F,I,NL,E,P,GR,SE)

Mat. – Nr. – Konstante
3740

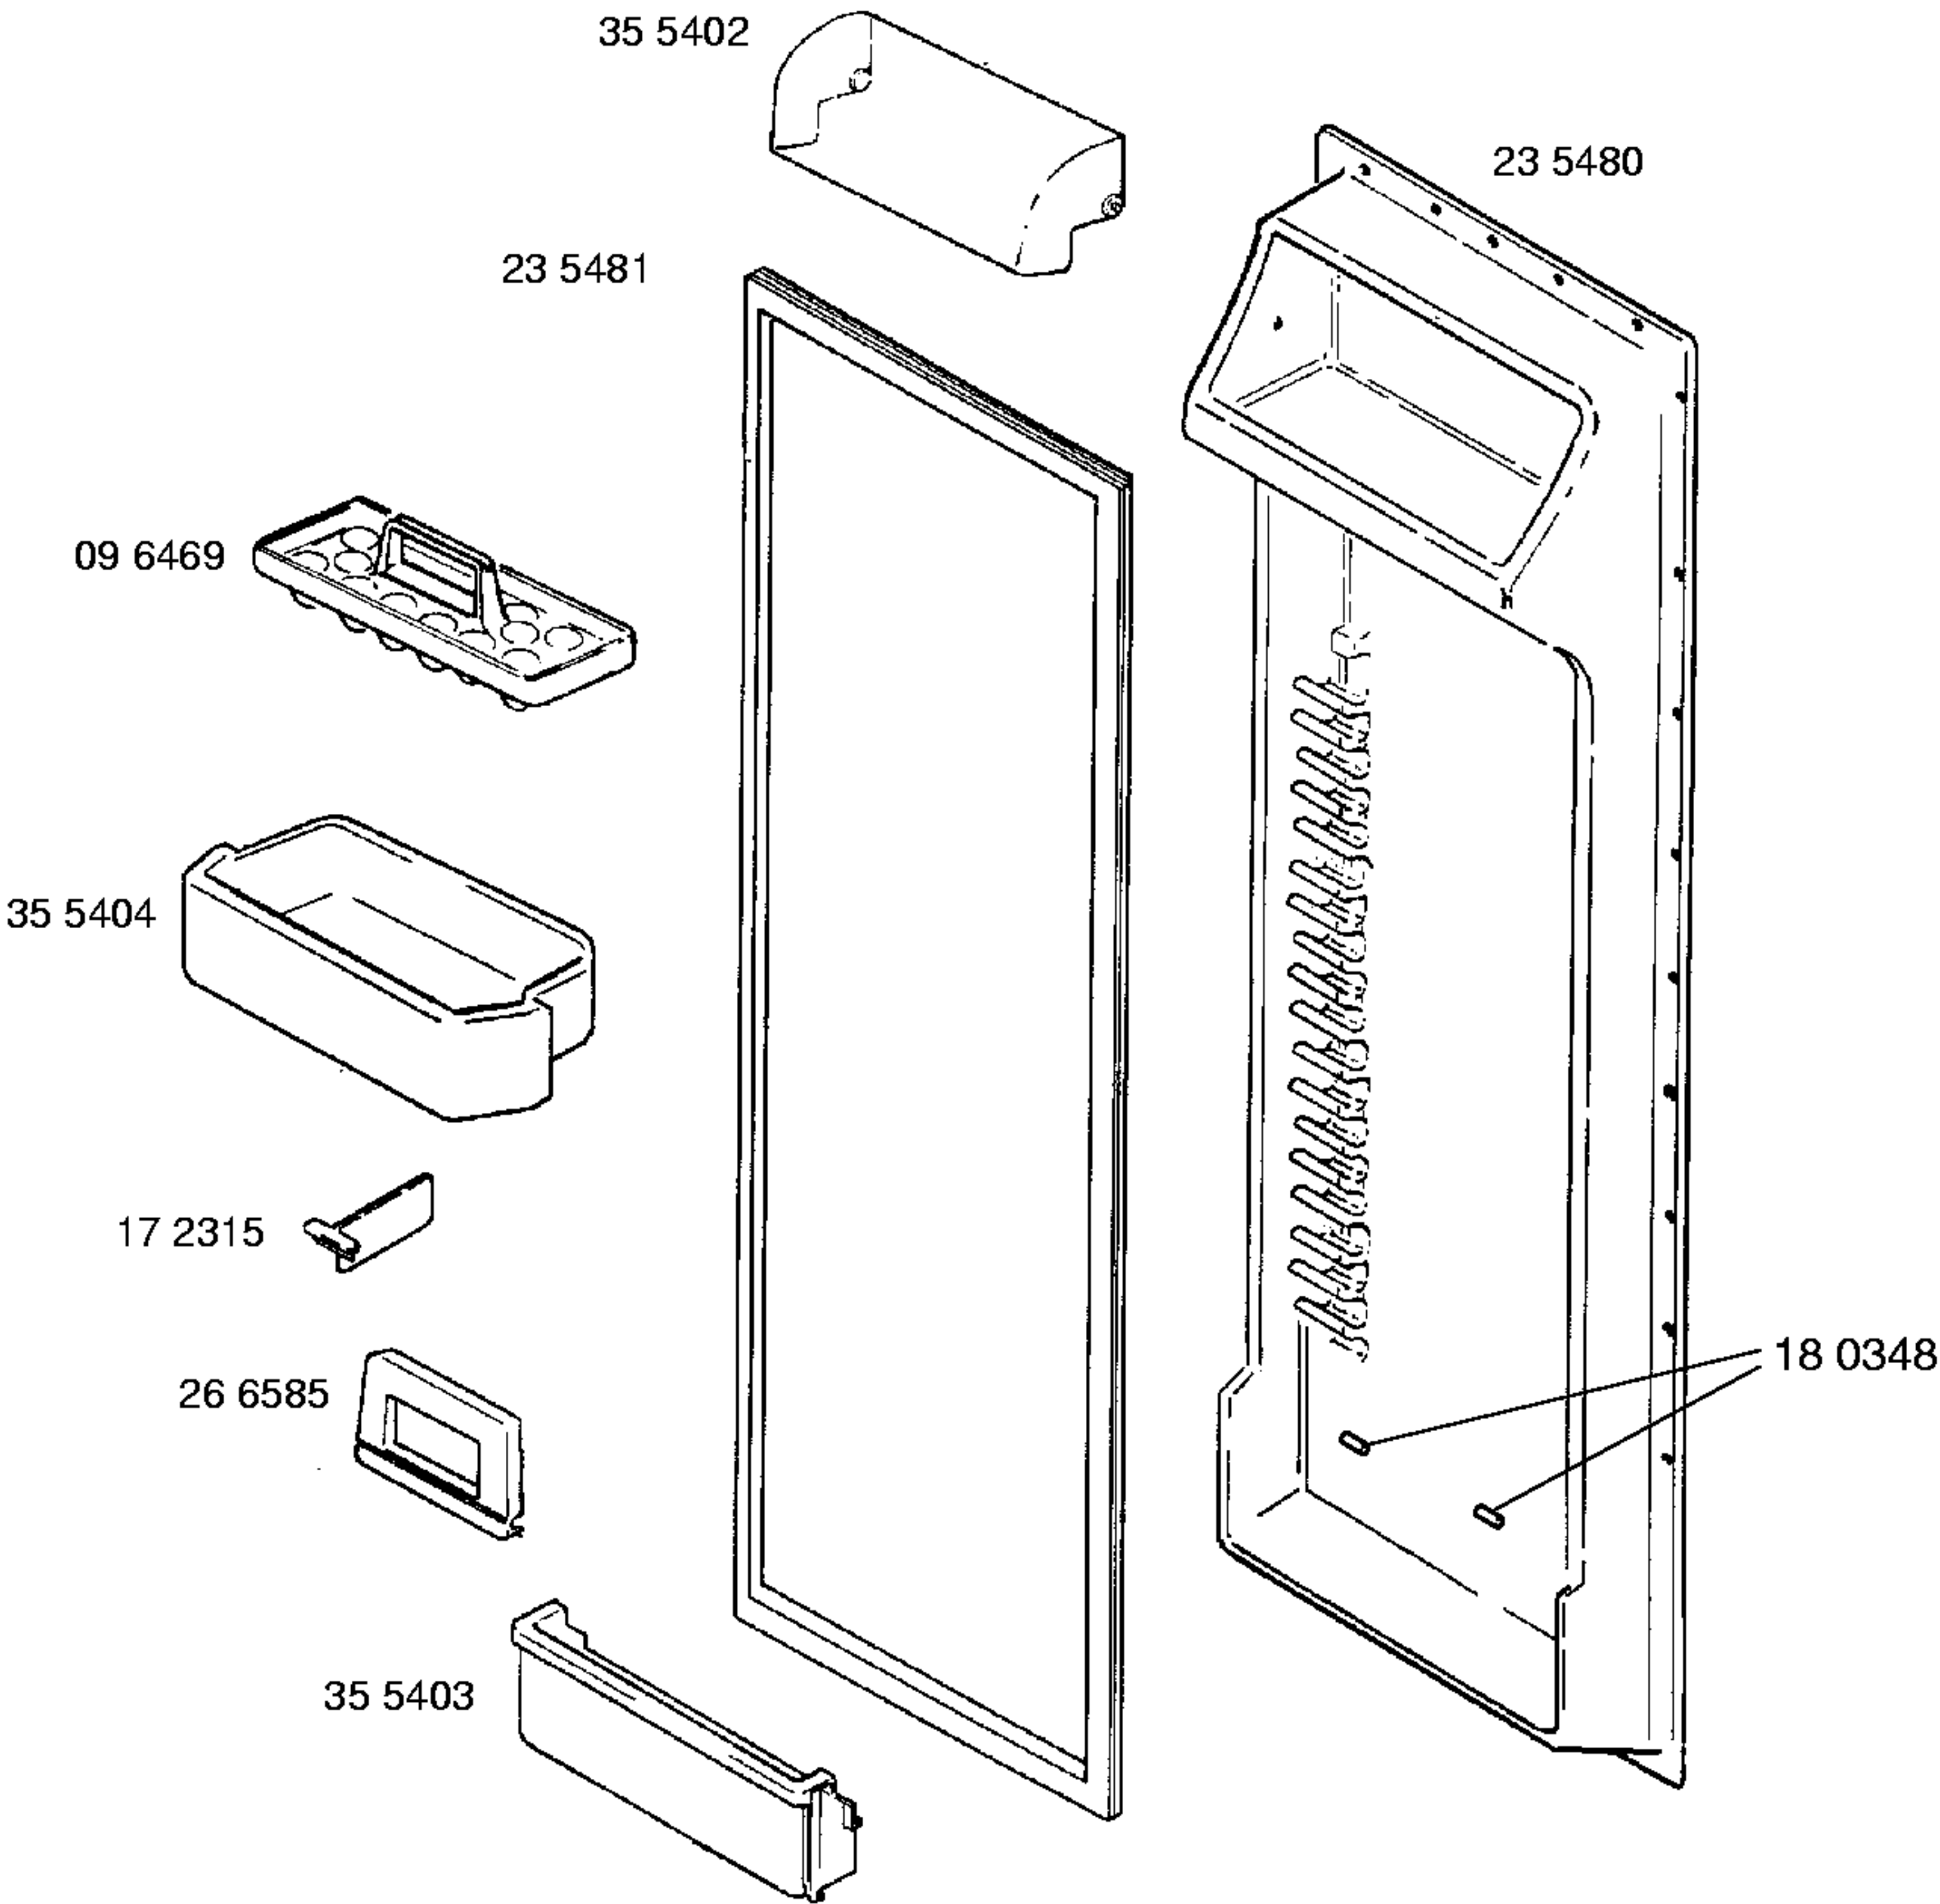



Mat. - Nr. - Konstante
3740

1) 15 4245
2) 15 4244

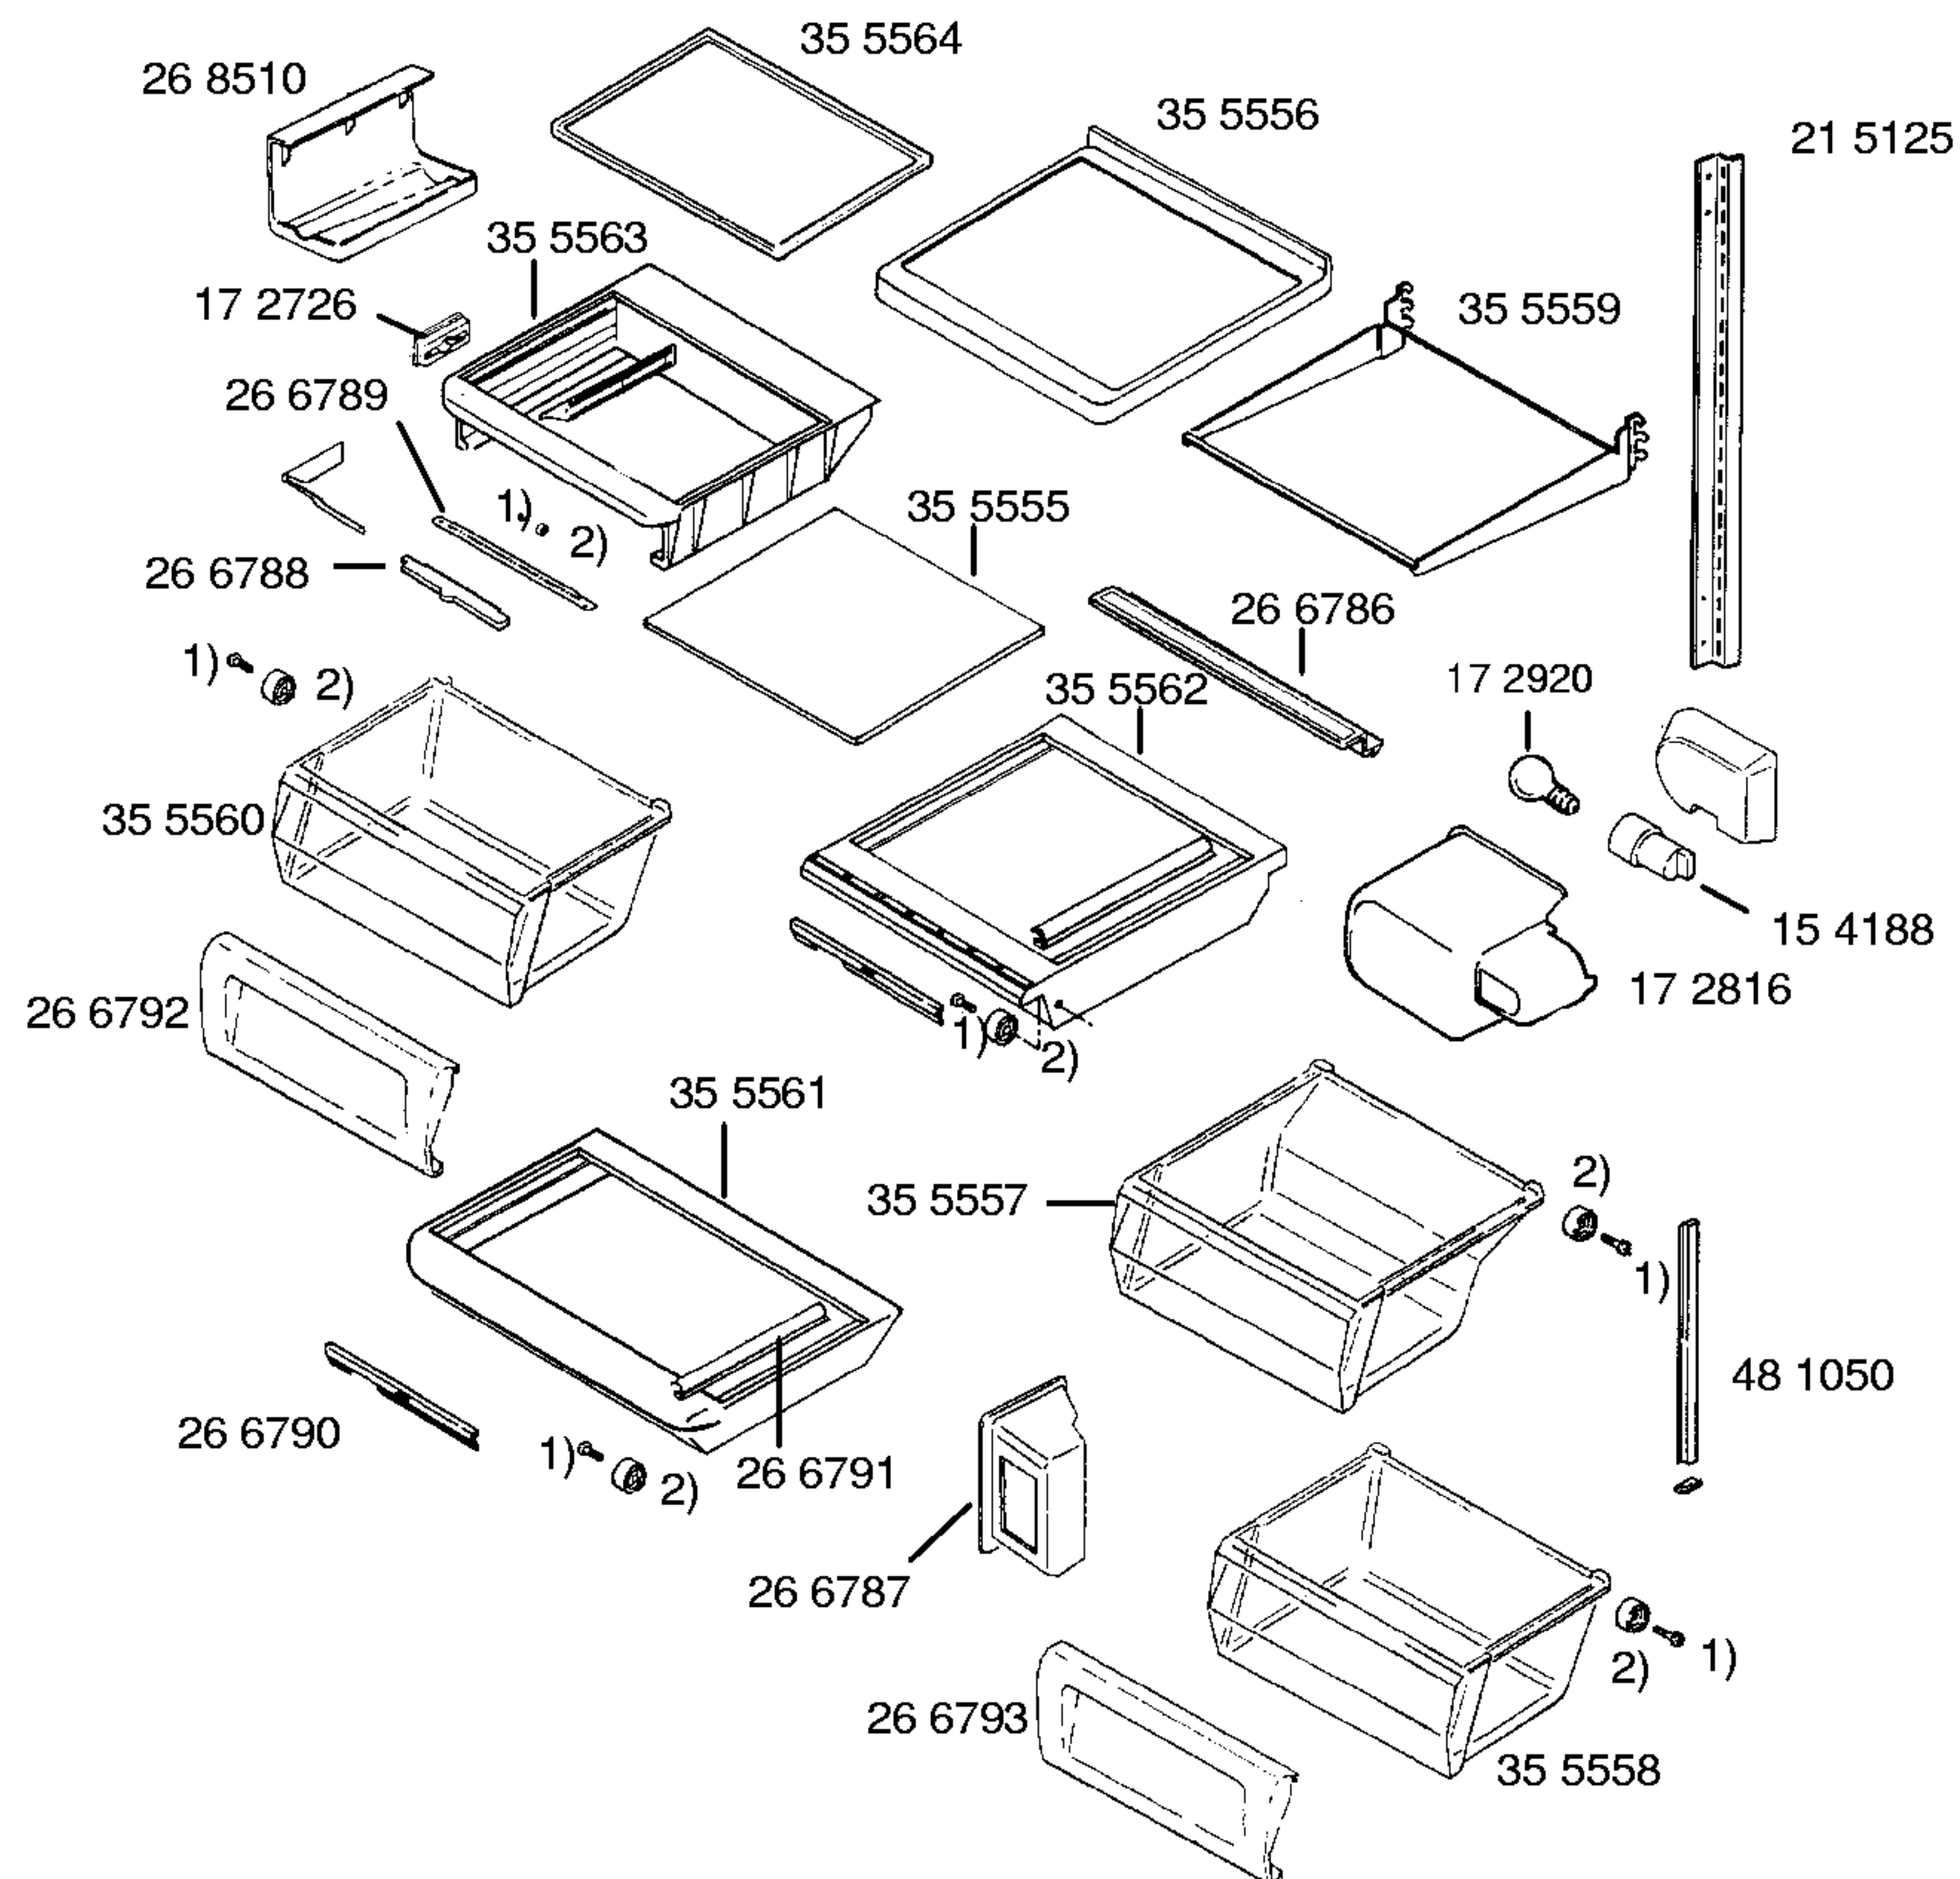



Mat. — Nr. — Konstante
3740

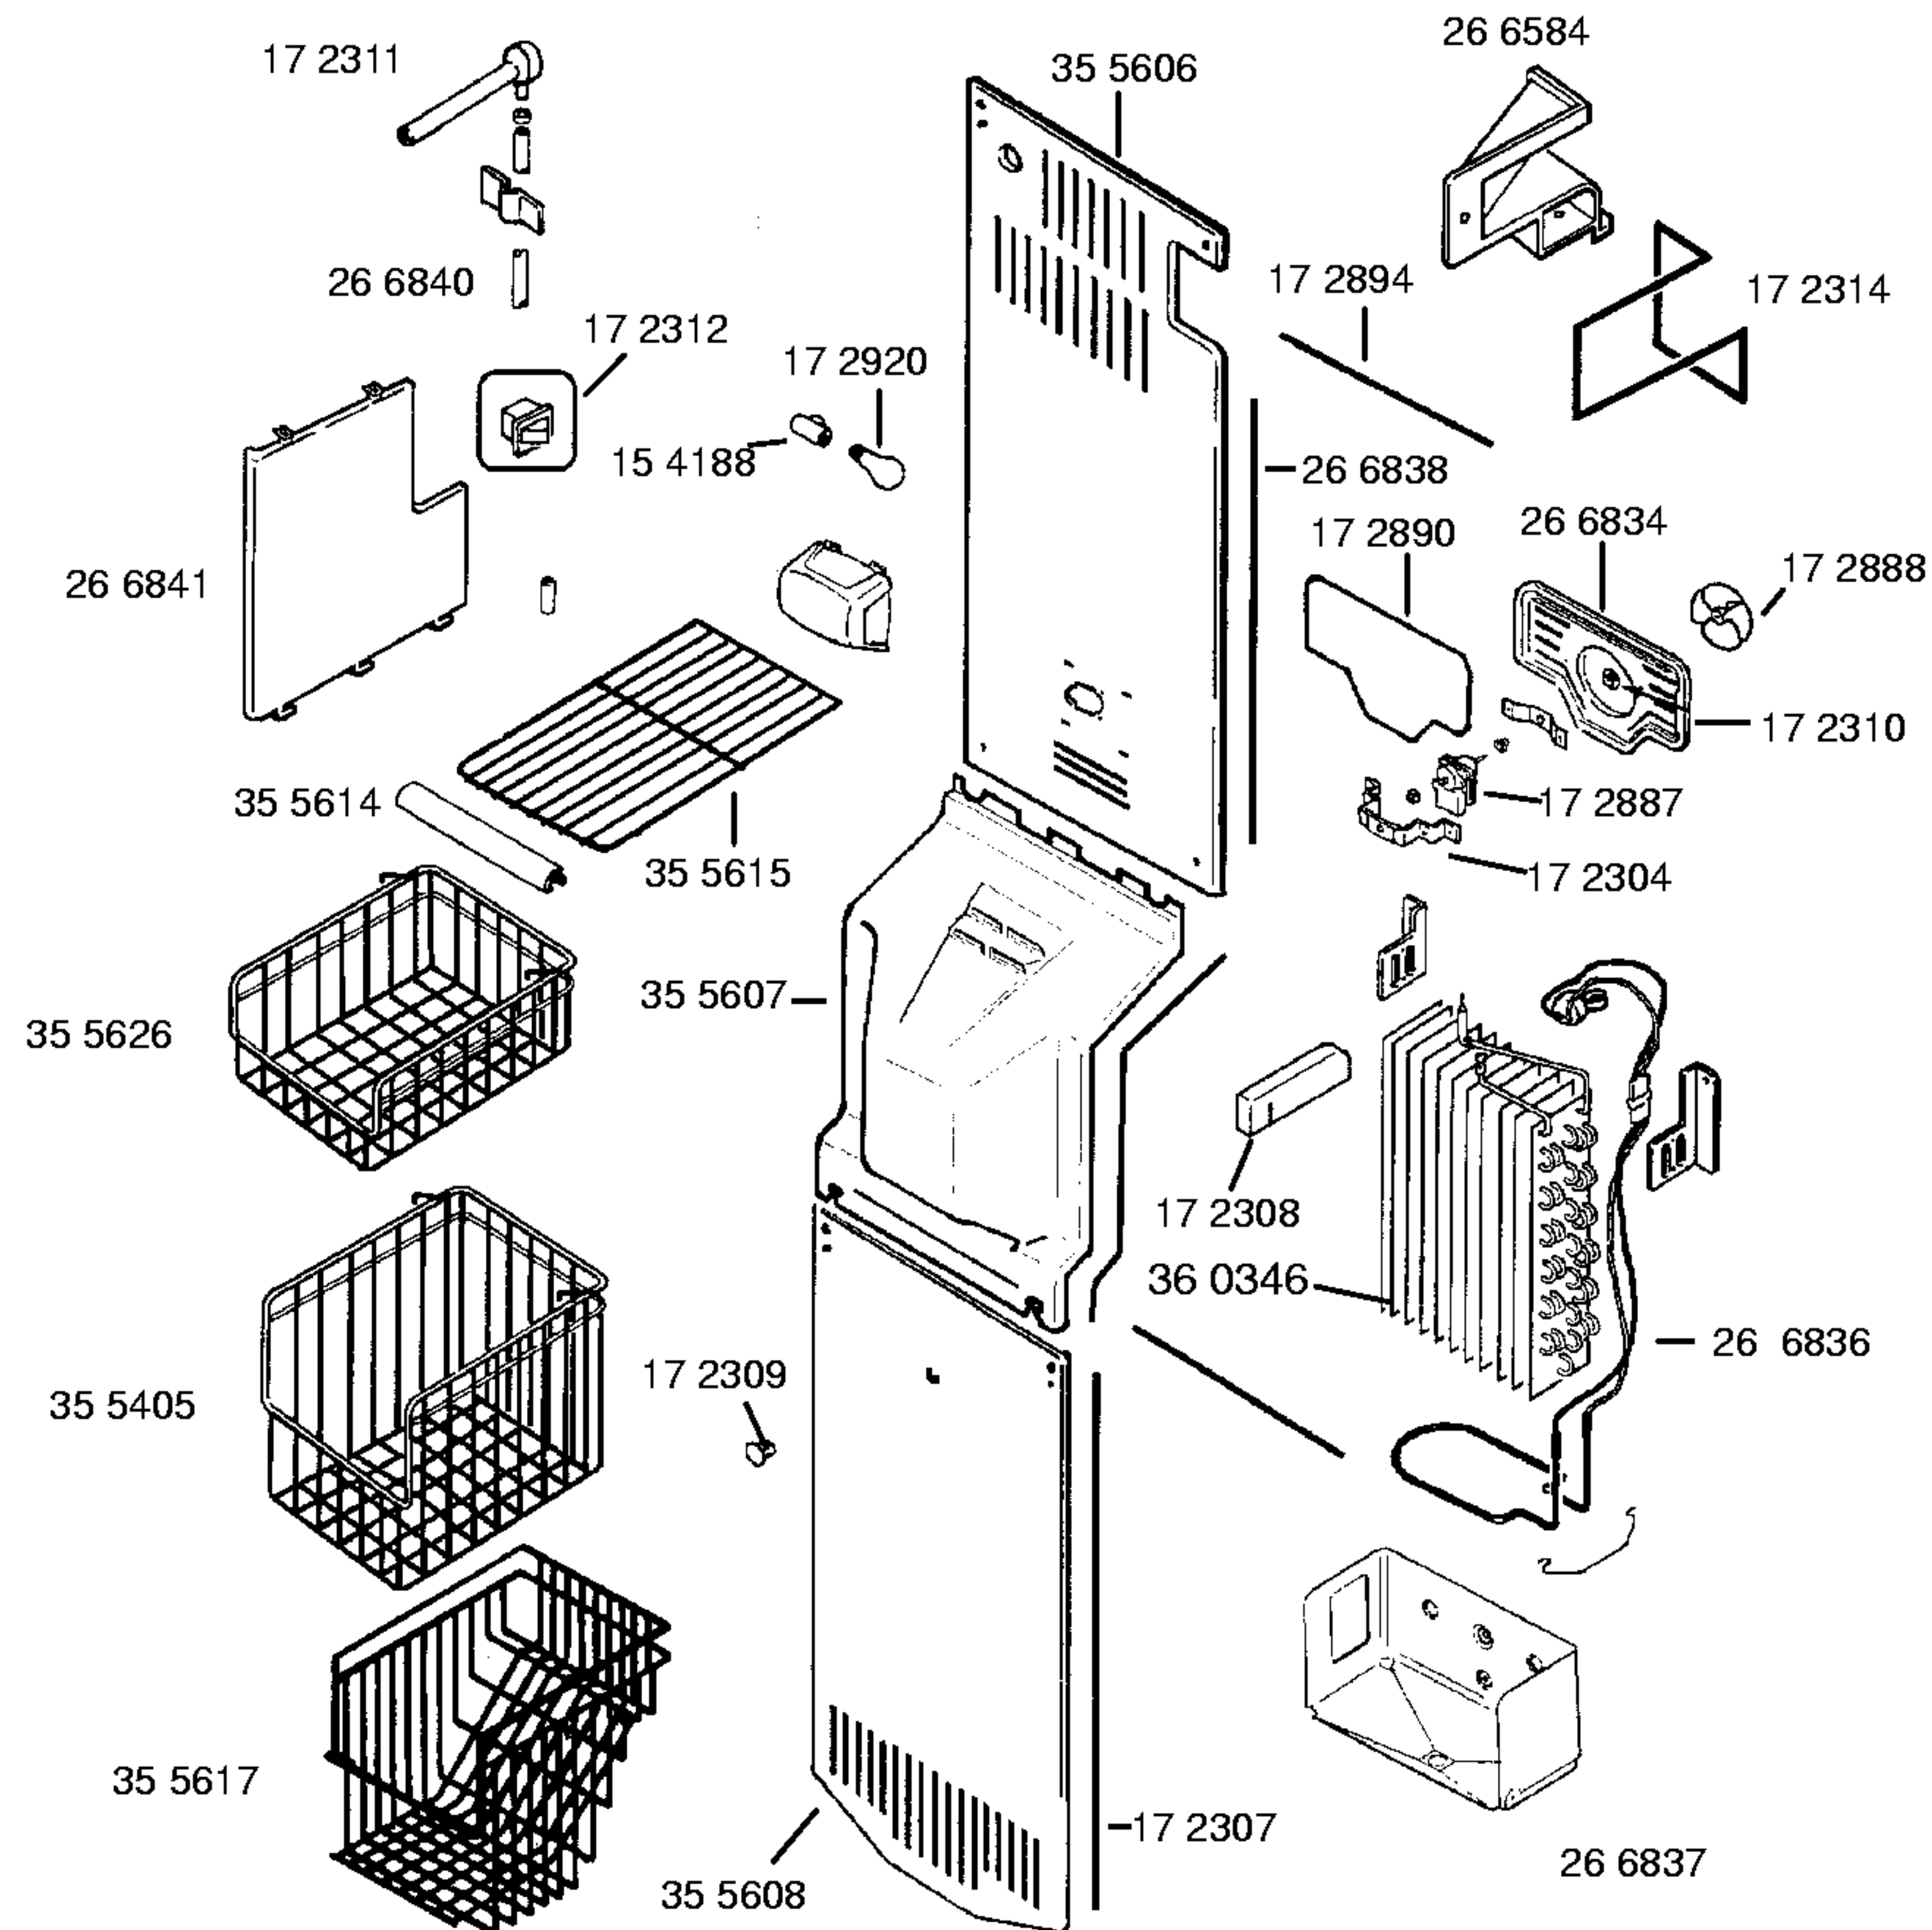

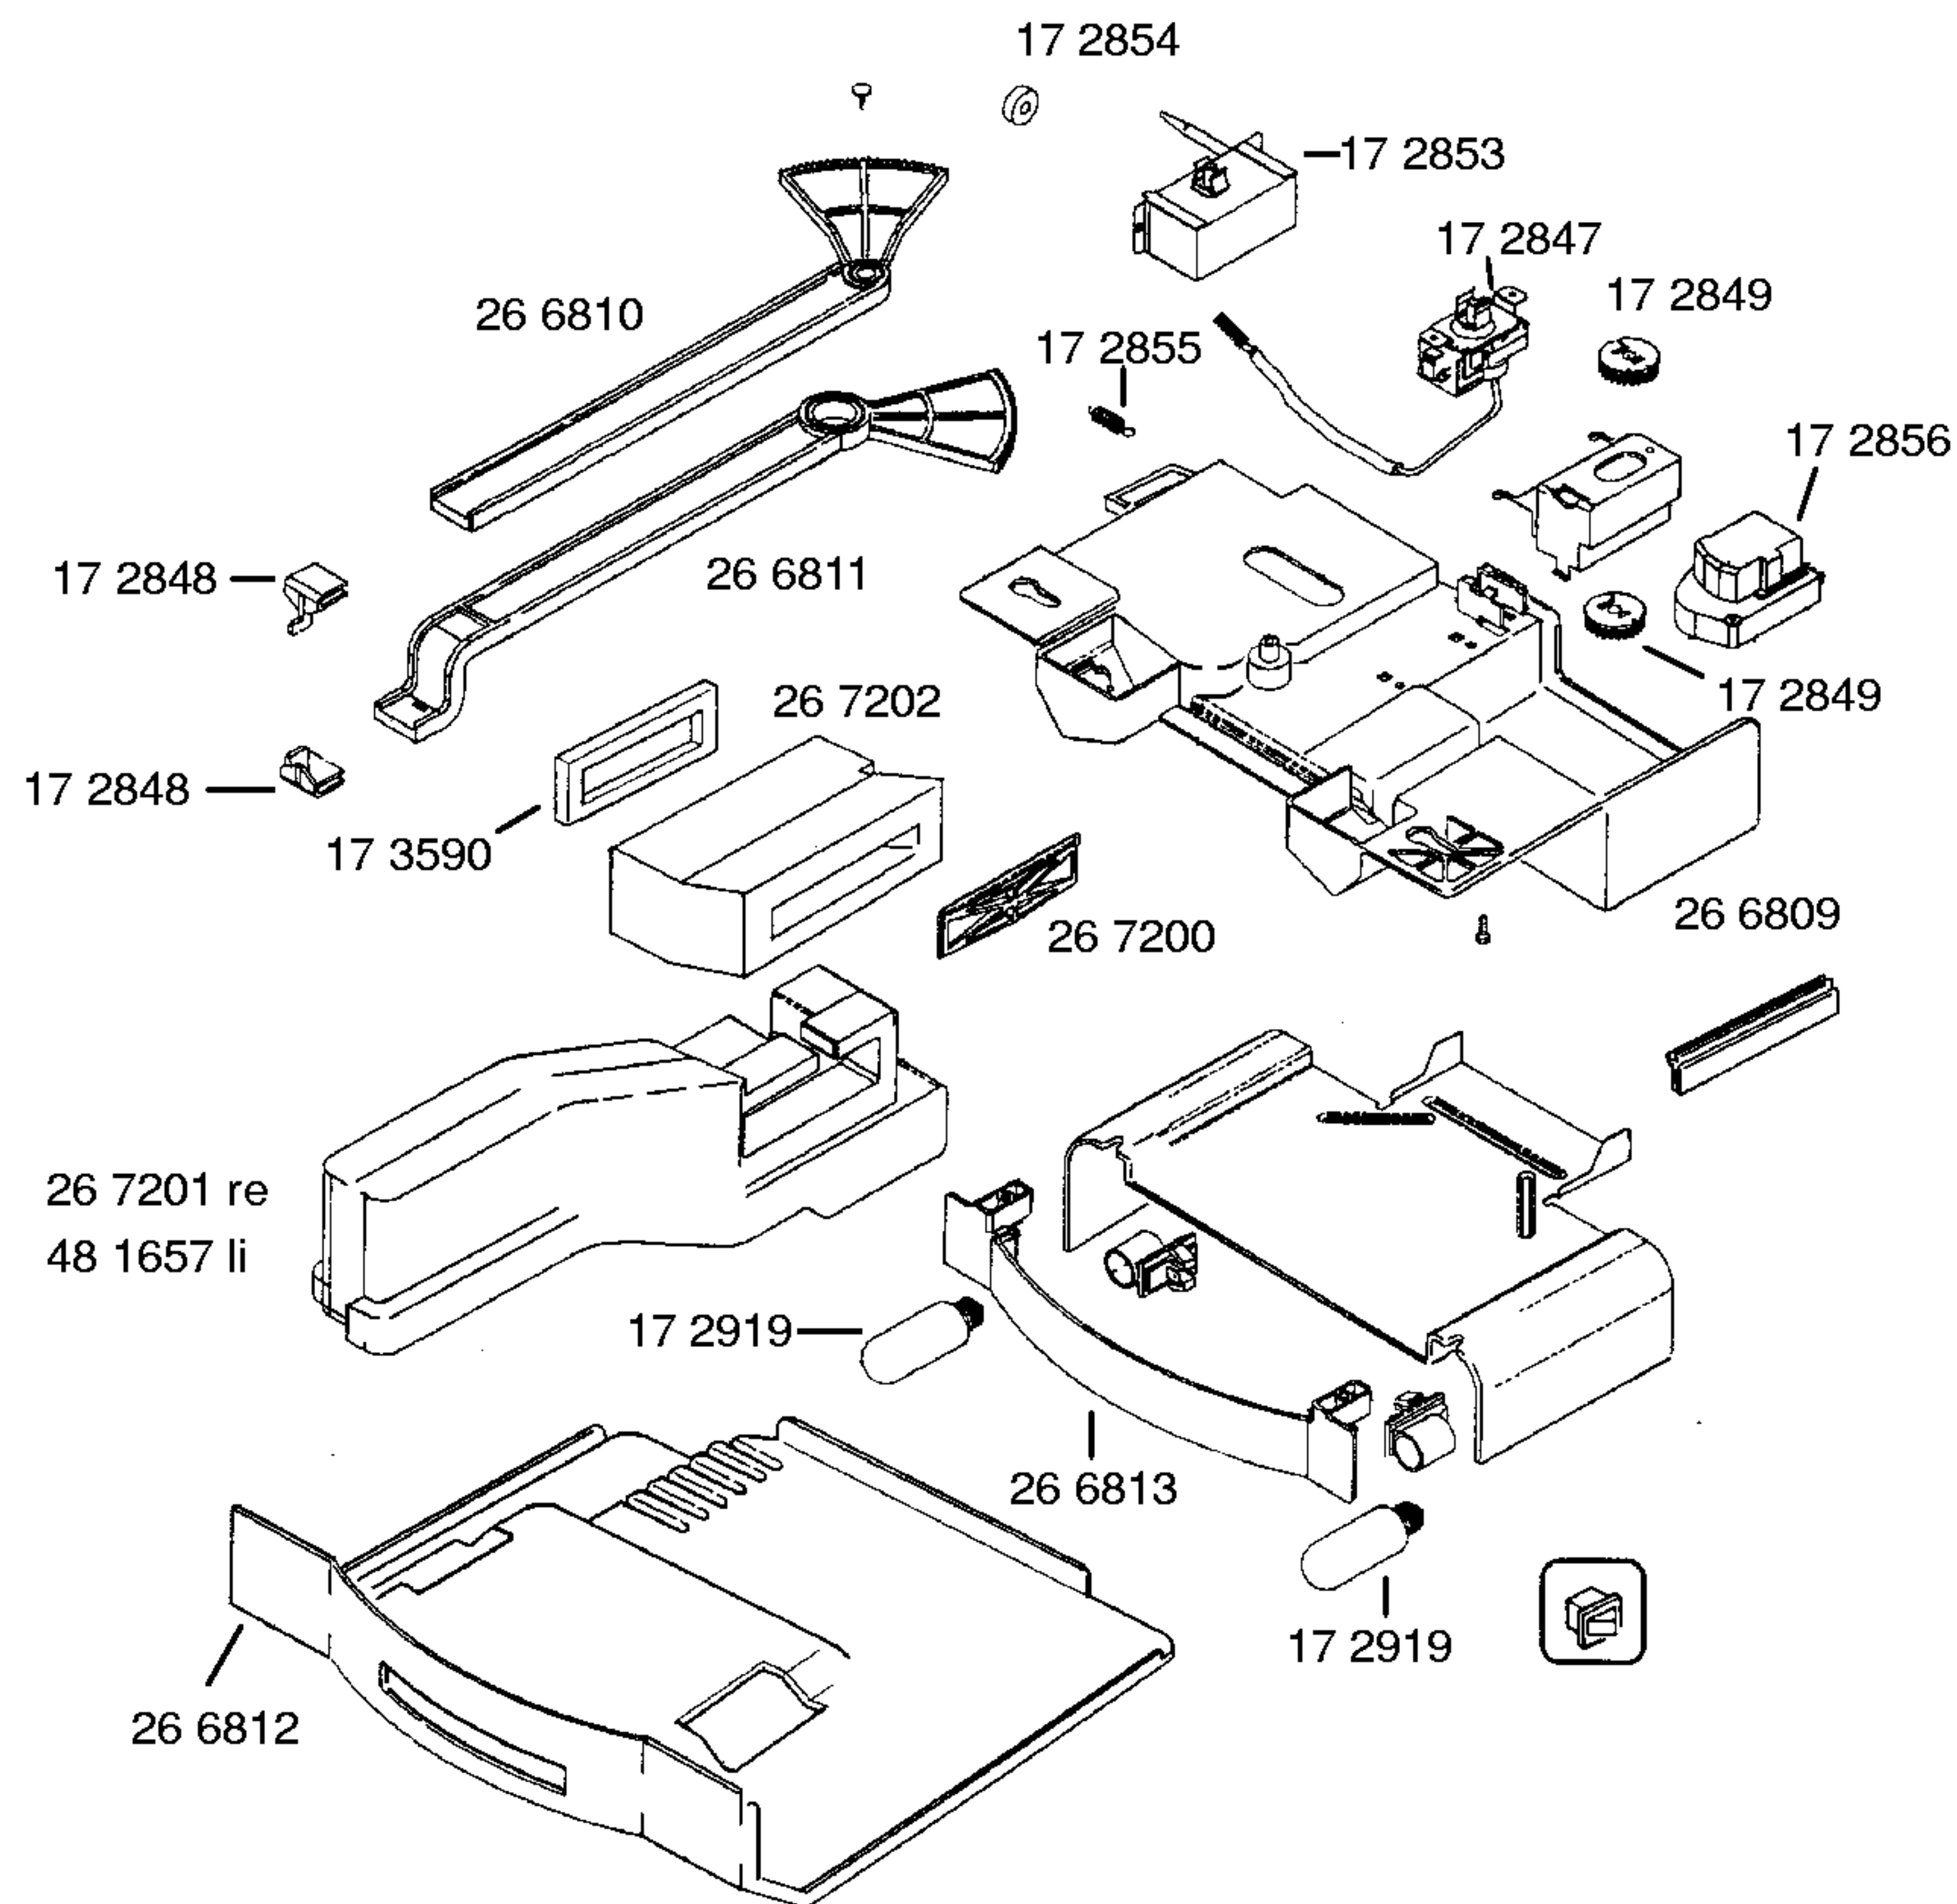


Mat. – Nr. – Konstante
3740

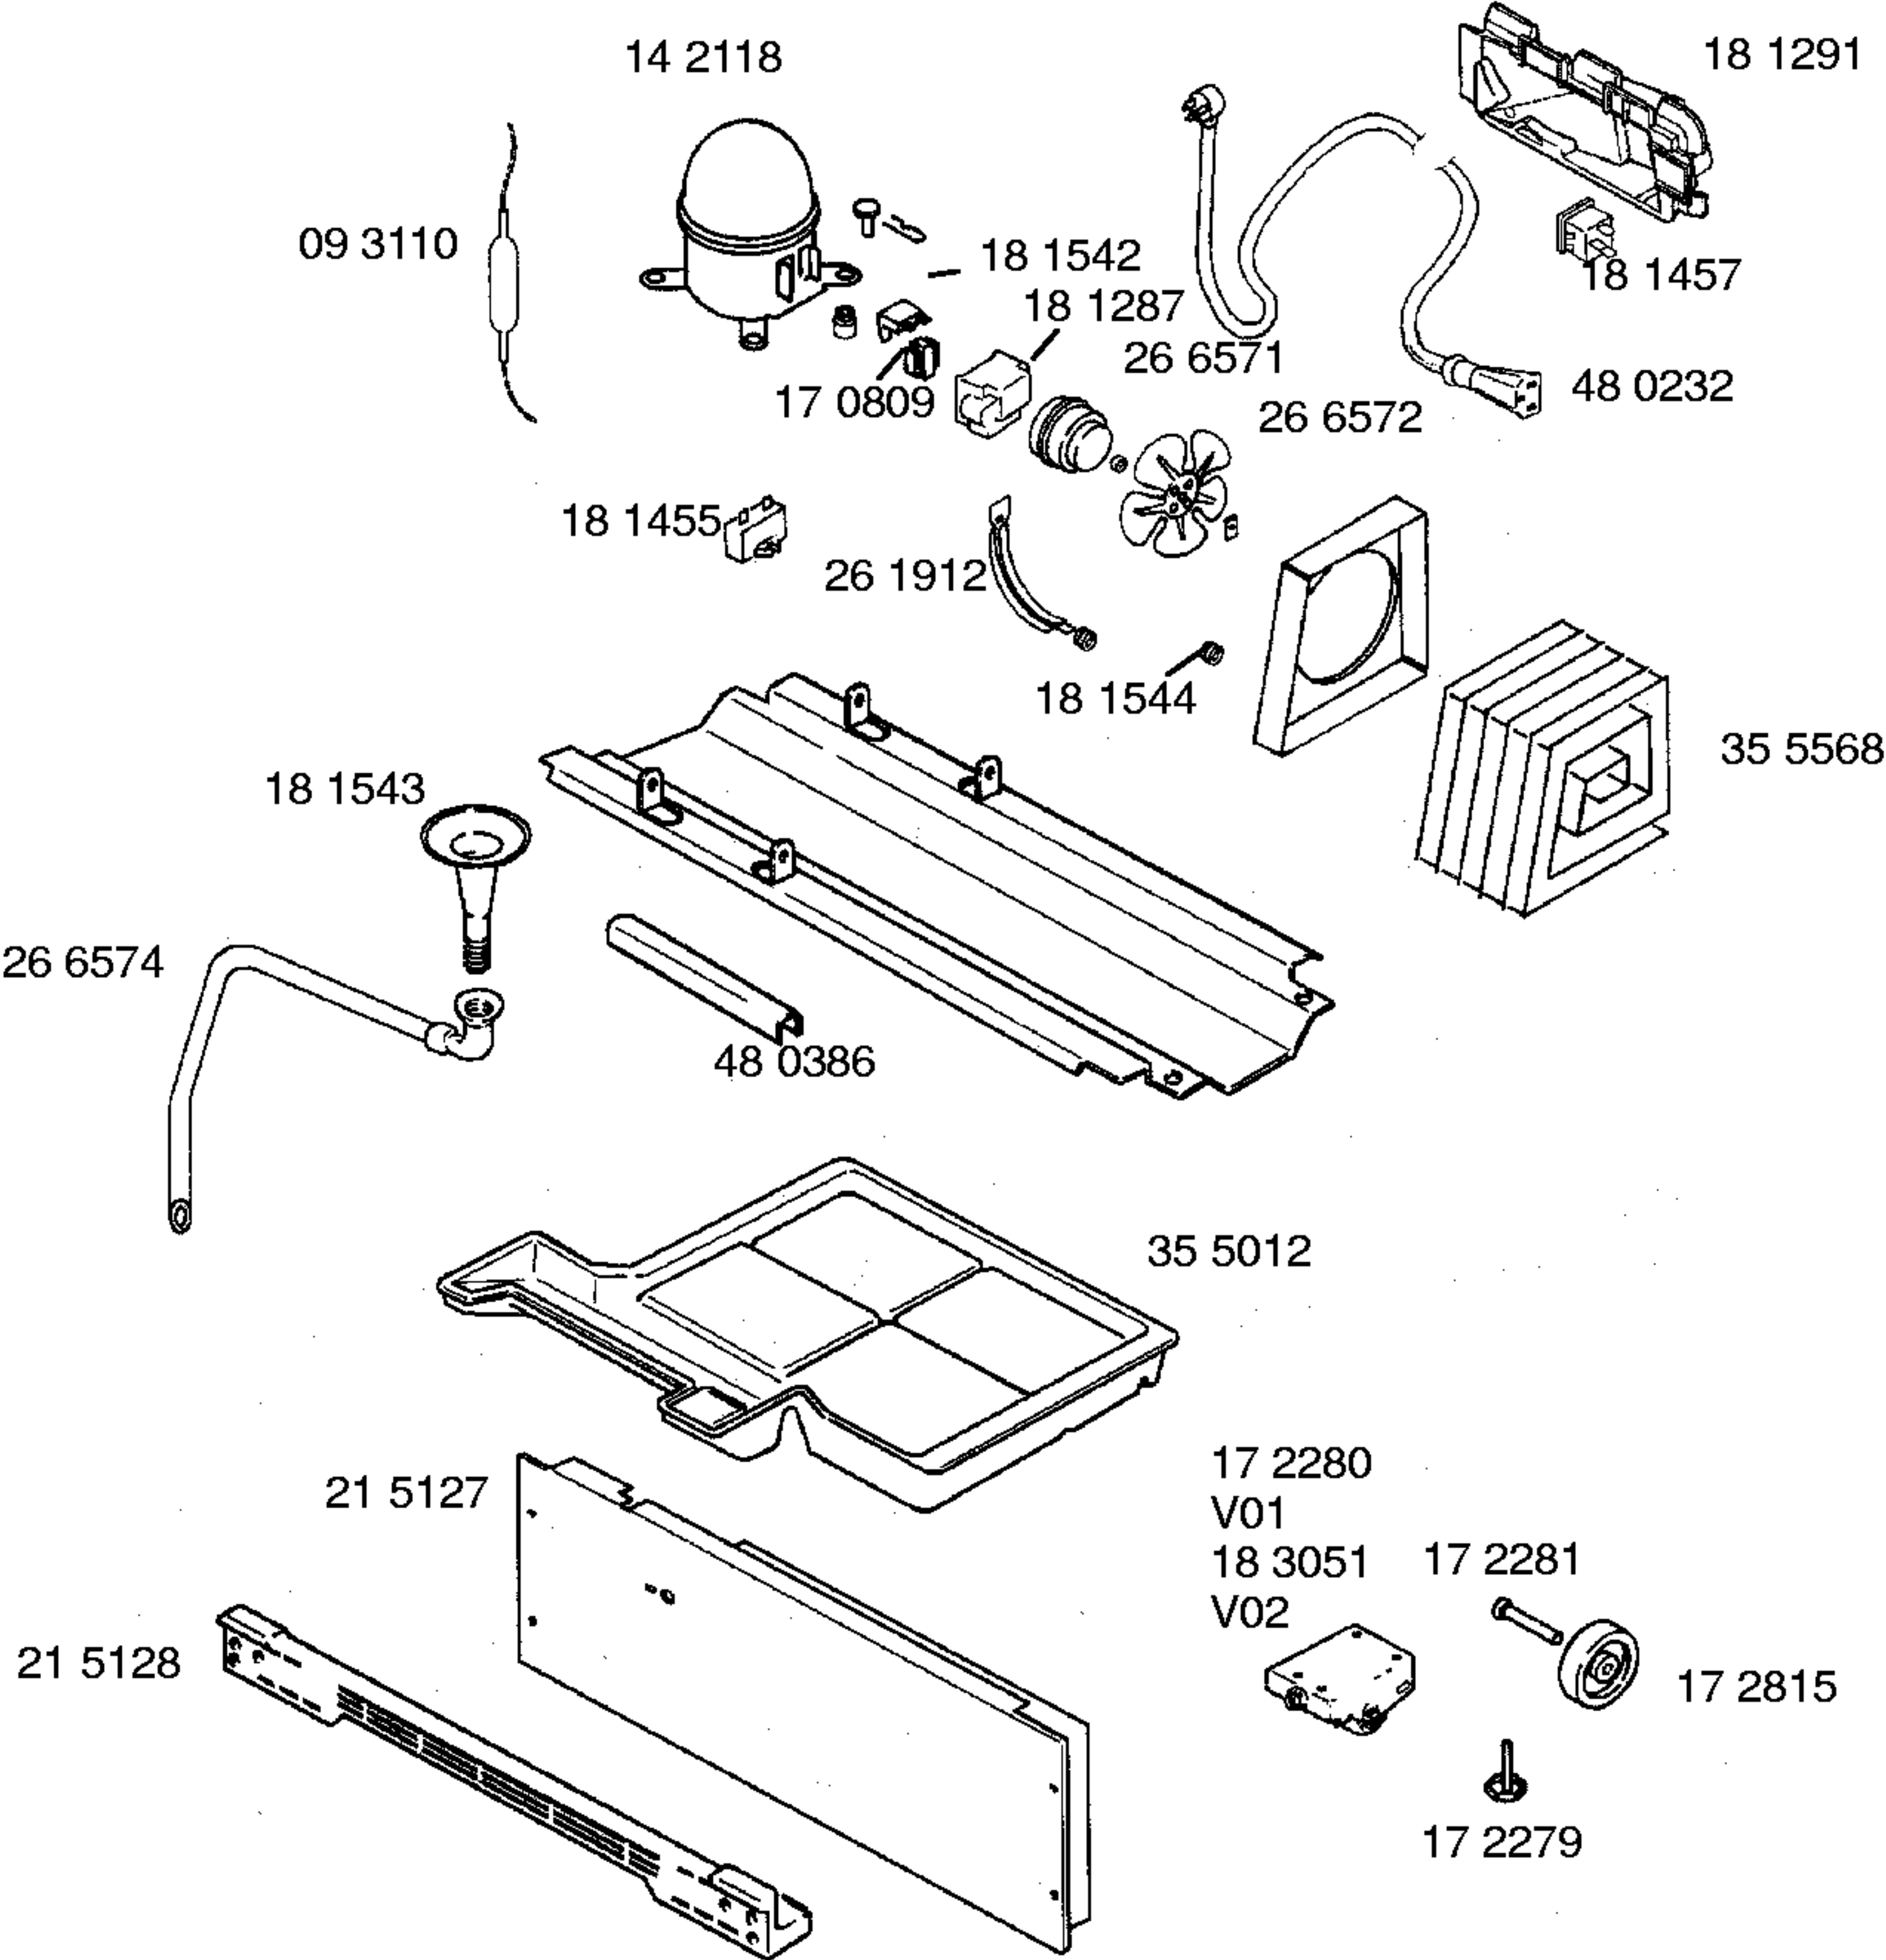


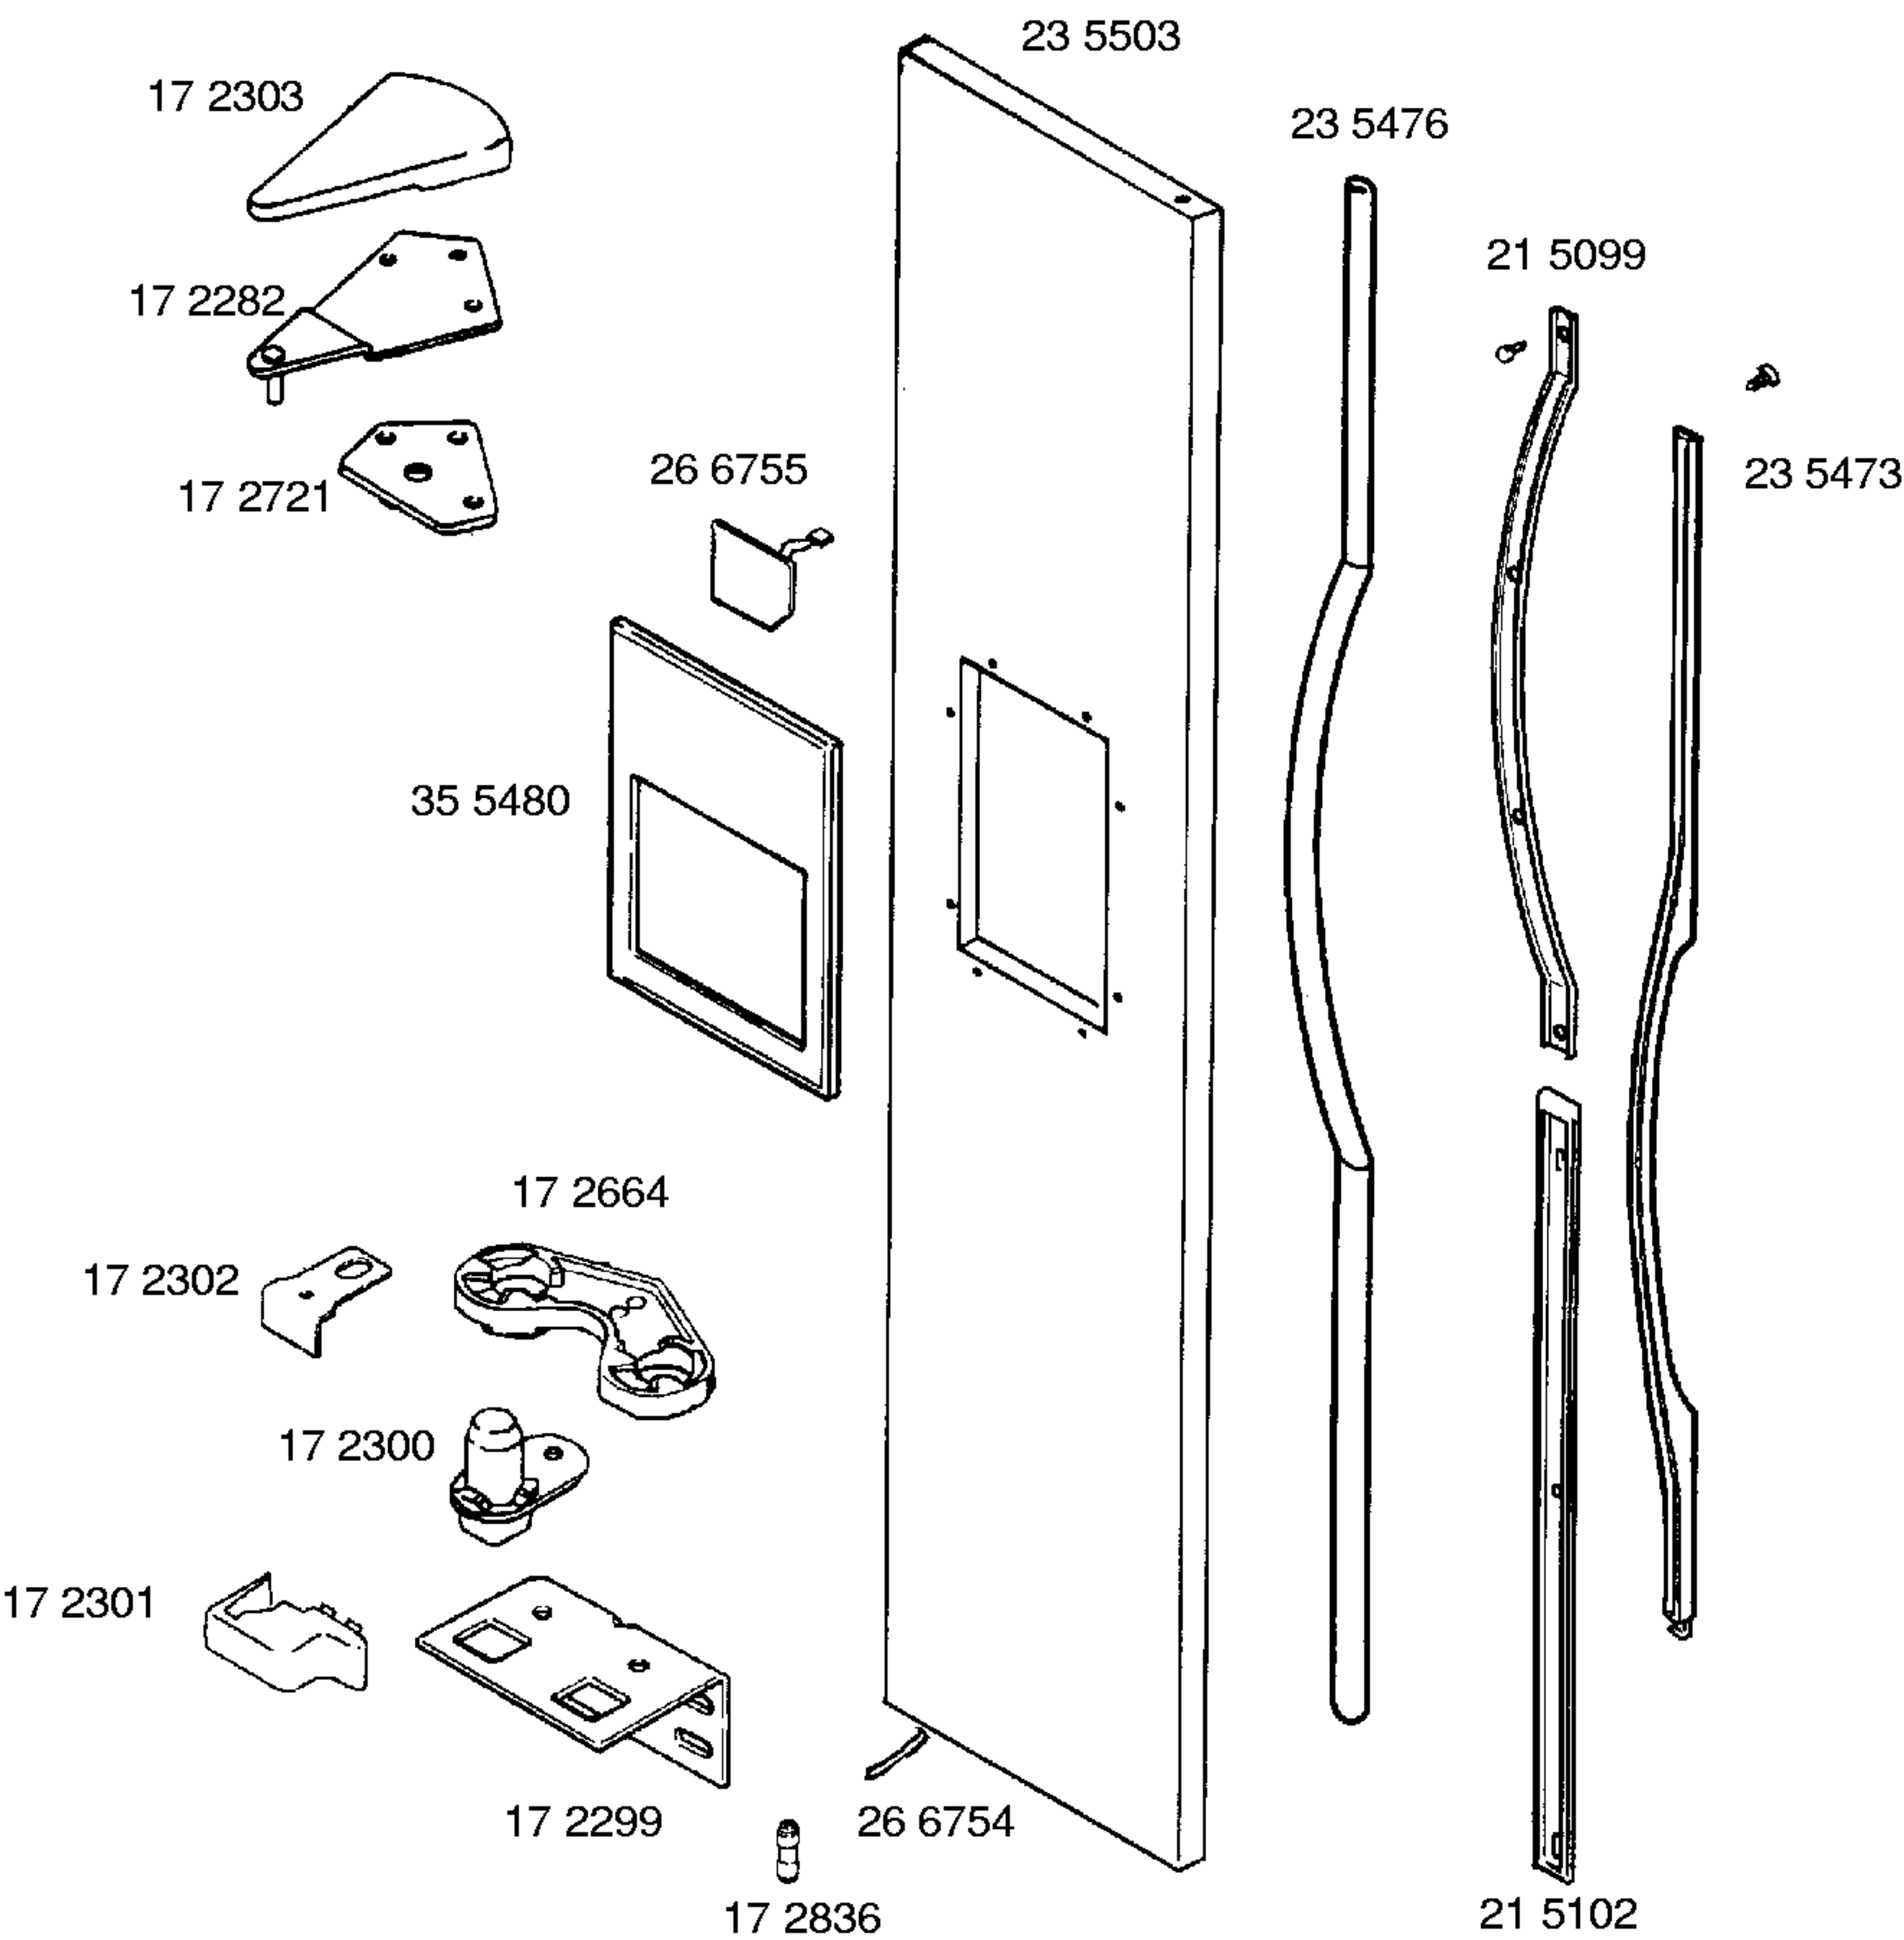

Mat. – Nr. – Konstante
3740

Mat. – Nr. – Konstante
3740

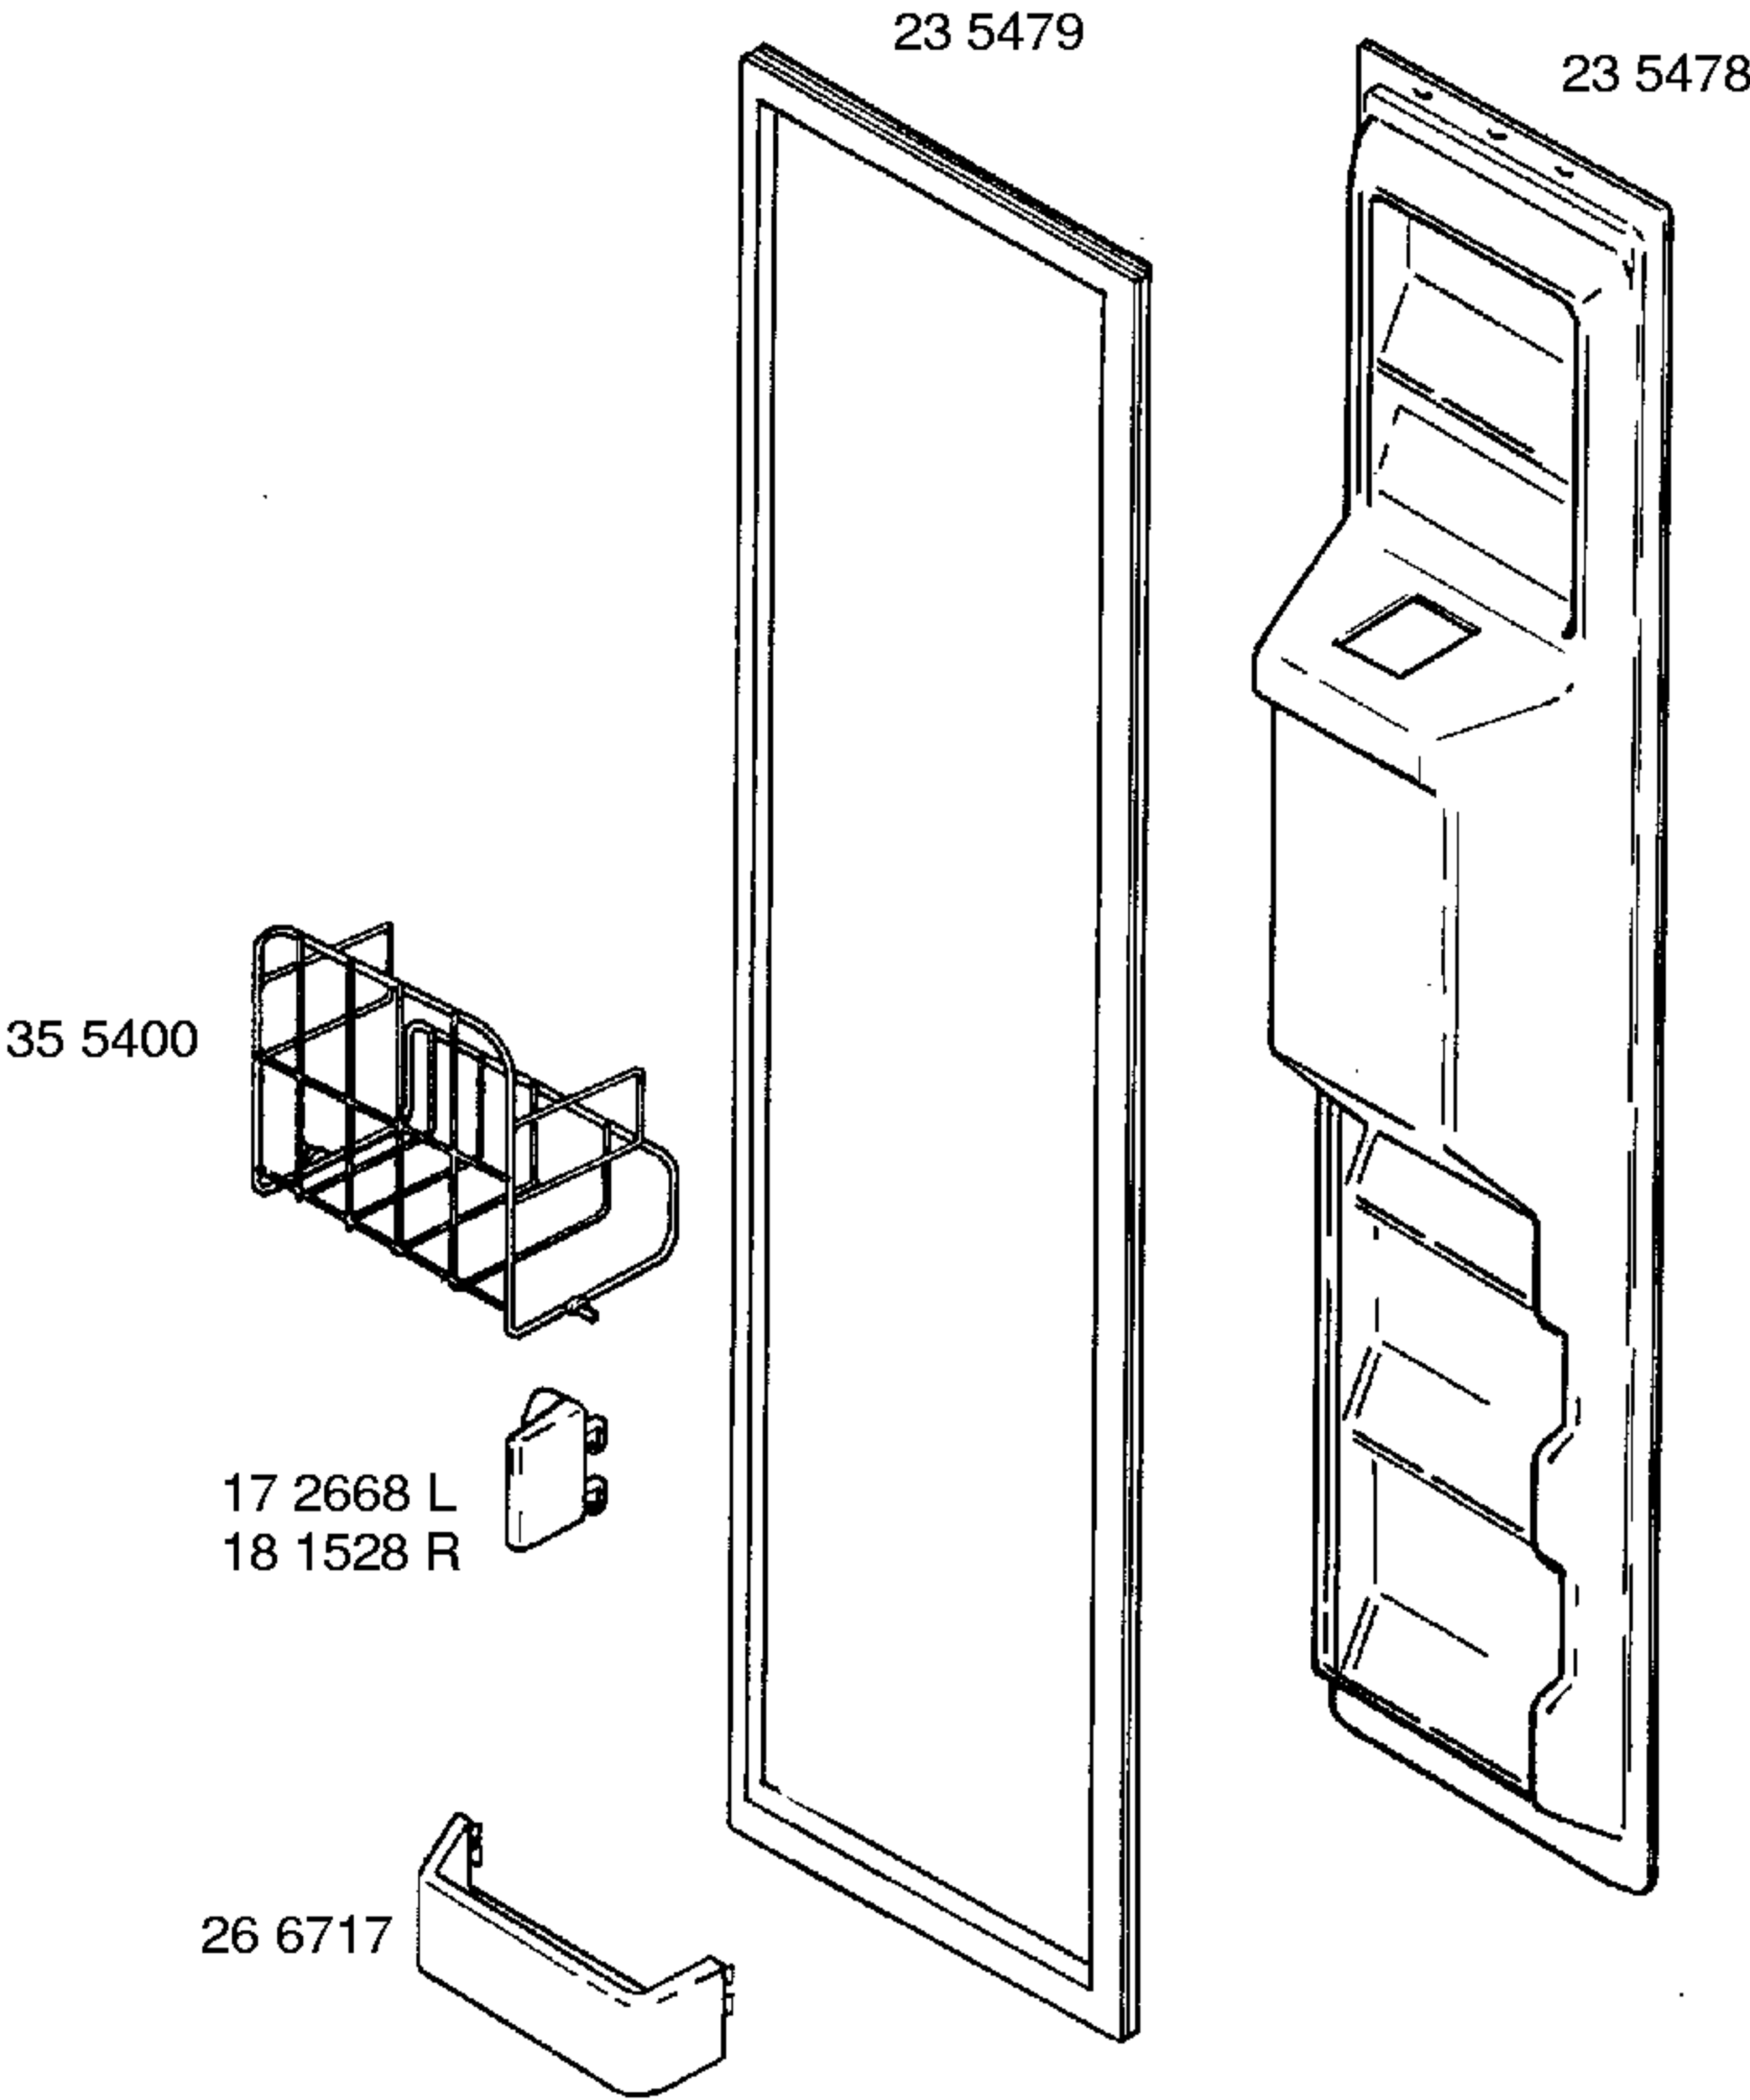

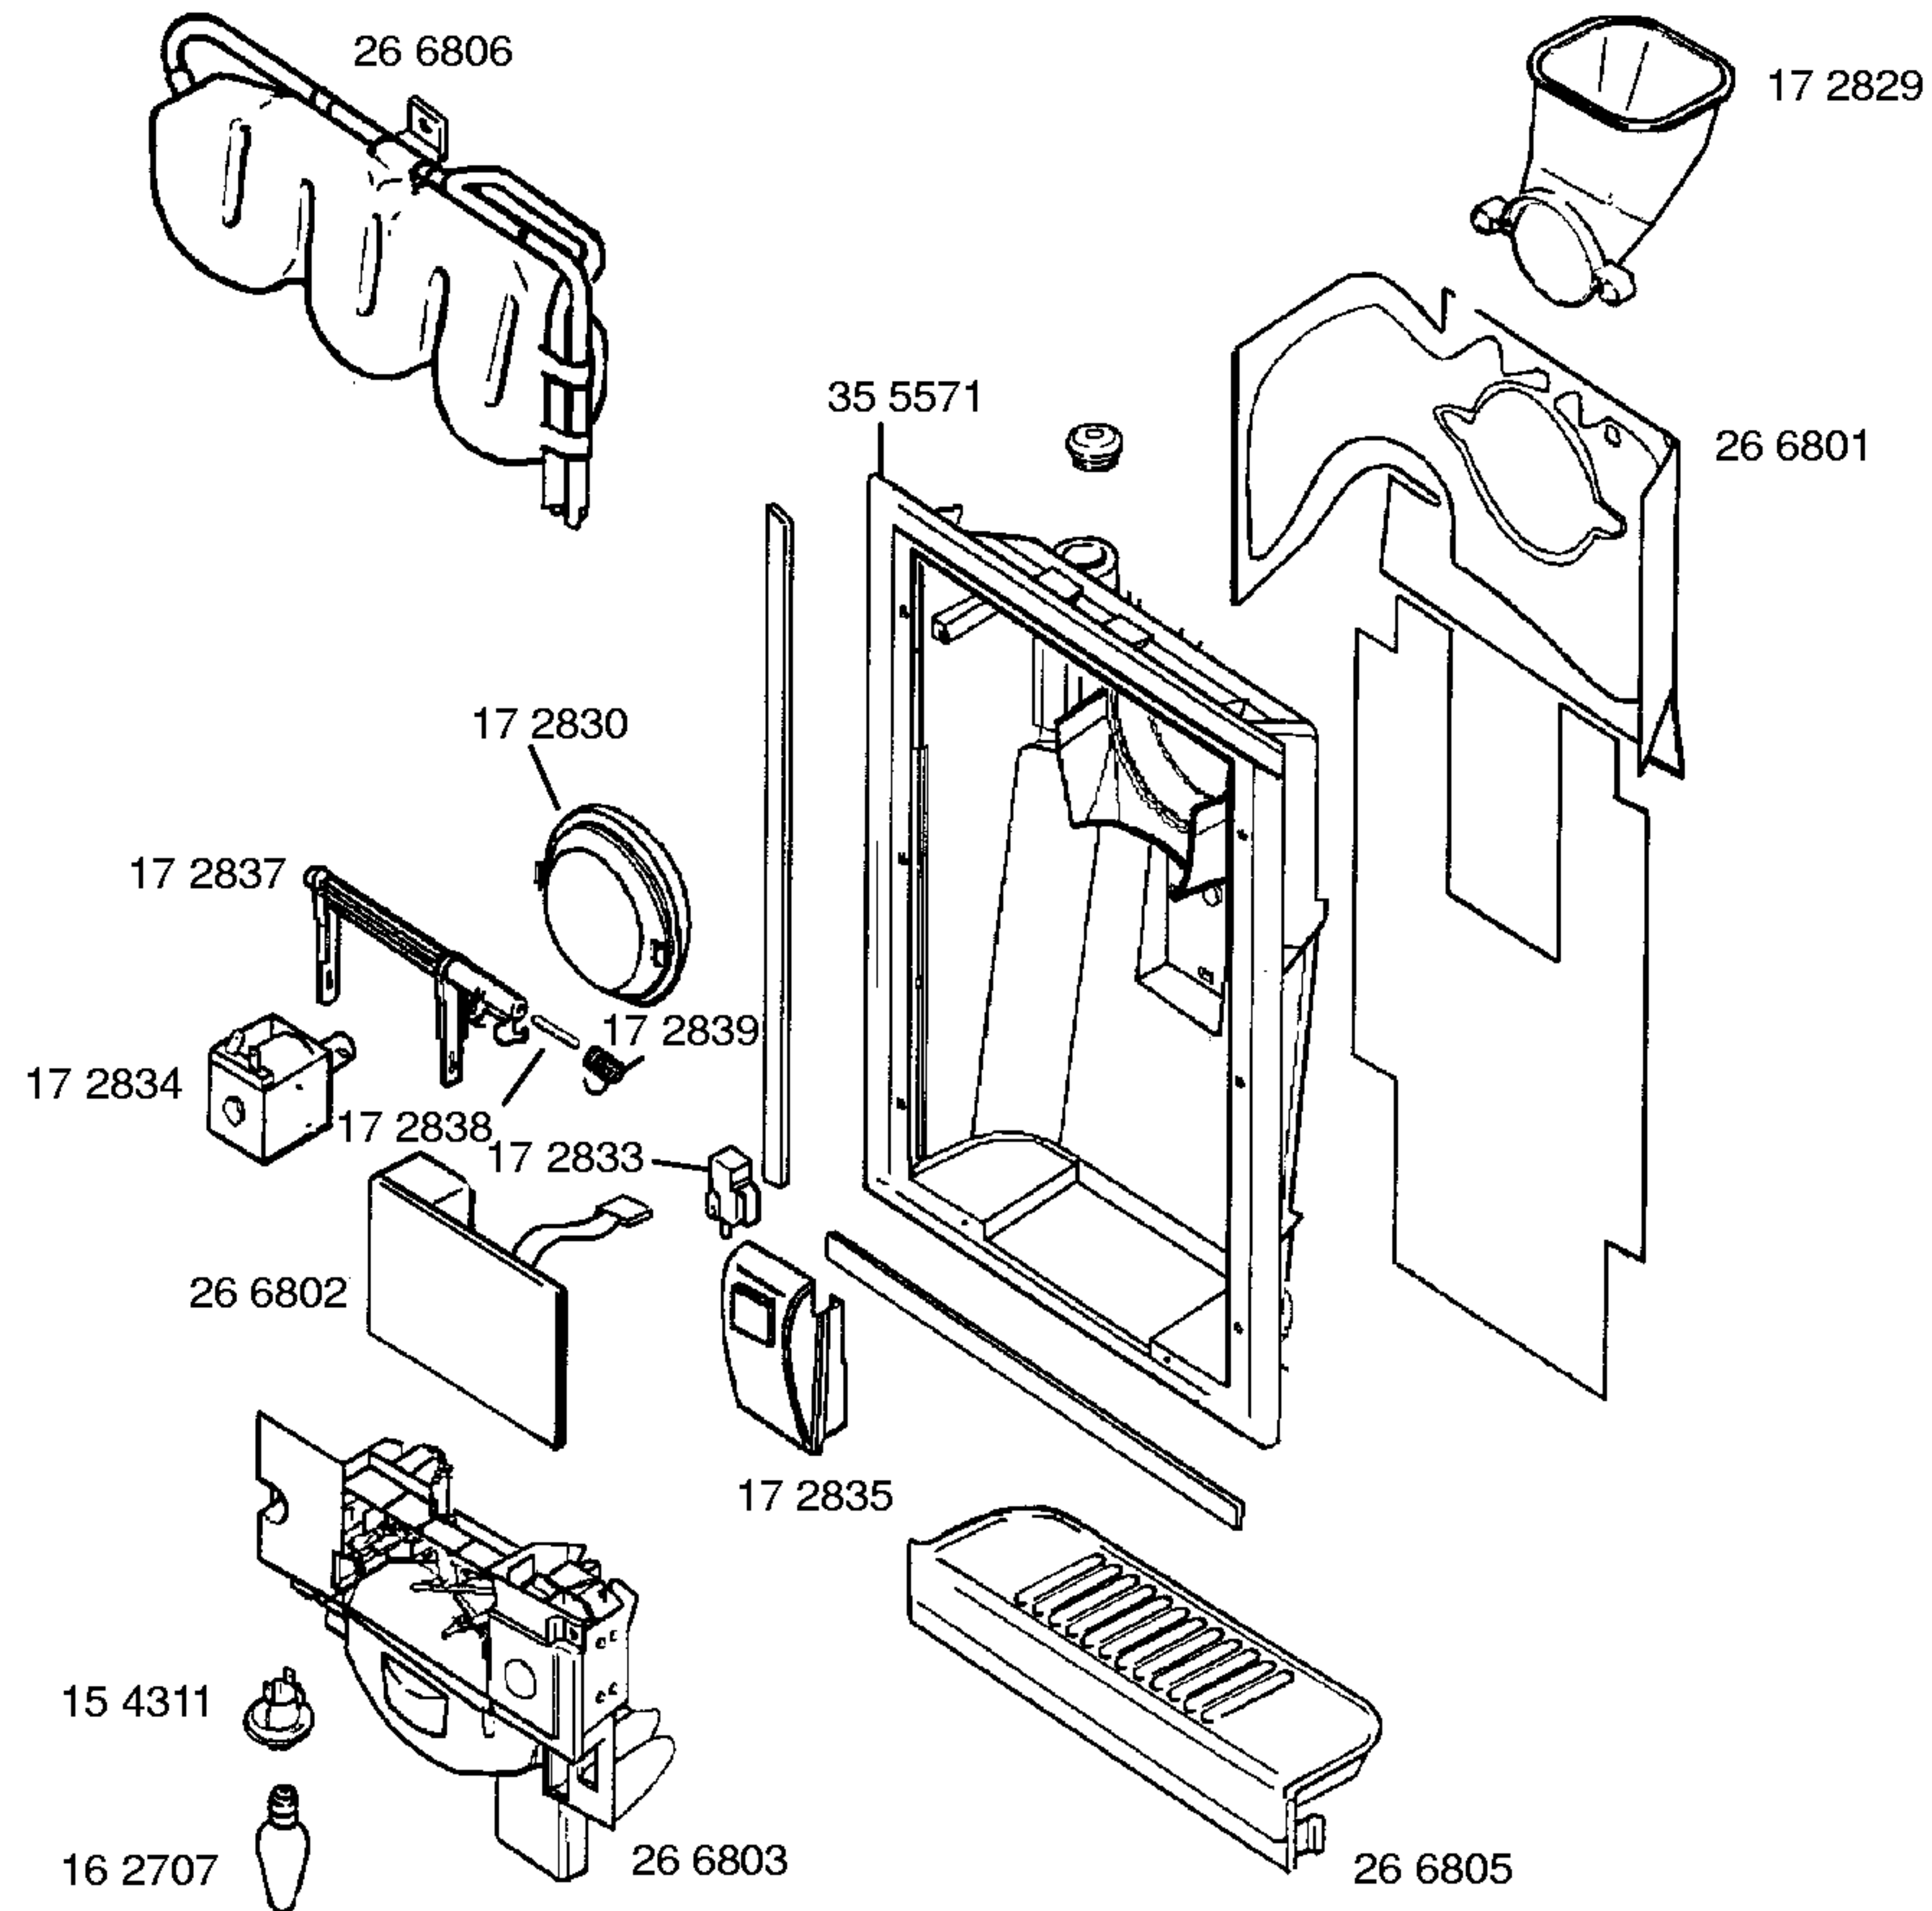

Mat. – Nr. – Konstante
3740

Mat. – Nr. – Konstante
3740

