


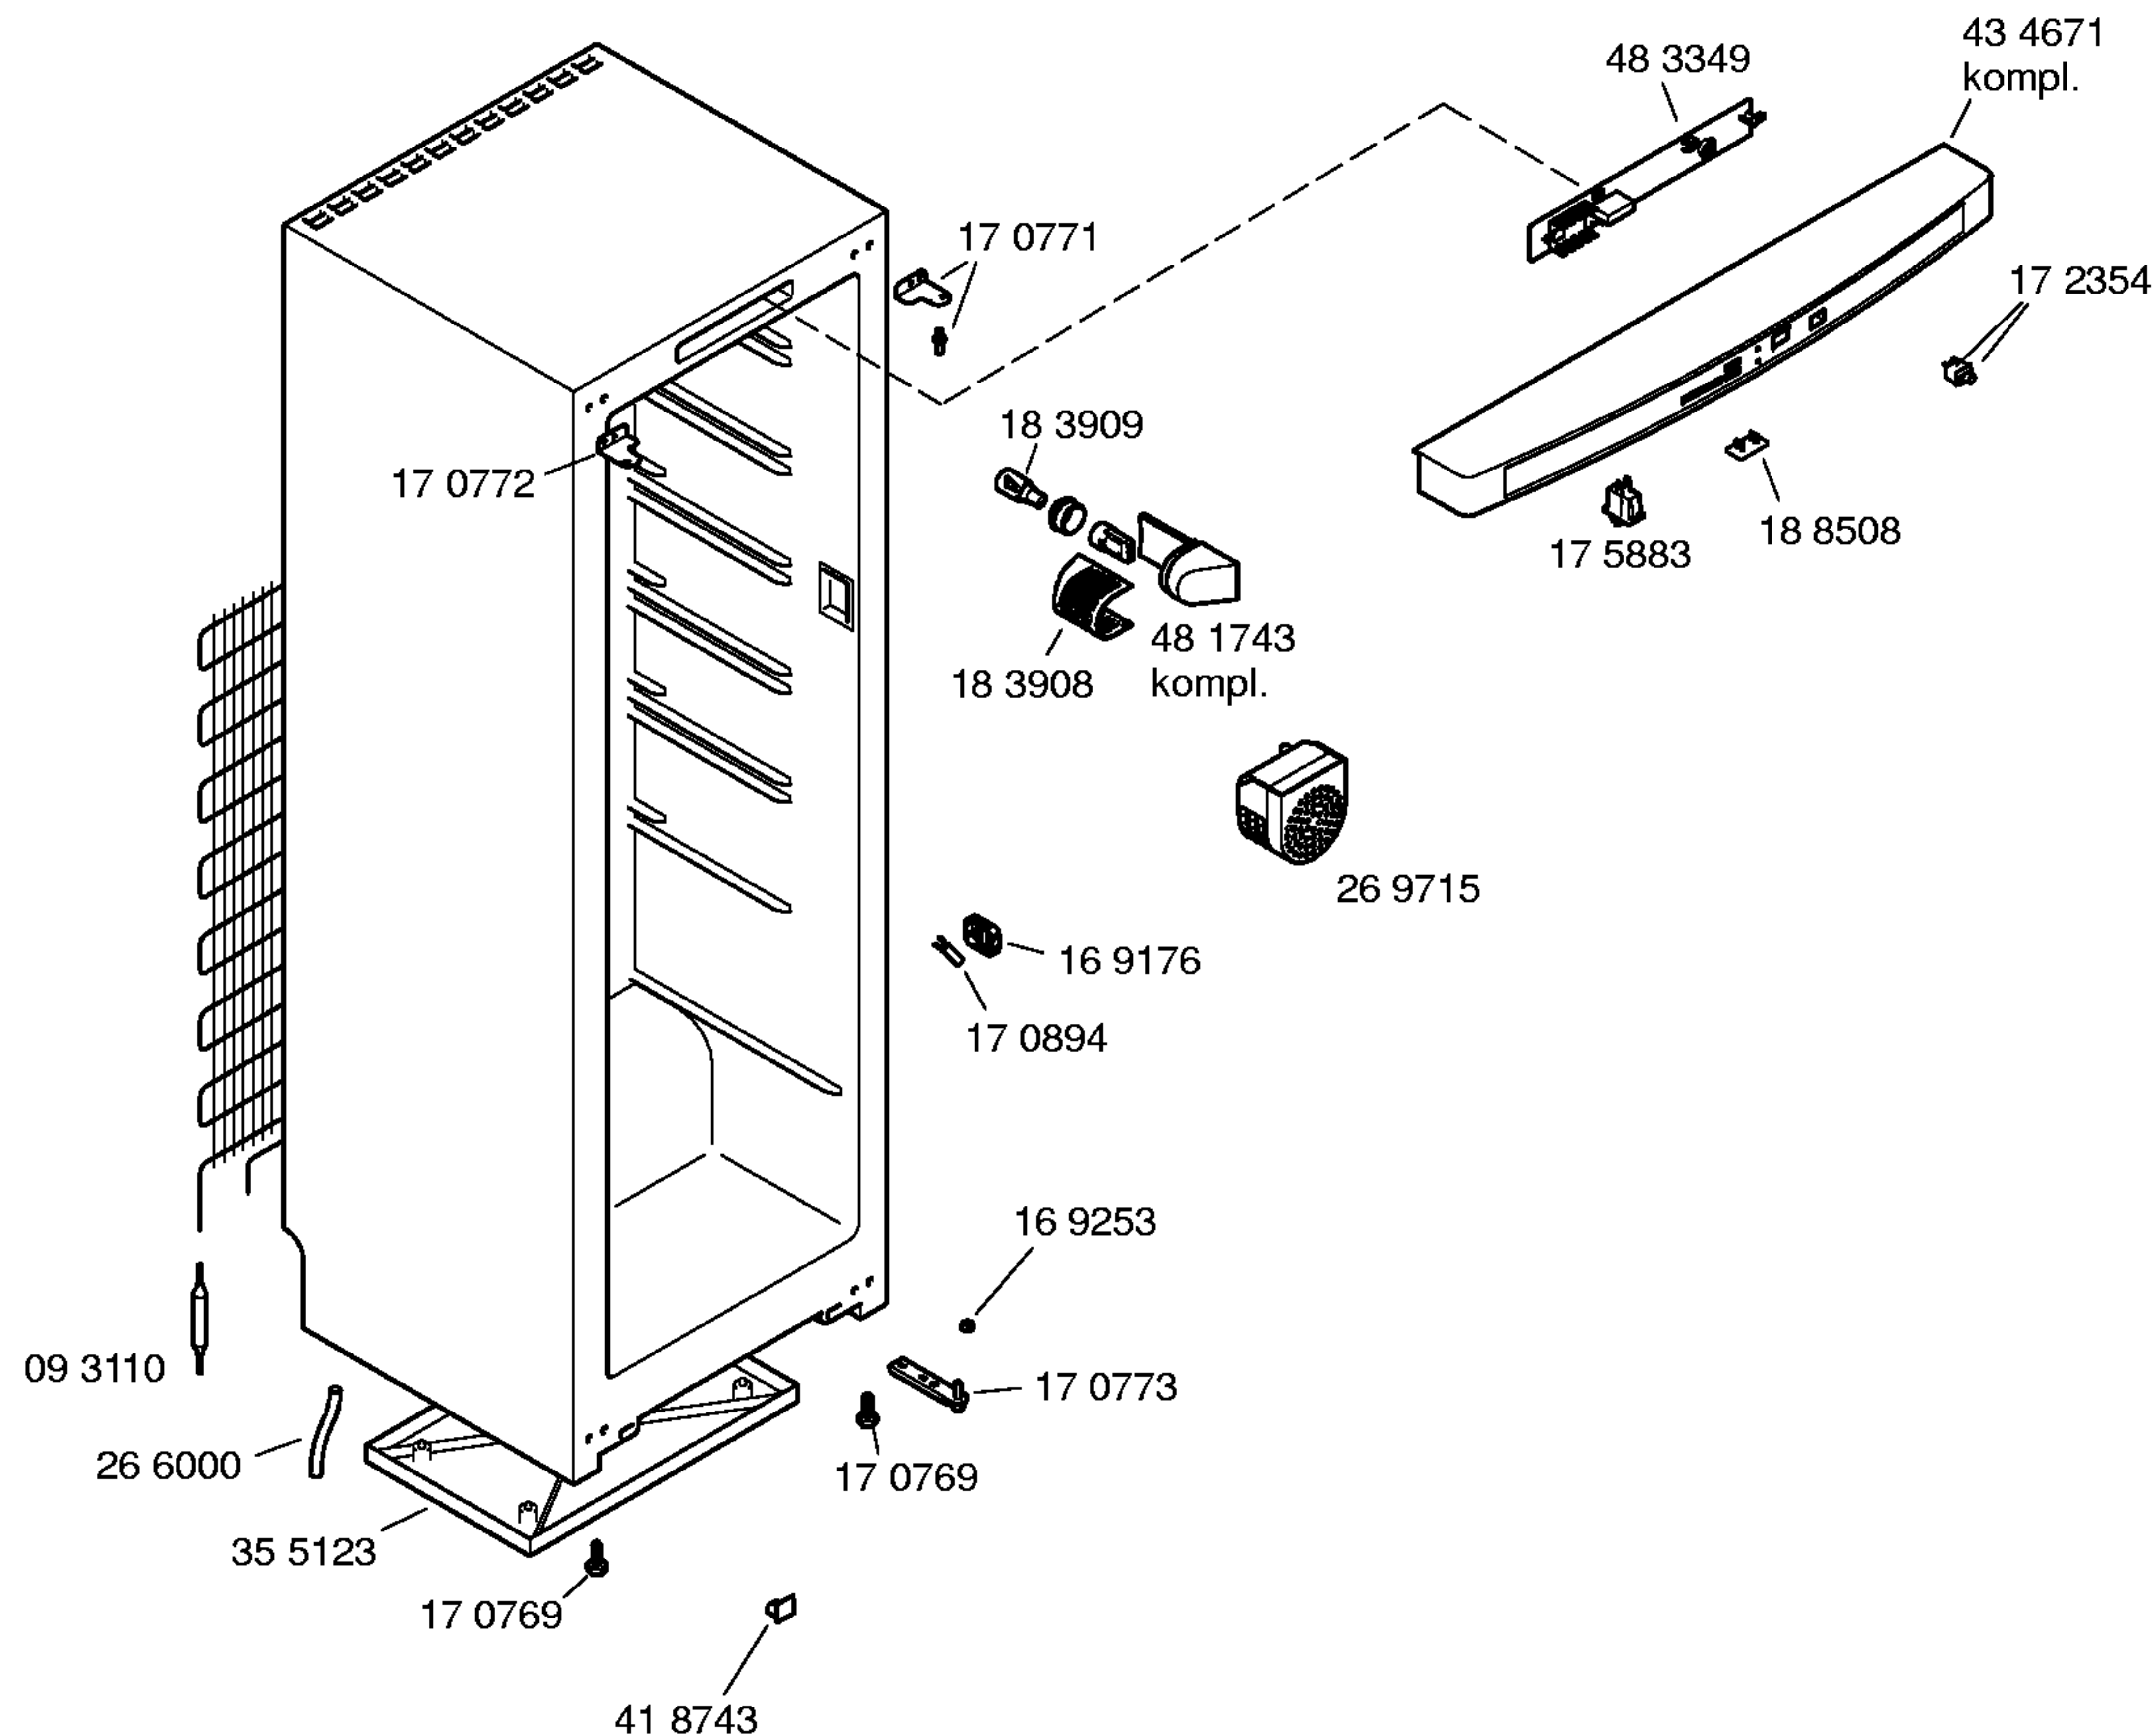


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 6651
(de,en,fr,it,nl,es,pt,gr)
58 6652
(da,no,sf,fi)


Montageanleitung
58 0241

Beistellsatz
18 1139

Mat. – Nr. – Konstante
3740

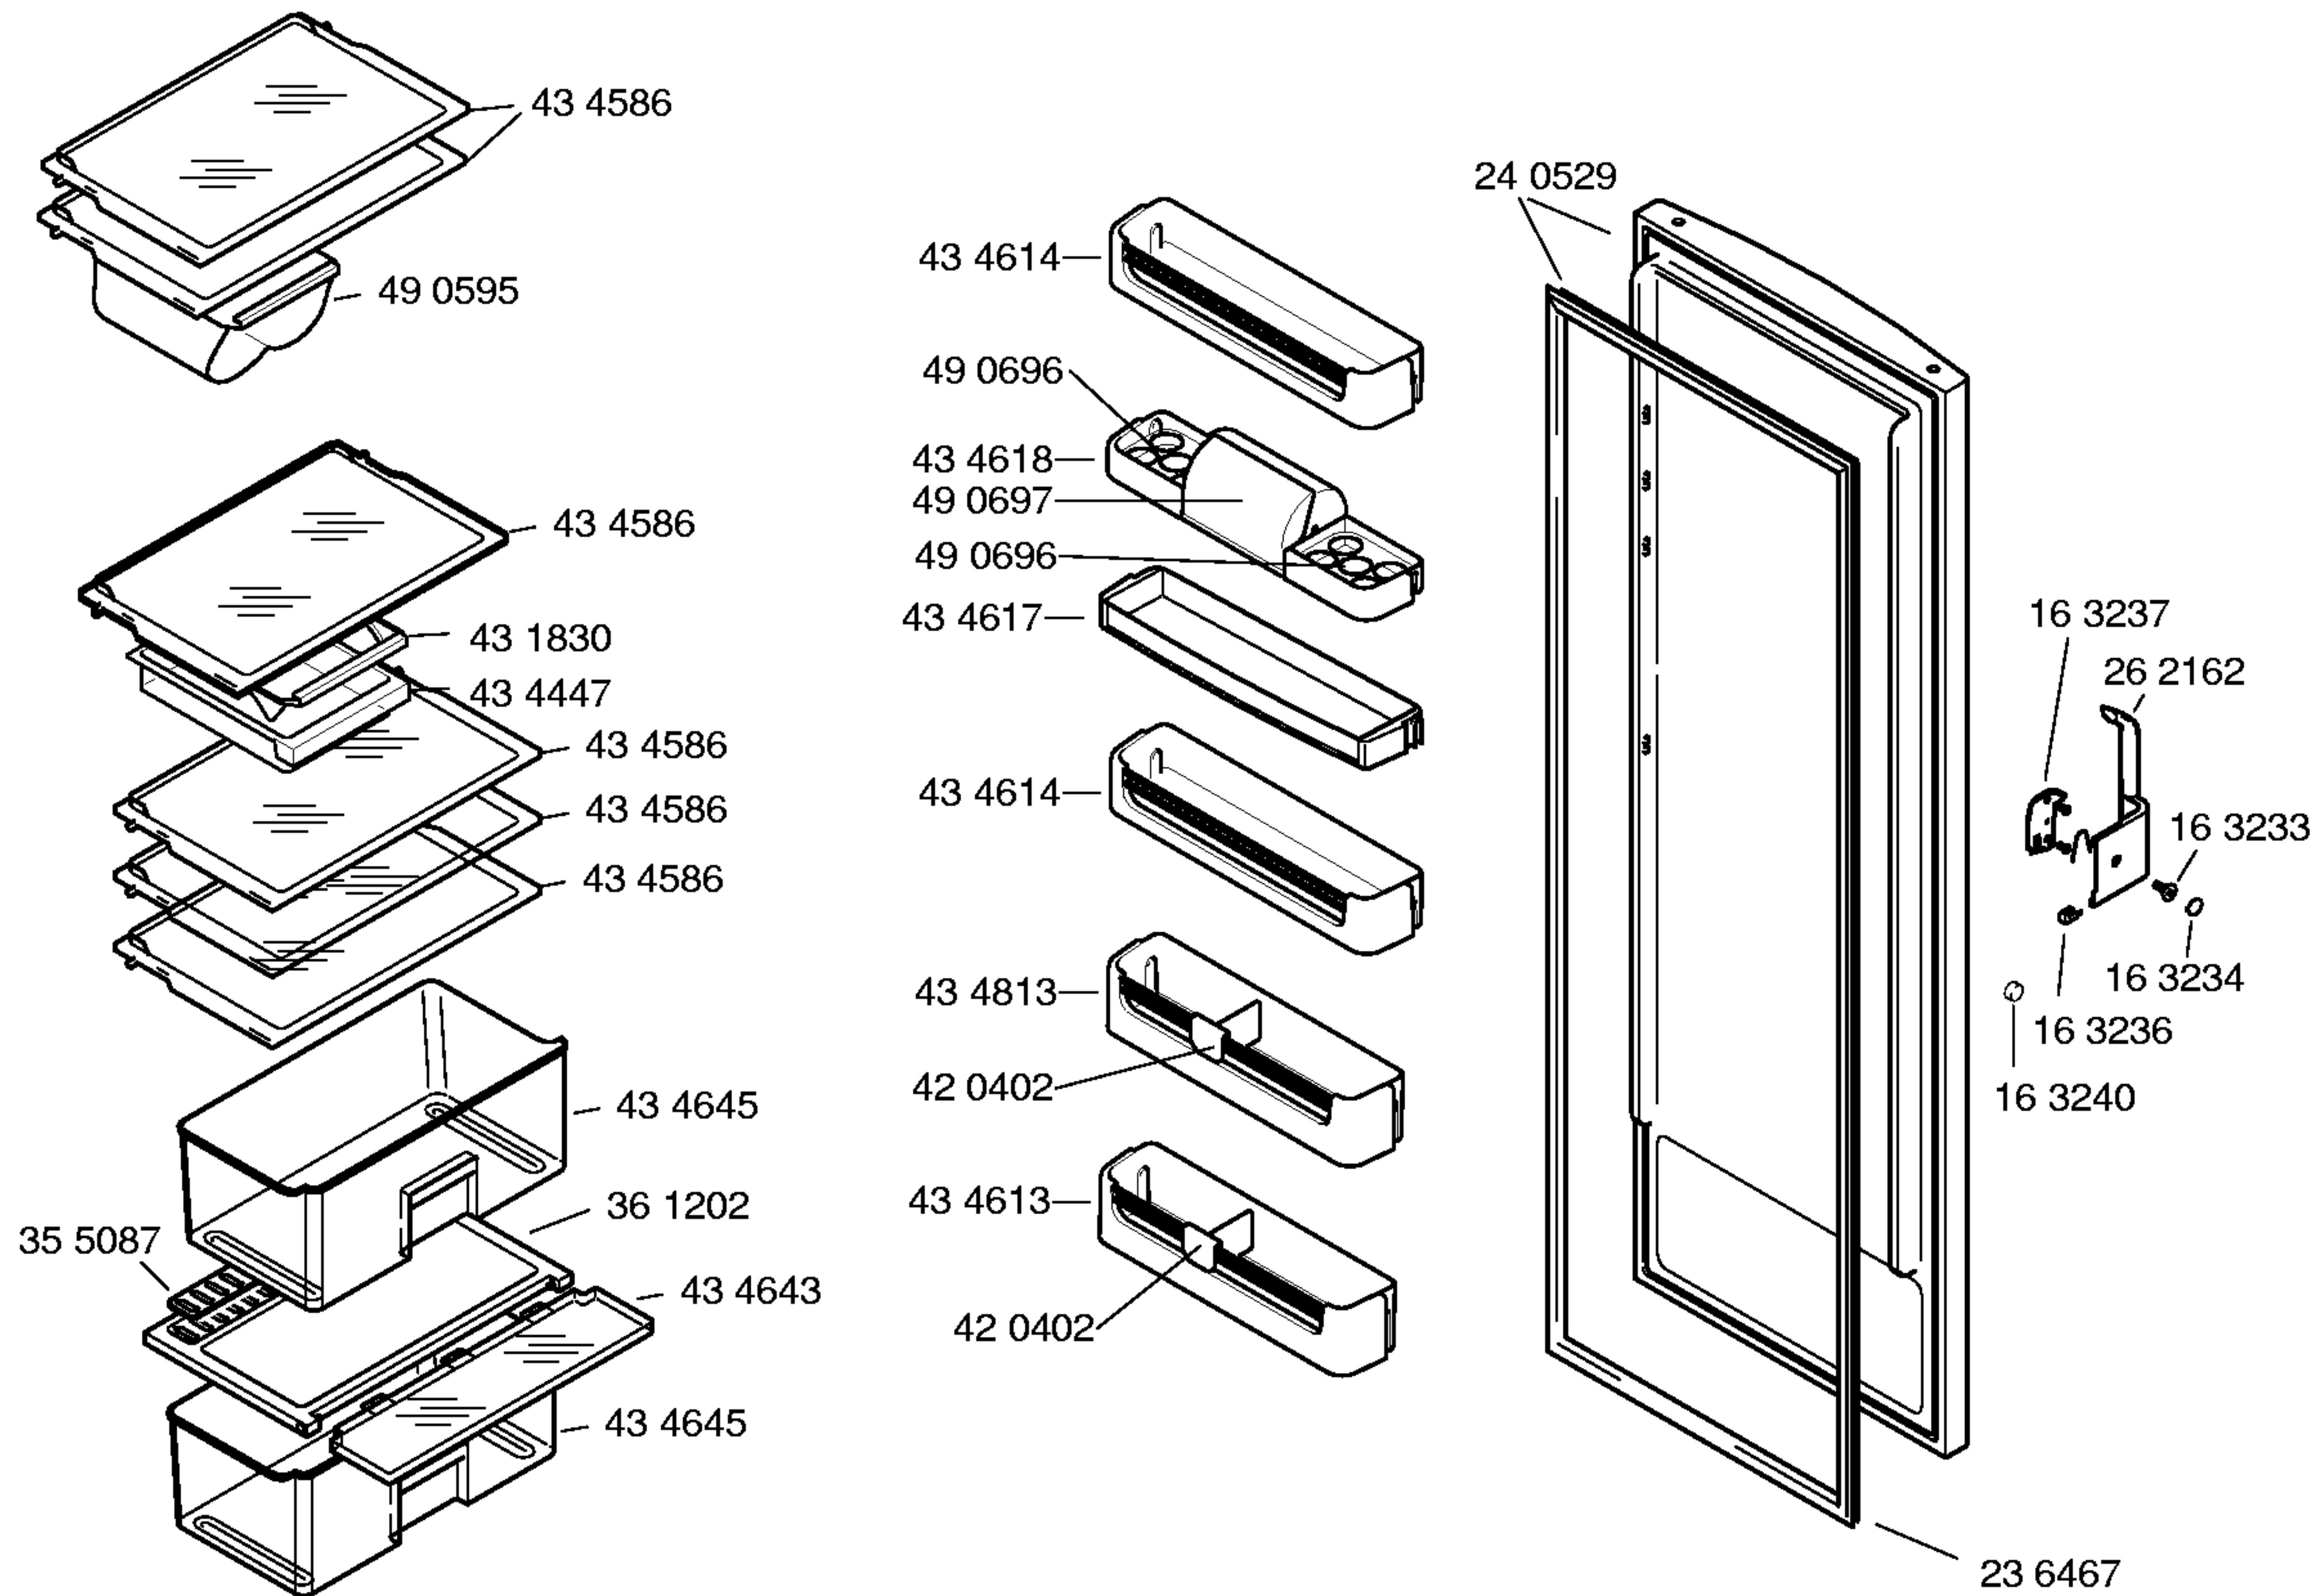

Mat. – Nr. – Konstante
3740

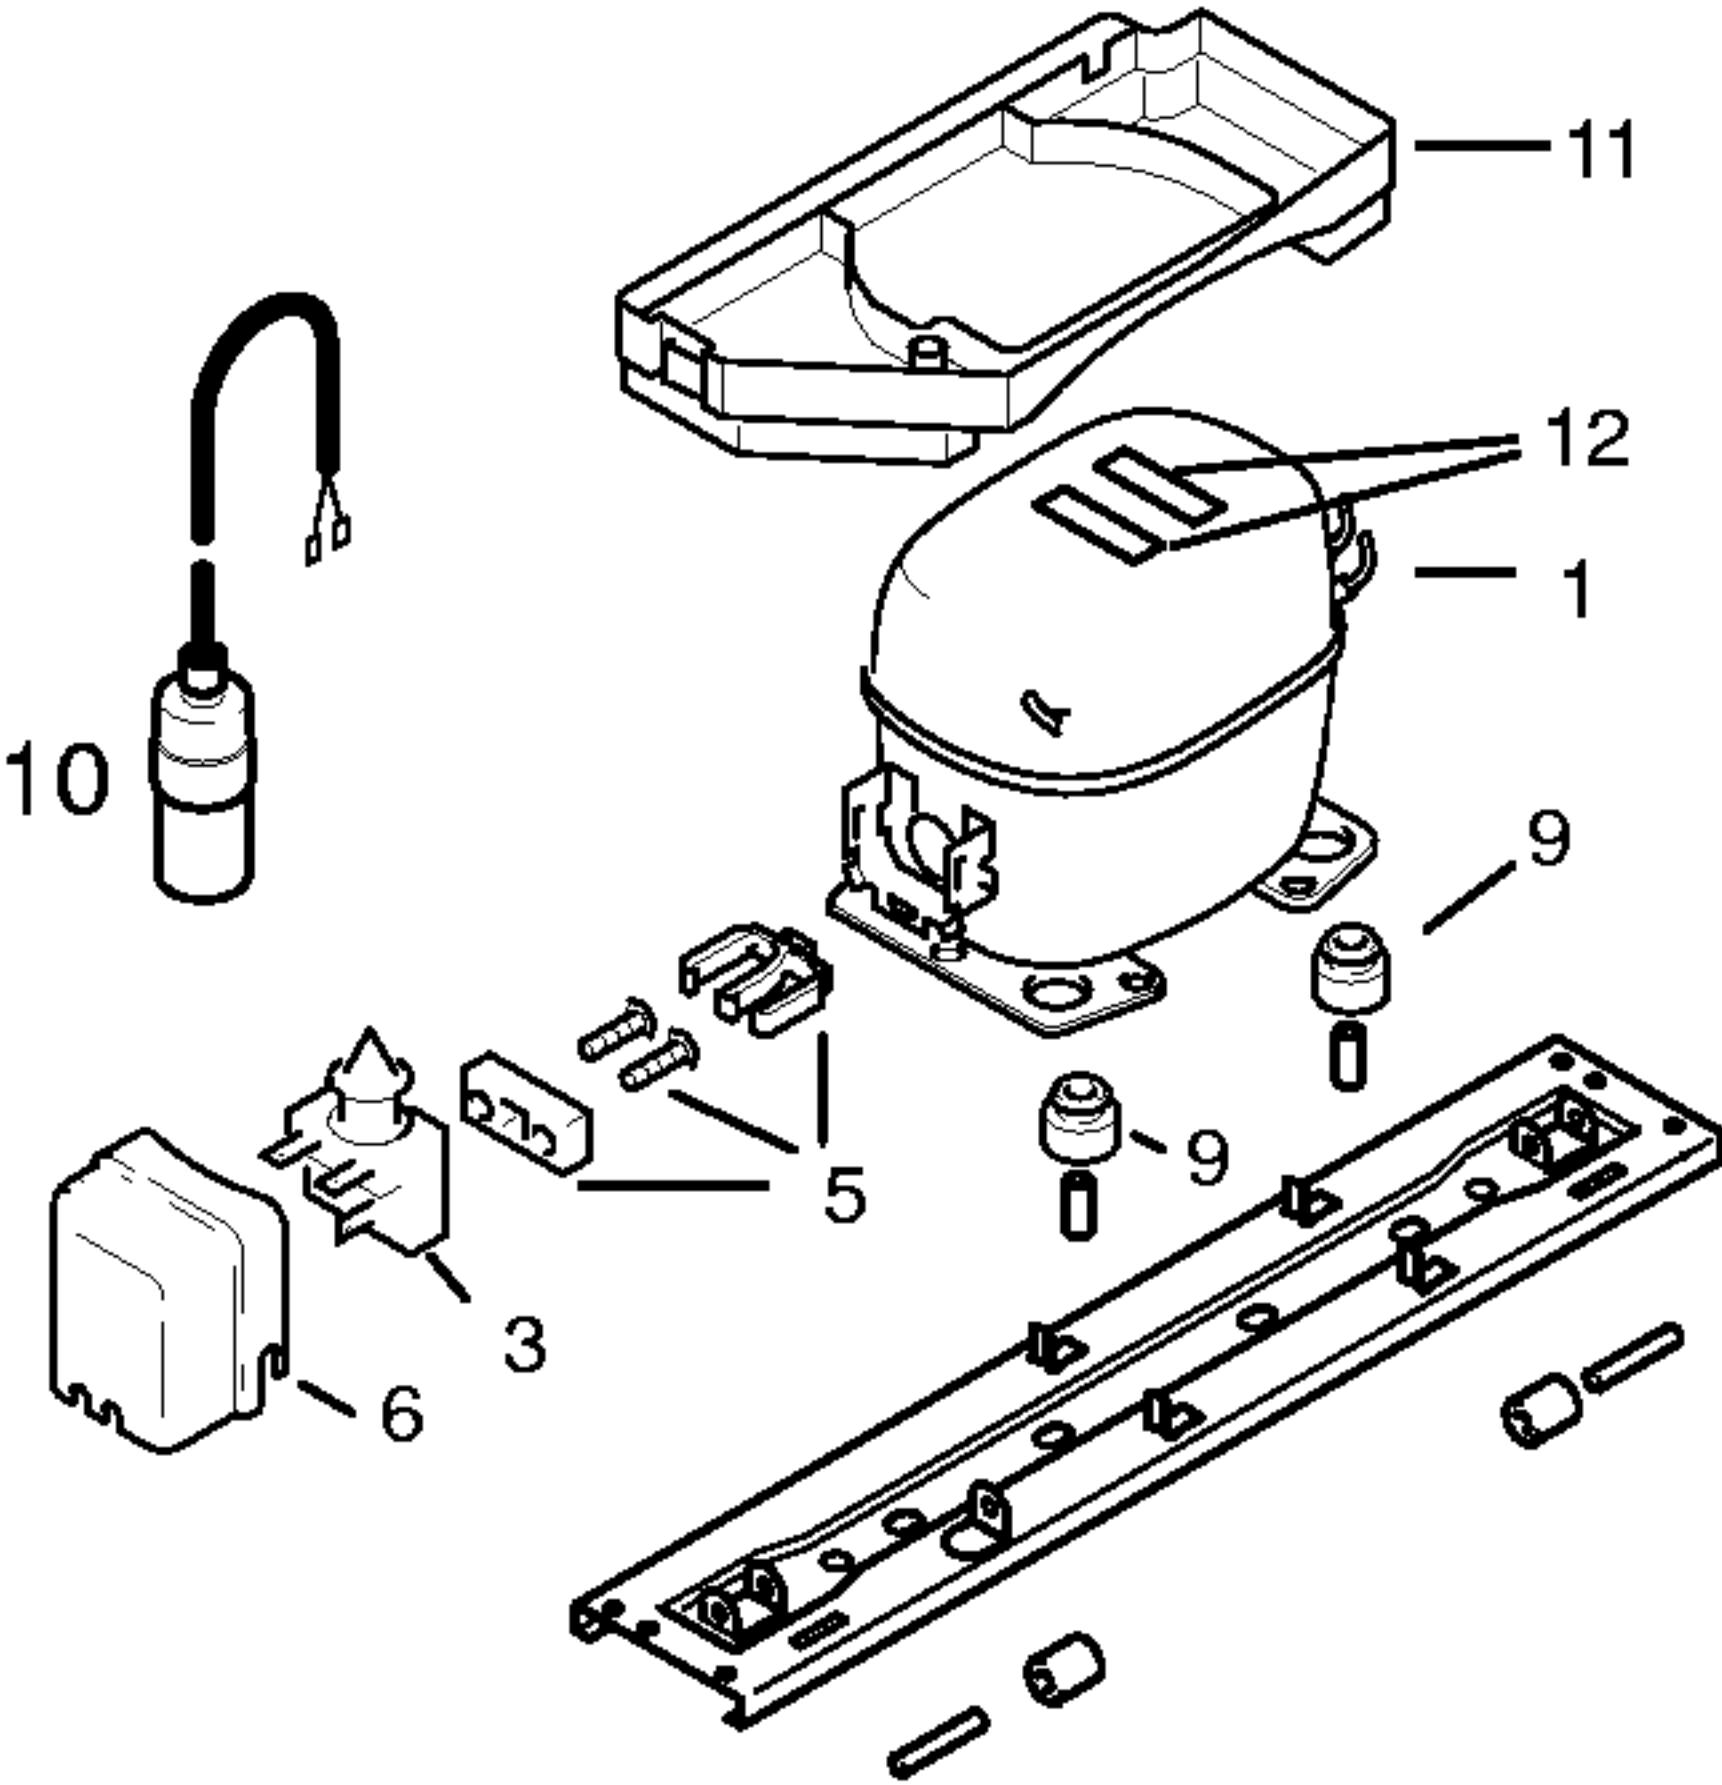

Pos.	V01		
	Goldstar NDA62NAEM		
1	14 2037		
2			
3	17 0743		
4			
5	17 0745		
6	17 0744		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 9660		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Goldstar			
Typ/Type		NDA69NAEM			
Förderleistung/Delivery/Débit		l/h		1120	
Anlaufstrom/Starting current/Cour de démarrage		A			
Widerstand/Resistance/Résistance		Ω			
Hi/main/prin		Ω			
Hi/aux		Ω			
Temp.–Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values		"warm"			
Valeurs de commutation		"kalt"			
		"alarm"			
Füllmenge/Fill.quantity/Charge		R600a		*	
Anschlußwert/Conn.load/Puiss. connectée		W		67	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
NTC–Fühler / Sensor		°C		kΩ	°C
		+10		9,95 ±0,18	–18 43,31 ±1,10
		+5		12,70 ±0,18	–22 54,66 ±1,59
		0		16,33 ±0,16	–26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild