


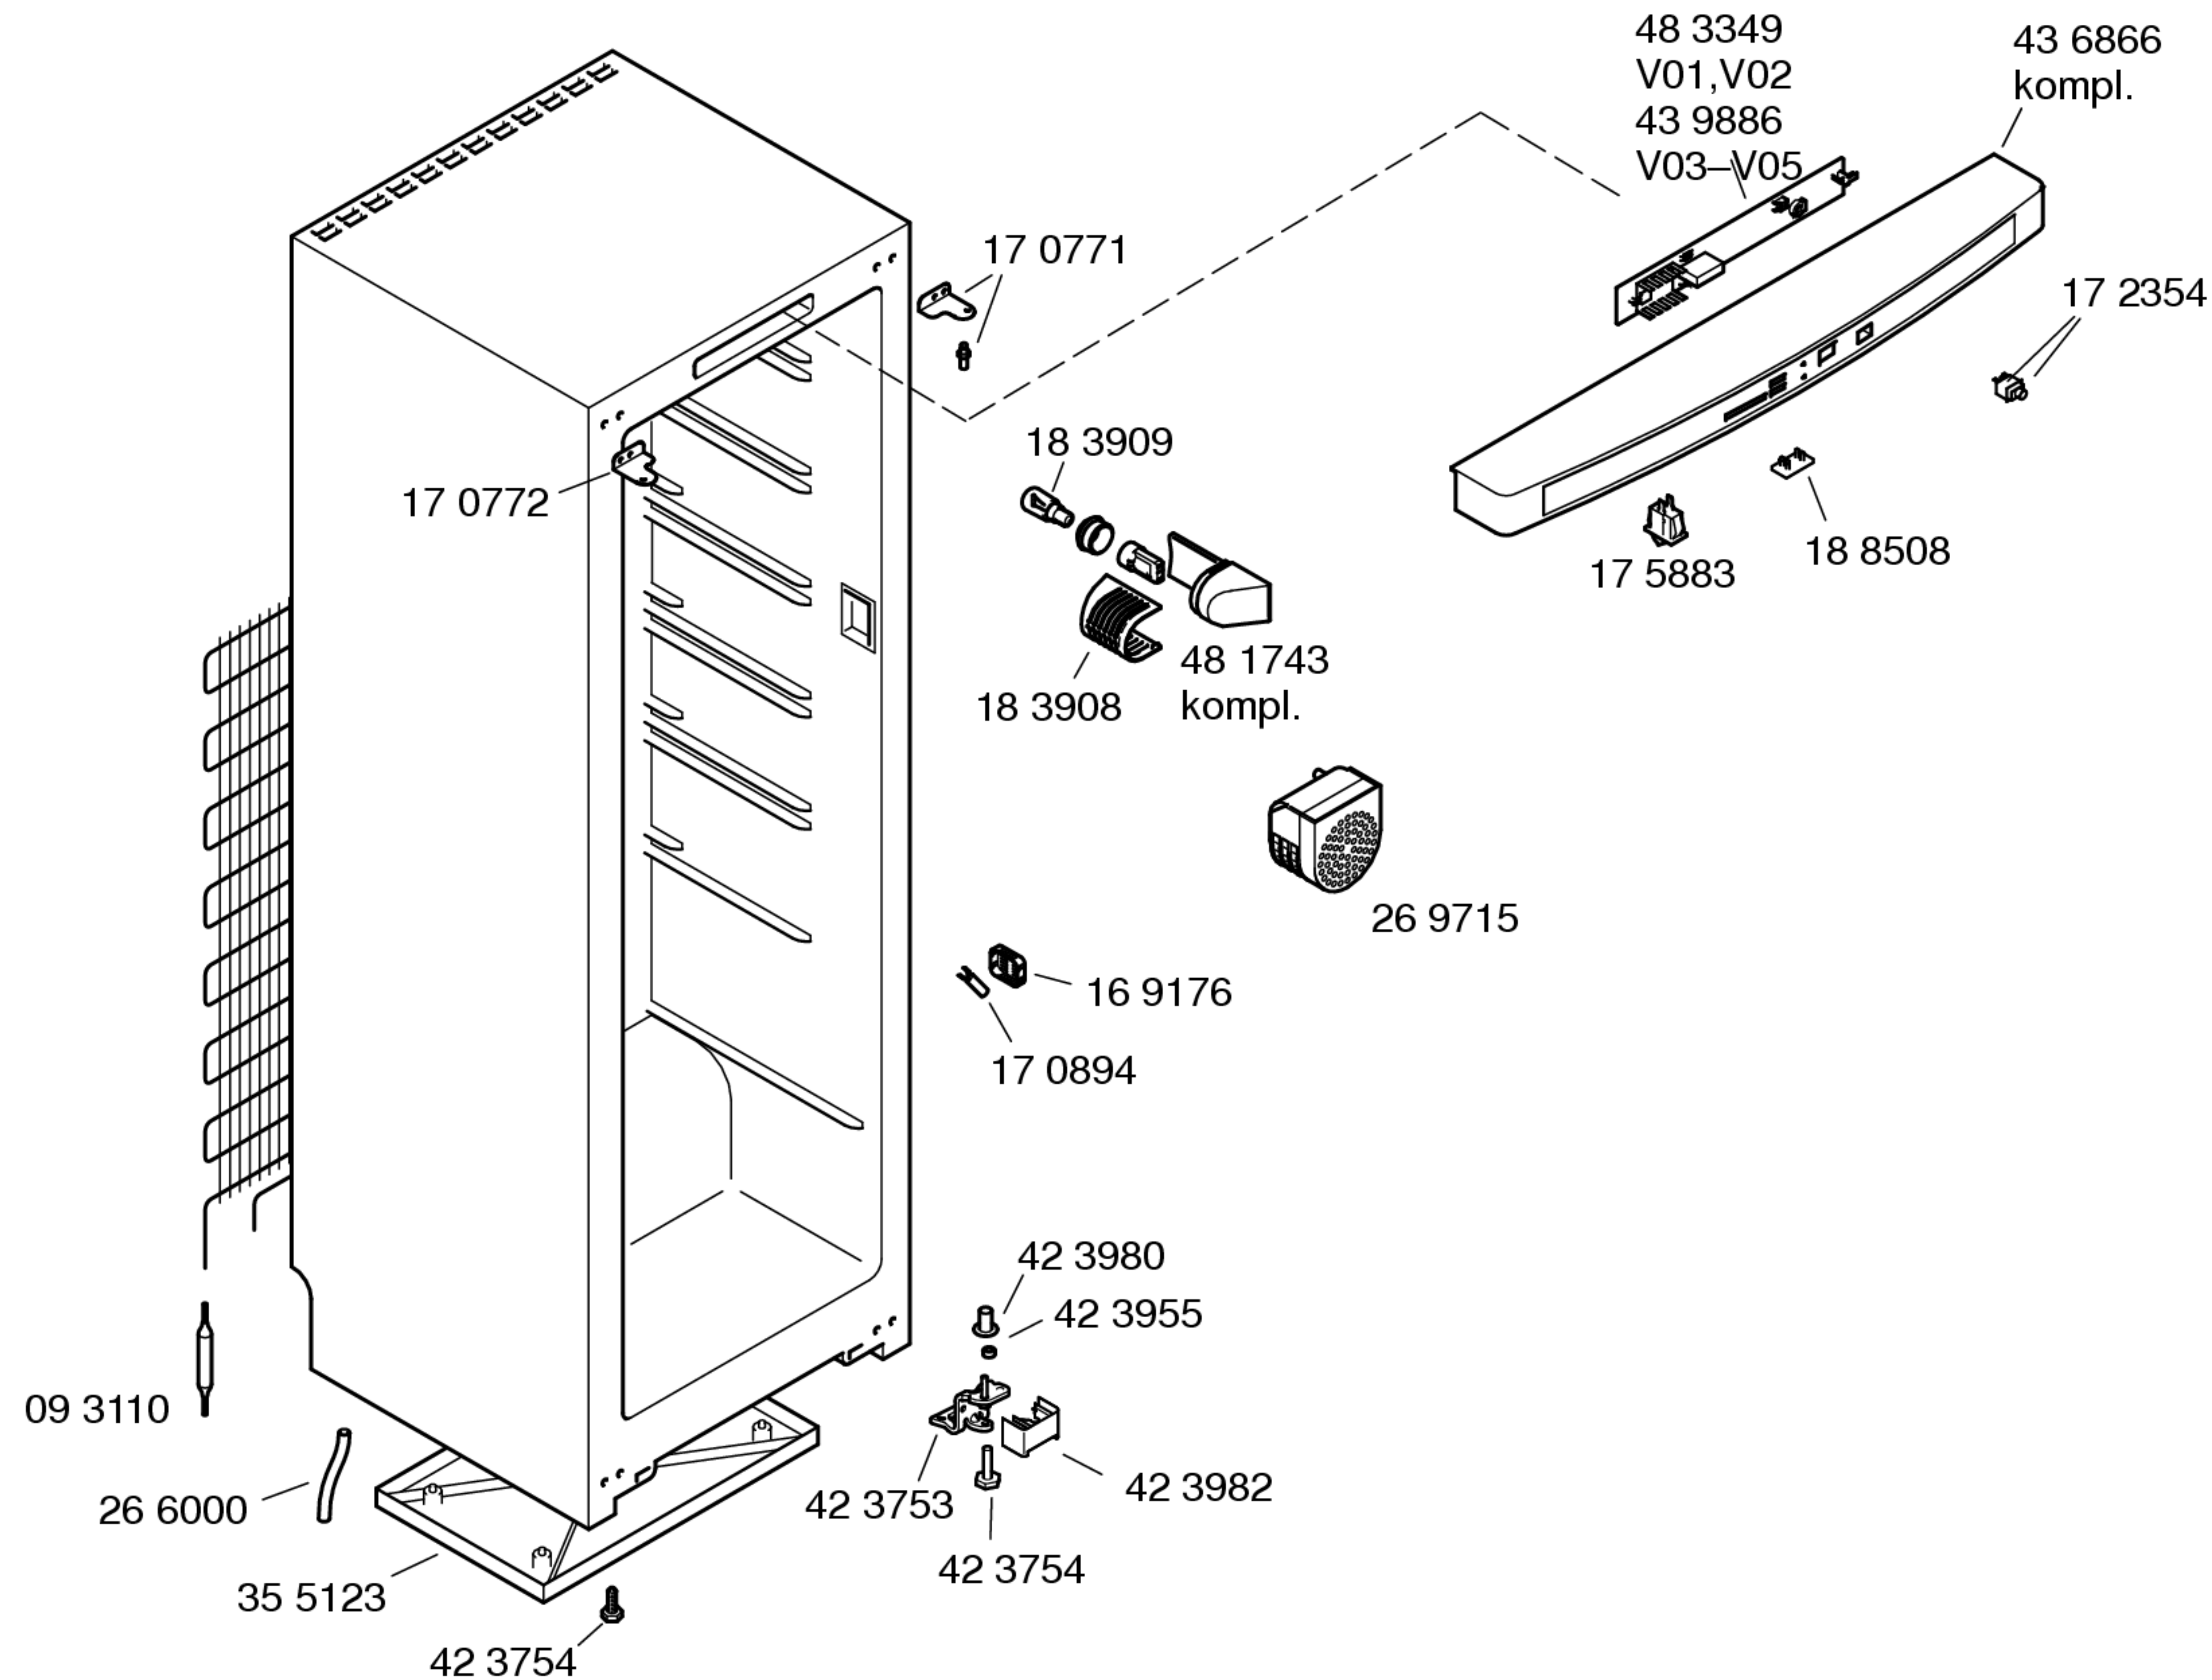


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
58 6651
(de,en,fr,it,nl,es,pt,gr)
58 6652
(da,no,sf,fi)

Montageanleitung
58 0241

Beistellsatz
18 1139

Edelstahlpflegemittel
16 6787

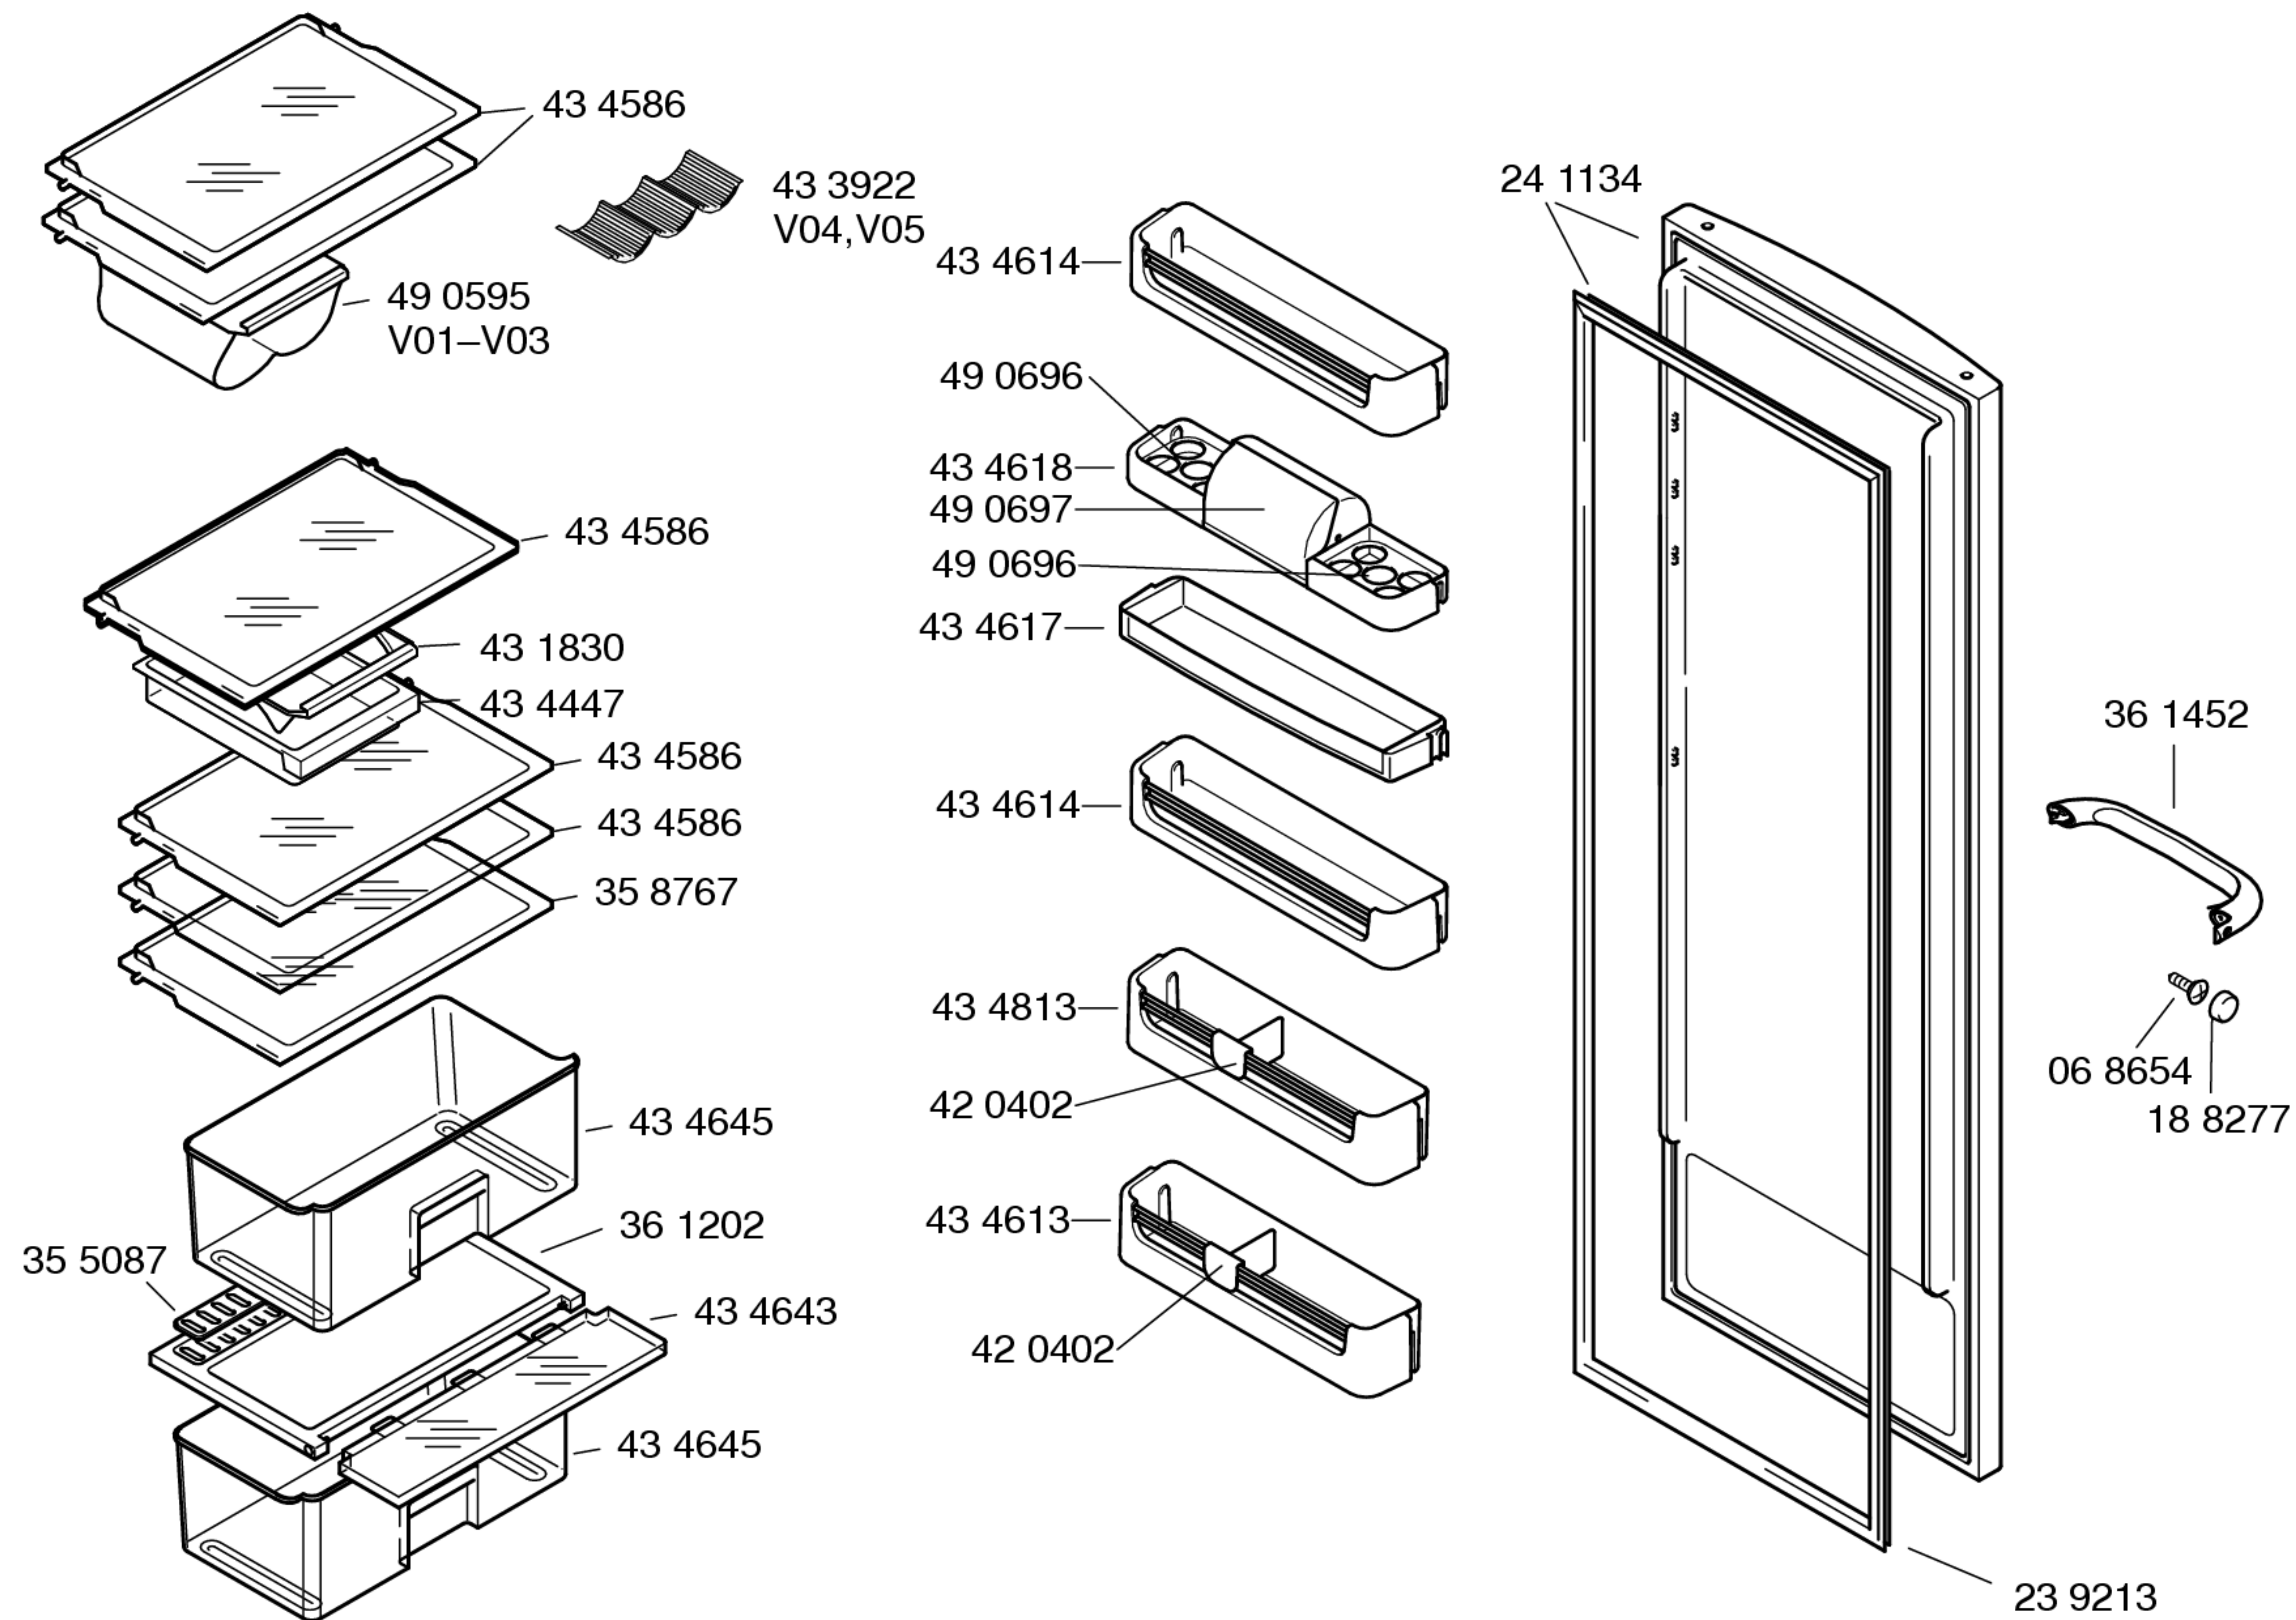

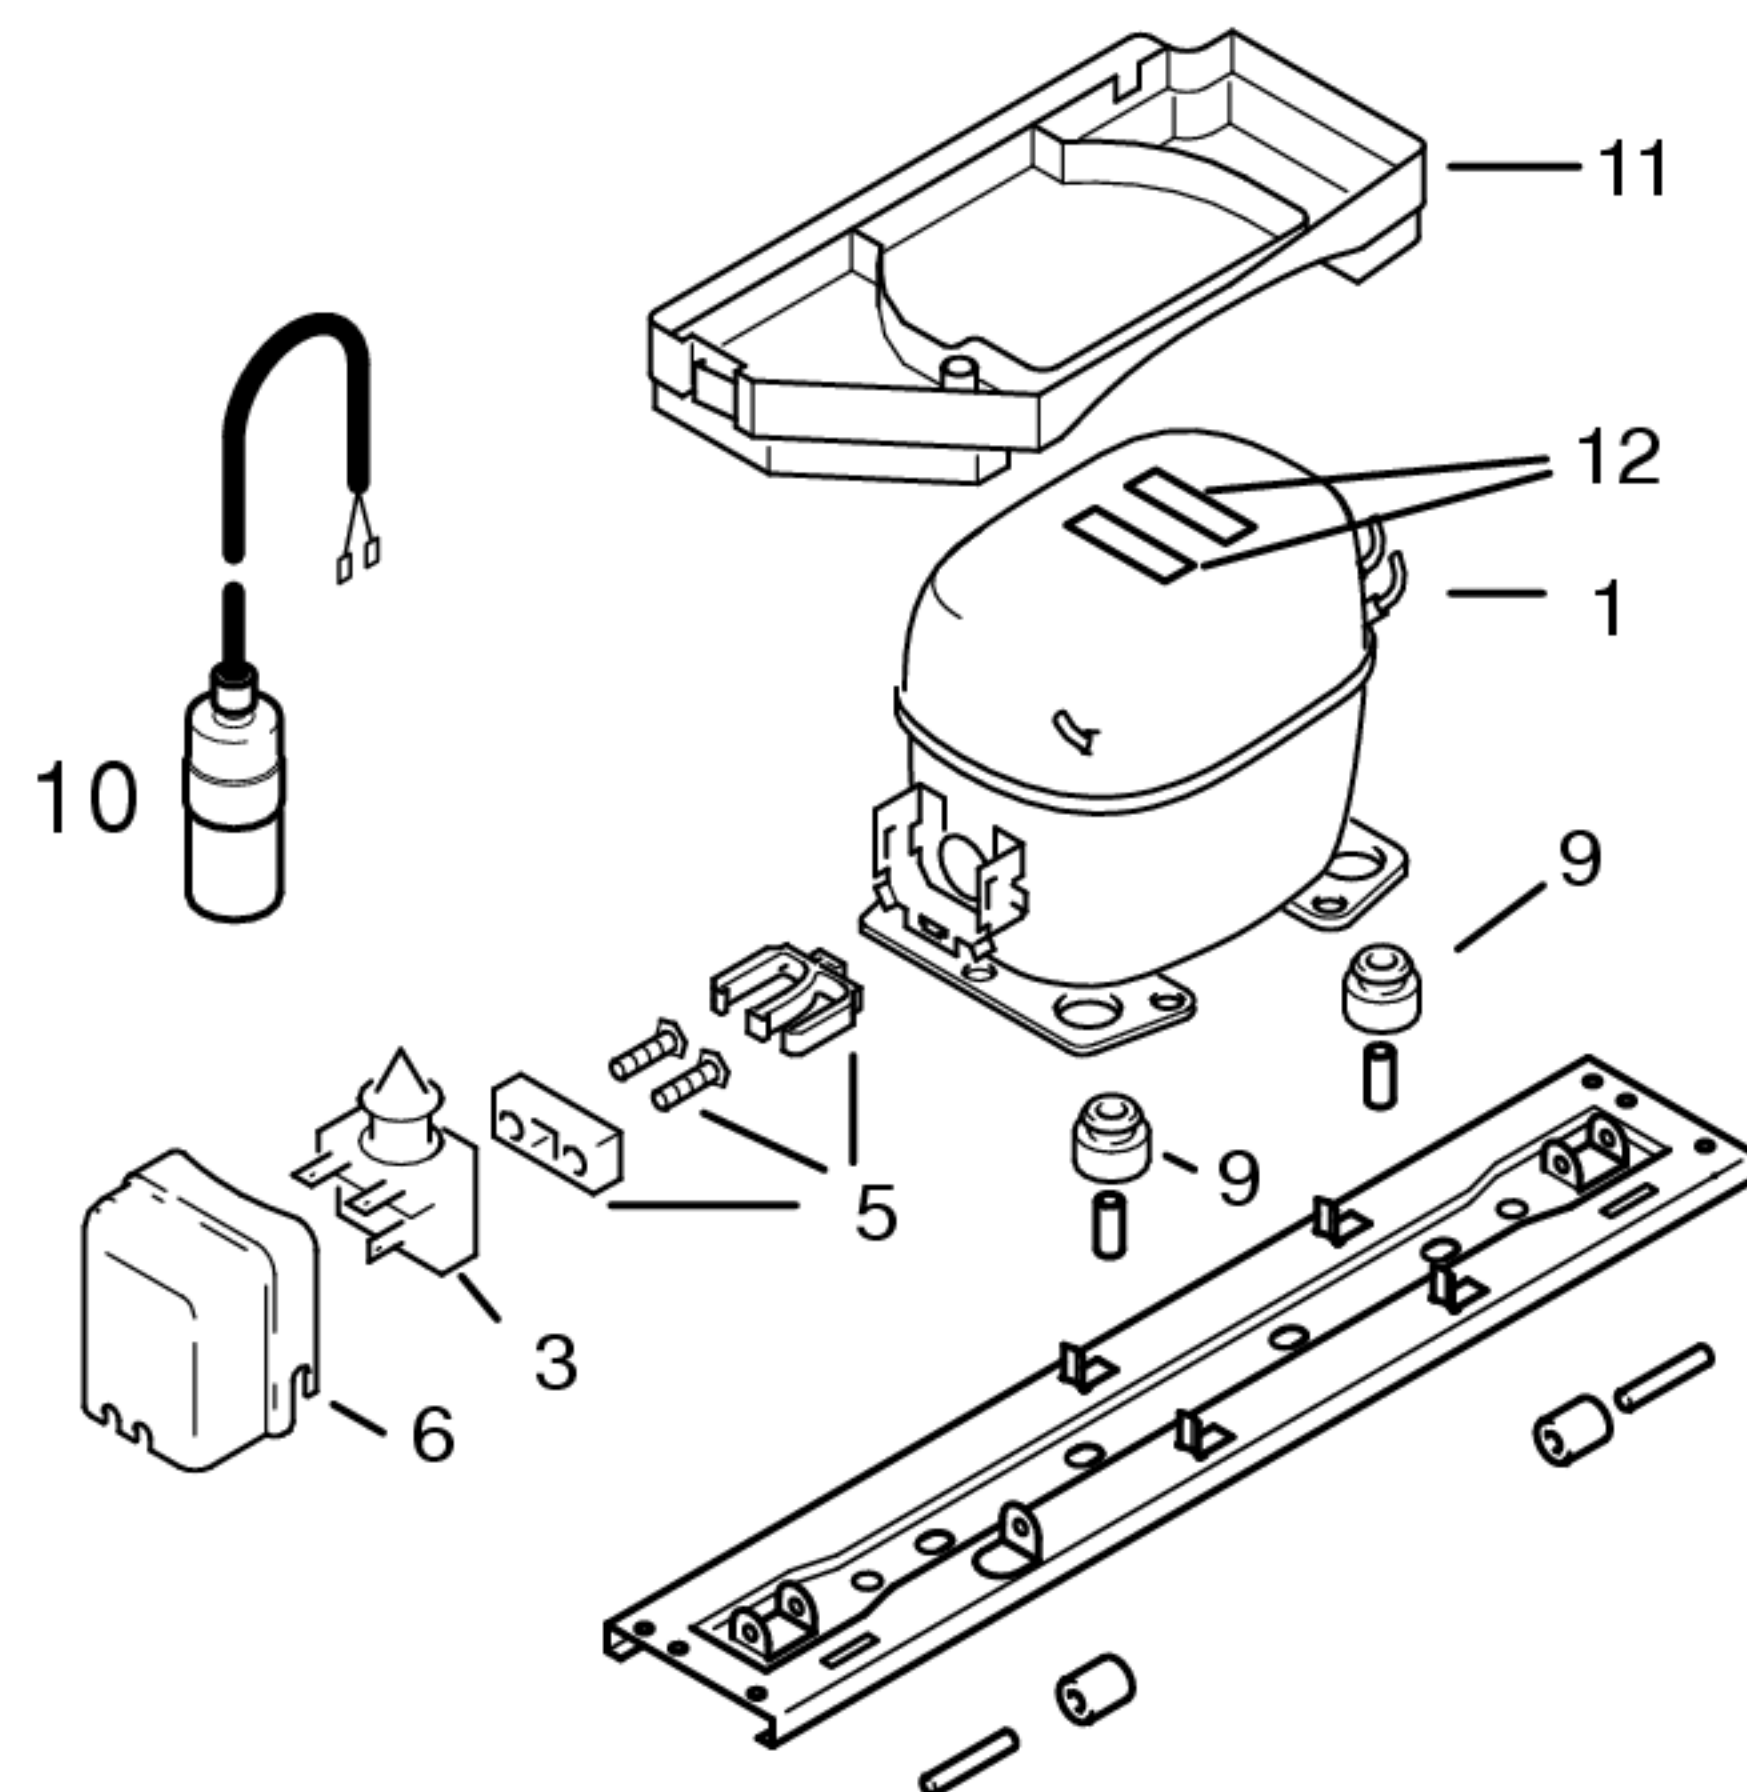

Pos.	V01–V04	V05	
	Goldstar	Danfoss	
	NDA62NAEM	TLES6KK2	
1	14 2037	14 1904	
2			
3	17 0743	15 1055	
4			
5	17 0745	15 0760	
6	17 0744	15 1072	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10		15 2222	
11	26 9660	35 5123	
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur	Goldstar	Danfoss		
Typ/Type	NDA69NAEM	TLES6KK2		
Förderleistung/Delivery/Débit	l/h	1026		
Anlaufstrom/Starting current/Cour de démarrage	A	8,5		
Widerstand/Resistance/Résistance Ha/main/prin	Ω	25,7		
Hi/aux	Ω	15,7		
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	67	67	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC–Fühler / Sensor	°C	kΩ	°C	kΩ
	+10	9,95 ± 0,18	–18	43,31 ± 1,10
	+5	12,70 ± 0,18	–22	54,66 ± 1,59
	0	16,33 ± 0,16	–26	69,42 ± 2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild