


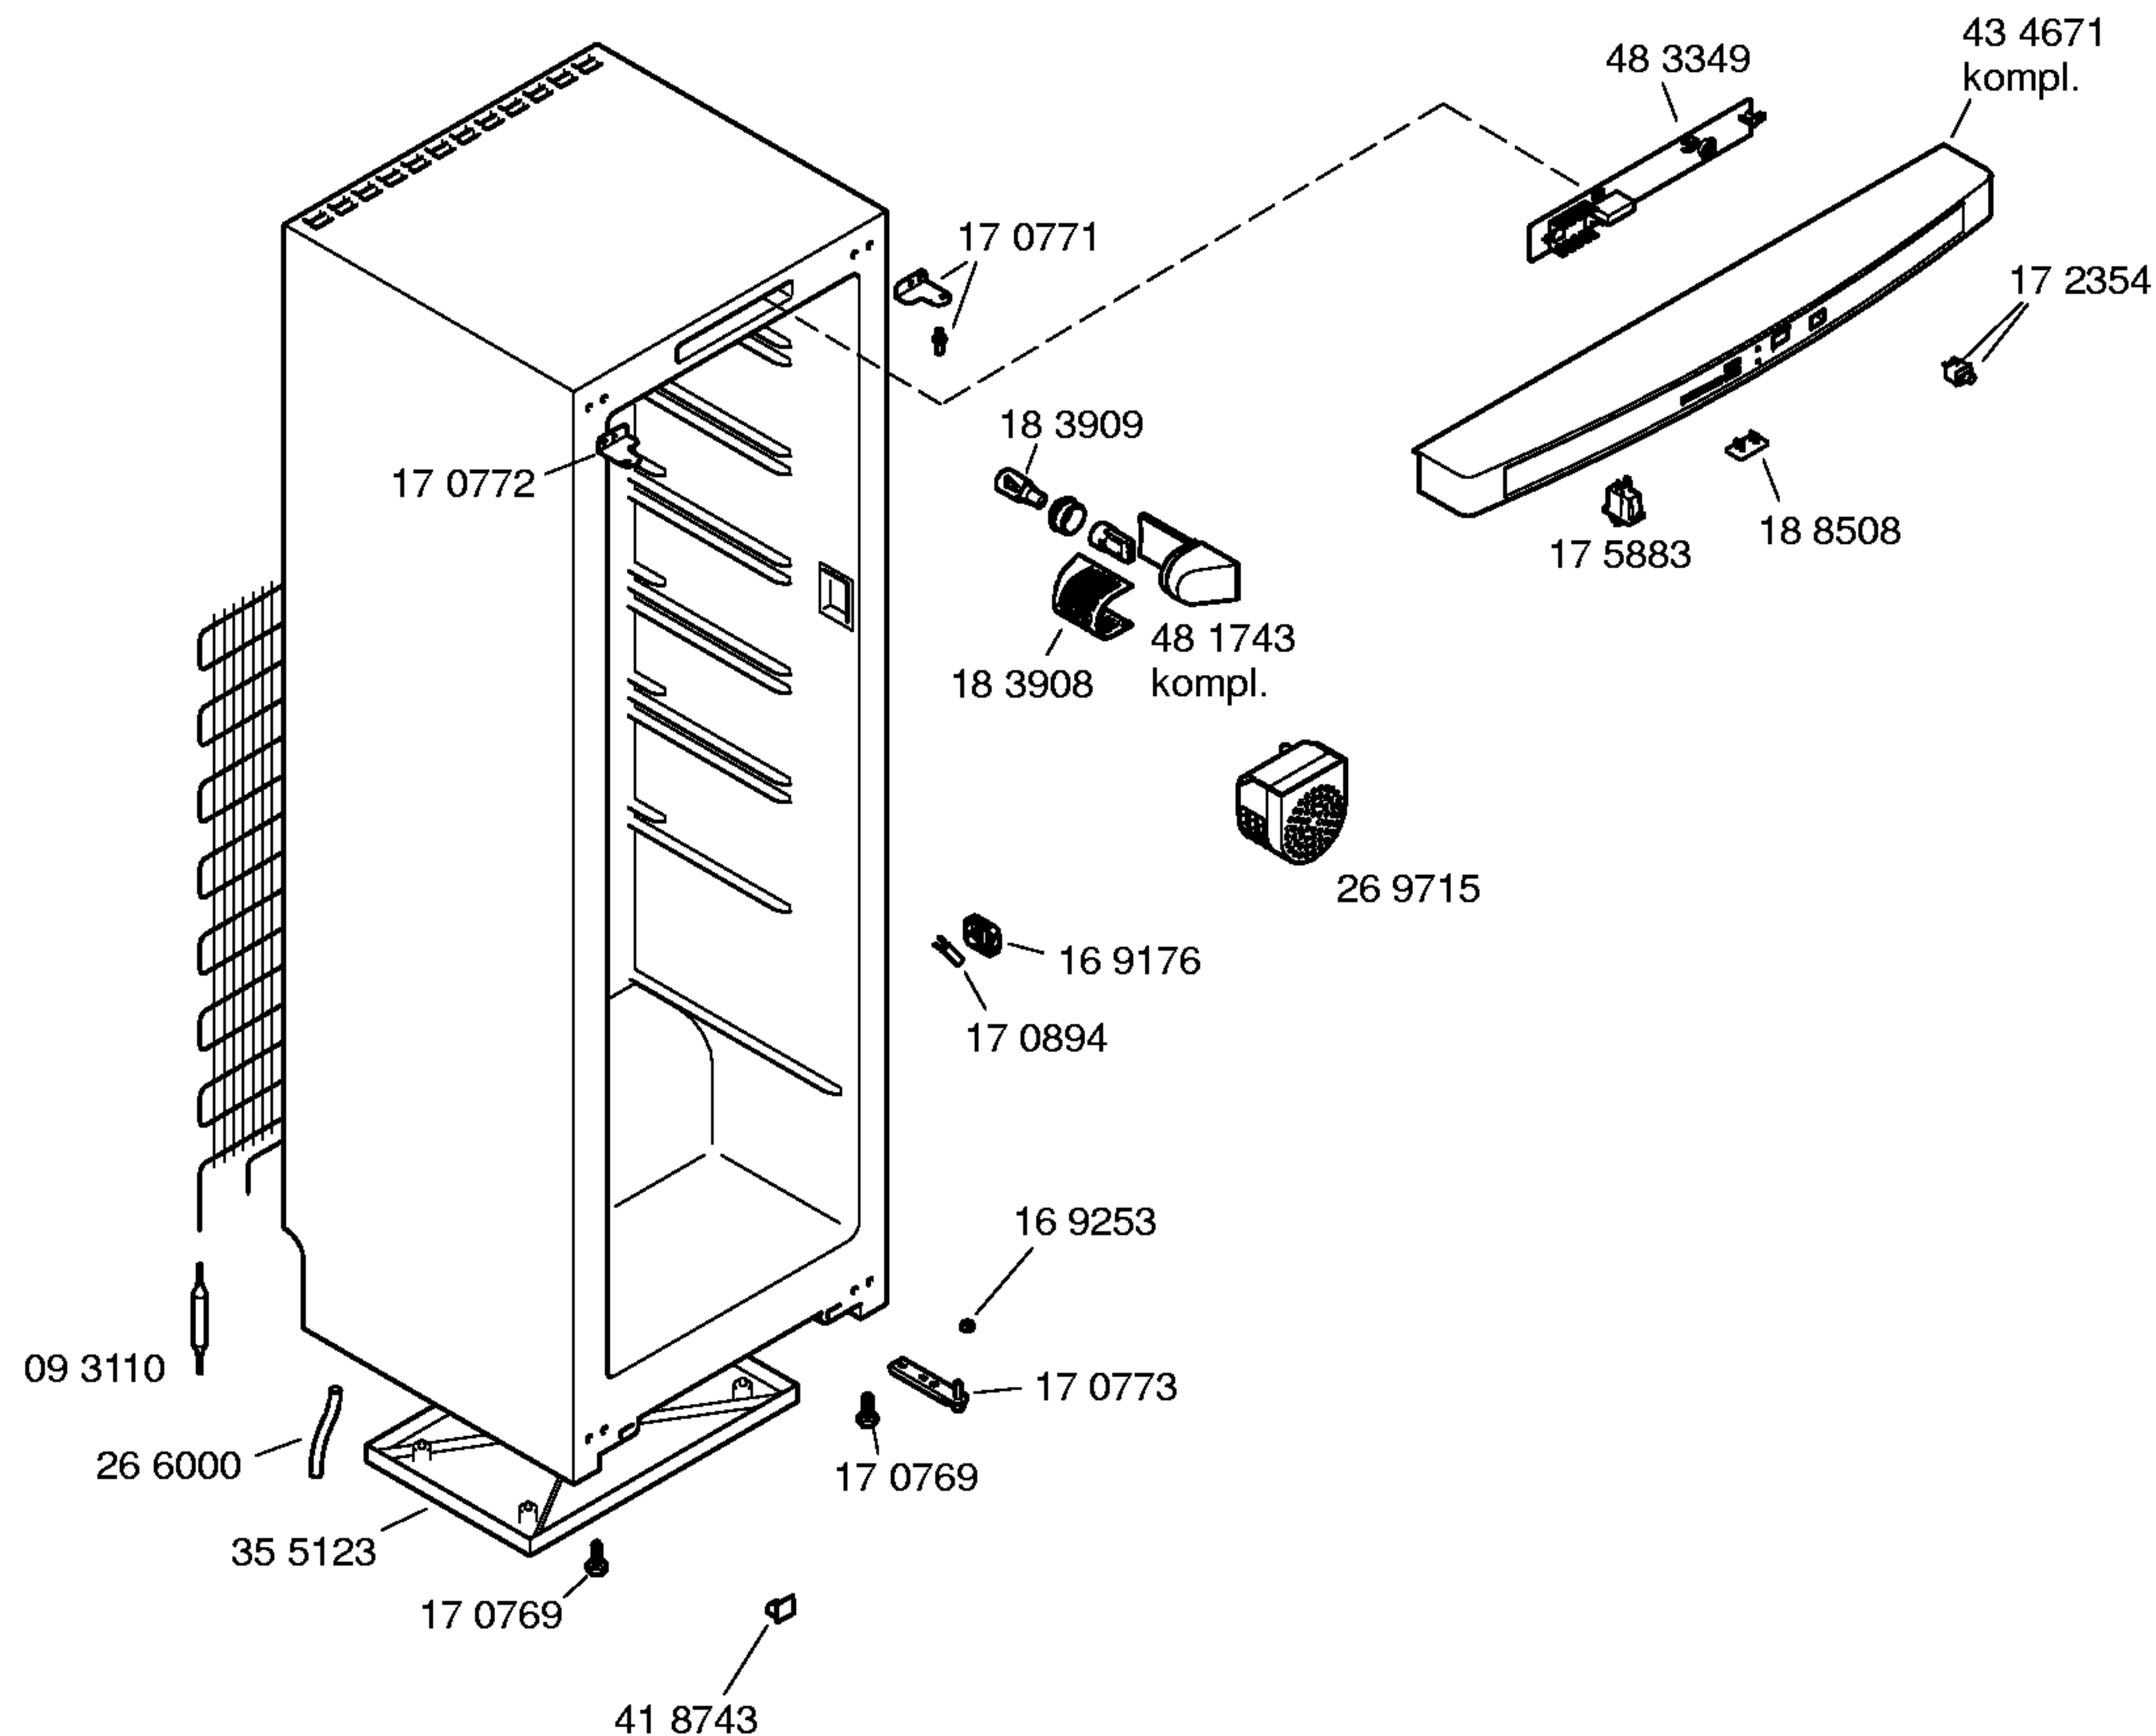


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
58 6651
(de,en,fr,it,nl,es,pt,gr)
58 6652
(da,no,sf,fi)

Montageanleitung
58 0241

Beistellsatz
18 1139

Mat. – Nr. – Konstante
3740

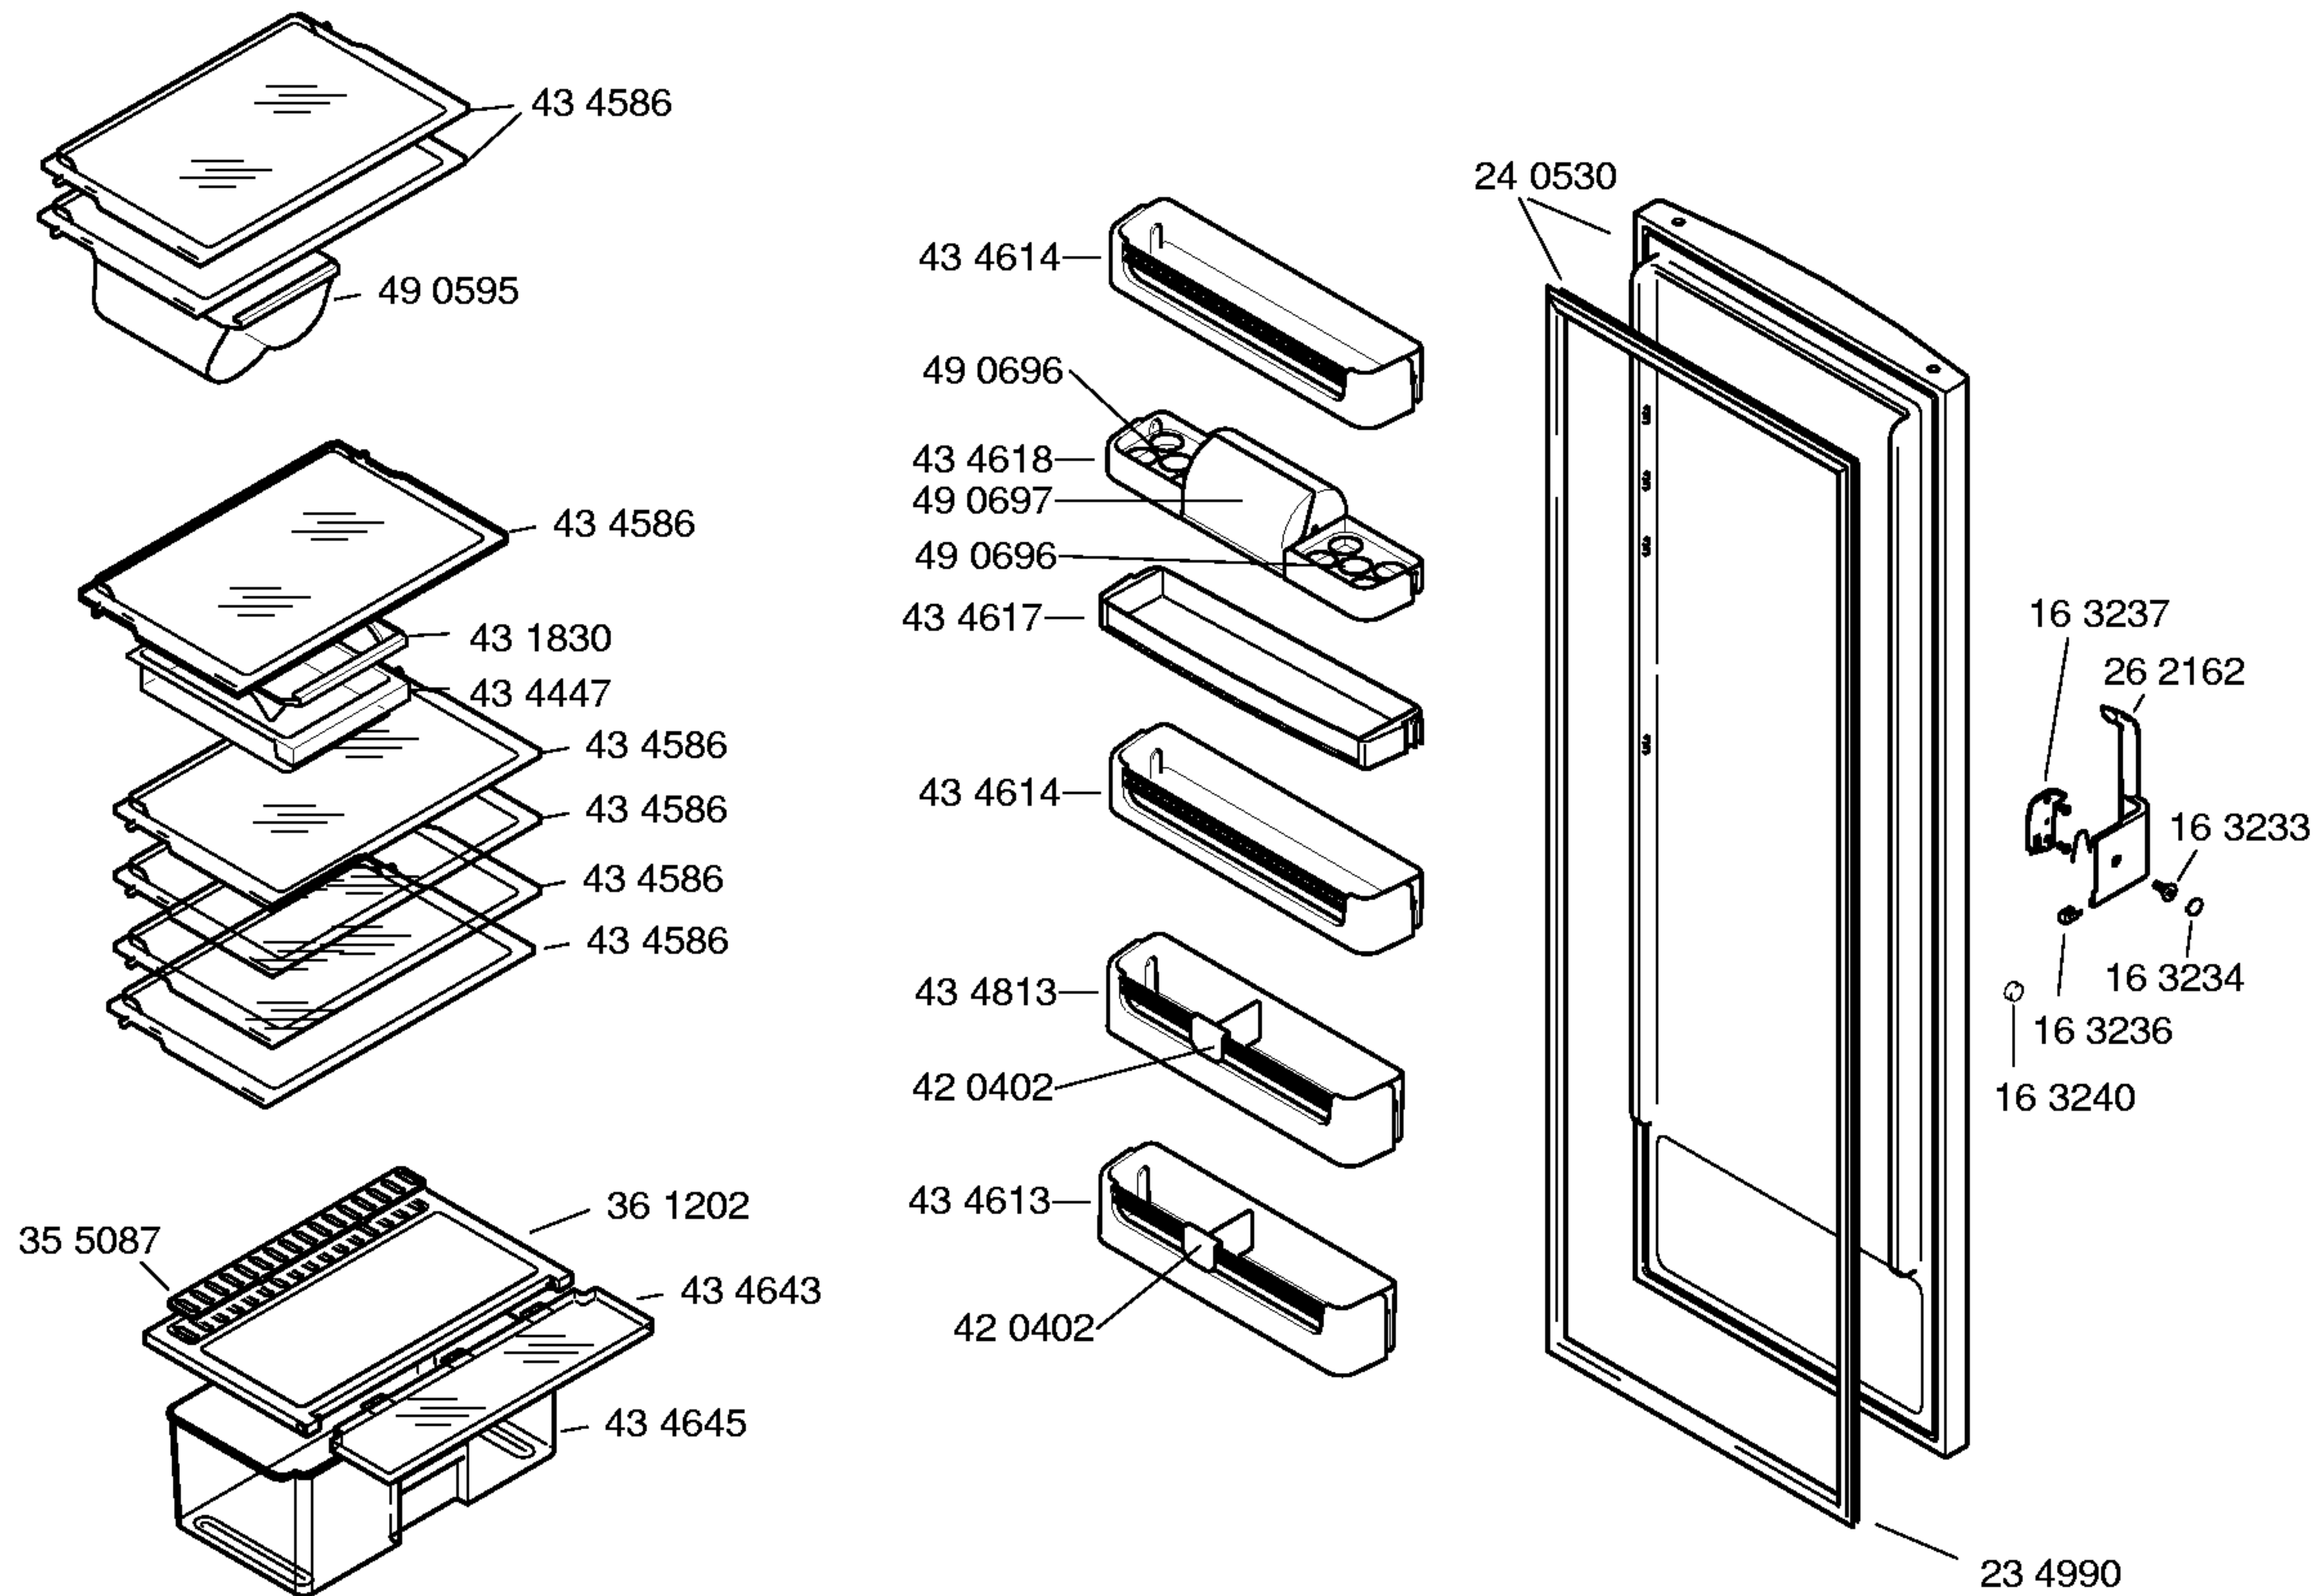

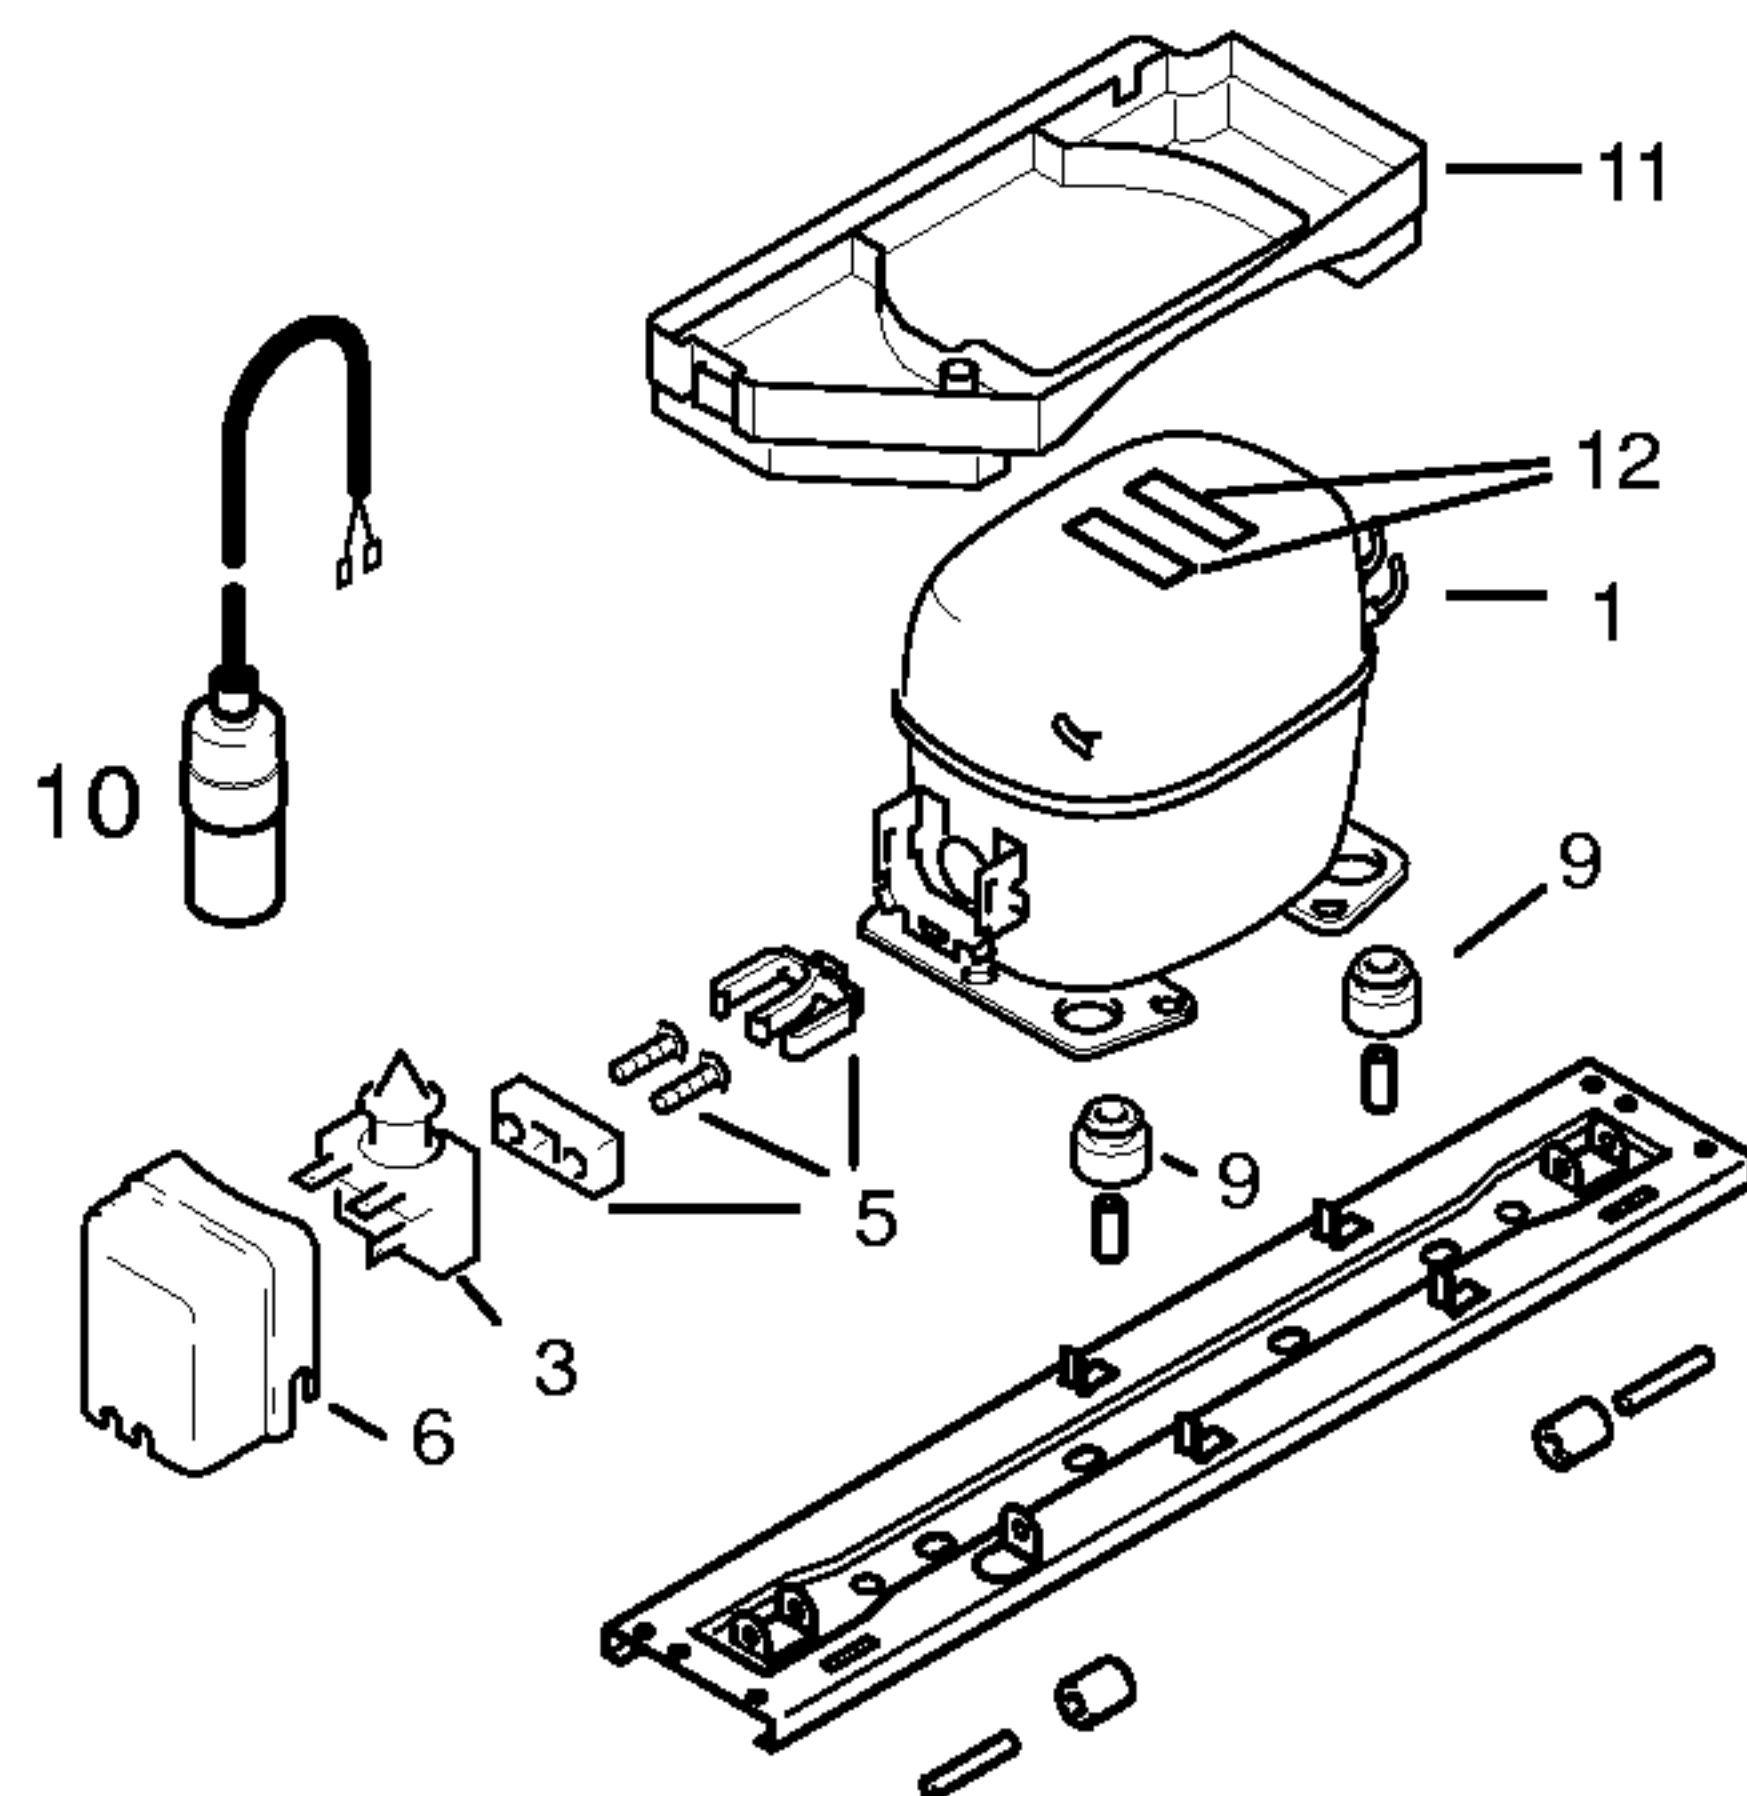Mat. – Nr. – Konstante
3740

	V01		
	Goldstar		
Pos.	NDA62NAEM		
1	14 2037		
2			
3	17 0743		
4			
5	17 0745		
6	17 0744		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 9660		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur	Goldstar			
Typ/Type	NDA69NAEM			
Förderleistung/Delivery/Débit	l/h			
Anlaufstrom/Starting current/Cour de démarrage	A			
Widerstand/Resistance/Résistance	Ω			
Hi/aux	Ω			
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	67		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC-Fühler / Sensor	°C	kΩ	°C	kΩ
	+10	9,95 ±0,18	-18	43,31 ±1,10
	+5	12,70 ±0,18	-22	54,66 ±1,59
	0	16,33 ±0,16	-26	69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild