


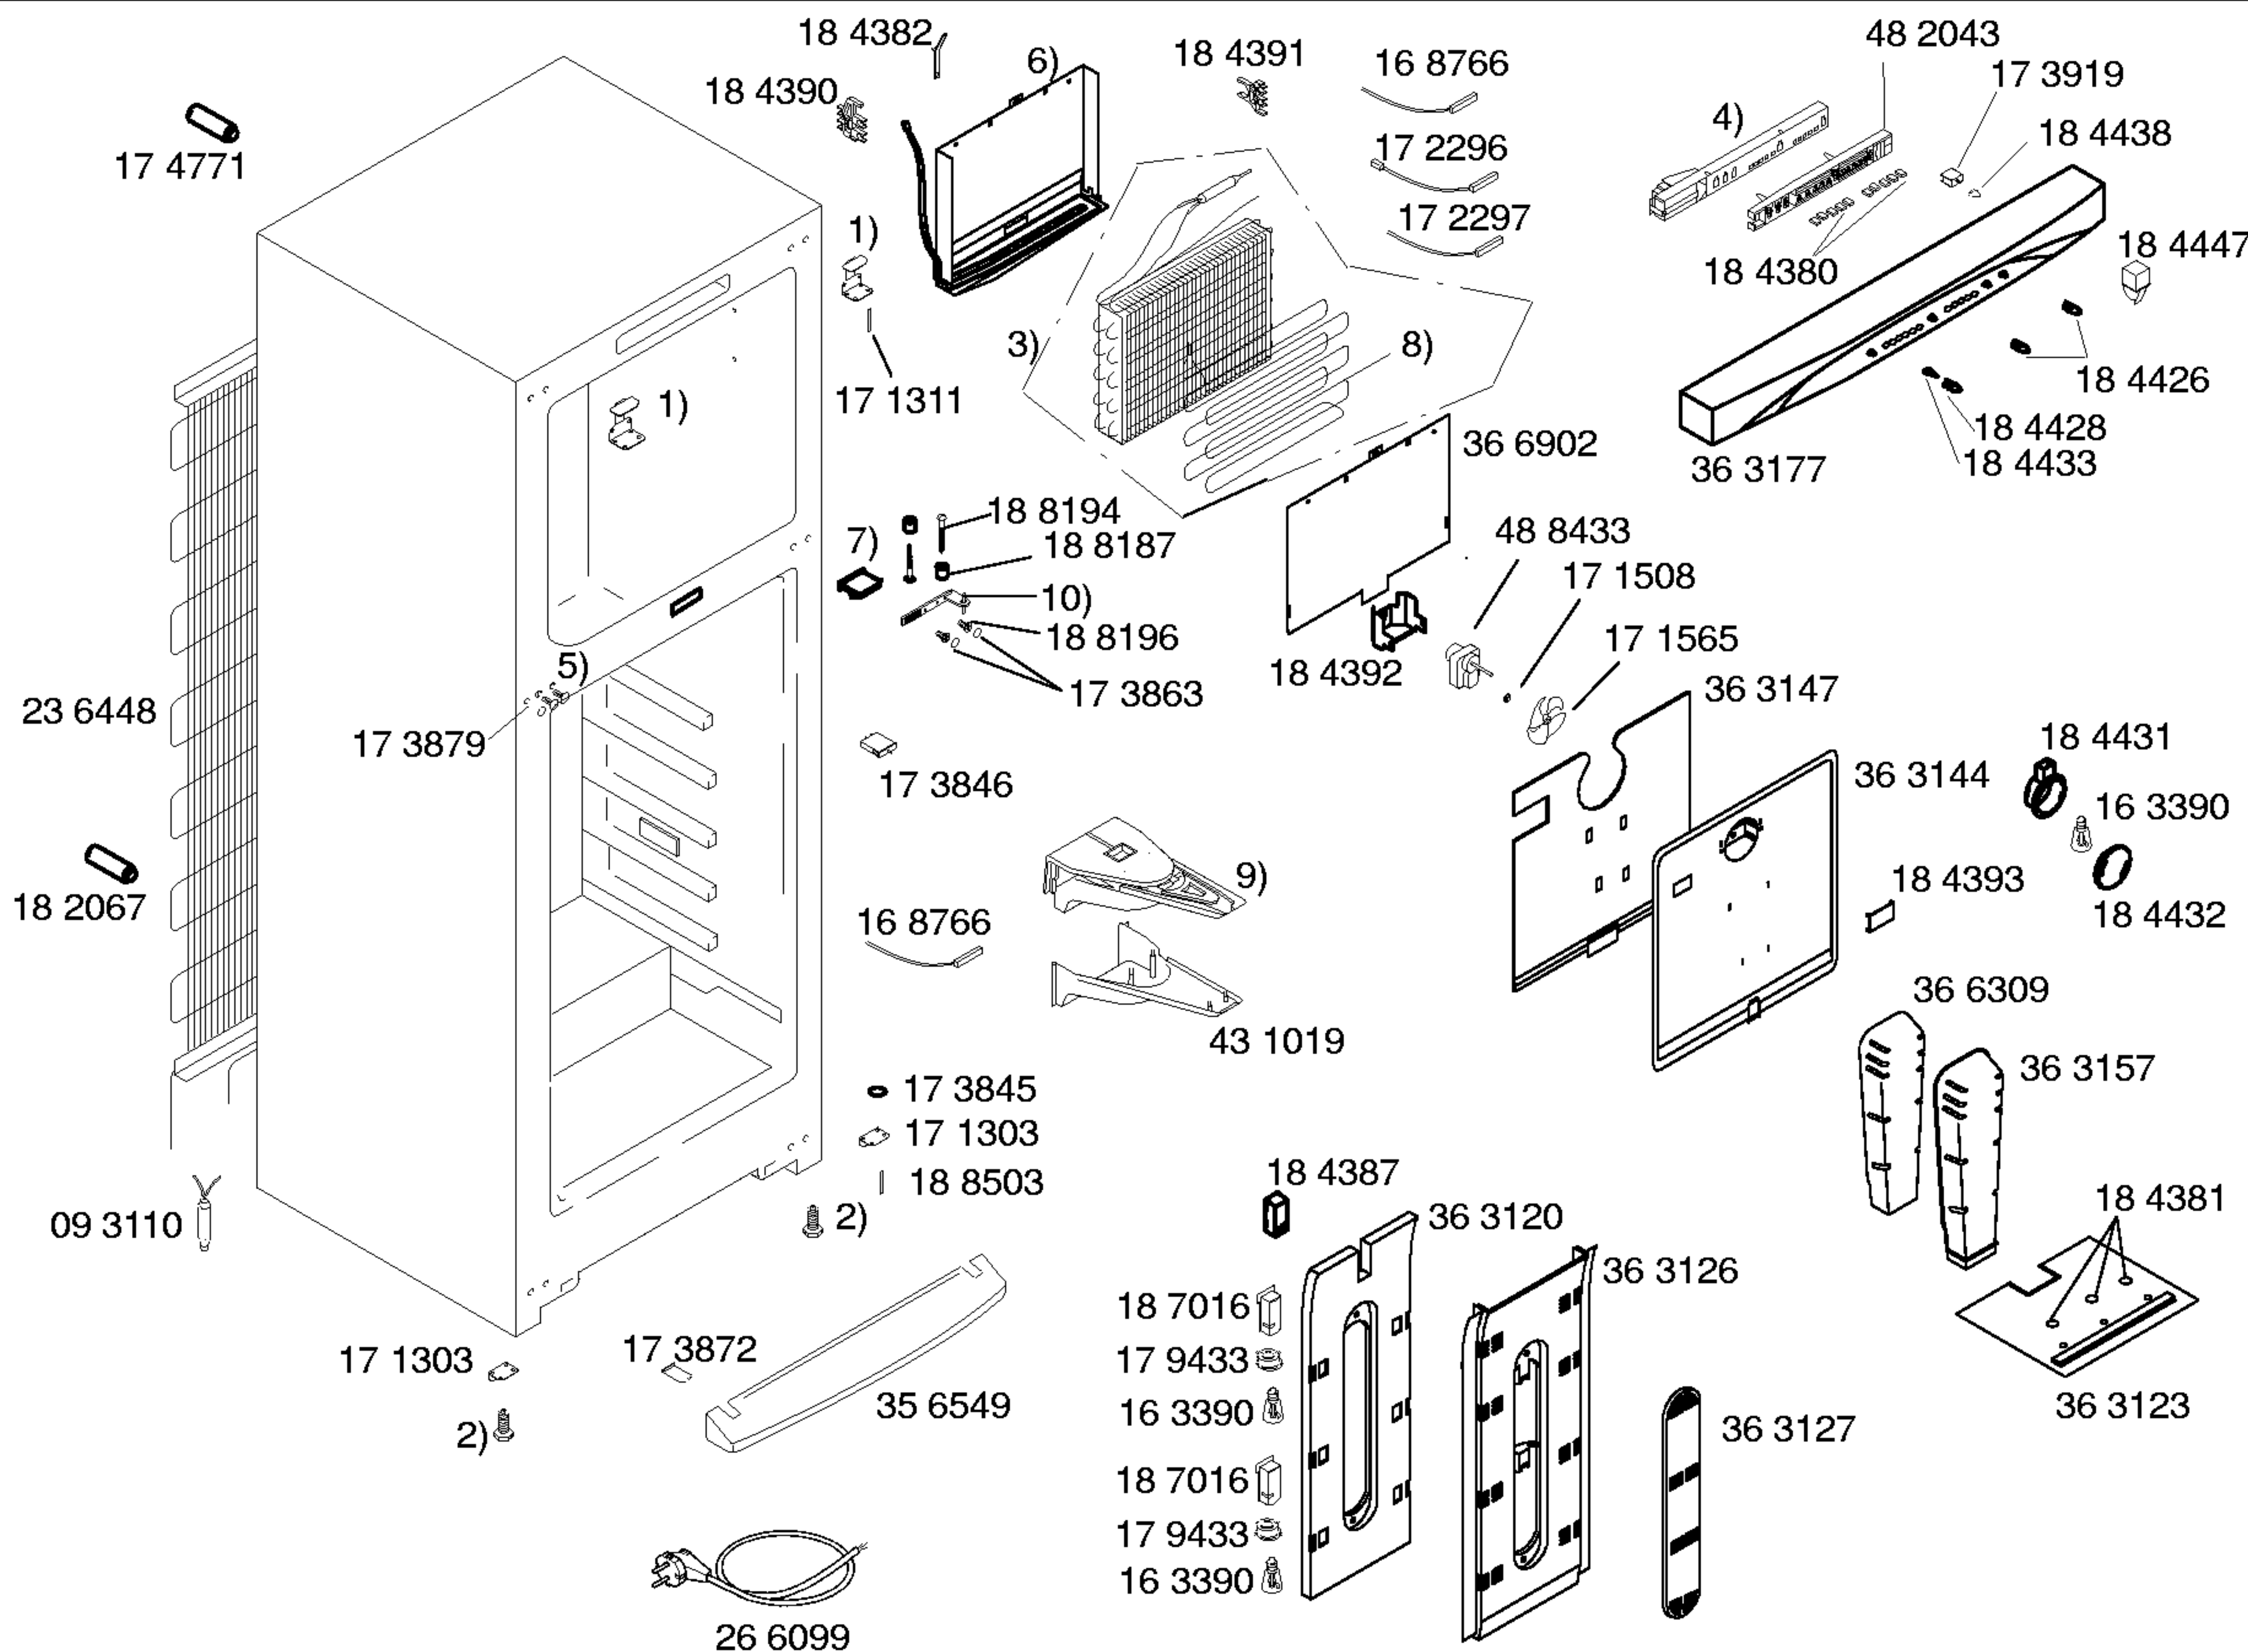

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung 58 3472

- 1) 17 1312
- 2) 18 9089
- 3) 36 9815
- 4) 48 4350

V01,V02,V03,V04
48 9131
V05,V06,V07,V08
V09,V10


- 5) 17 3866
- 6) 36 9905
- 7) 18 8198


V01,V02,V03,V04
41 8169
V05,V06,V07,V08
V09,V10

- 8) 36 9816

9) 43 1021
V01,V02,V03,V04
V05
43 2092
V06,V07,V08,V09
V10

10) 18 8193
V01,V02,V03,V04
V05,V06,V07,V08
V09
42 0645
V10

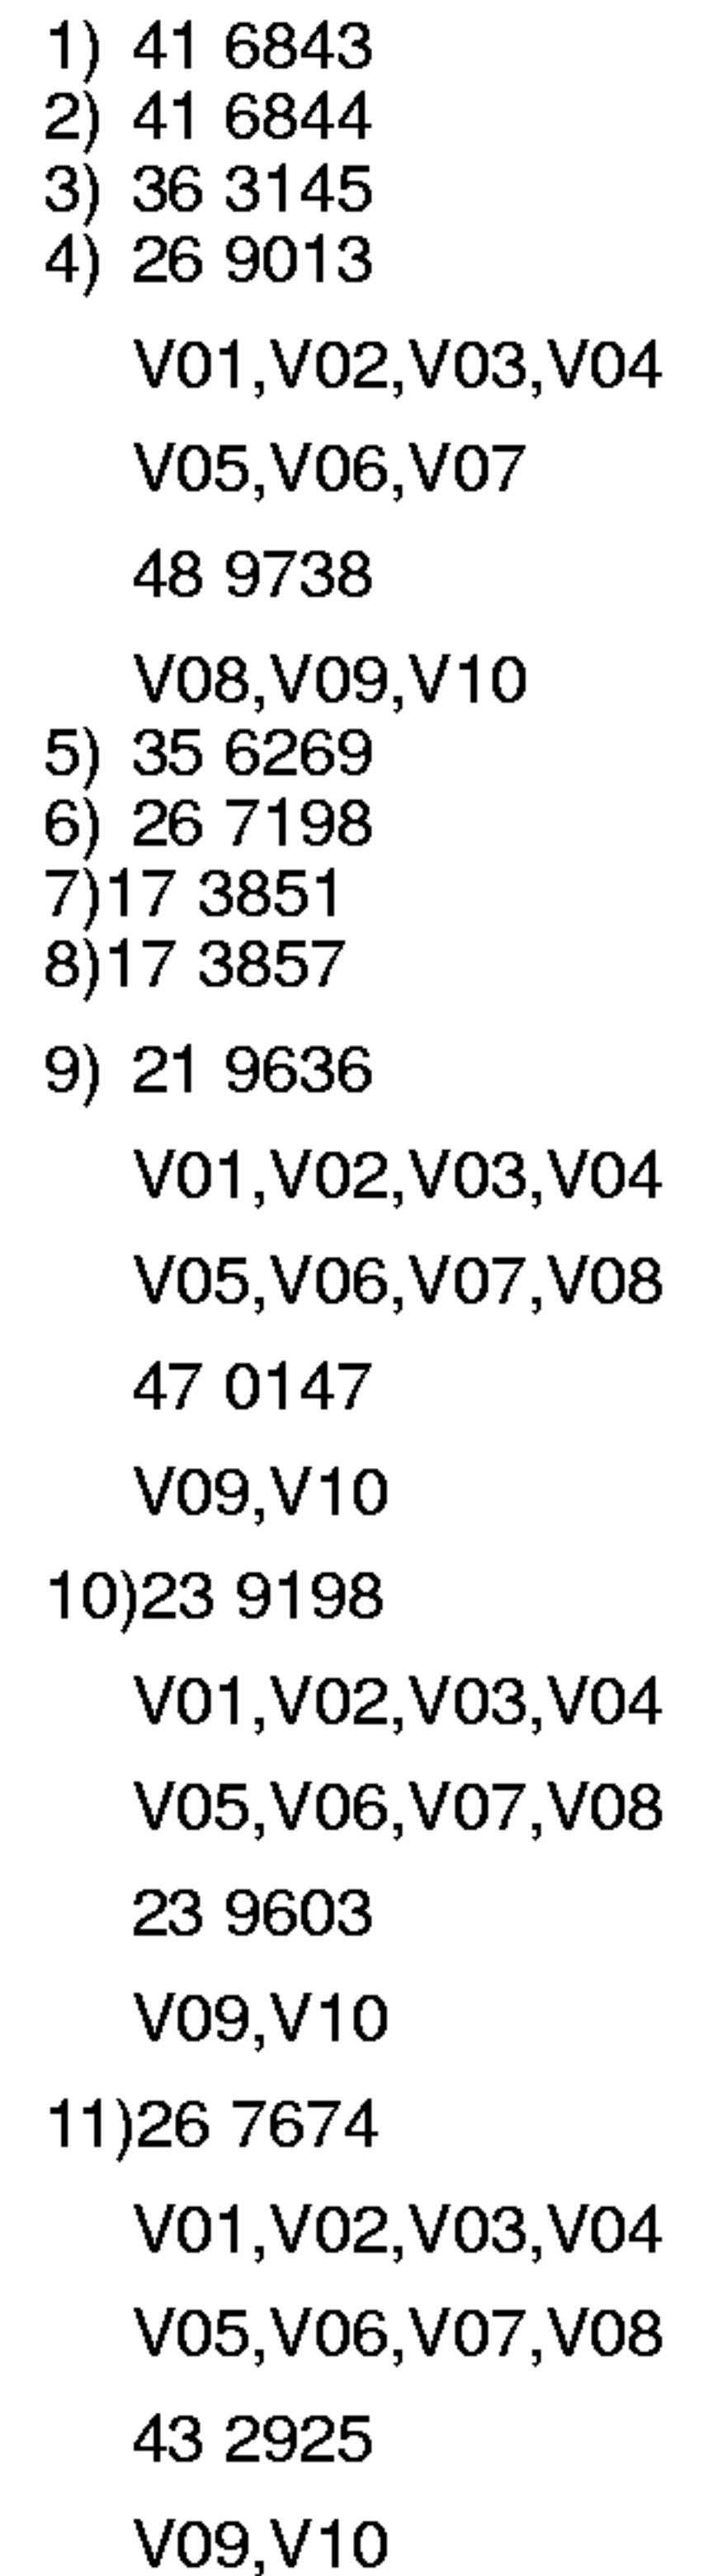

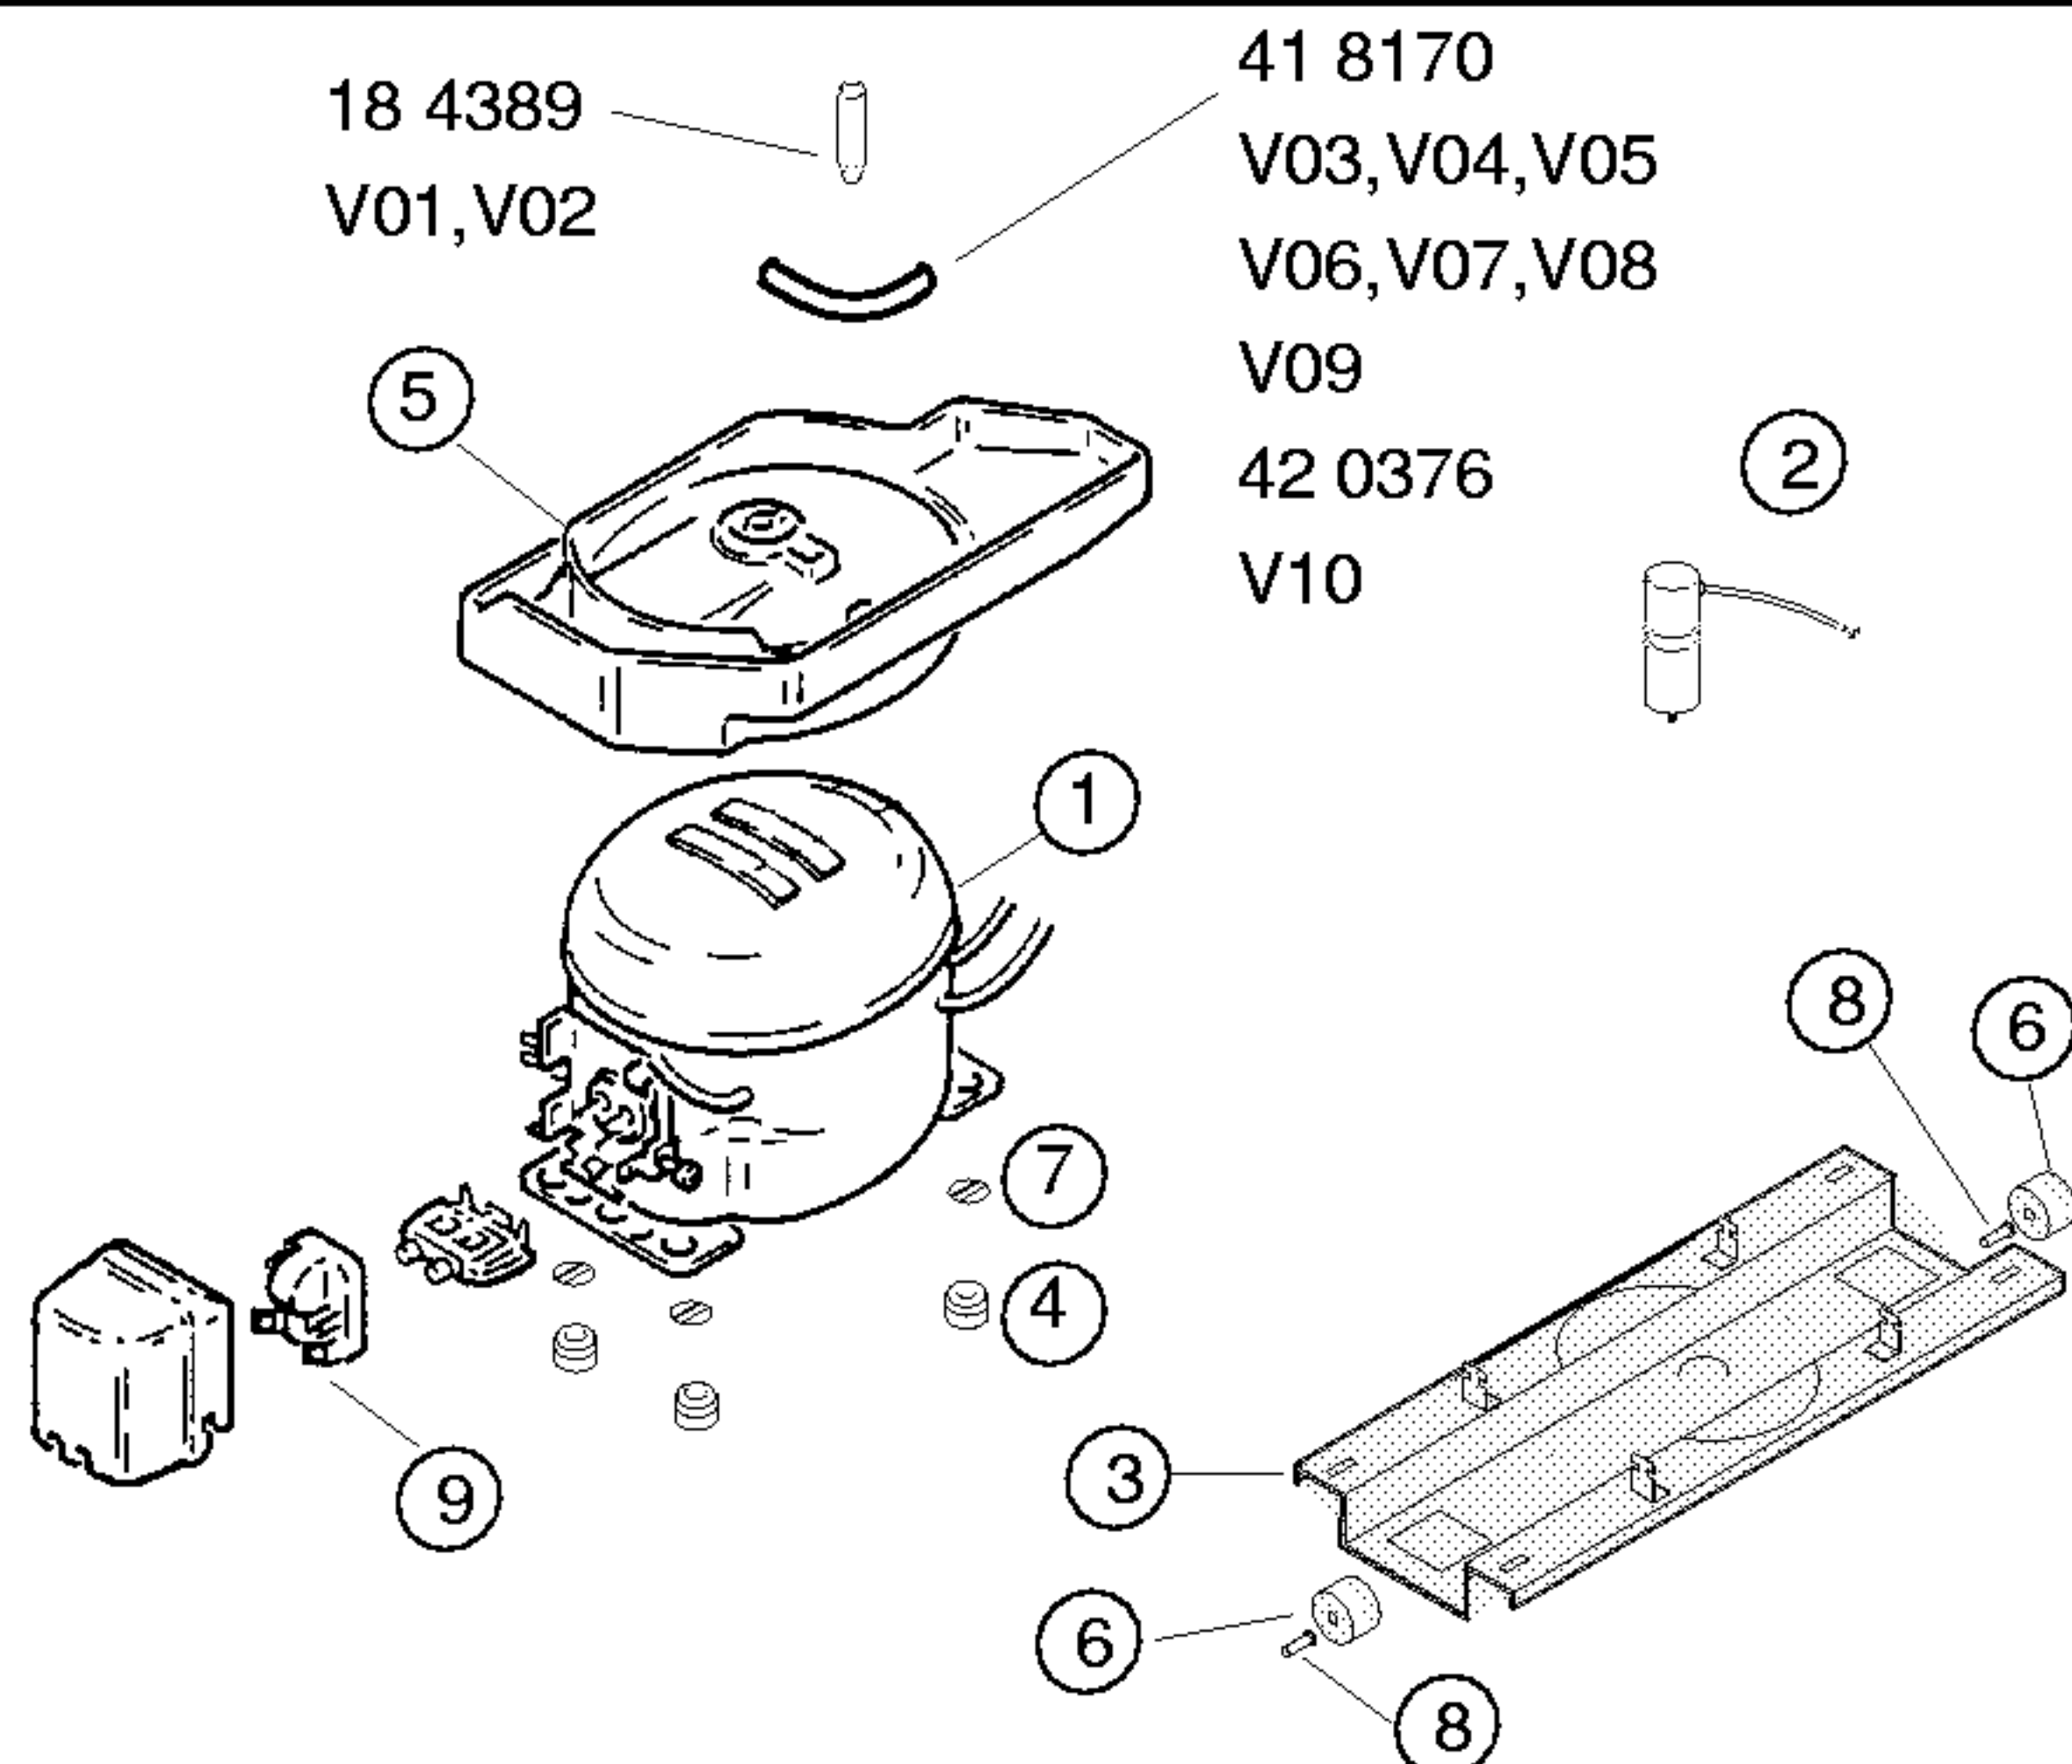

Pos.		V04,5,6,7,8,9	V10
	Mats.		
	DA125E		
1	14 2199	14 3334	
2	17 4093		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	18 1014		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NLE15KTK		
Förderleistung/Delivery/Verim/h		8		
Anlaufstrom/Starting current/Giris akimi		A		
Widerstand/Resistance/Rezistans Ha/Hi/aux.		Ω		
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Acma kapama degerleri		..ein/acma °C		
Valeurs de commutation/Termostat degeri		..aus"/kapama		
(..abtaven' od)		..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari		R600	g	60
Anschlusswert/Comm. load/Giris gucu		W	215	
Heizung/Heater/Rezistans		Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		W	267	81
Leistung/Power/Guc				Klappe
				4
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans		Ω		
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans		Ω		
Spannung/Voltage/Gerilim		V		
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz