



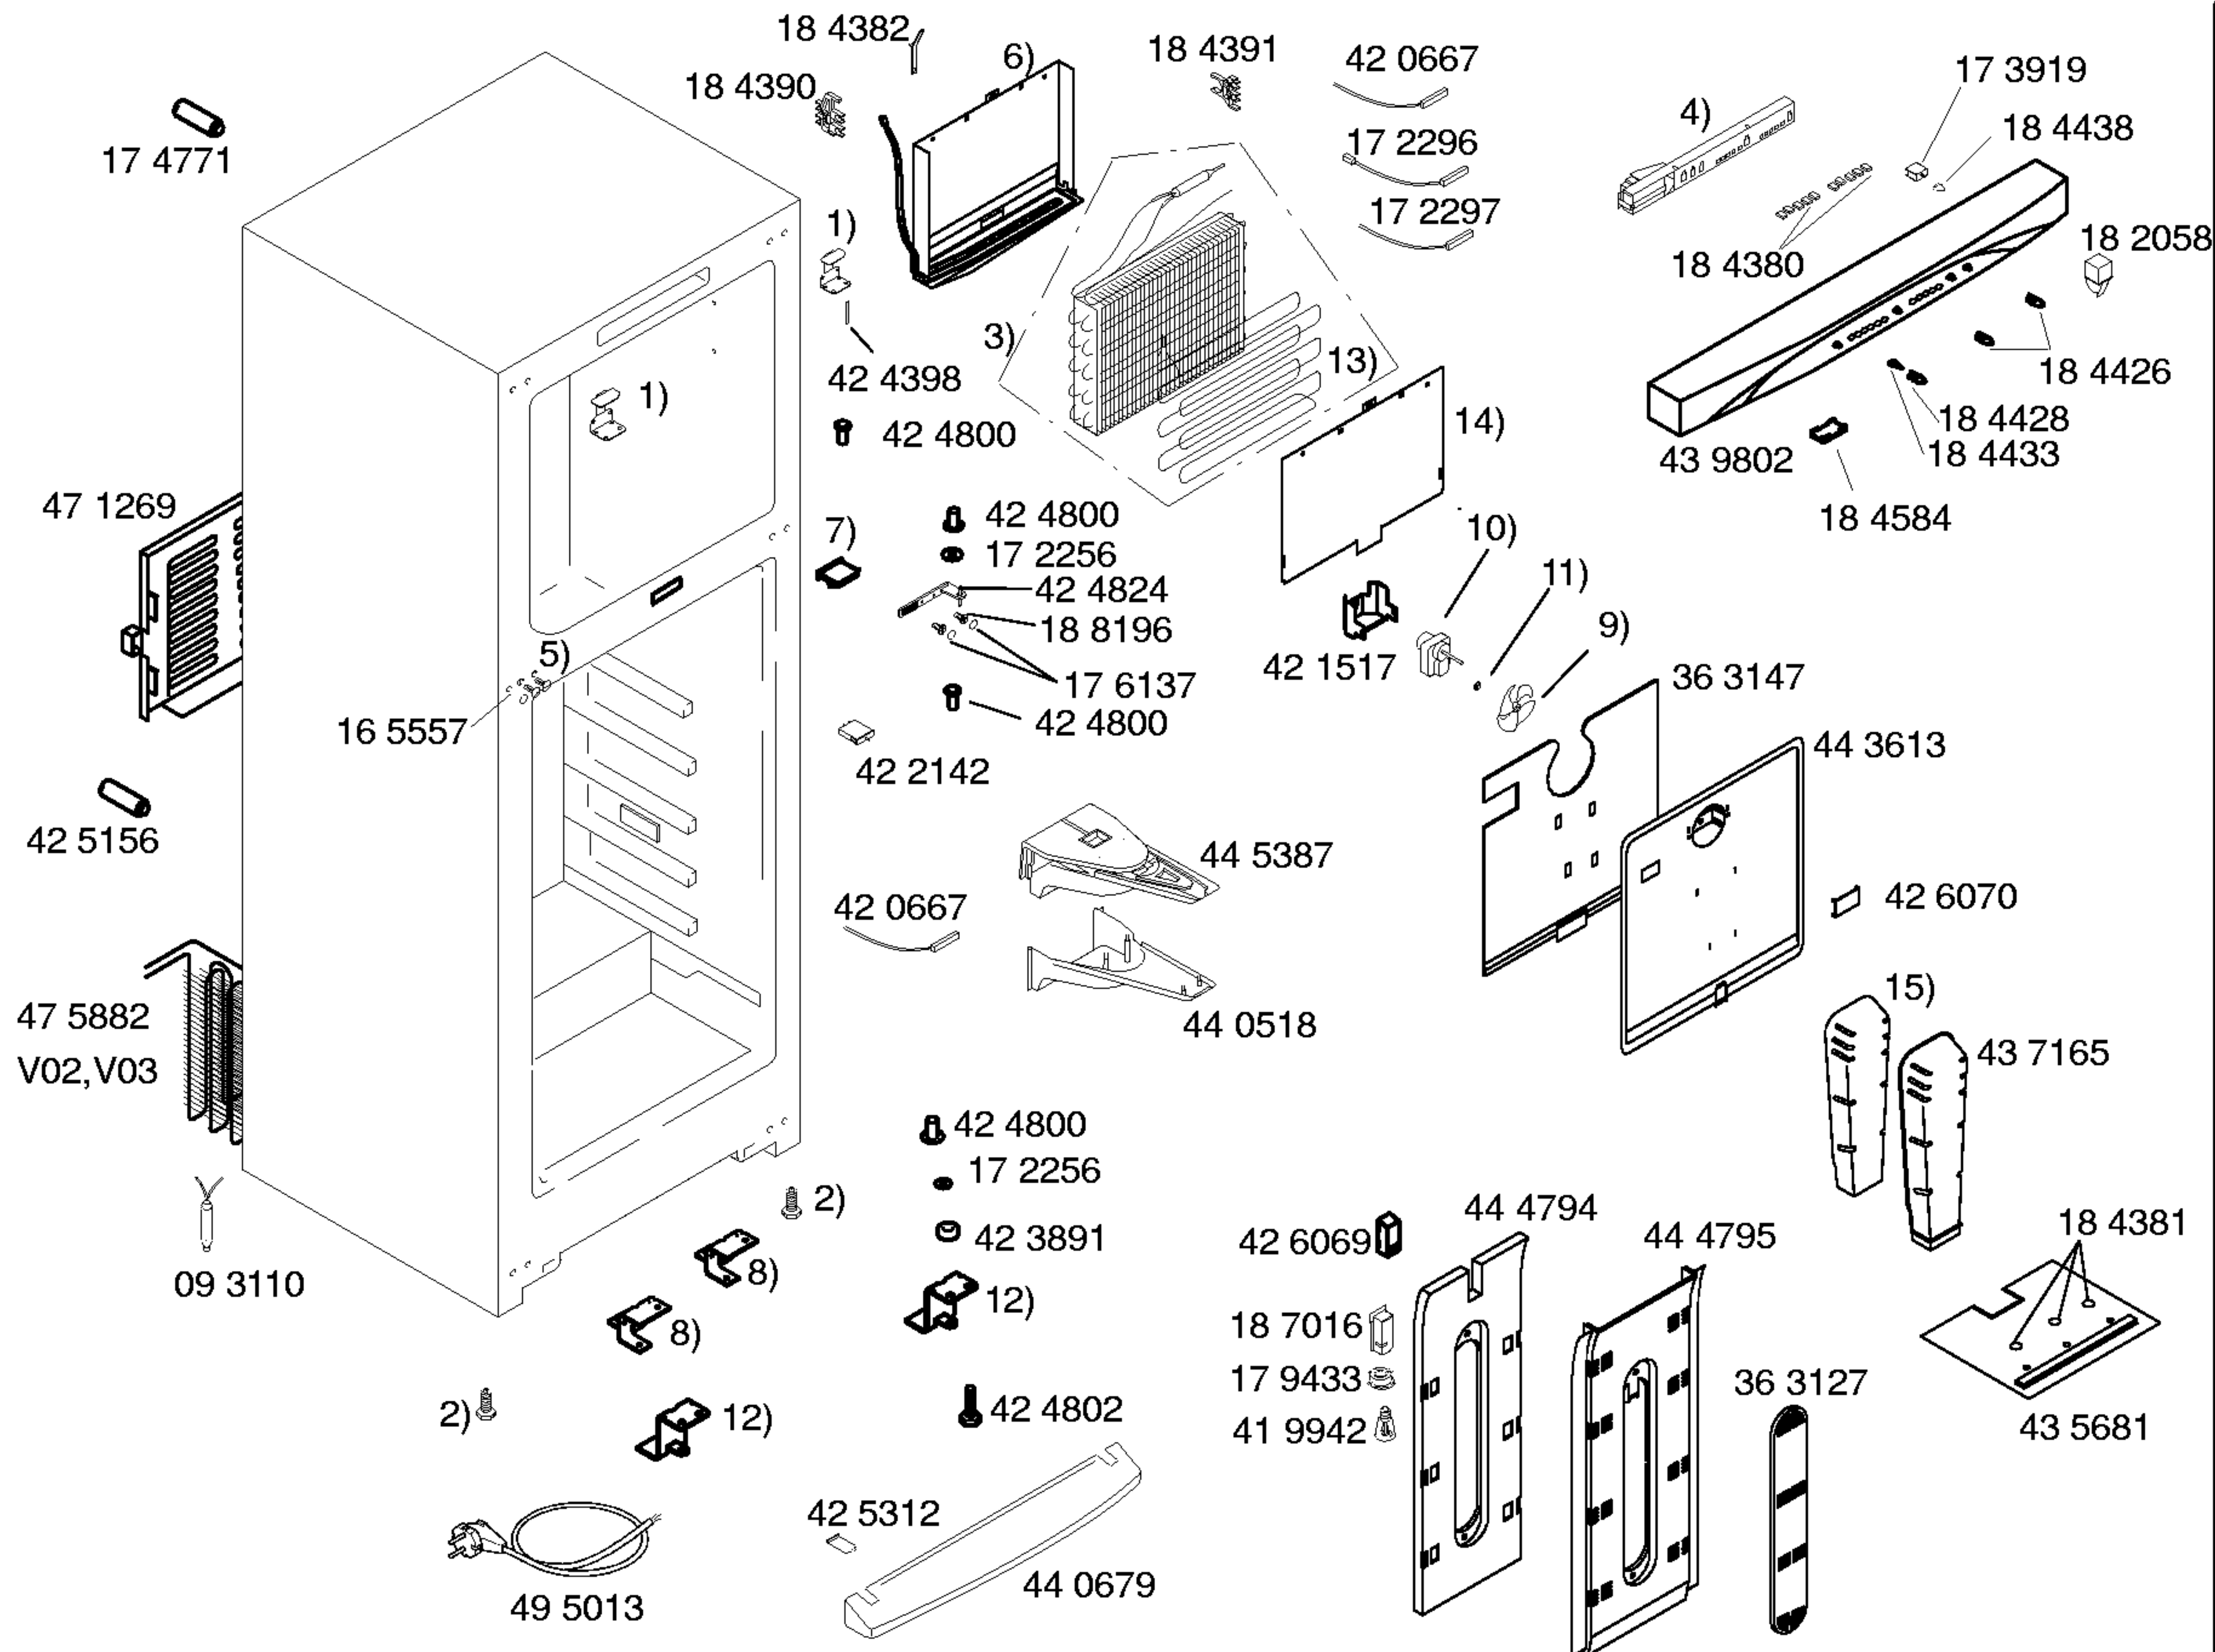

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
59 1259
(DE,GB,FR,IT,ES,PT)


- 1) 17 1312
- 2) 42 4340
- 3) 43 8728
- 4) 49 7503
- 5) 16 5552
- 6) 43 5739
- 7) 41 8128
- 8) 49 1346
- 9) 17 1565
- 10) 49 0859
- 11) 17 1508
- 12) 42 8184
- 13) 43 5707
- 14) 43 5738
- V01
- 44 6179
- V02,V03
- 15) 44 3611

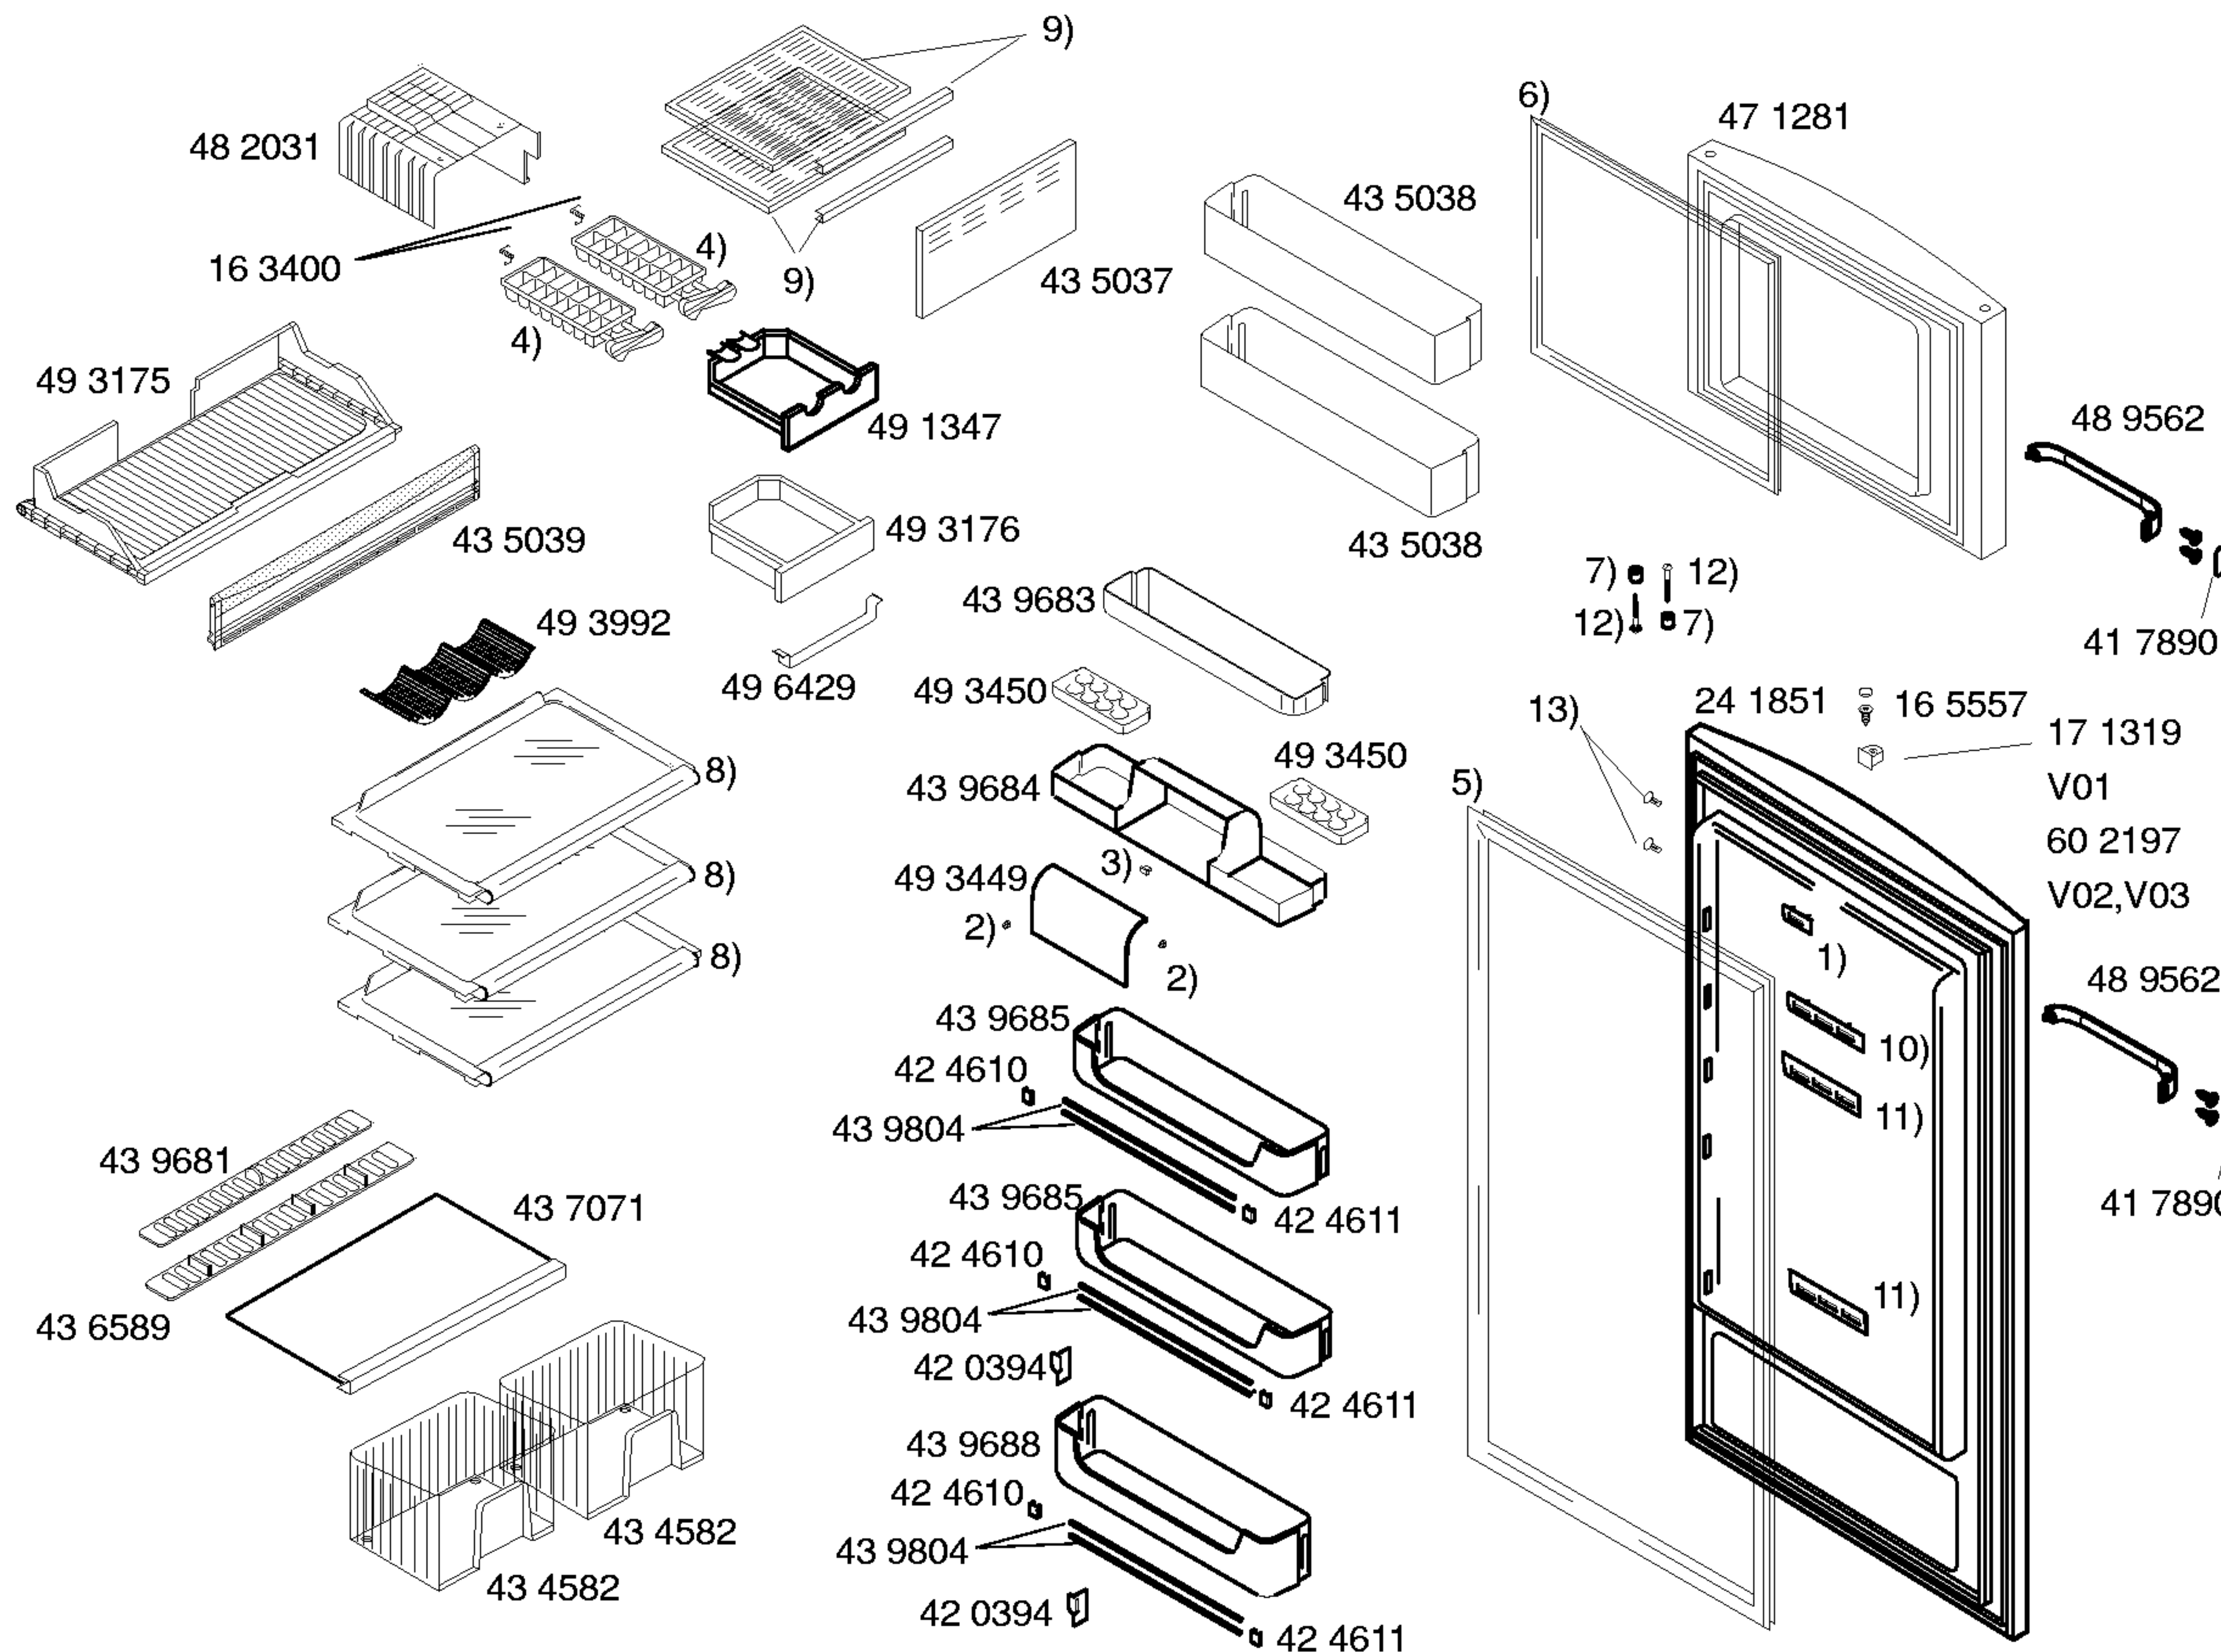

Mat. - Nr. - Konstante
3740

- 1) 49 5014
- 2) 42 0568
- 3) 42 0751
- 4) 49 1361
- 5) 24 2330
- 6) 47 4027
- 7) 18 8188
- 8) 43 7243
- 9) 43 8709
- 10) 49 4865
- 11) 49 4864
- 12) 18 8194
- 13) 17 3747

17 1319
V01
60 2197
V02,V03
48 9562
41 7890

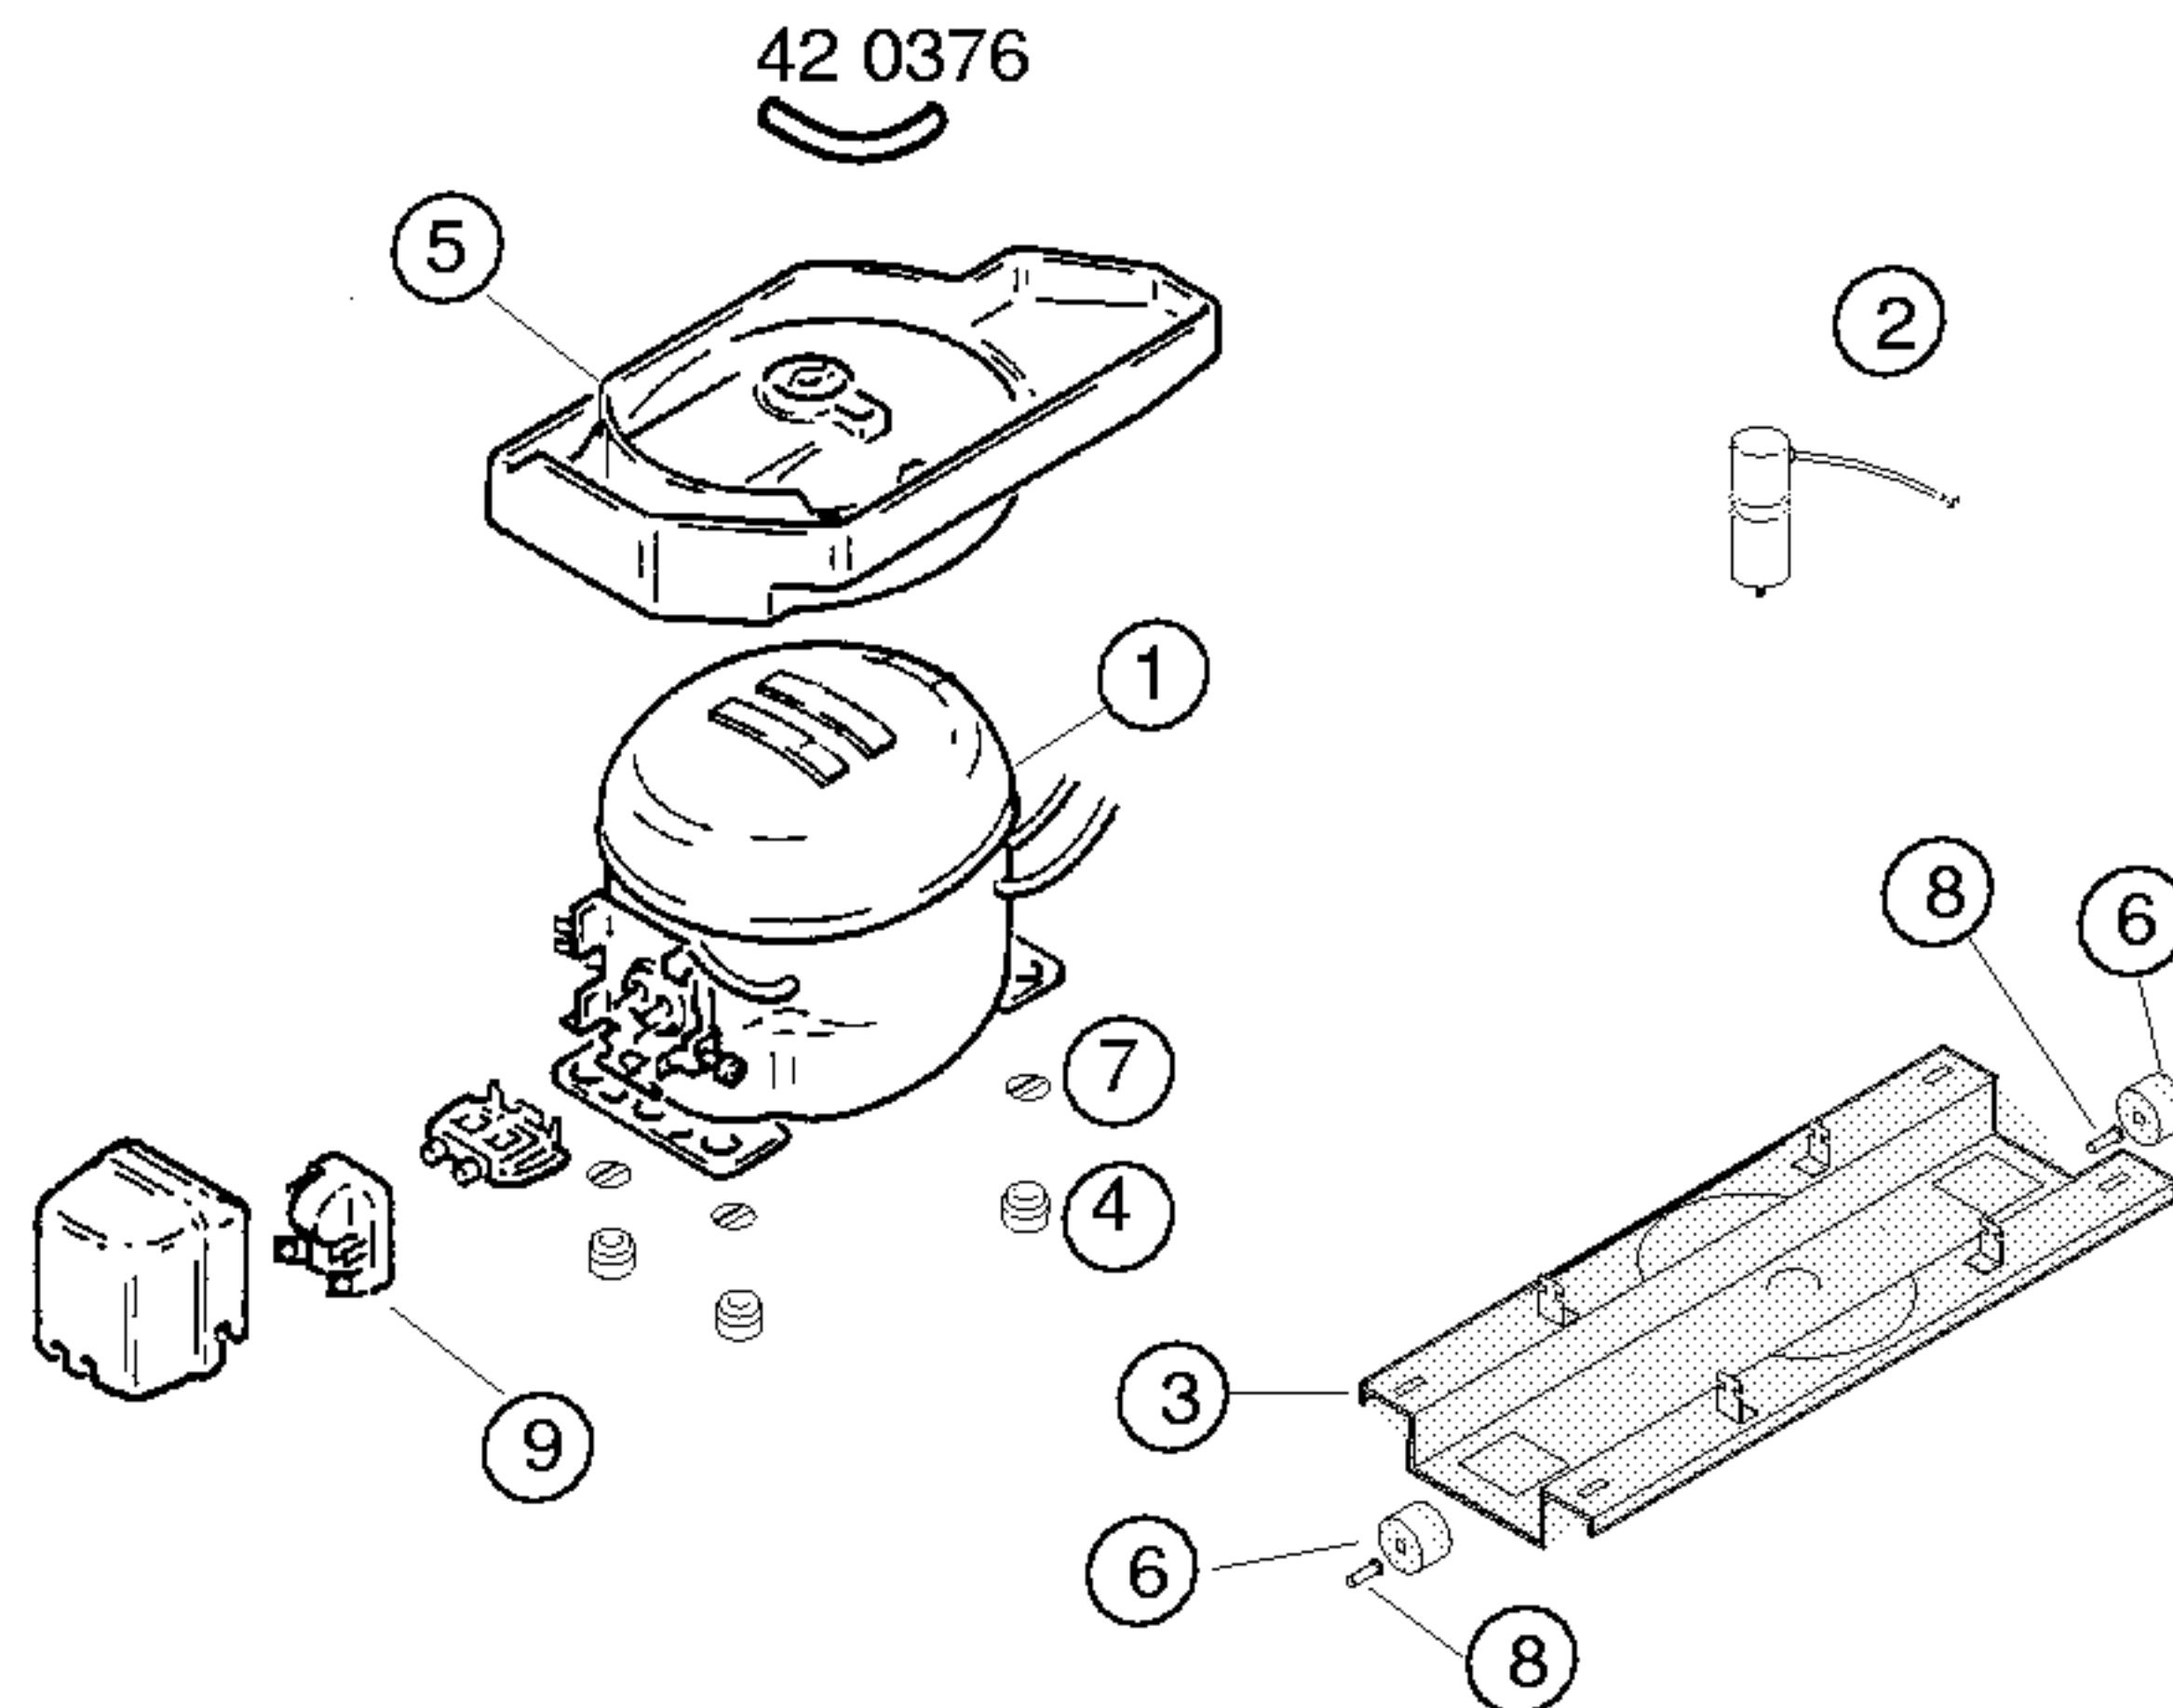

Pos.	V01	V02, V03	
	Danfoss		
	NLX15KK		
1	14 3744		
2	17 4093	43 6199	
3	35 4583		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	18 1014		
9	16 5570		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLX15KK		
Temp. Reyley/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600	g	65
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ω W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V		
Temp. Reyley/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz