


Libro de instrucciones 51 9303 (es,pt)

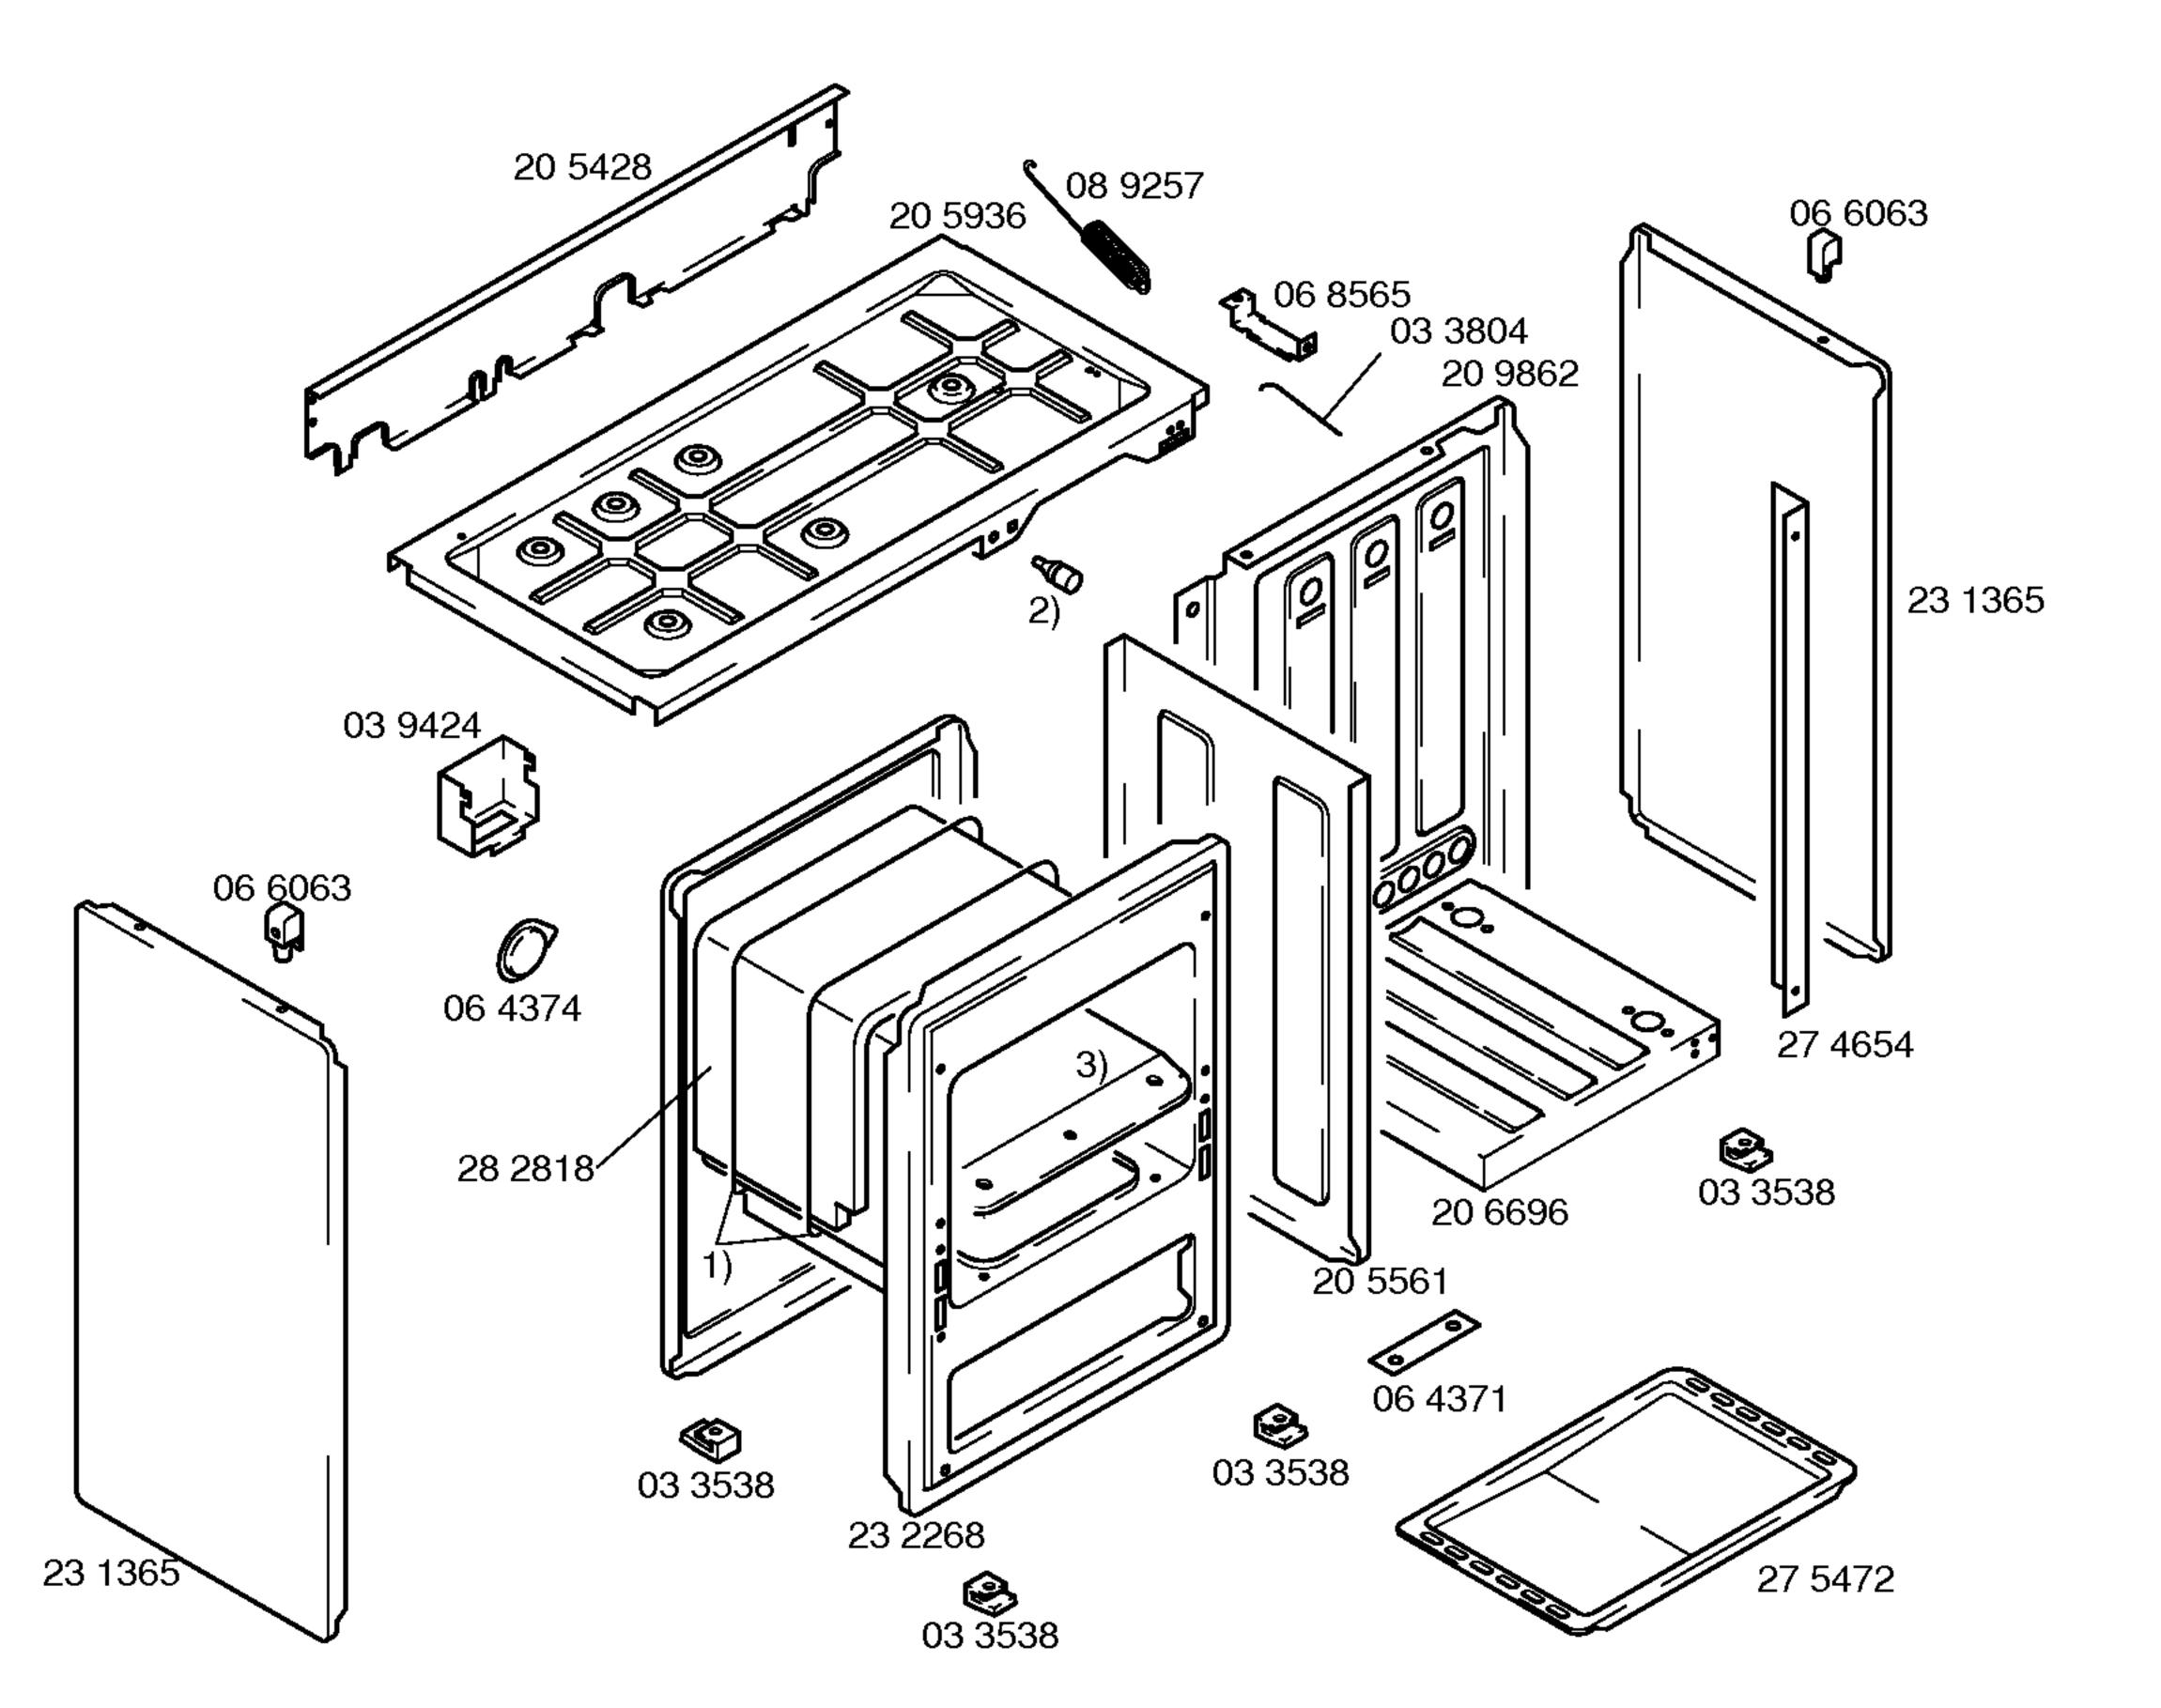


- 1) 09 2939
- 2) 06 8567
- 3) 27 4895

RC9144/02-V01


RC9144/04-V02



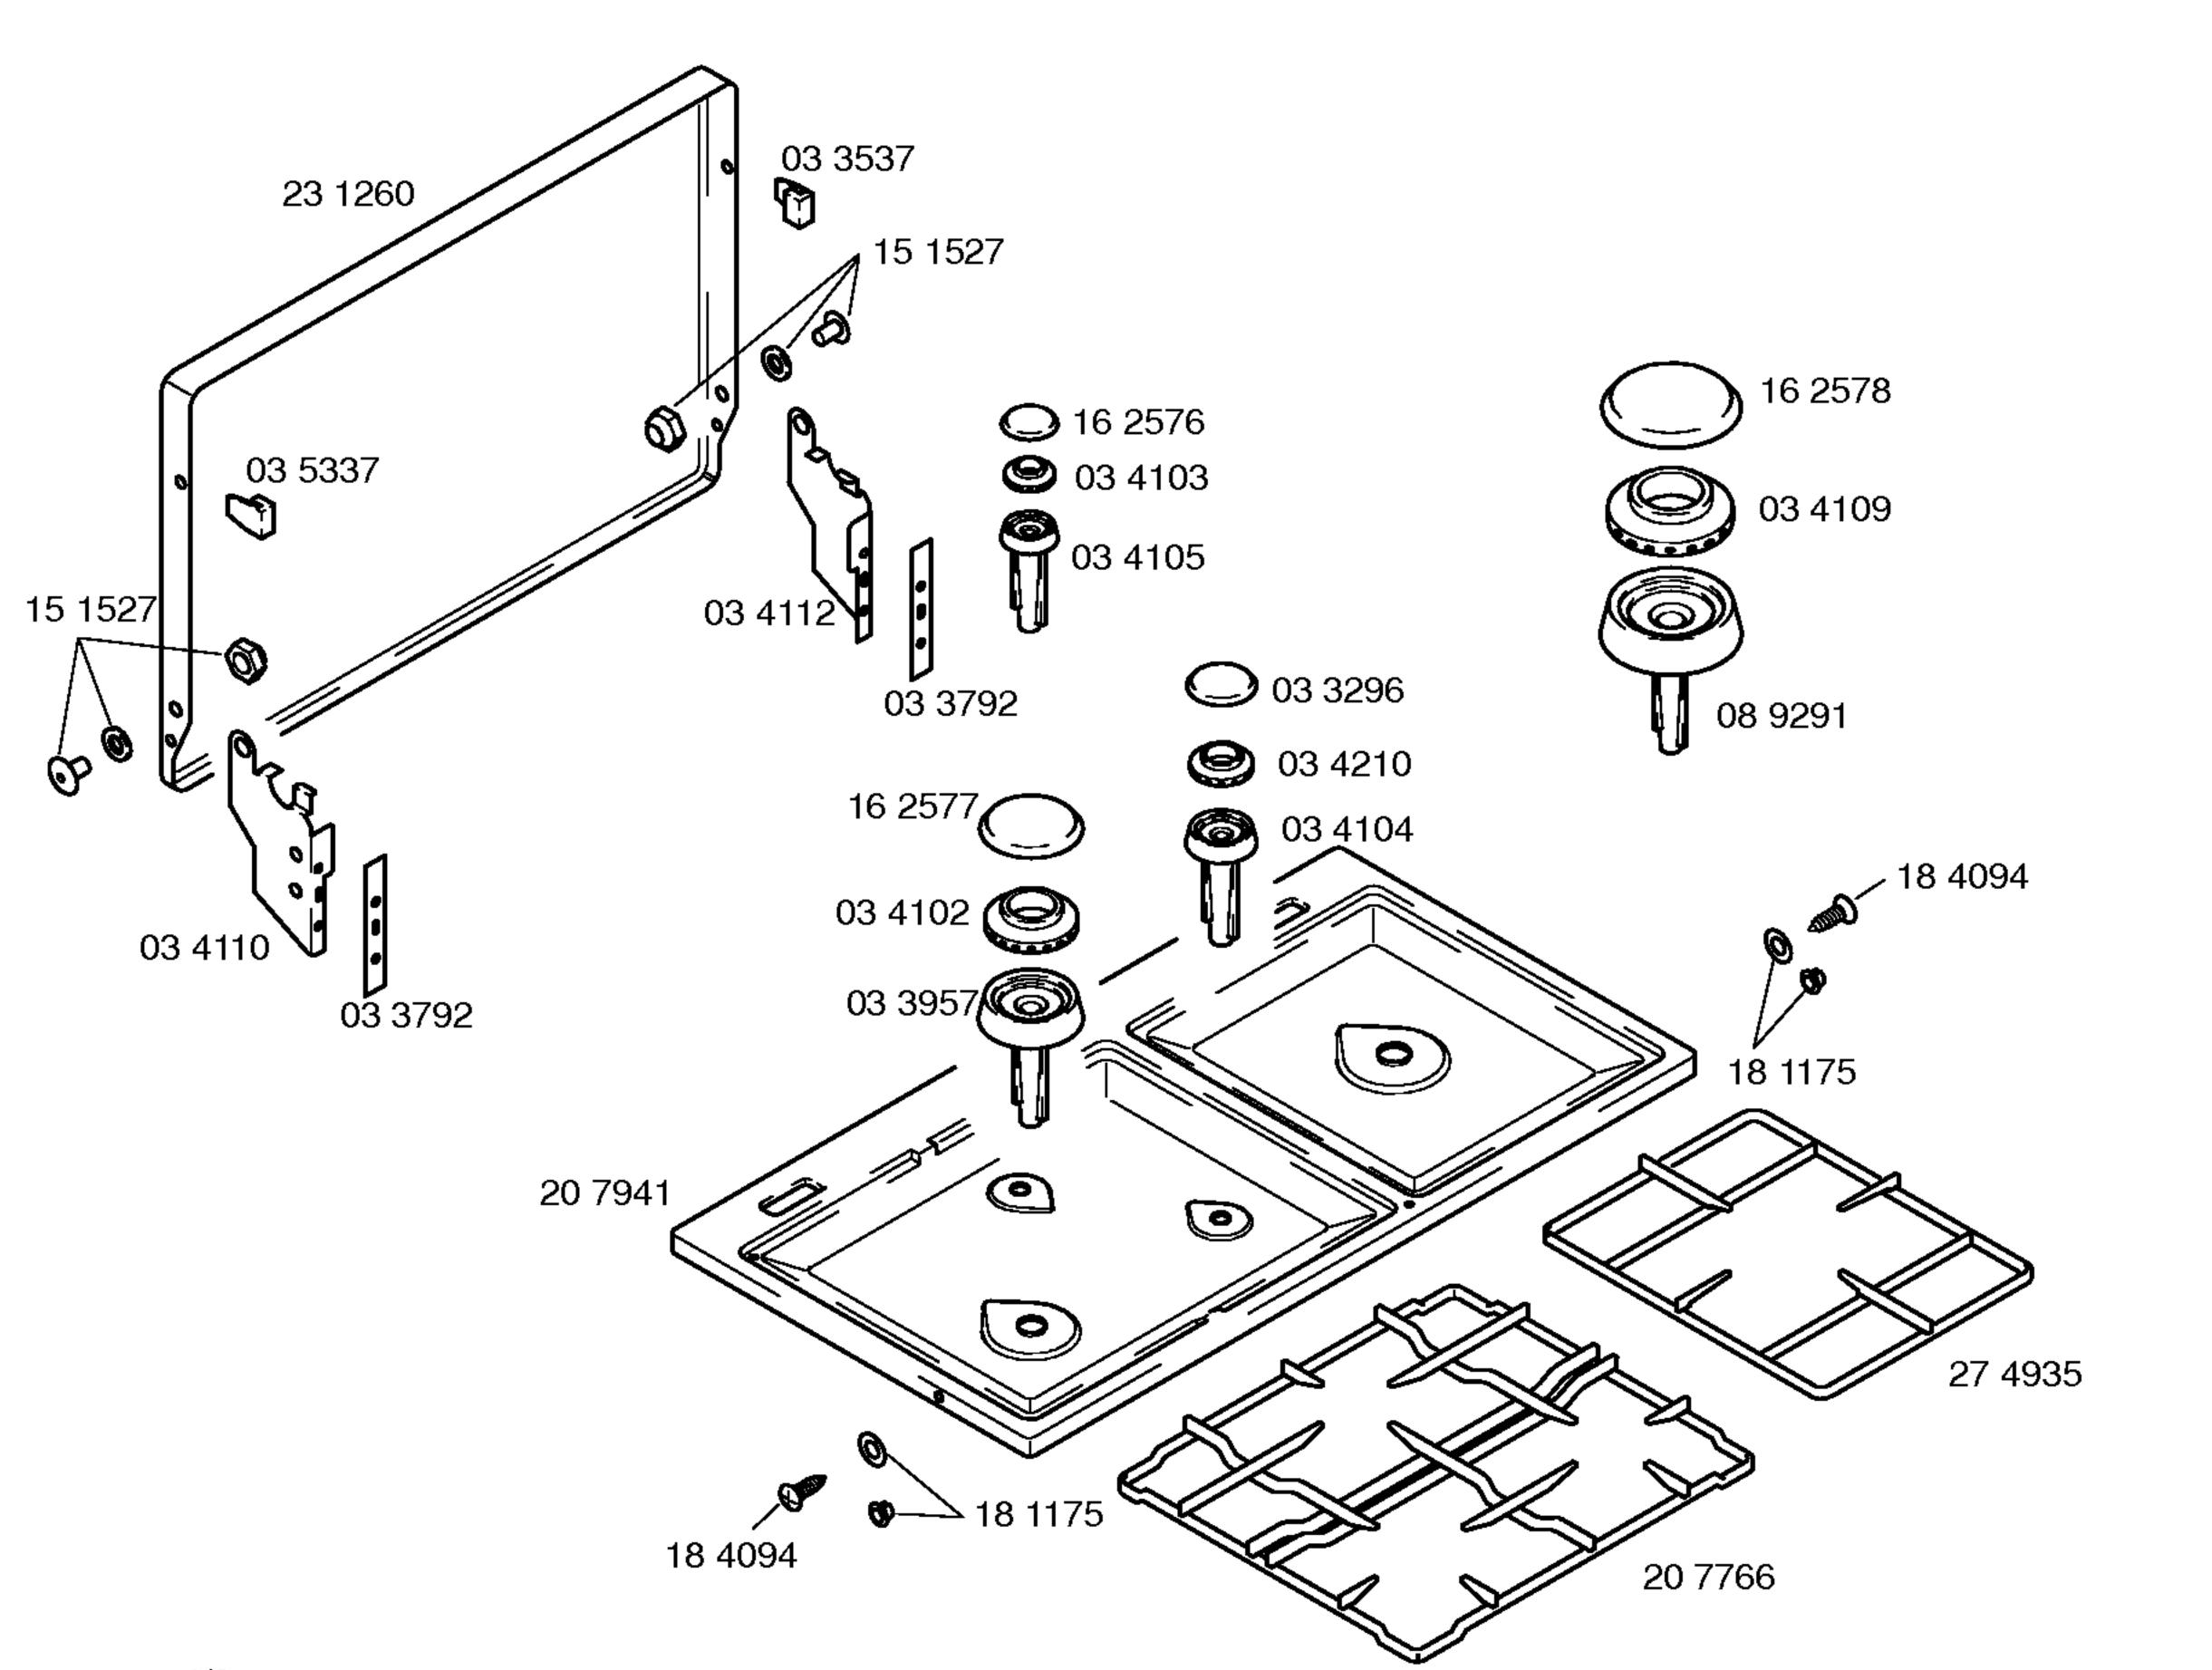

RC9144/02-V01

RC9144/04-V02

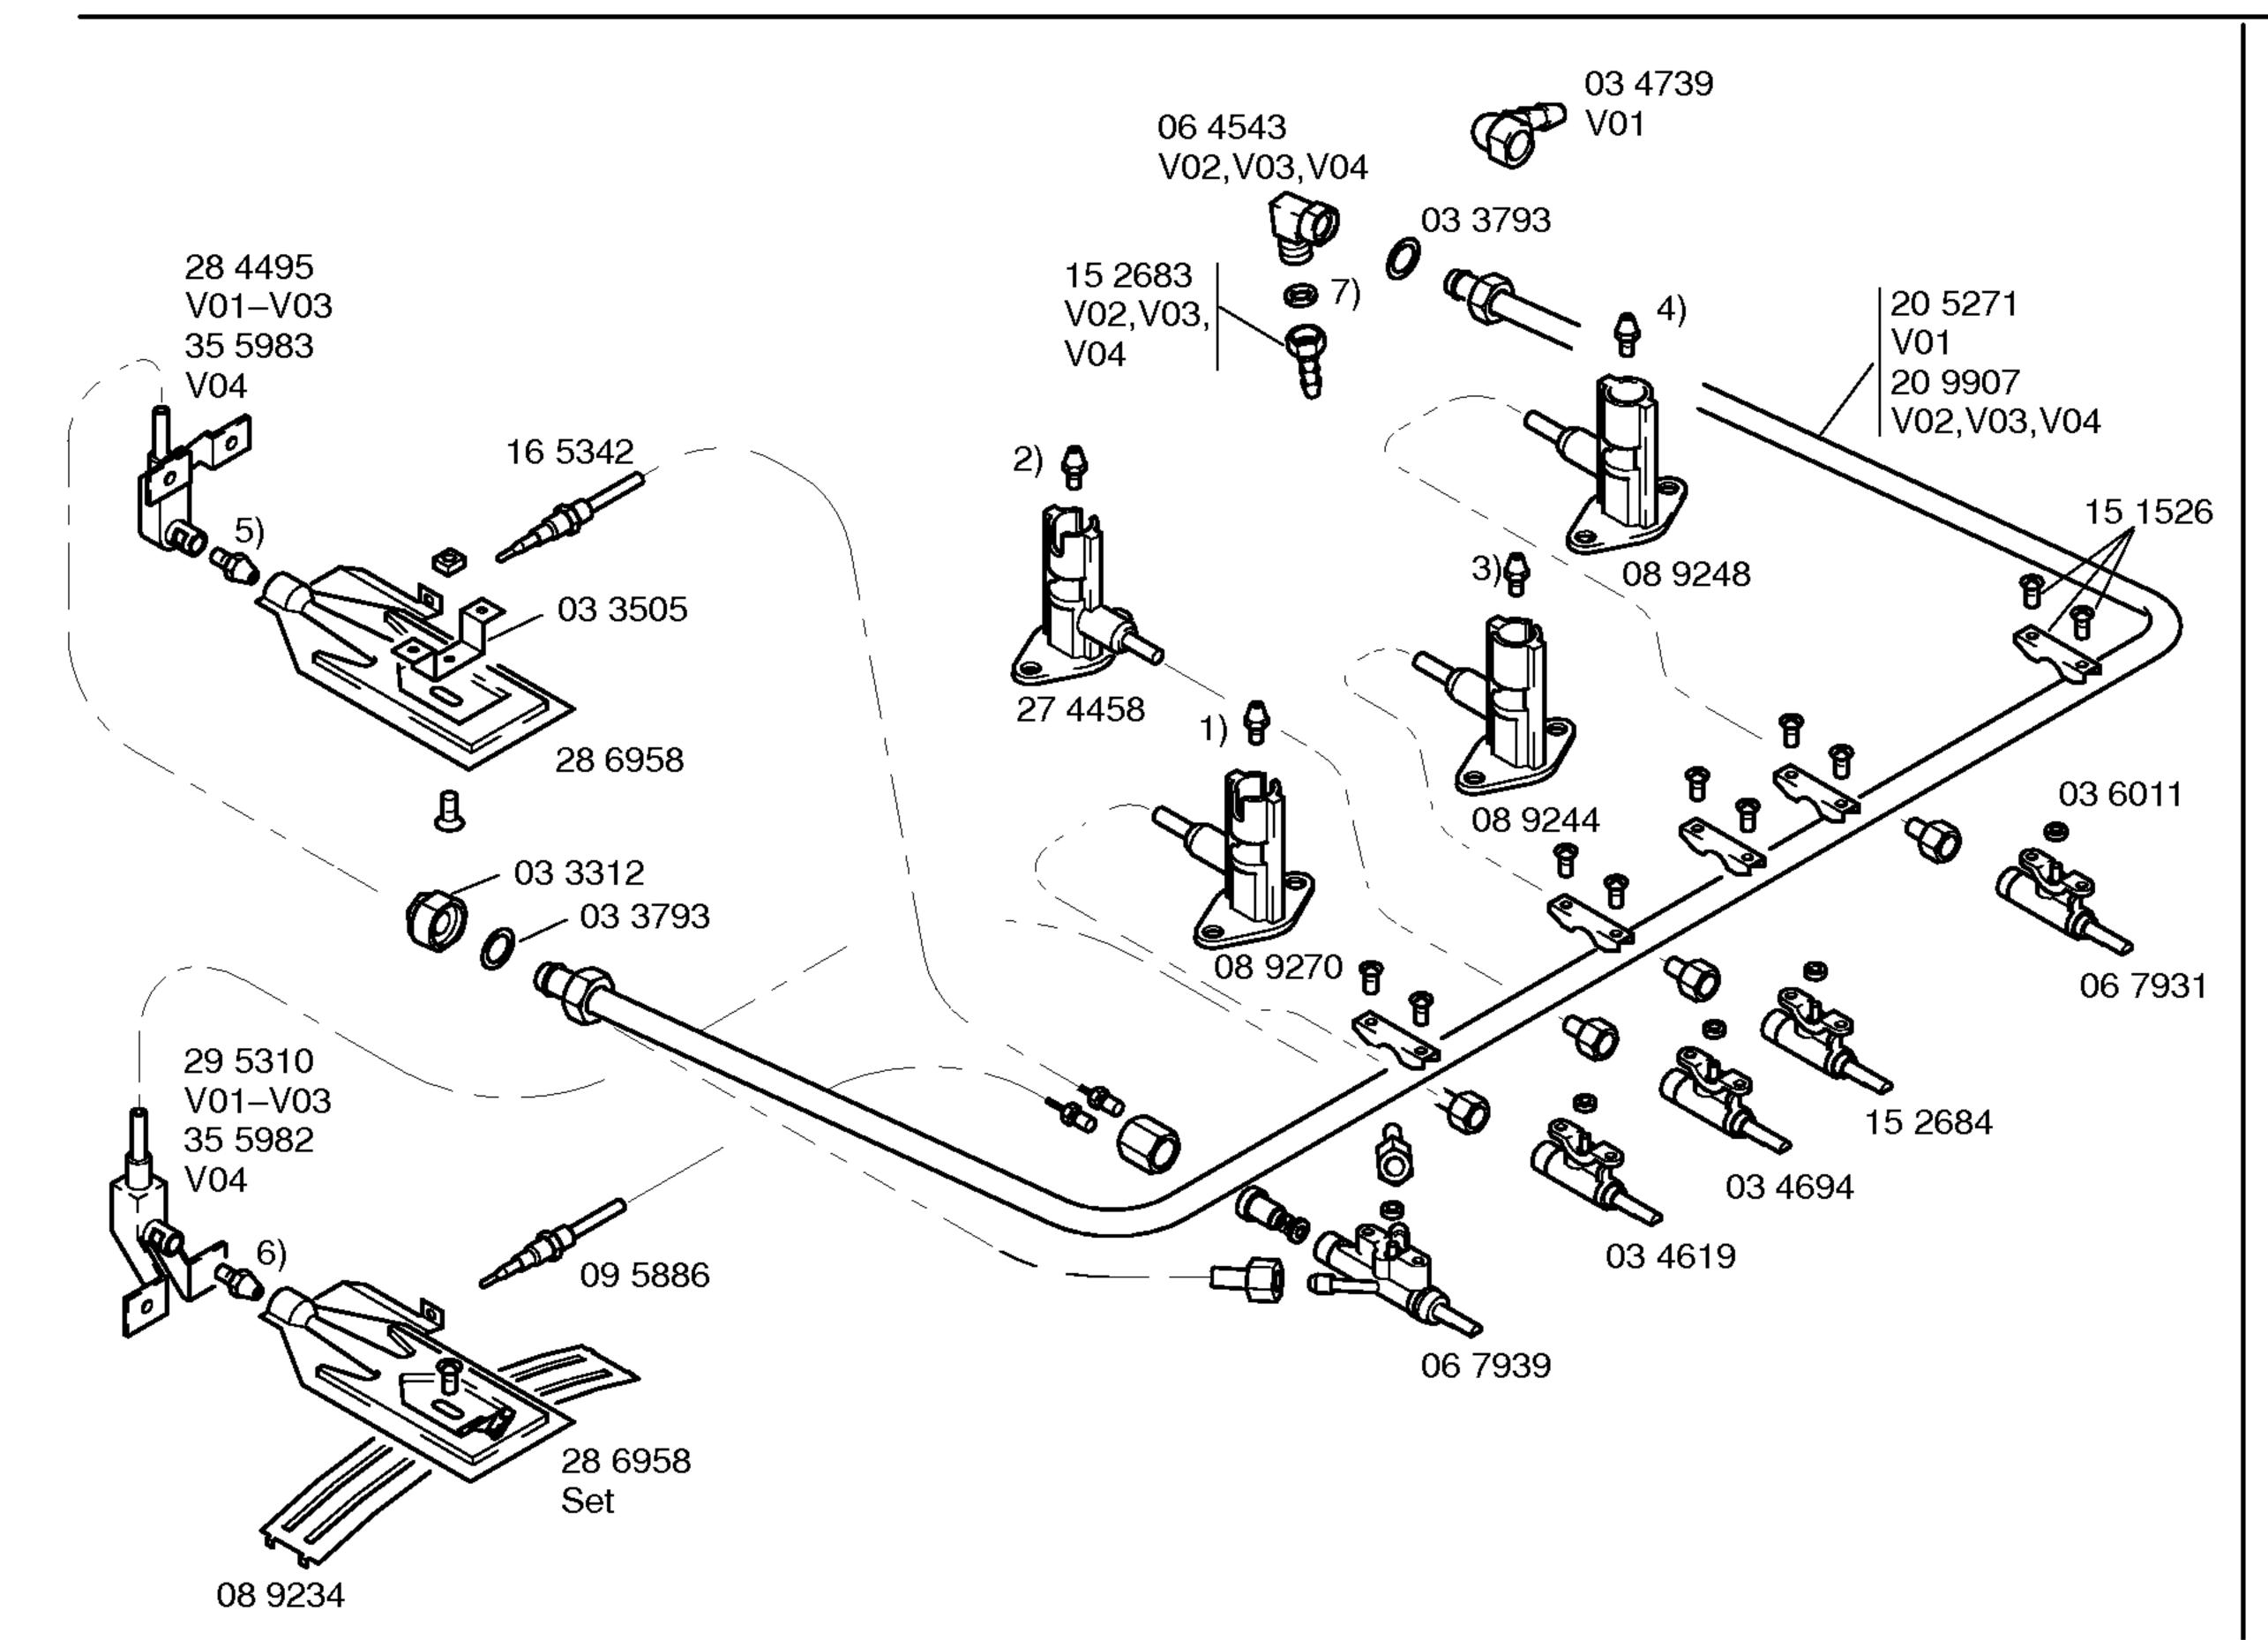

- 1) 03 4224
- 2) 03 4232
- 3) 03 4231
- 4) 03 4223
- 5) 03 4220
- 6) 03 4222

V02,V03

7) 03 4308

Cjtos transformación: Gas Butano 15 3164 Gas Natural 15 3165 Gas Ciudad 15 3166