


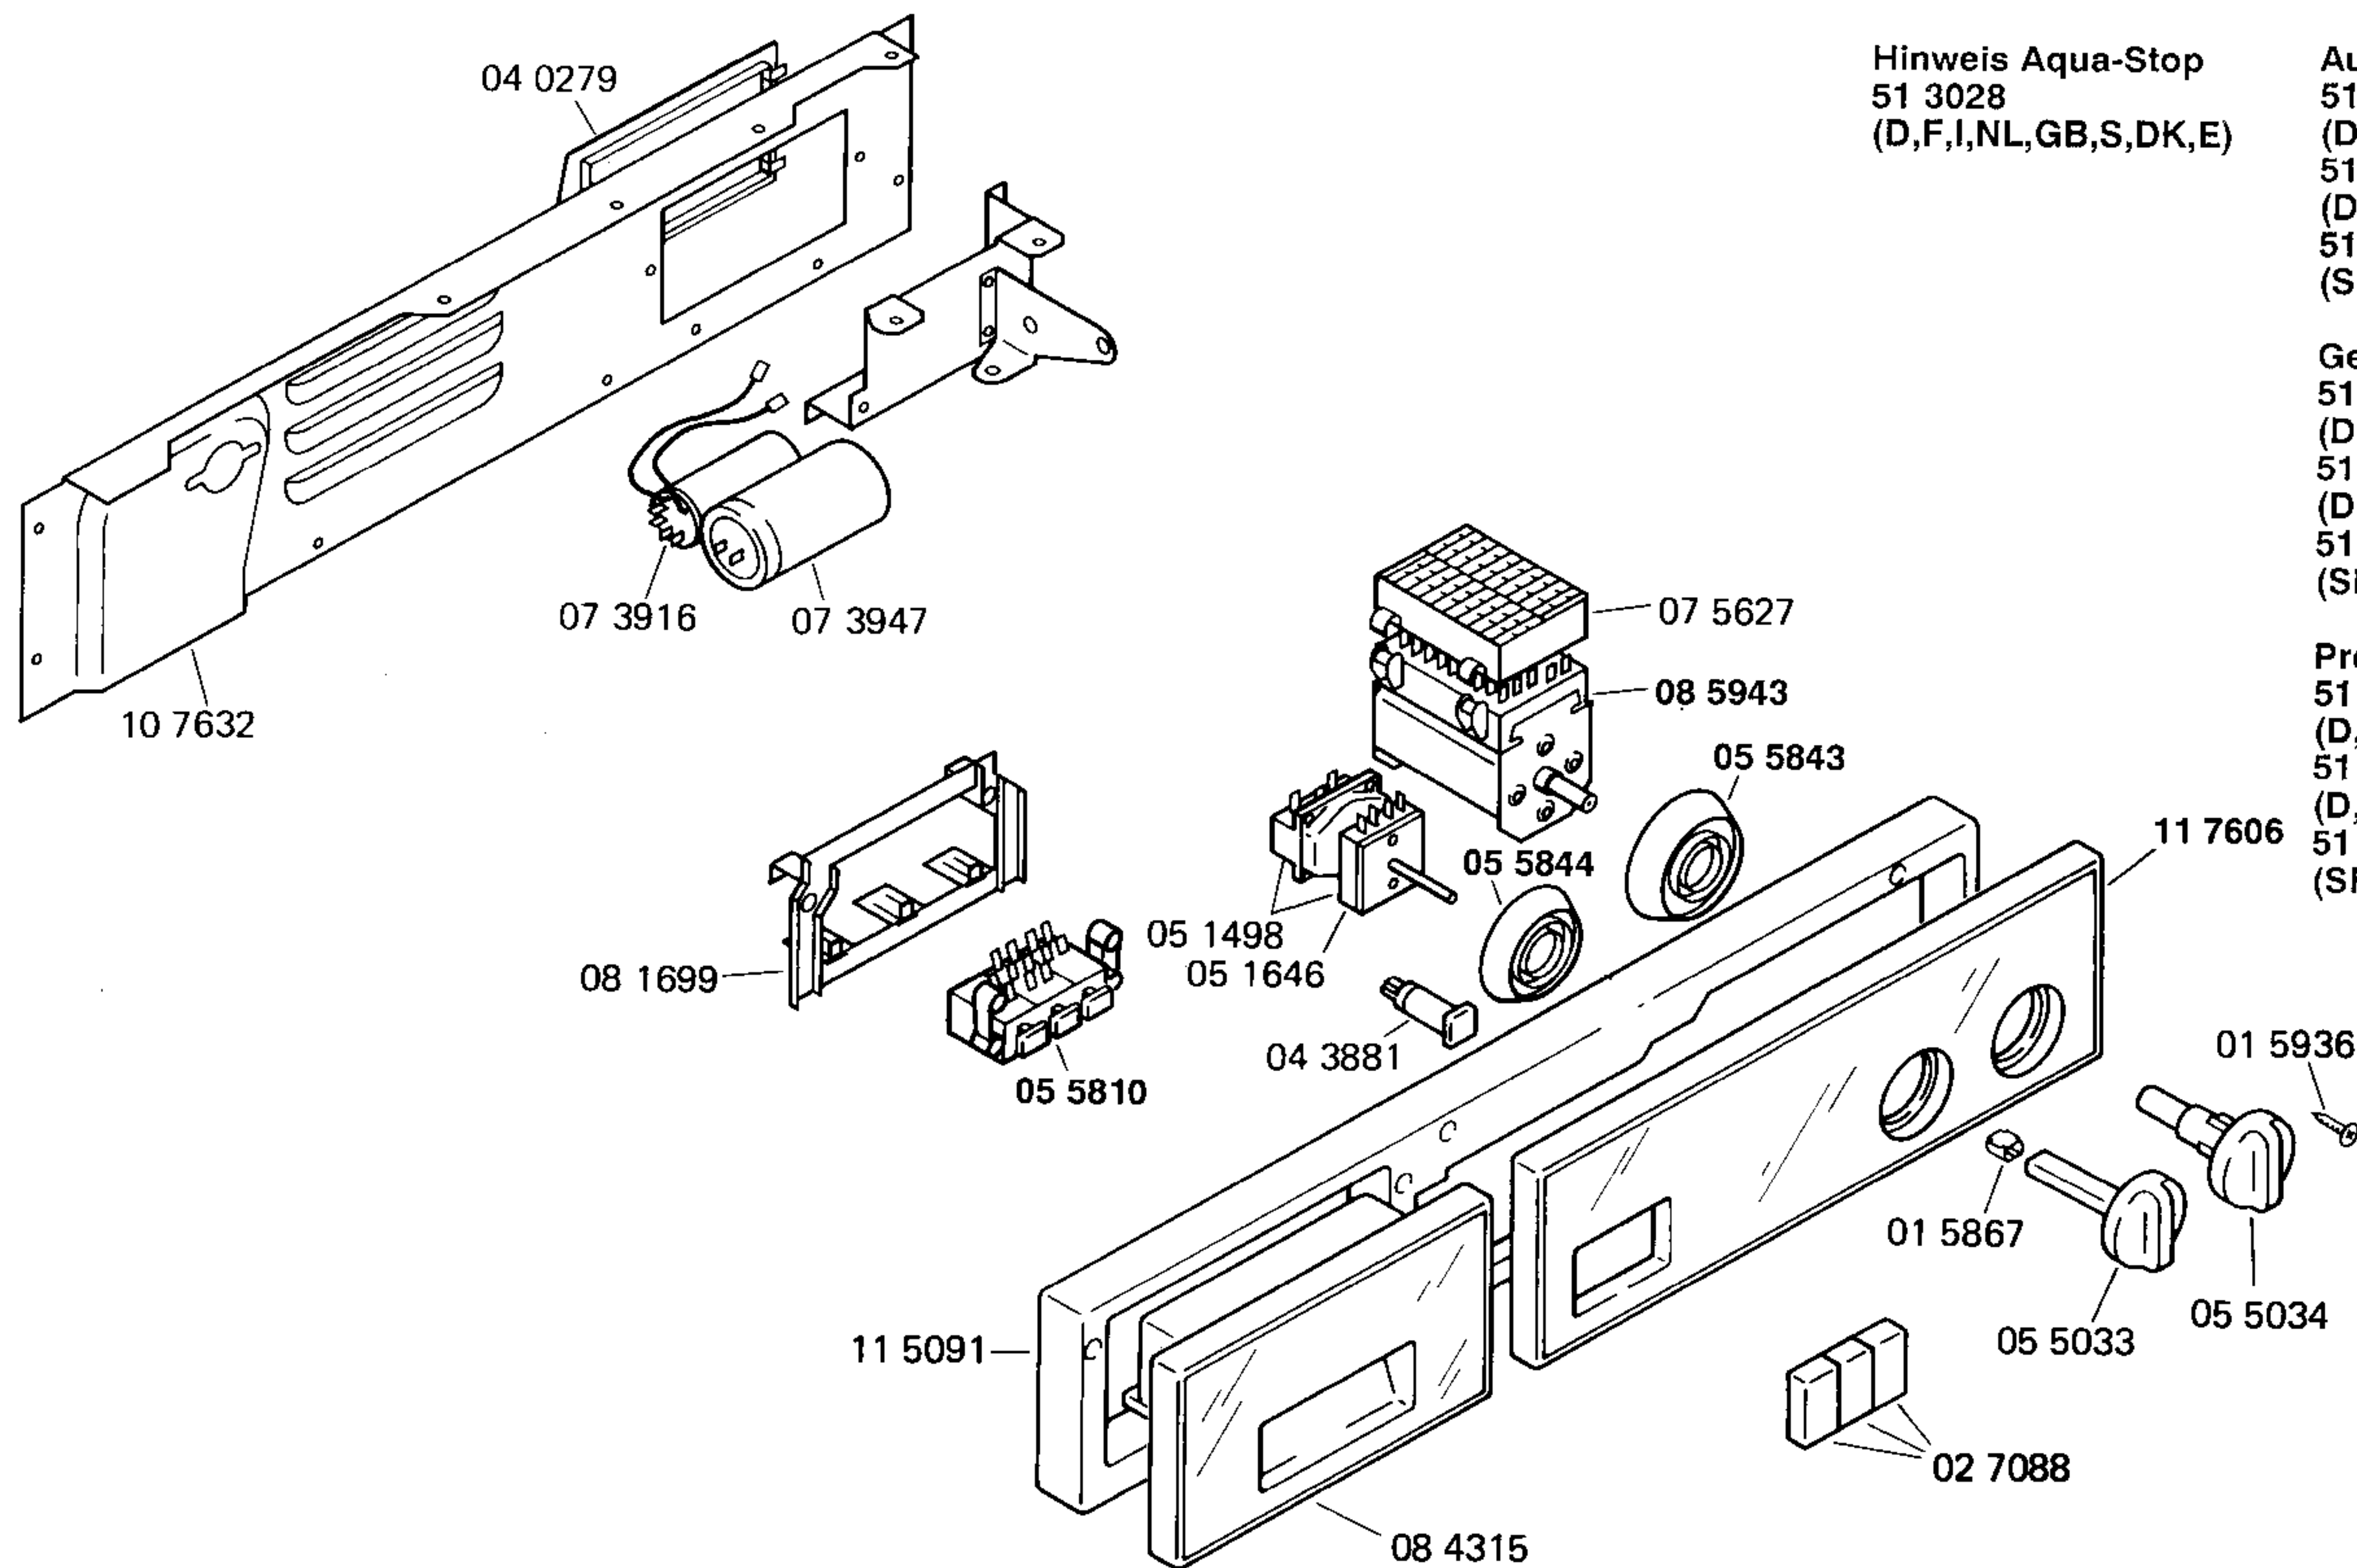



Hinweis Aqua-Stop
51 3028
(D,F,I,NL,GB,S,DK,E)


Aufstellanweisungen:
51 1221
(D,F,I,NL,GB,E)
51 1337
(D,F,I,S,DK,N)
51 1575
(SF)

Gebrauchsanweisungen:
51 1259
(D,F,I,NL,GB,E)
51 1338
(D,F,I,S,DK,N)
51 1577
(SF)

Programmtabellen:
51 1256
(D,F,I,NL,GB,E)
51 1339
(D,F,I,S,DK,N)
51 1578
(SF)

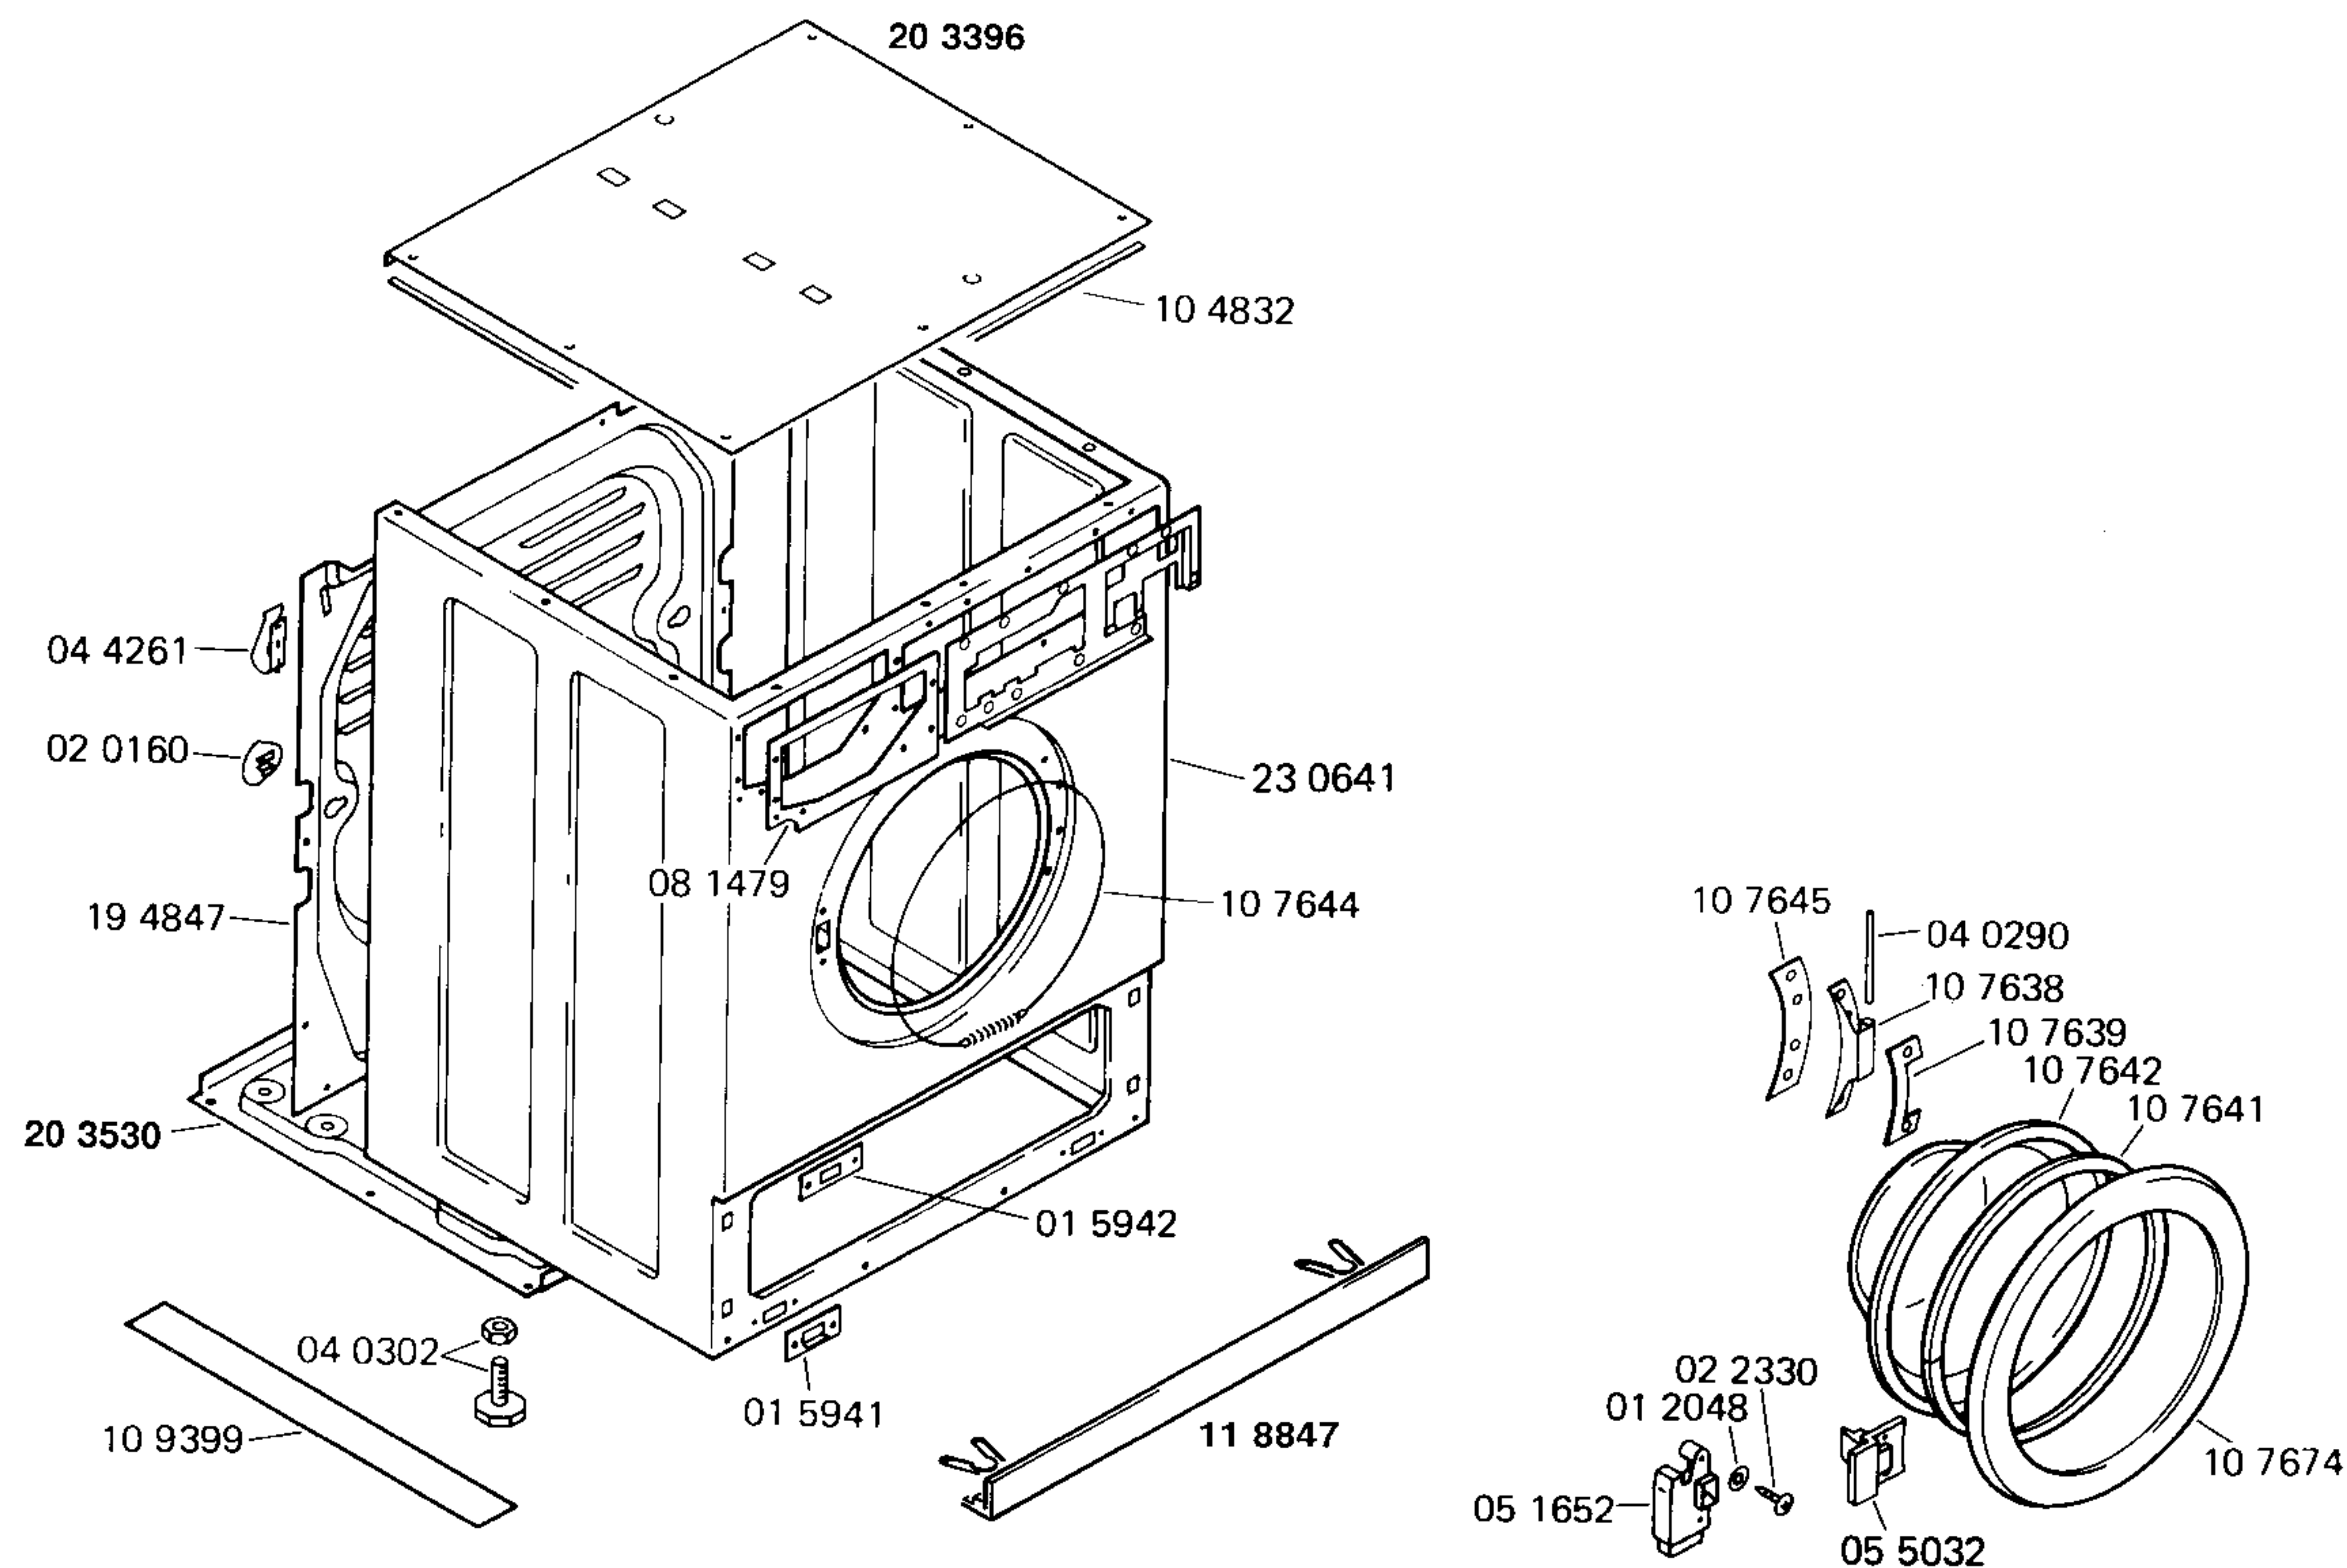

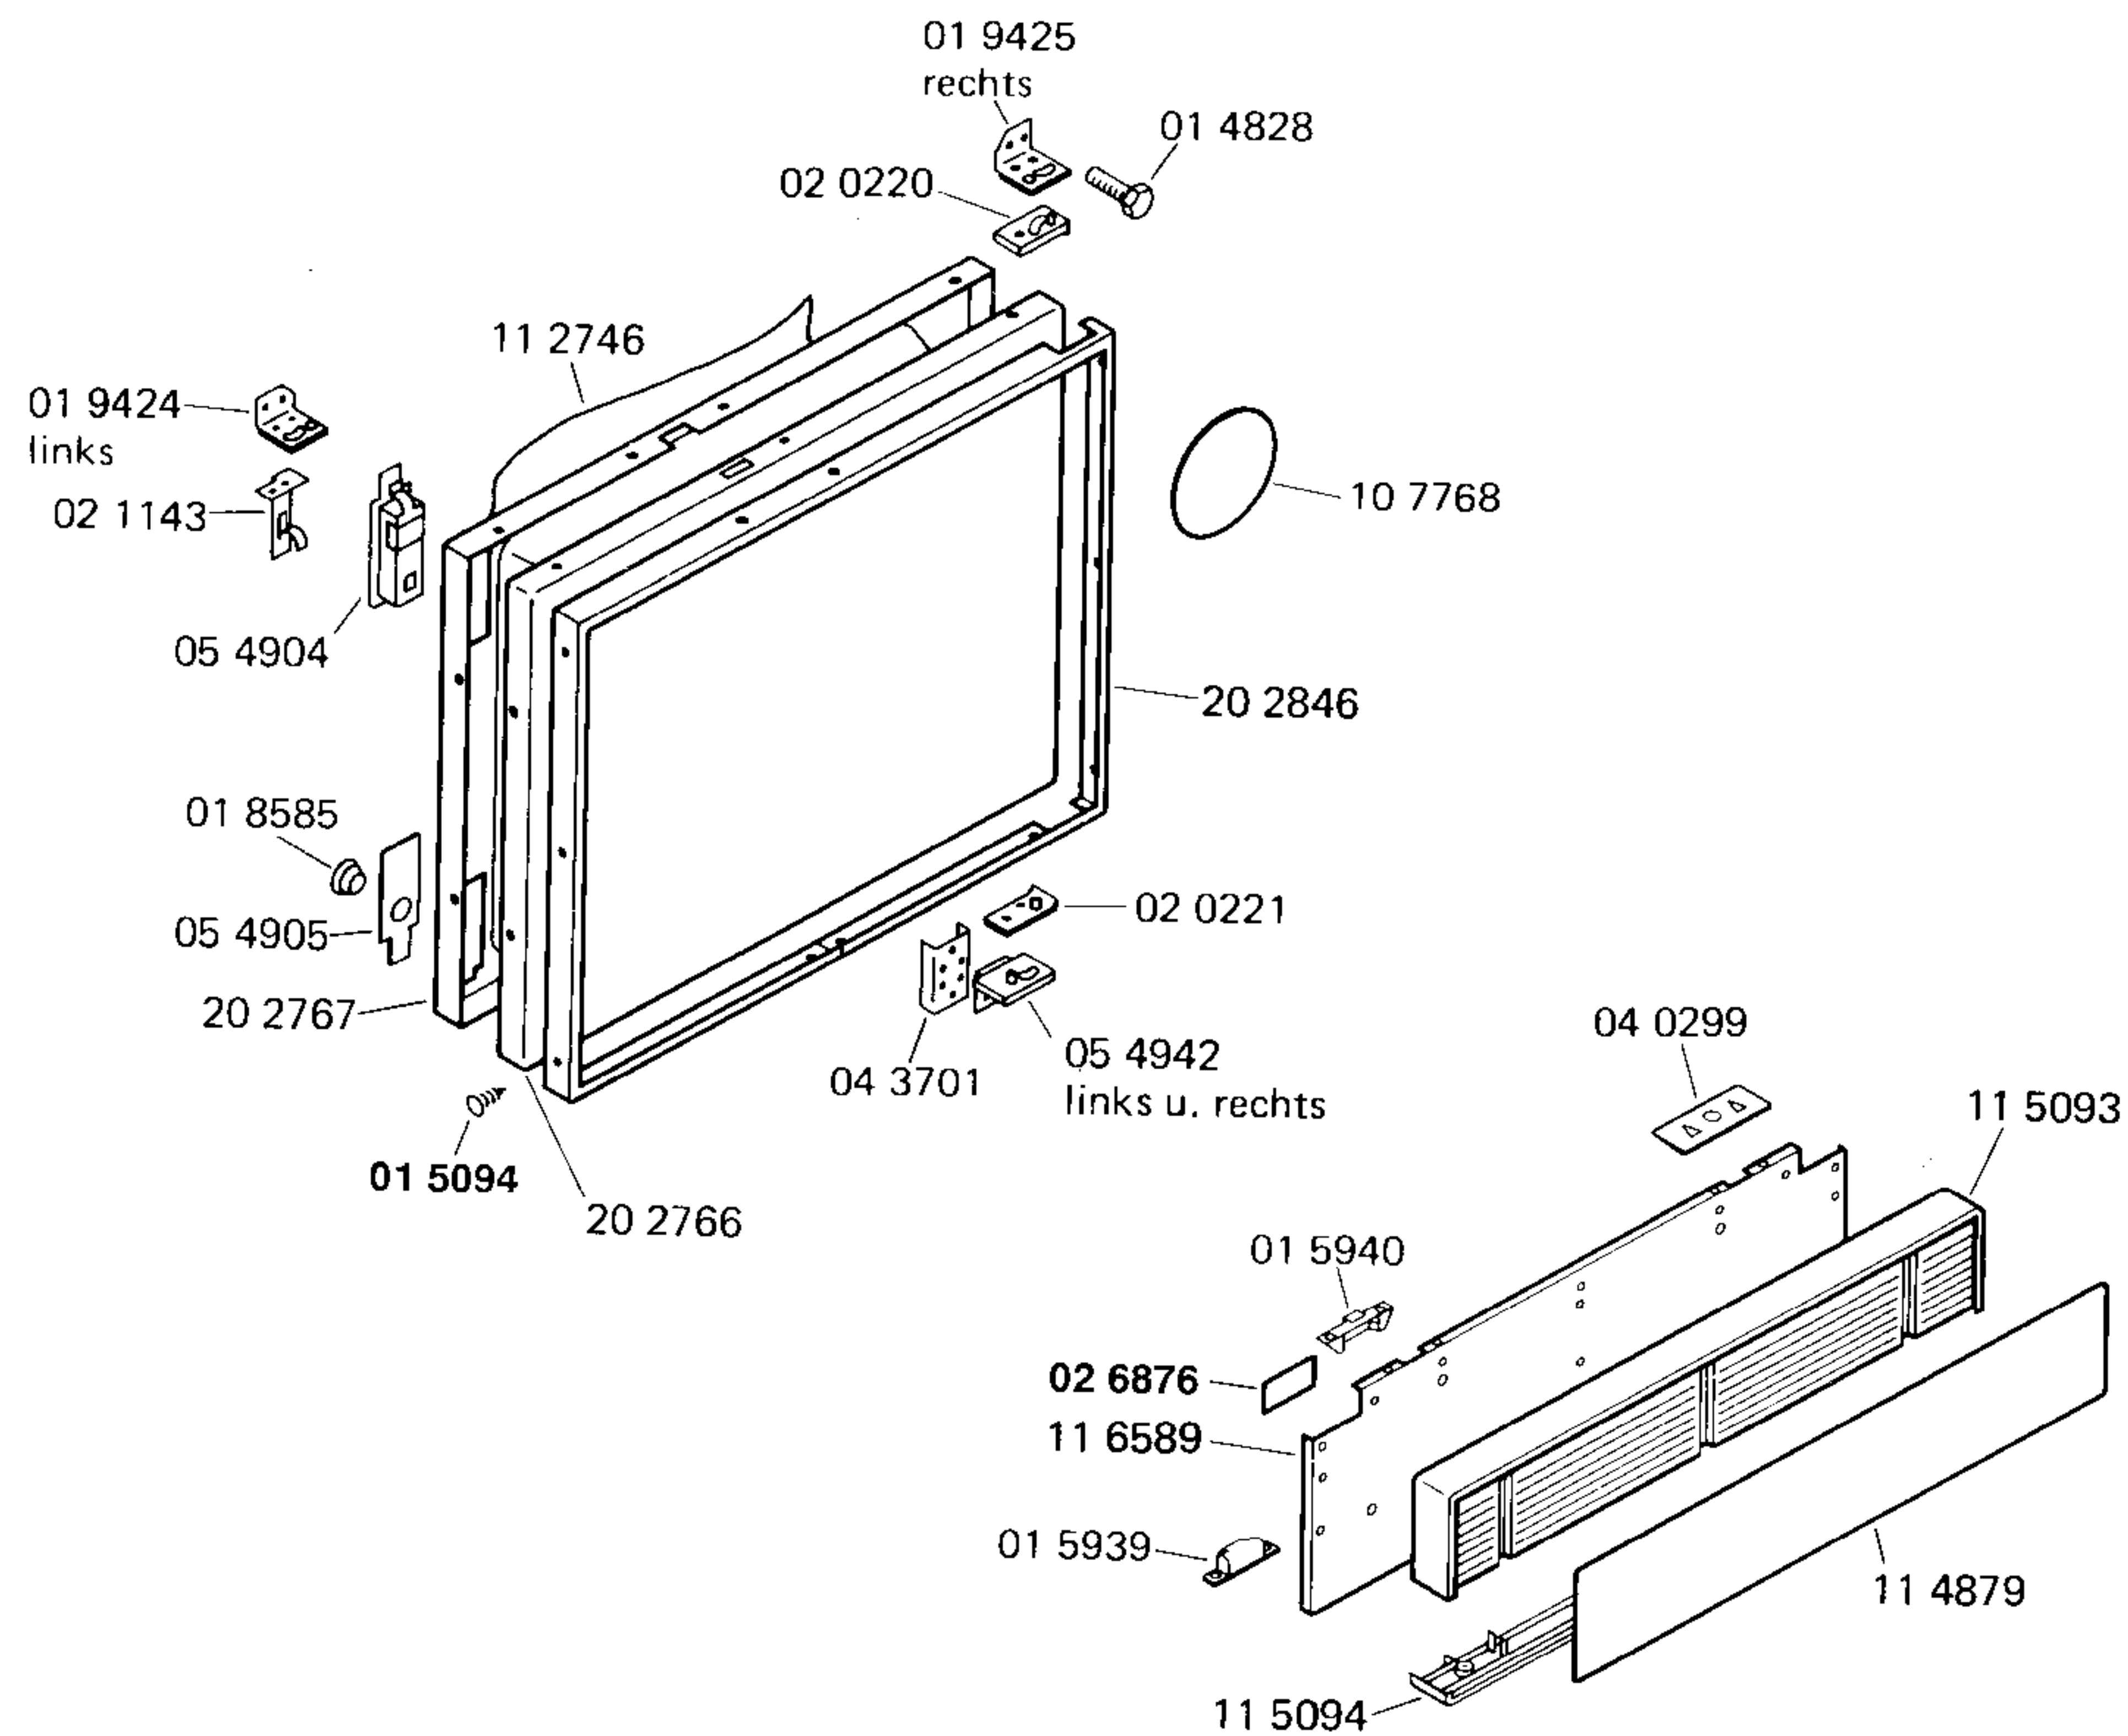

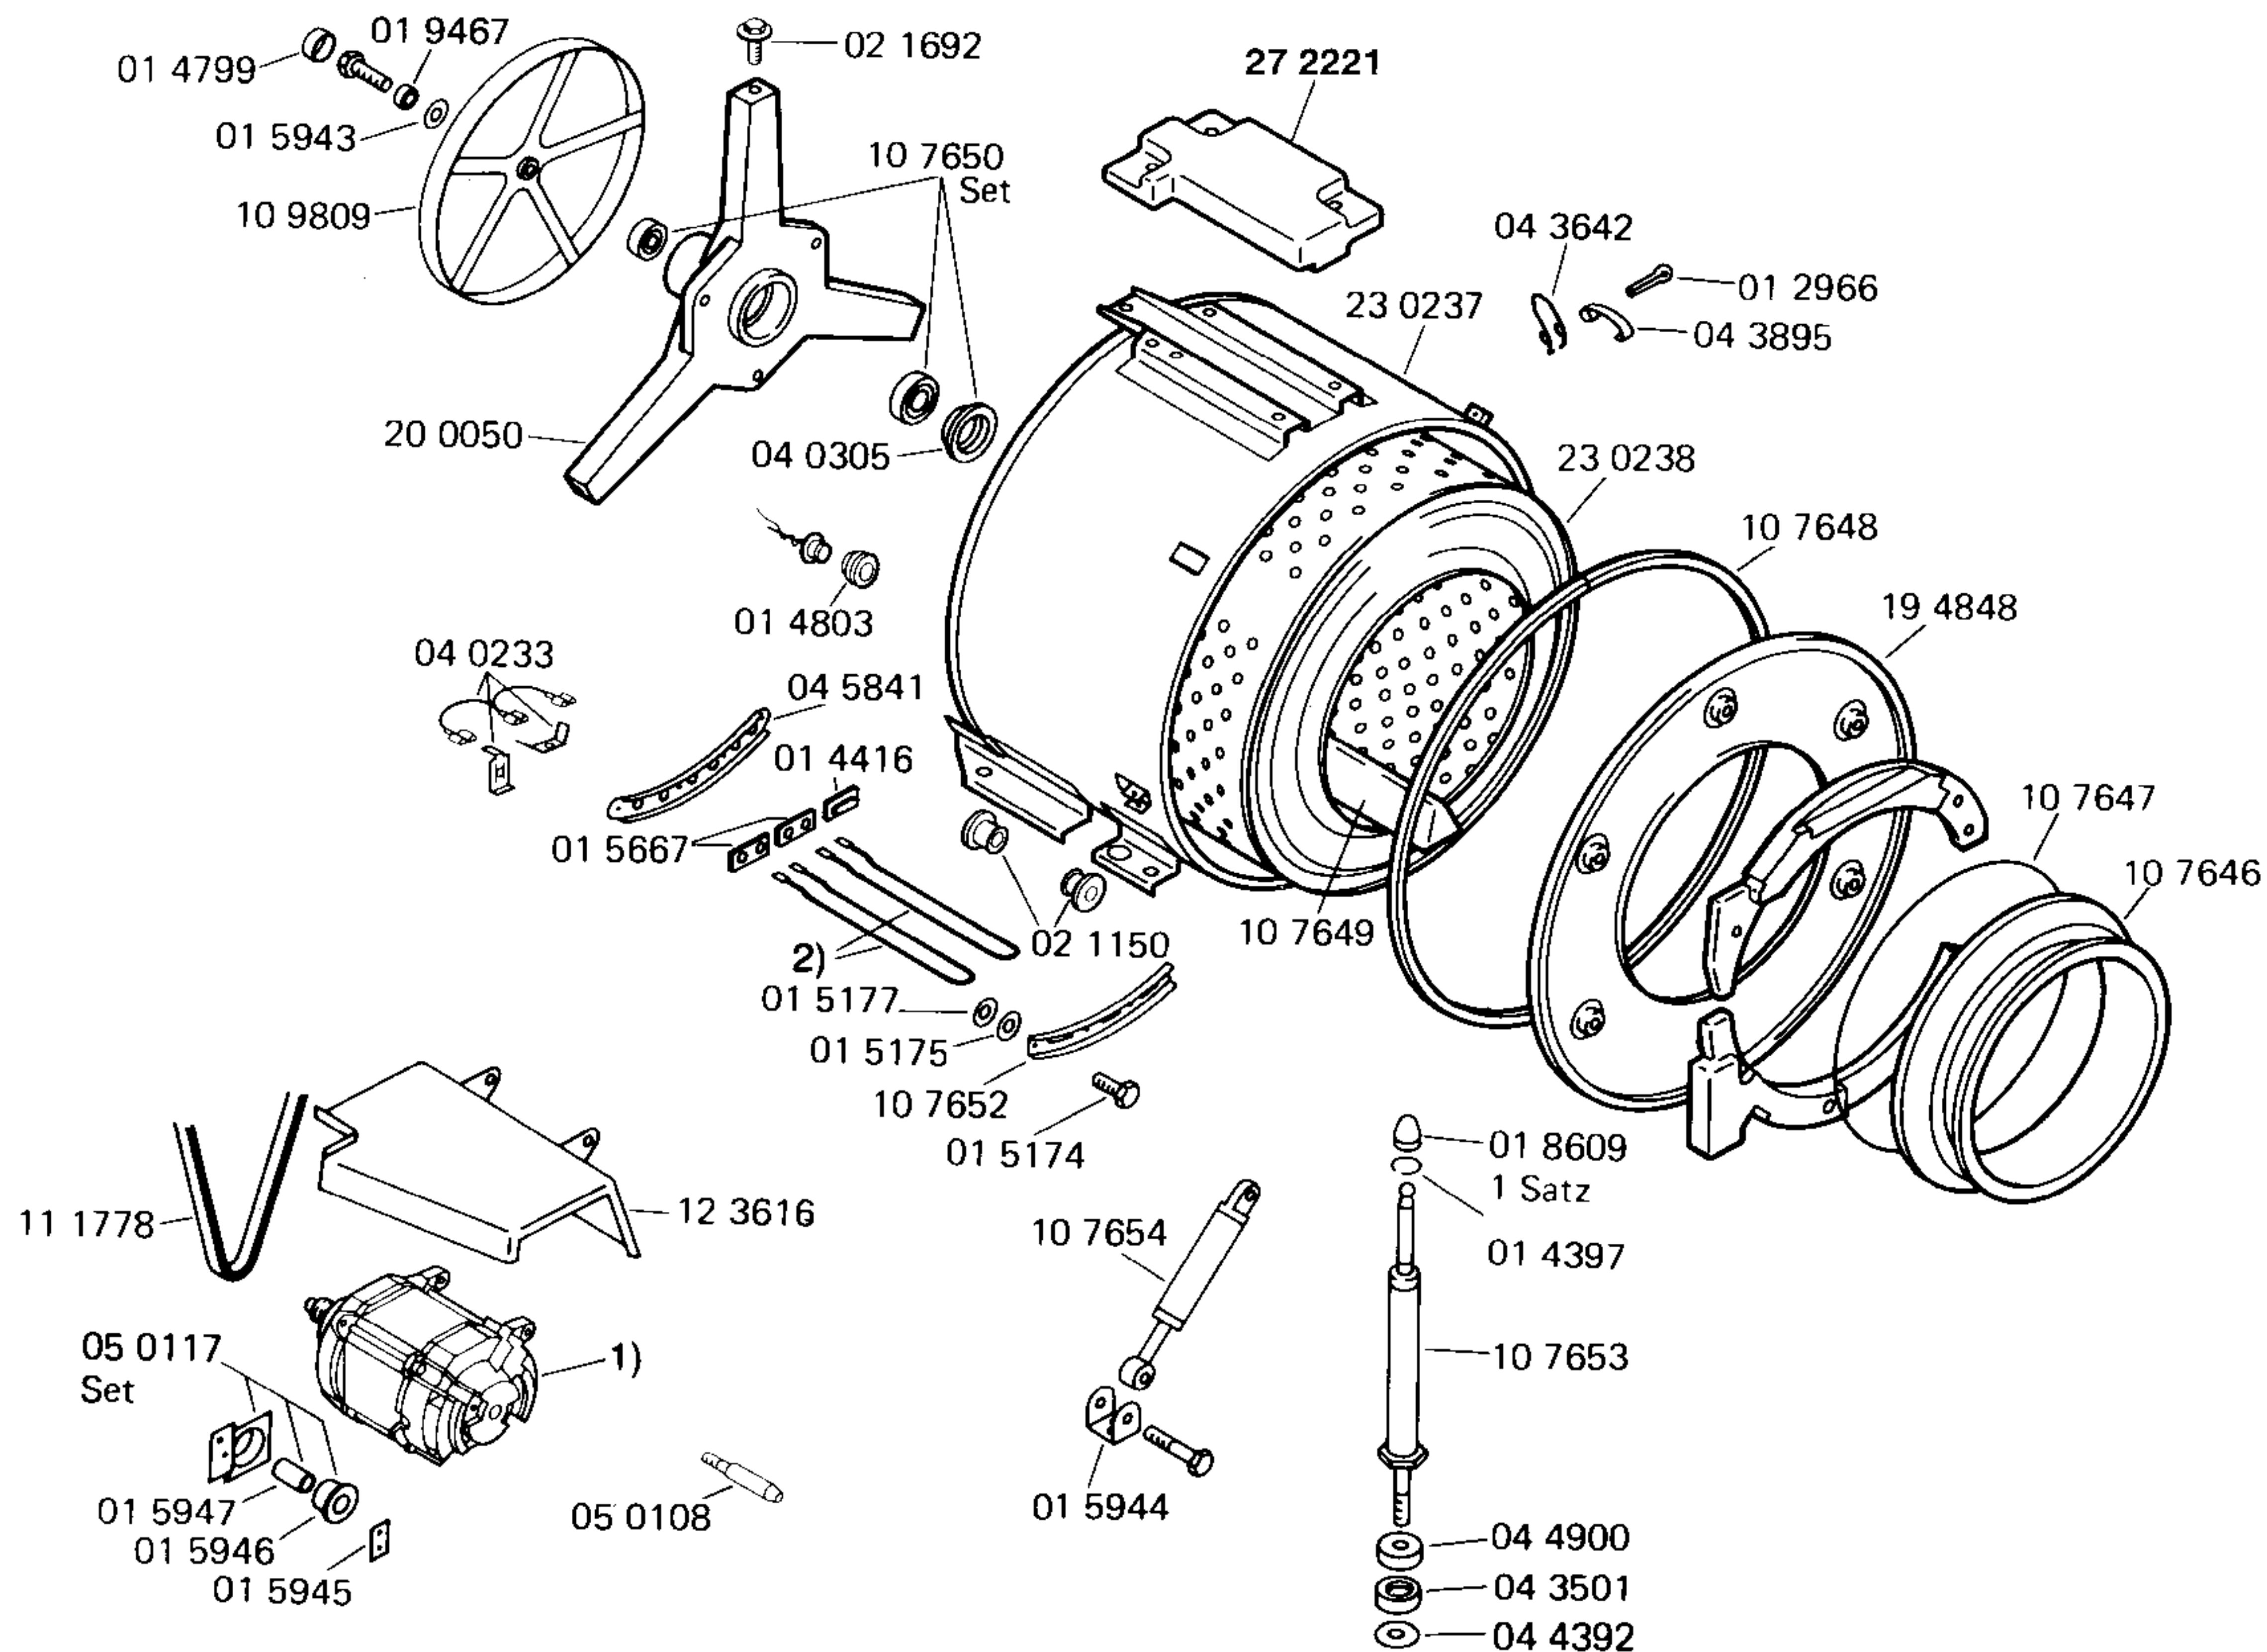

1) 14 0372
2) 07 3594

