


WOL 2200 electronique – WOL 2200FF/01–V01
WOL 2000 electronique – WOL 2000FF/01–V02
WOL 2050 – WOL 2050/01–V03
WOL 2050 – WOL 2050NL/01–V04


WOL 2450 – WOL2450SN/01–V05
WOL 2450 – WOL2450/01–V06
WOL 1650 – WOL1650/01–V07
WOL 2200 – WOL 2200GB/01–V08

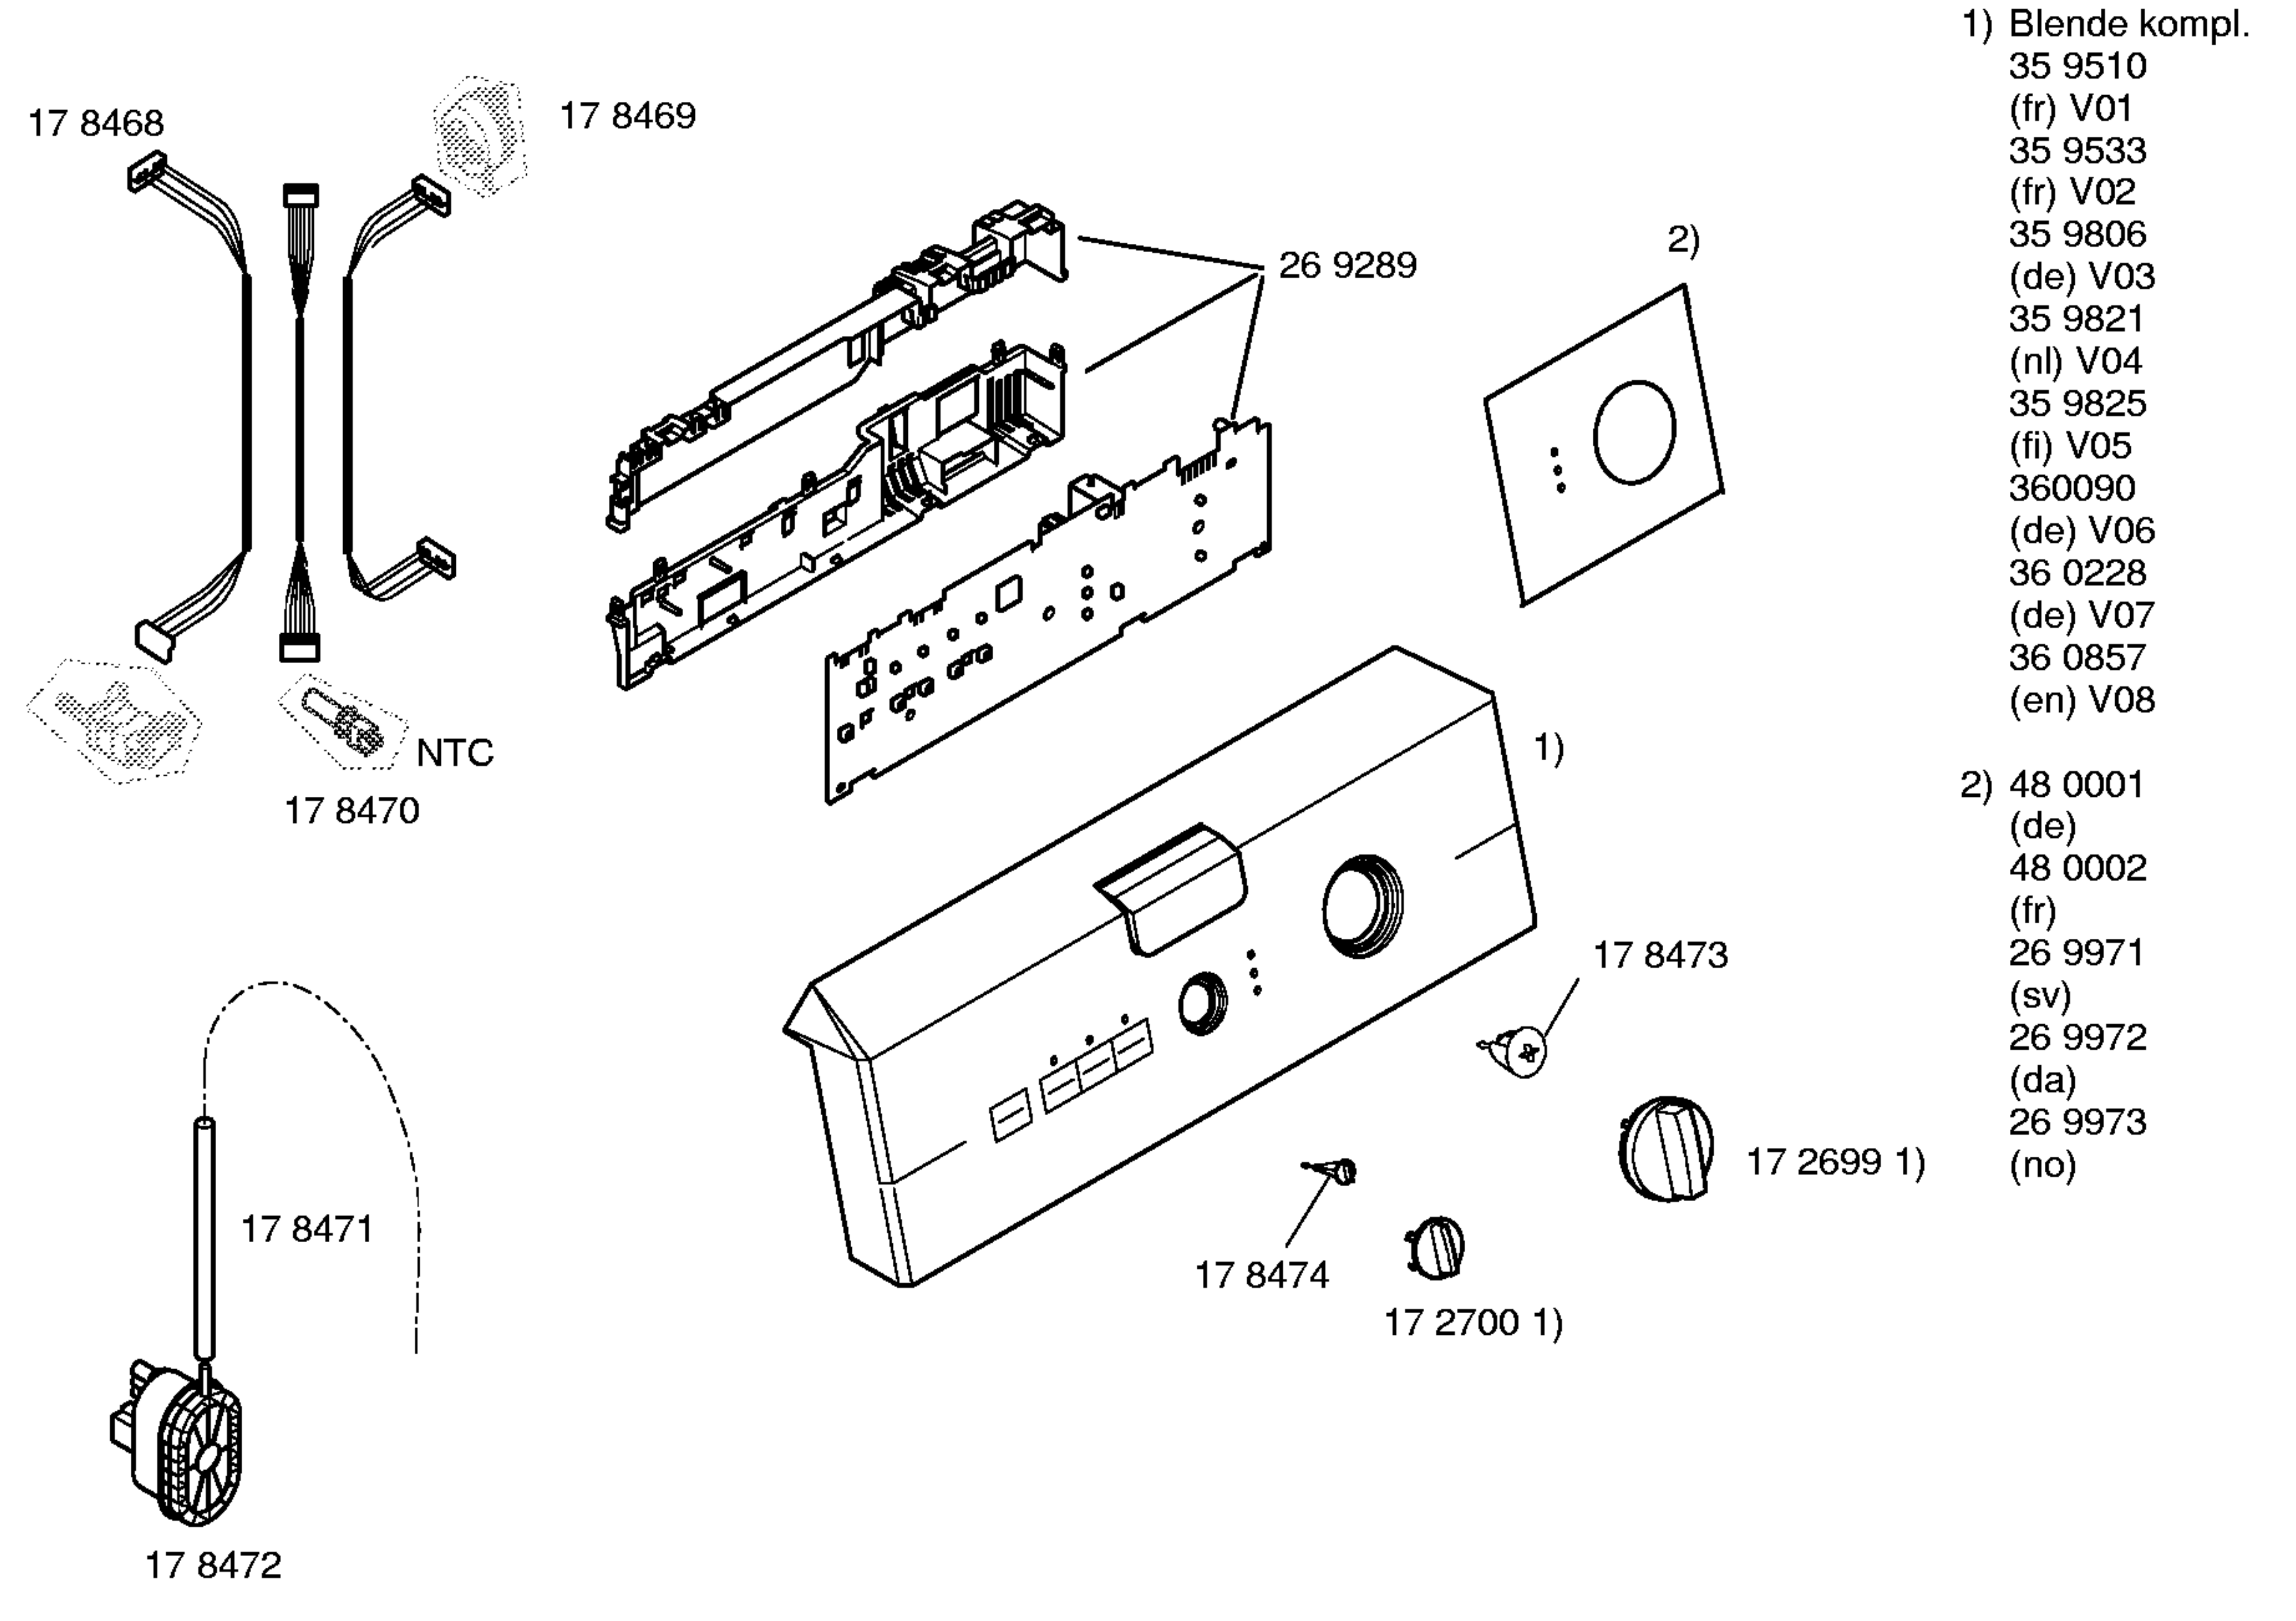

Mat. – Nr. – Konstante	
3740	
Gebrauchsanweisung	
52 6590 (fr) V01,V02	
52 6996 (de) V03	
52 7027 (de) V04	
52 7028 (fr) V04	
52 7029 (nl)	
52 7033 (sv)	
52 7034 (da)	
52 7035 (no)	
52 7036 (fi)	
52 7812 (en)	
Aufstellanweisung	
52 2698 (fr)	
52 0249 (de)	
52 0634 (fi)	
52 0635 (no)	
52 0636 (sv)	
52 0637 (da)	
52 0638 (nl)	
52 2639 (en)	
Programmtabelle	
52 6591 (fr)	
52 6995 (de)	
52 7037 (sv)	
52 7038 (da)	
52 7039 (no)	
52 7040 (fi)	
52 7026 (nl)	
52 7233 (en)	
Zubehör:	
Bodenbefestigung	
WMZ2200	
Entkalker	
46 0038	


1) 2 x pro Gerät



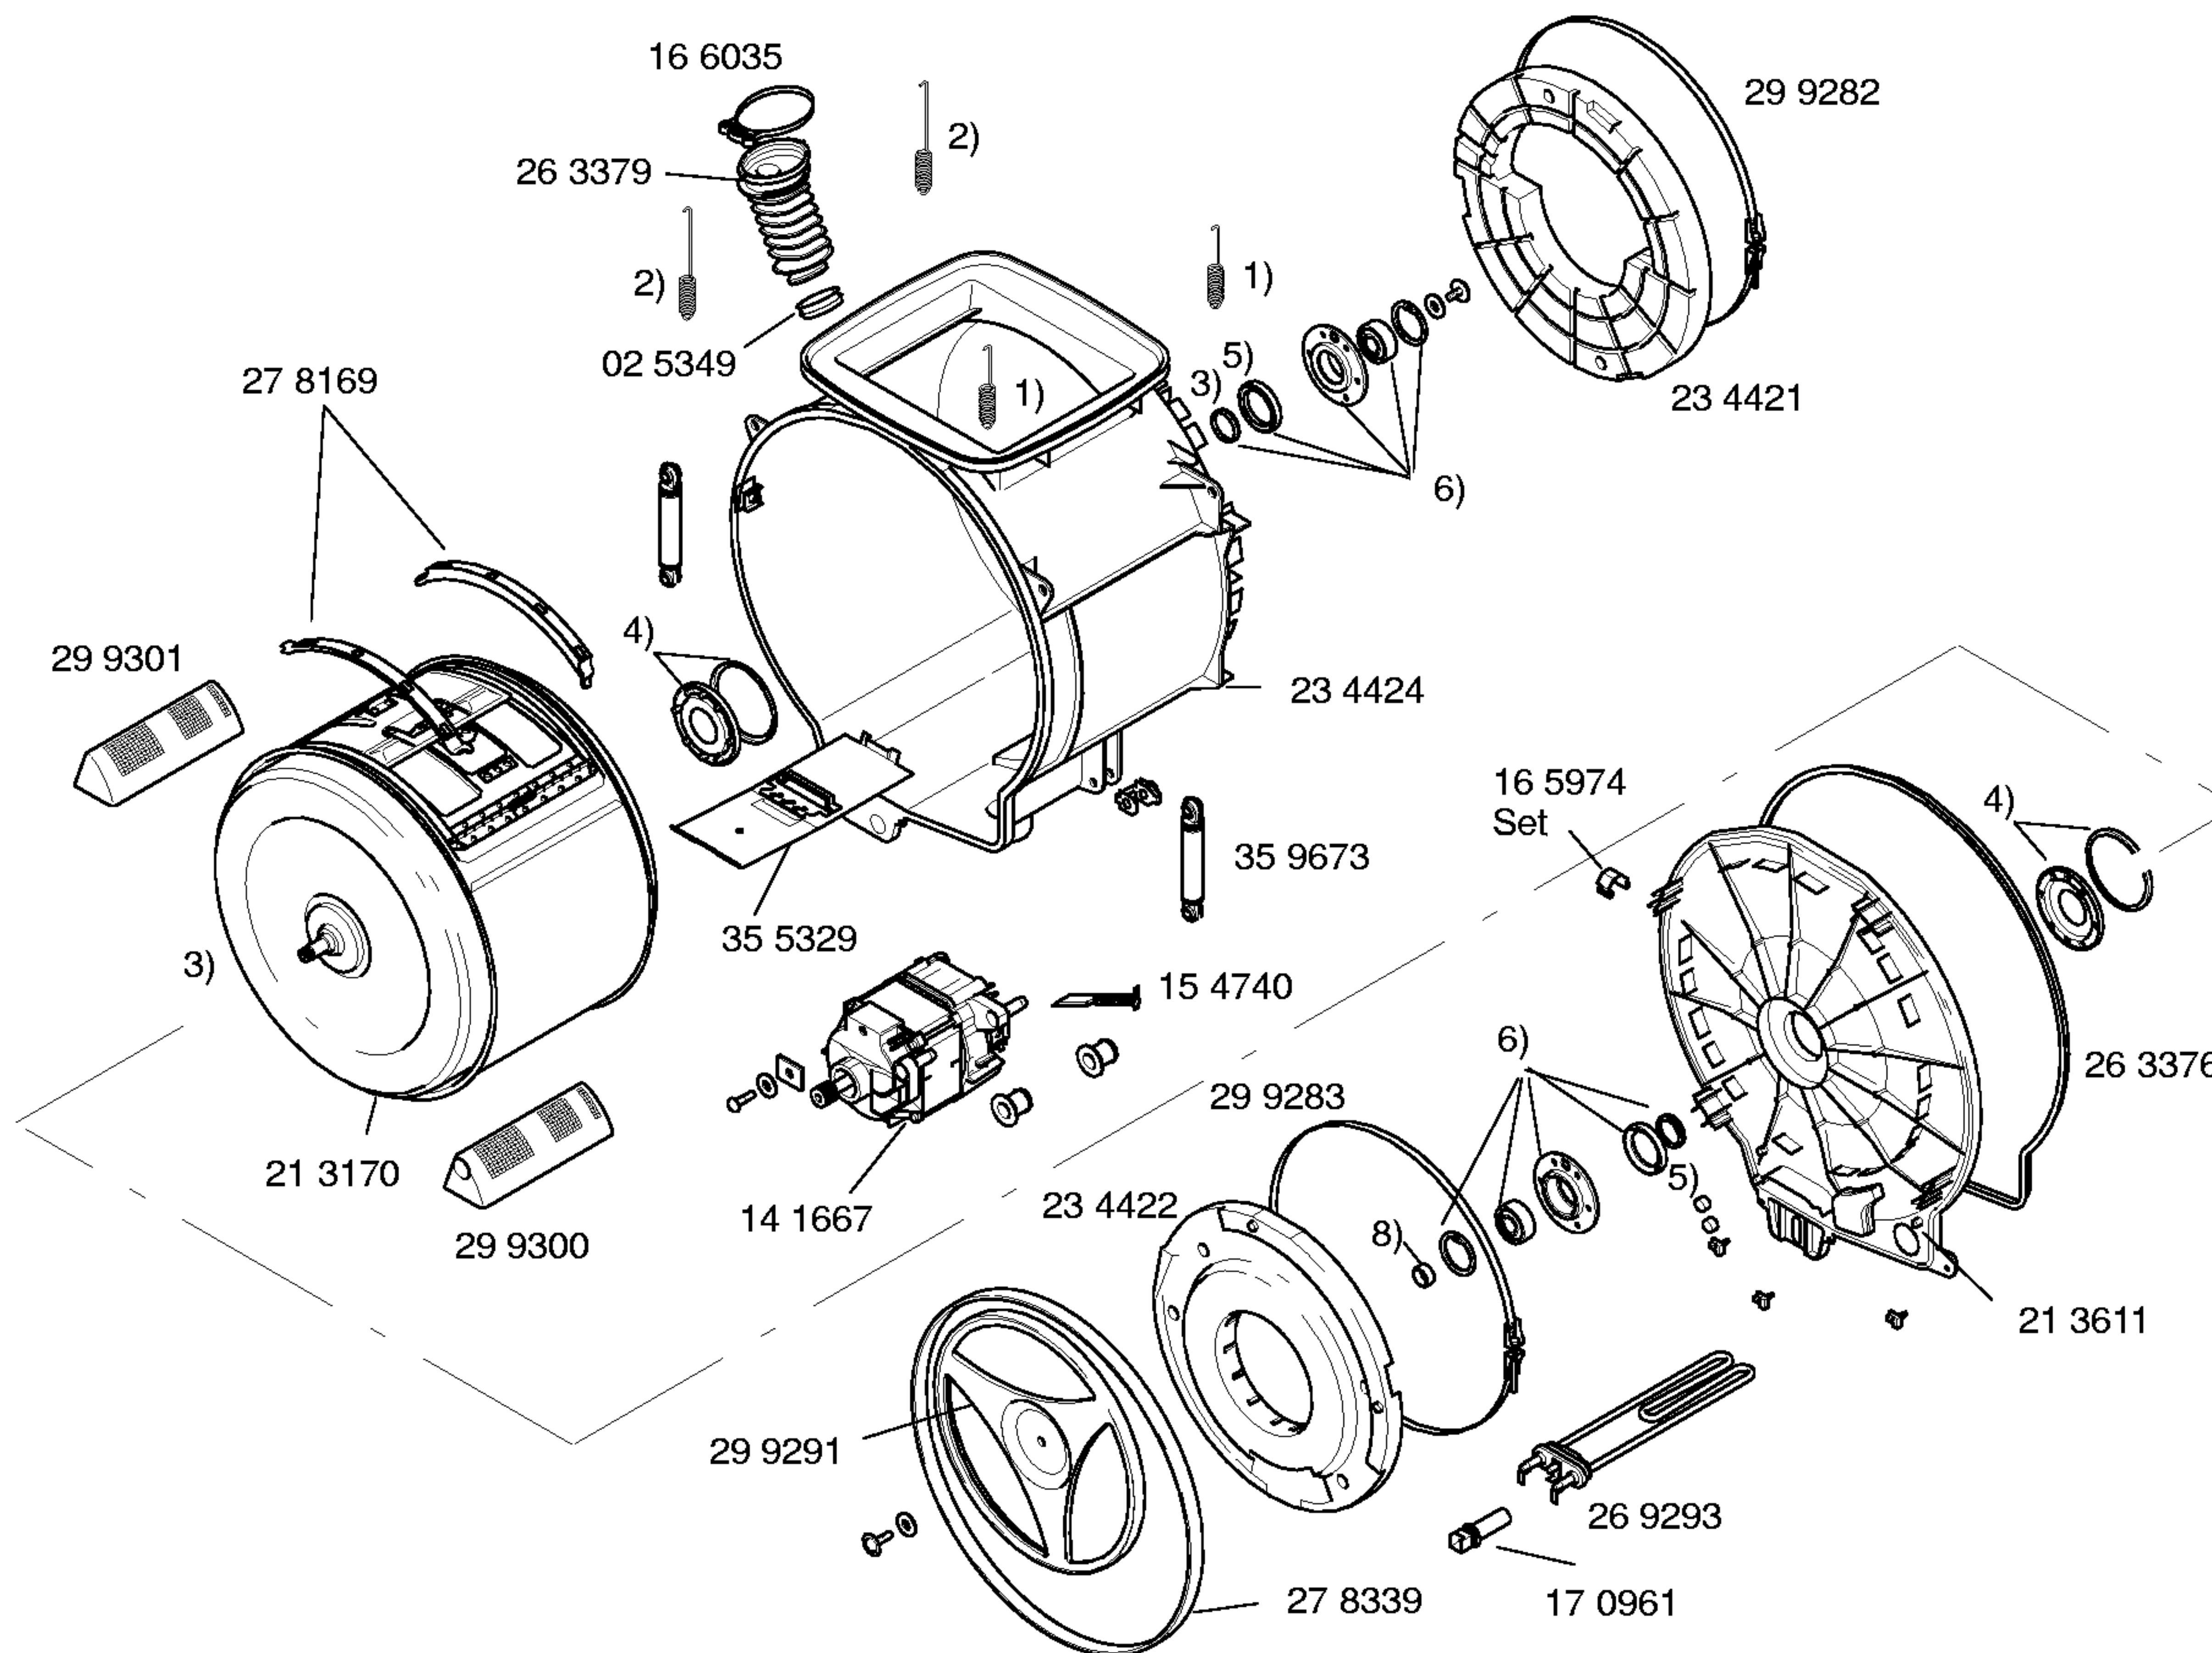

Mat. – Nr. – Konstante
3740

- | | |
|----|---------|
| 1) | 26 3372 |
| 2) | 26 3373 |
| 3) | 16 5983 |
| 4) | 26 3395 |
| 5) | 16 5984 |
| 6) | 48 0138 |
| | kompl. |
| 8) | 16 5978 |

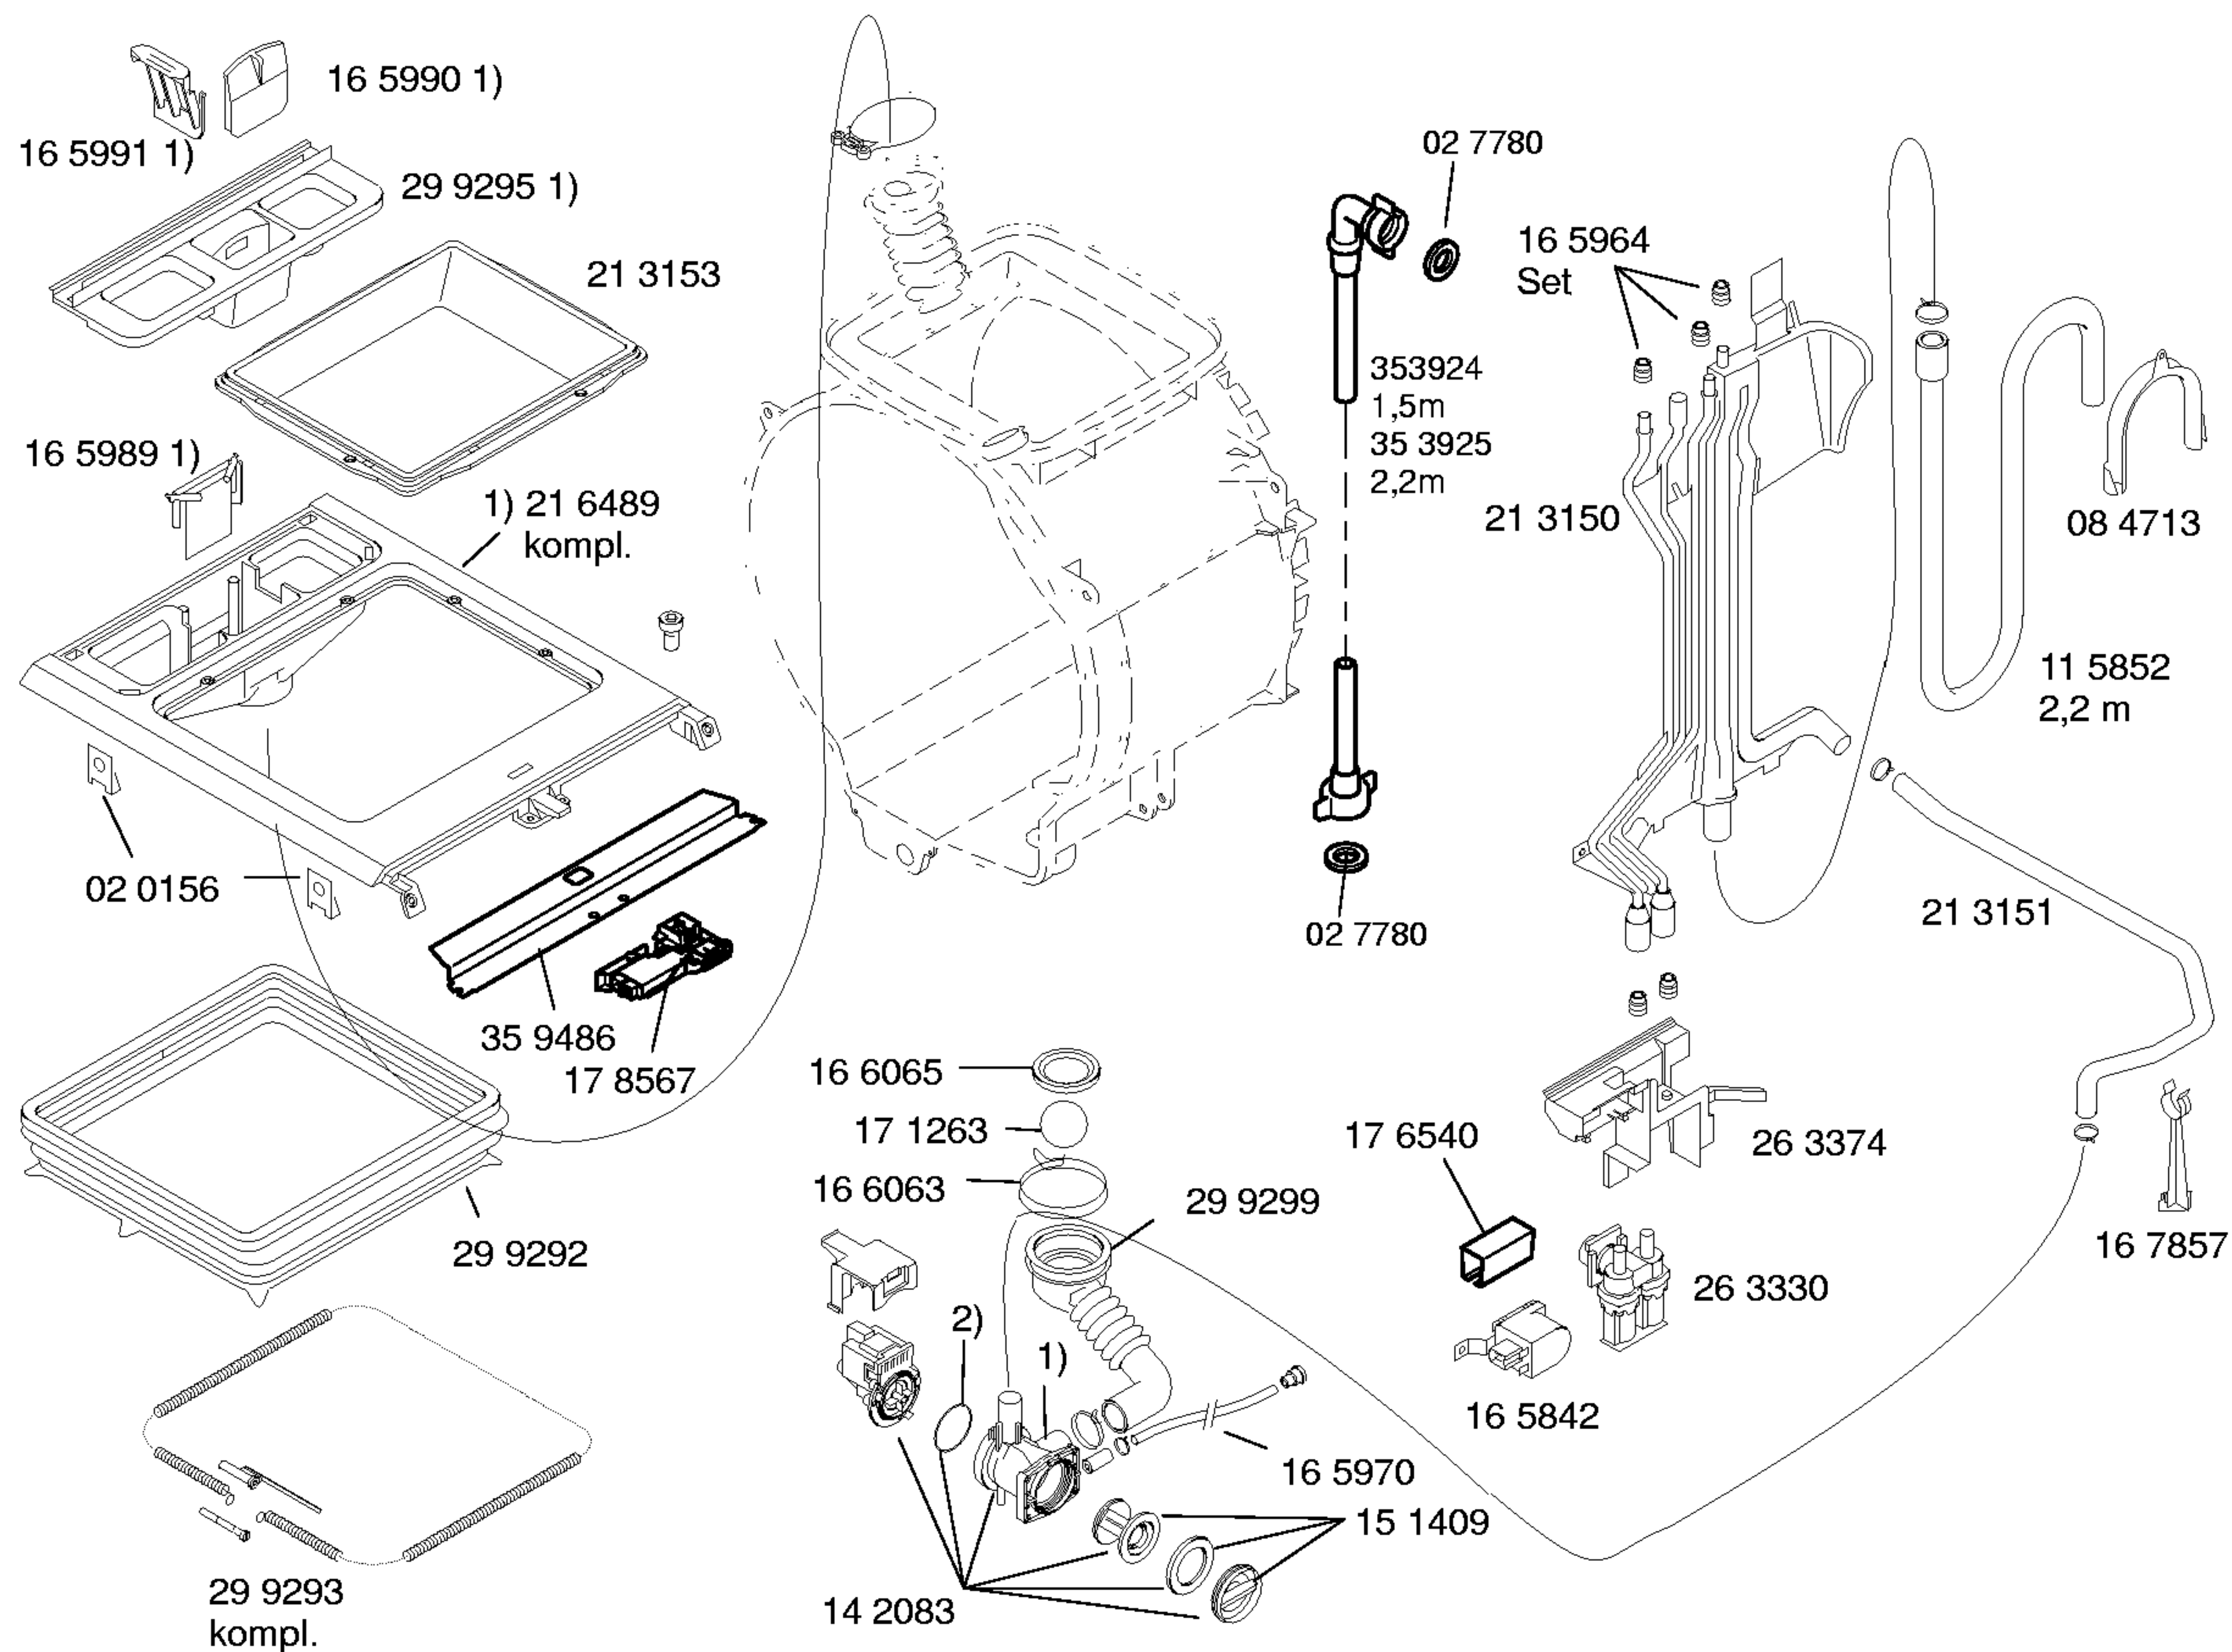

Mat. – Nr. – Konstante
 3740

1) 26 8885
 2) 15 1408