




Libro de instrucciones 51 7464 (E,P,GB,F,NL,GR)Libro de instrucciones R600a 51 9240 (E,GB,F,P,D,I,NL,N,GR, DK,S,SF,TR) Instrucciones de montaje Ø 51 9729 (D,GB,F,I,NL,E,P,GR)Anexo ind. temp. 52 0758 (D,GB,F,I,NL,E,SF, S,N,GR,DK,P) 1) 067746 2) 03 3055

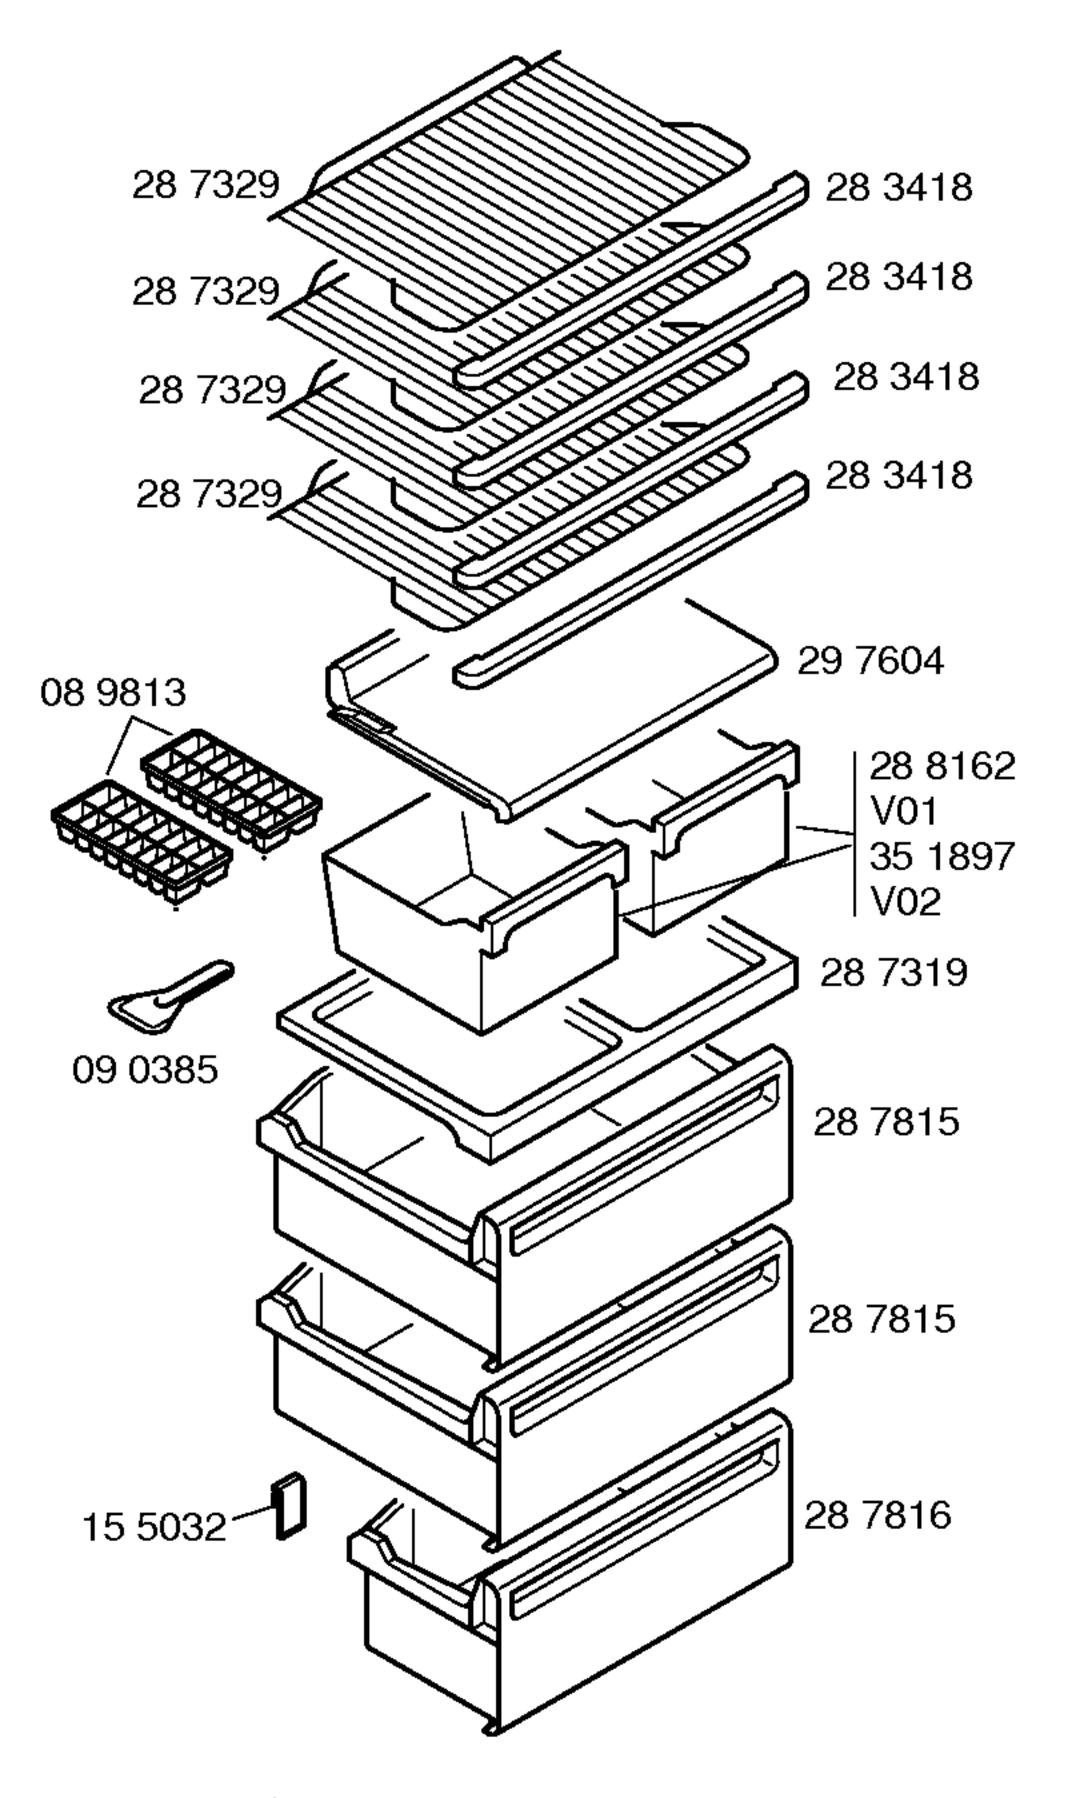

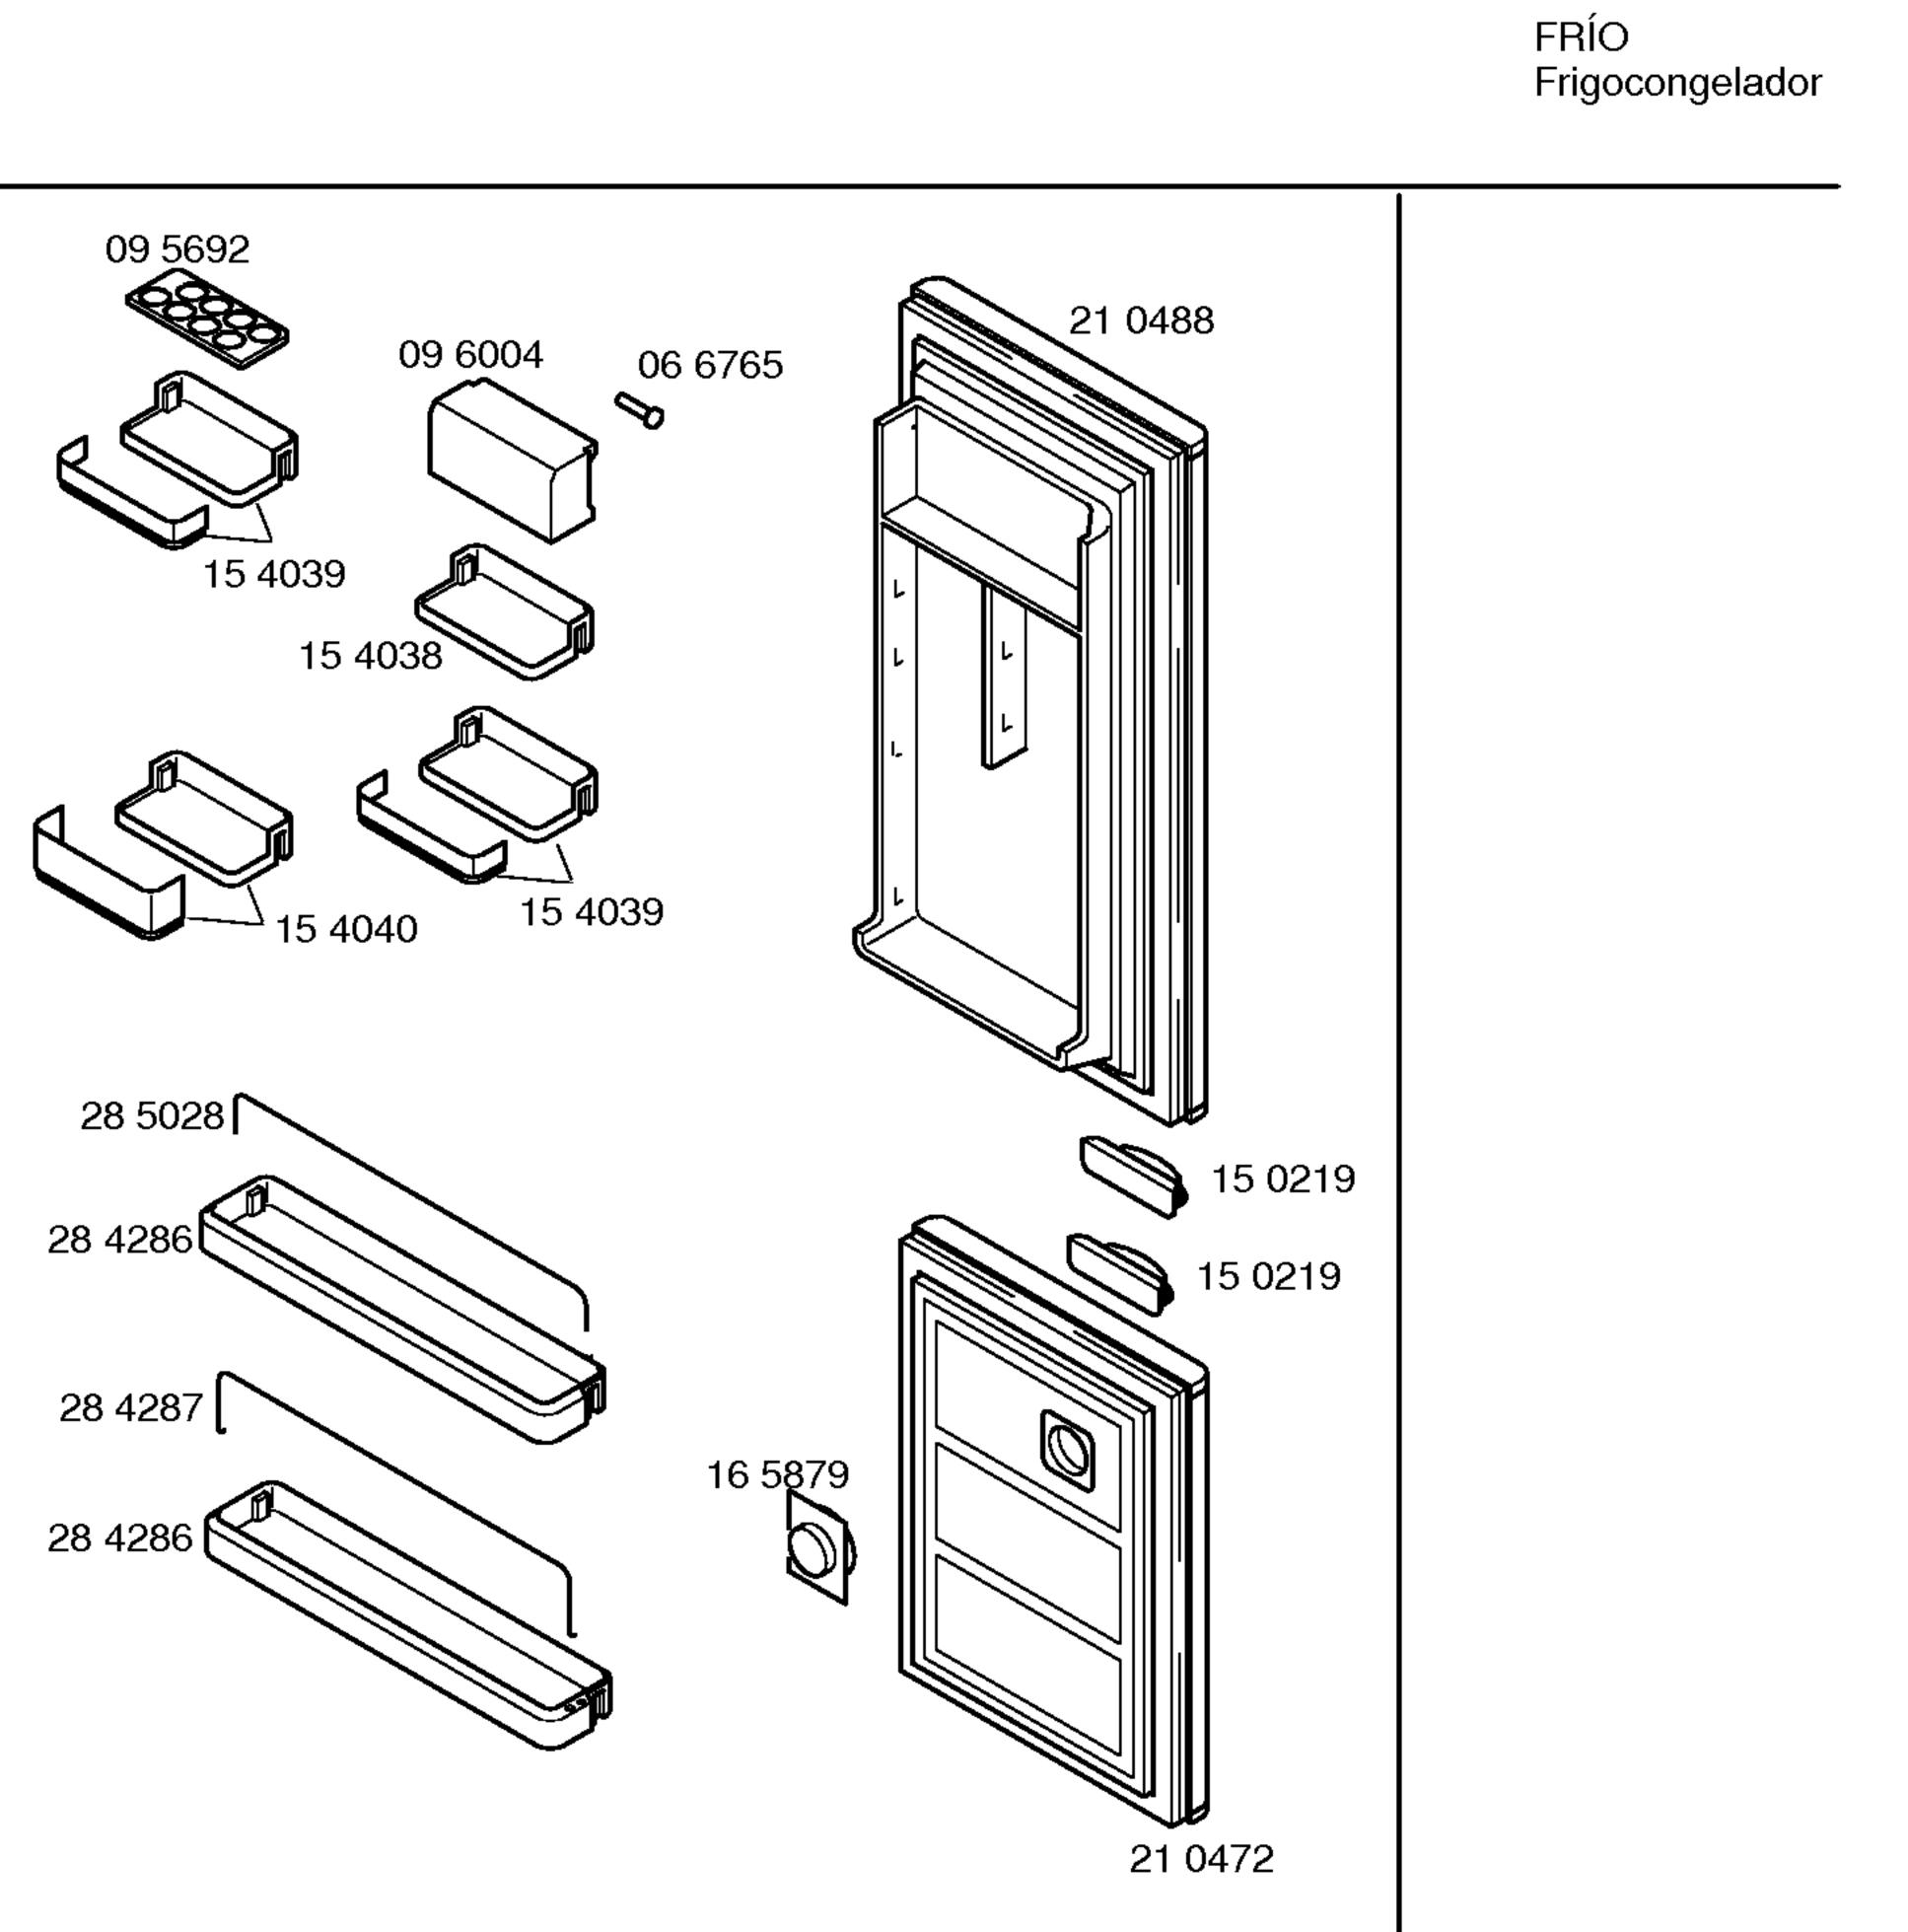





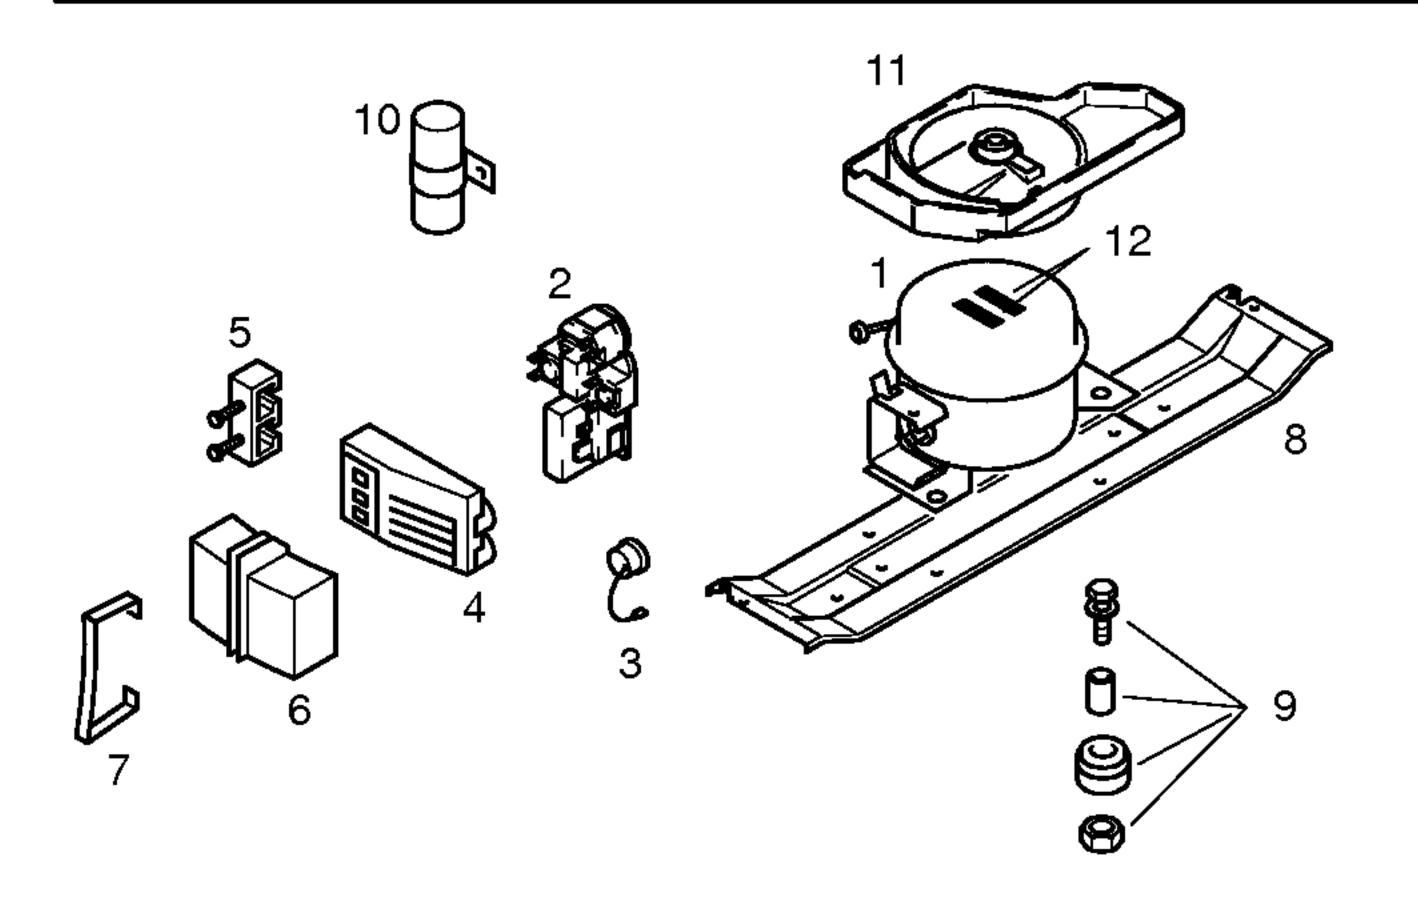

			•

Pos.	Aspera	Aspera	
	BPM1084Y	BPM1110Y	
1	14 1723	14 1605	
2	15 4315	15 4315	
3	16 7769	16 5230	
4			
5			
6			
7			
8	28 0162	28 0162	
9	05 0166	05 0166	
10			
11	26 4123		
12			
13			

ev50121 -3/3



TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNICUES/DATOS TECNICOS								

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A	Aspera BPM1084Y 3,60	Aspera BPM1110Y						
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	29,60 38,50	24,70 37,65						
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ein/conex.ºC Valeurs de commutation/Desconexaus"/descon. (abtaven' od)alarm'	Danfoss 077B62 MIN. MAX +6 ⁹ –14 ⁹ –28 ⁹	Ranco K54–L1924 MIN. MAX –14° –24° –21° –31° –15°						
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*						
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	86						
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W								
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm								
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V								
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador								

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNICUES/DATOS TECNICOS							

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A	Aspera BPM1084Y 3,60	Aspera BPM1110Y					
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	29,60 38,50	24,70 37,65					
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ein/conex.ºC Valeurs de commutation/Desconexaus"/descon. (abtaven' od)alarm'	Danfoss 077B62 MIN. MAX +6 ^º -14 ^º -28 ^º	Ranco K54–L1924 MIN. MAX –14 ^º –24 ^º –21 ^º –31 ^º –15 ^º					
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*					
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	86					
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W							
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm							
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V							
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador							

* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques /Ver plaqueta de características

FRÍO Frigocongelador