


Libro de instrucciones 52 4512 (E,P,GB,F)


Instrucciones de montaje 51 9729 (D,GB,F,I,NL,E,P,GR)

- 1) 06 7746
- 2) 03 3058
- 3) 16 9346 Set
- 4) 16 9821

6FG9662/12-V01

6FG9662/13-V02

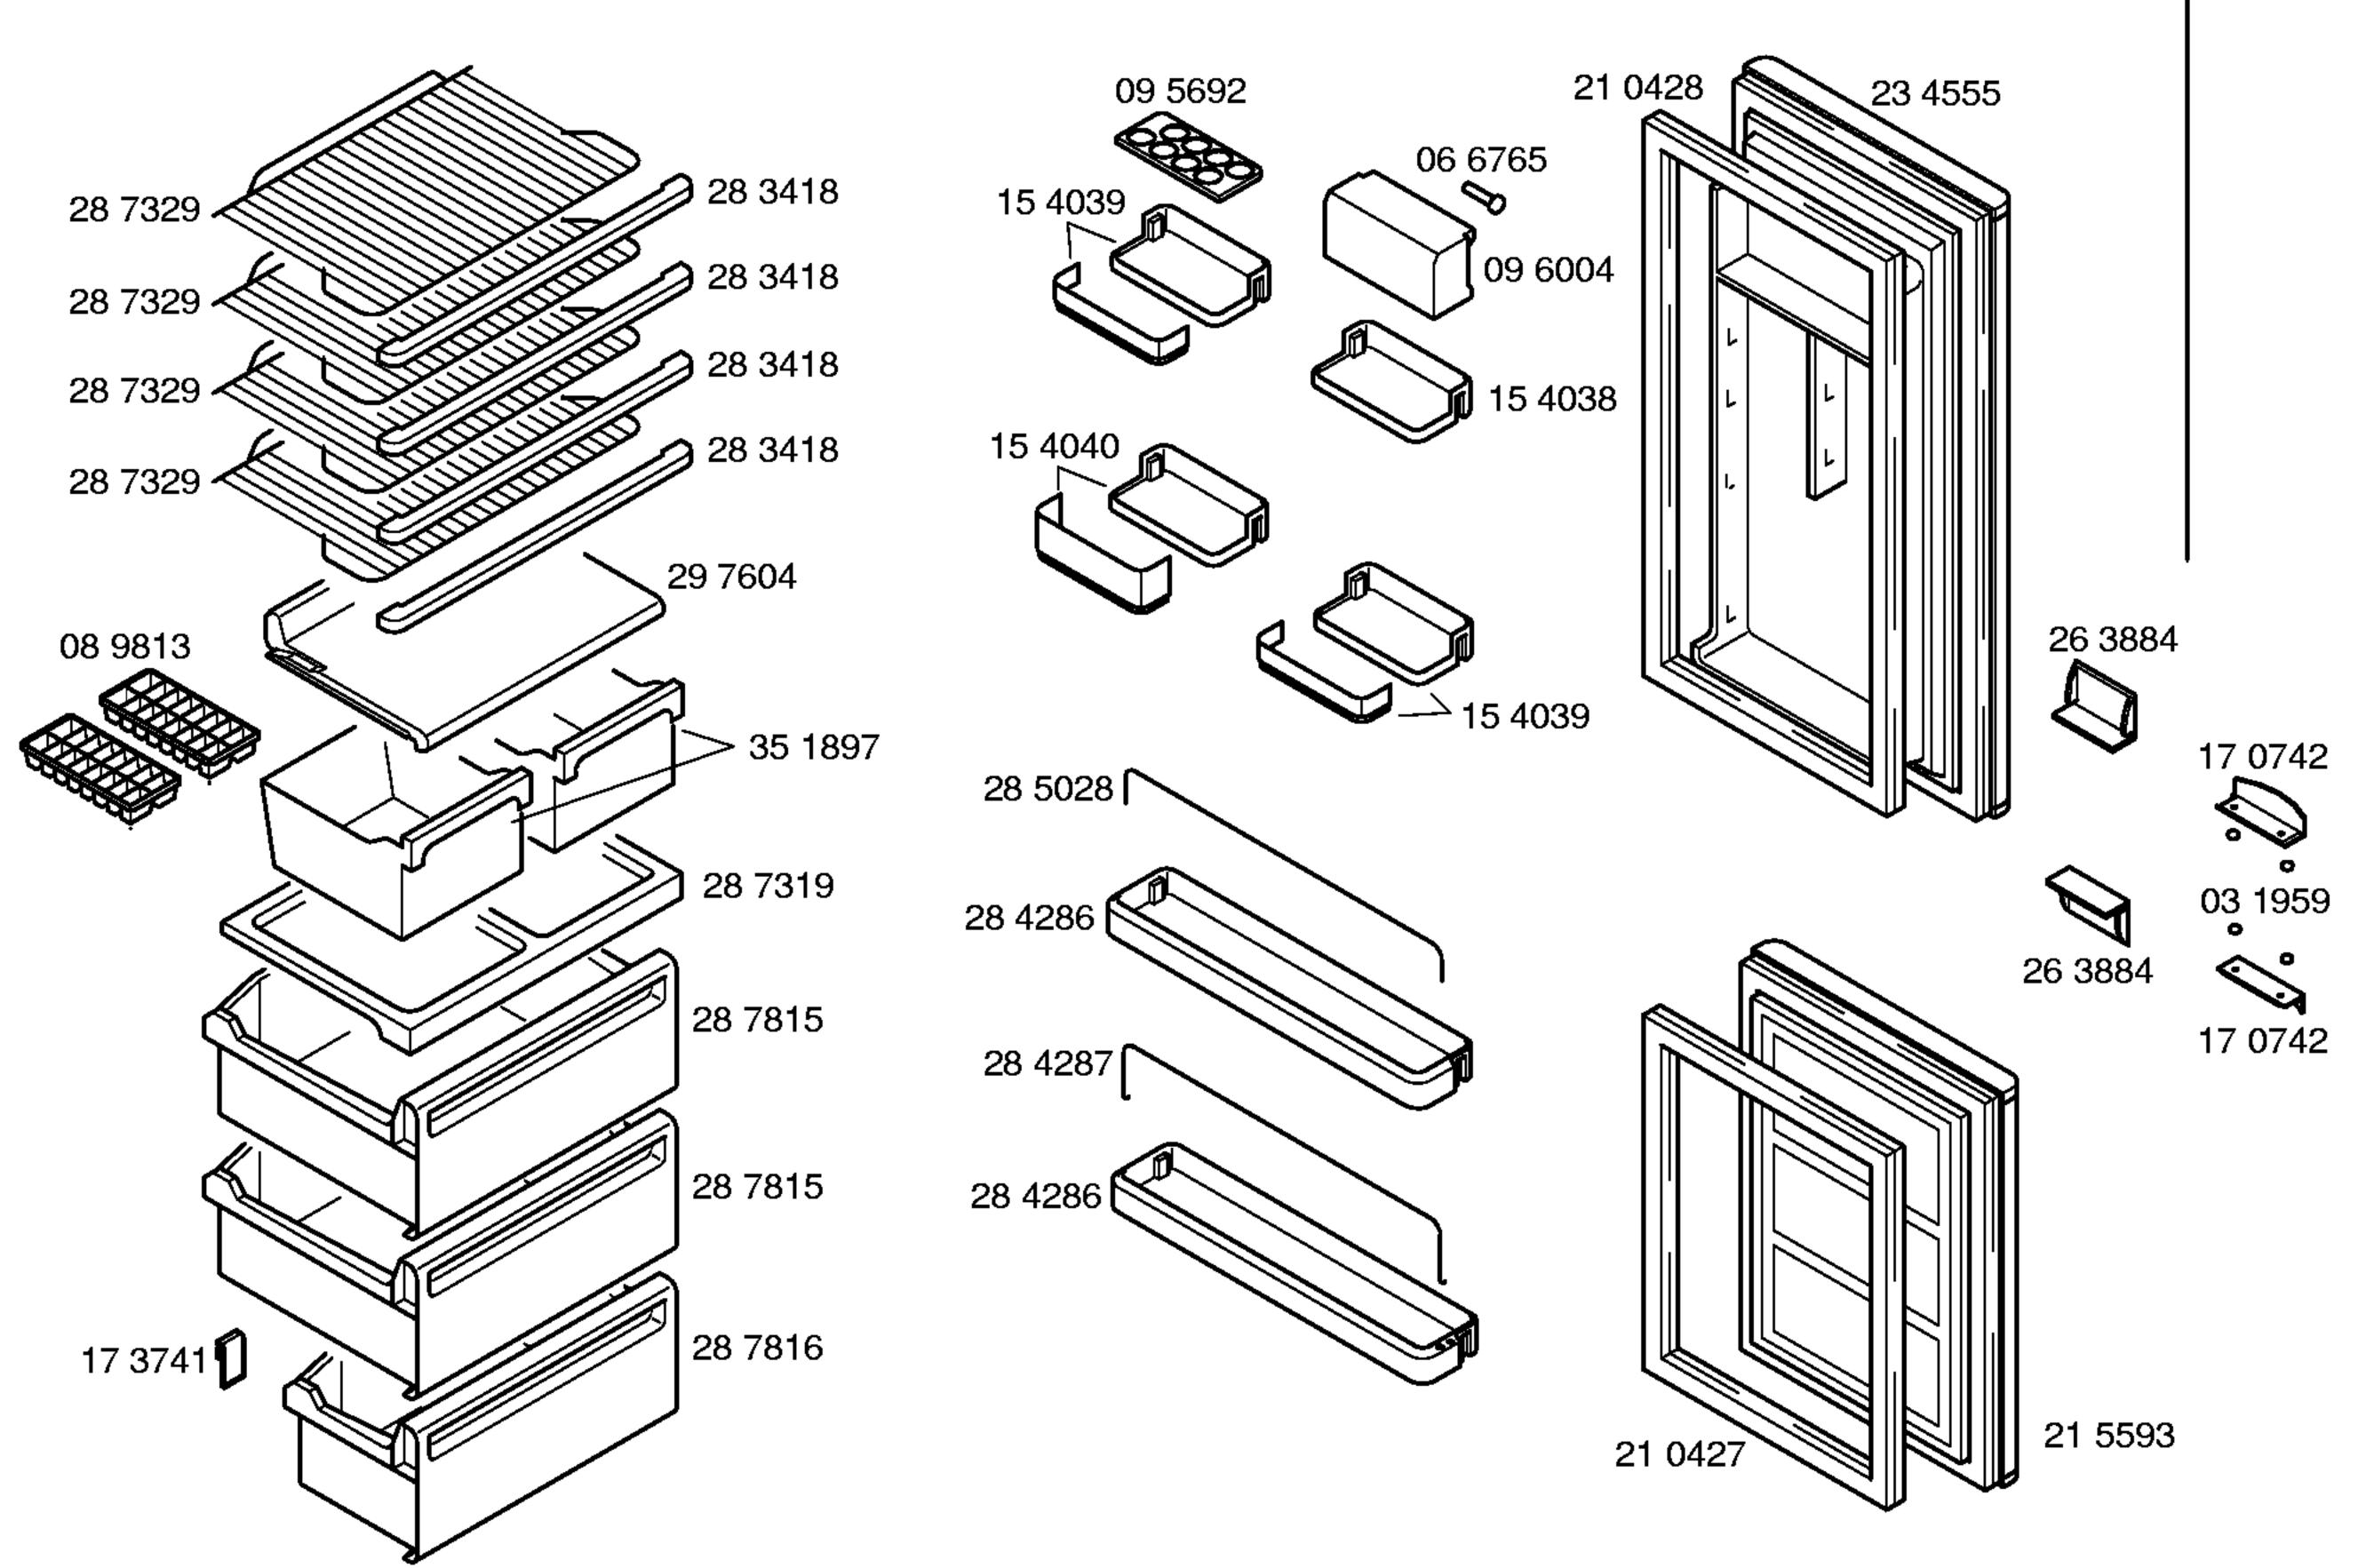

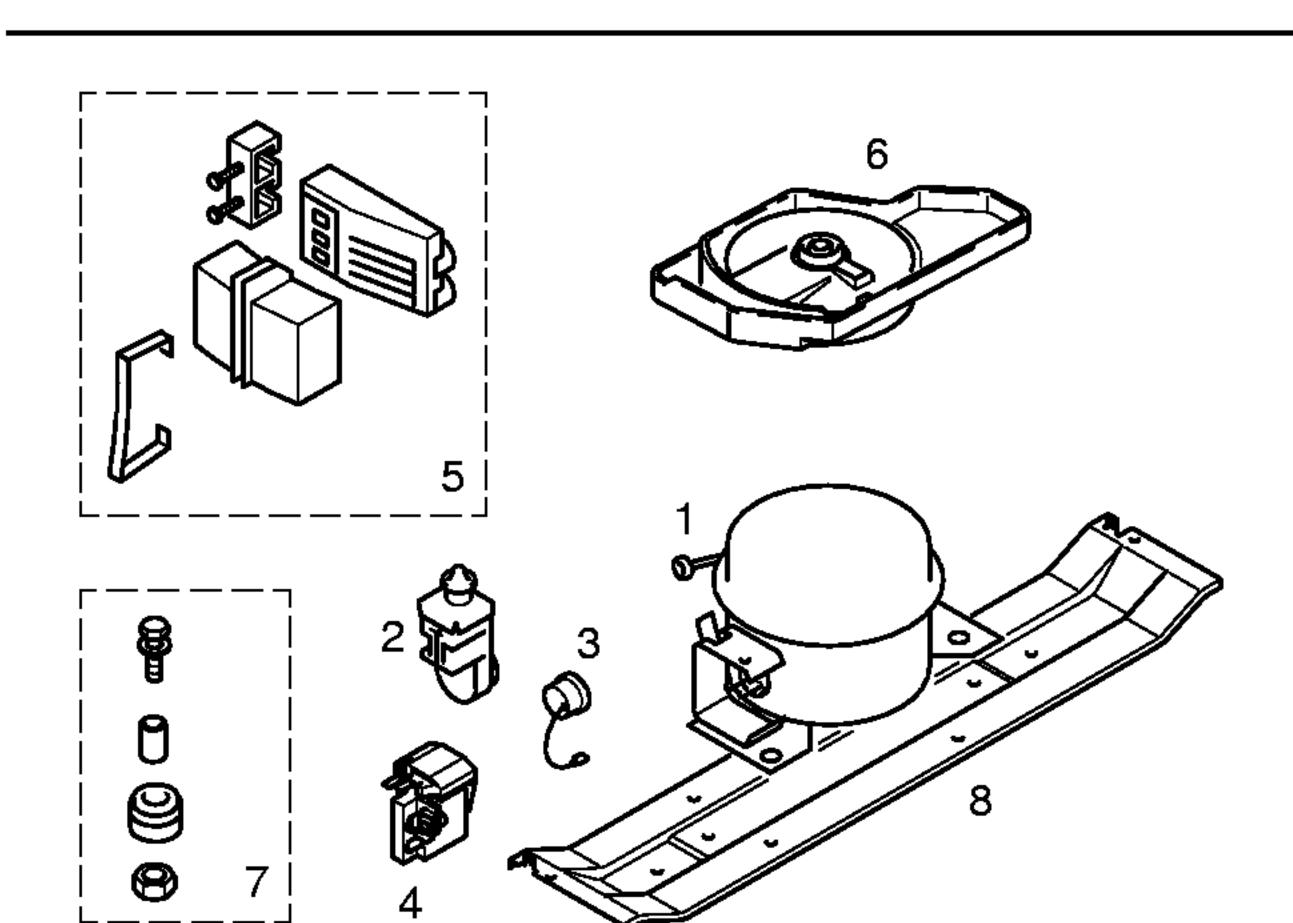

6FG9662/12-V01

6FG9662/13-V02

	V01	V02	V03	****	
Pos.	Aspera	Matsushita	Aspera	Gold Star	
	BMP1084Y	SD65E80	BPK1072Y	ND69NAEG	
1	14 1723	14 2003	14 2000	14 2001	
2	15 4315		15 4315		
3	16 7769		17 3748		
4		16 5229		17 1011	
5					
6	26 4123	09 5320	26 4123		
7	05 0166	05 0166	05 0166	05 0166	
8	28 8253	28 8253	28 8253	28 8253	
9					
10					
11					
12					
13				-	

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNICUES/DATOS TECNICOS								
	V01	V02	V03	***				
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h	Aspera BMP1084Y	Matsushita SD65E80	Aspera BPK1072Y	Gold Star ND69NAEG				
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	3,60 29,60 38,50	5,76 22,50 31,80	0,47 33,10 38,20					
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ein/conex.ºC Valeurs de commutation/Desconexaus"/descon. (abtaven' od)alarm'		Ranco K59–L6050 MIN. MAX. +6º –11º –28º		Ranco K54–L2006 MIN. MAX. –14° –22° –20° –28° –10° –18°				
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*	*	*				
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	77	79	83				
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W								
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm								
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión								
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador								

^{*} Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características