



Libro de instrucciones 52 4512 (E,P,GB,F)

Instrucciones de montaje 51 9729 (D,GB,F,I,NL,E,P,GR)

- 1) 06 7746
- 2) 03 3058
- 3) 16 9346 Set

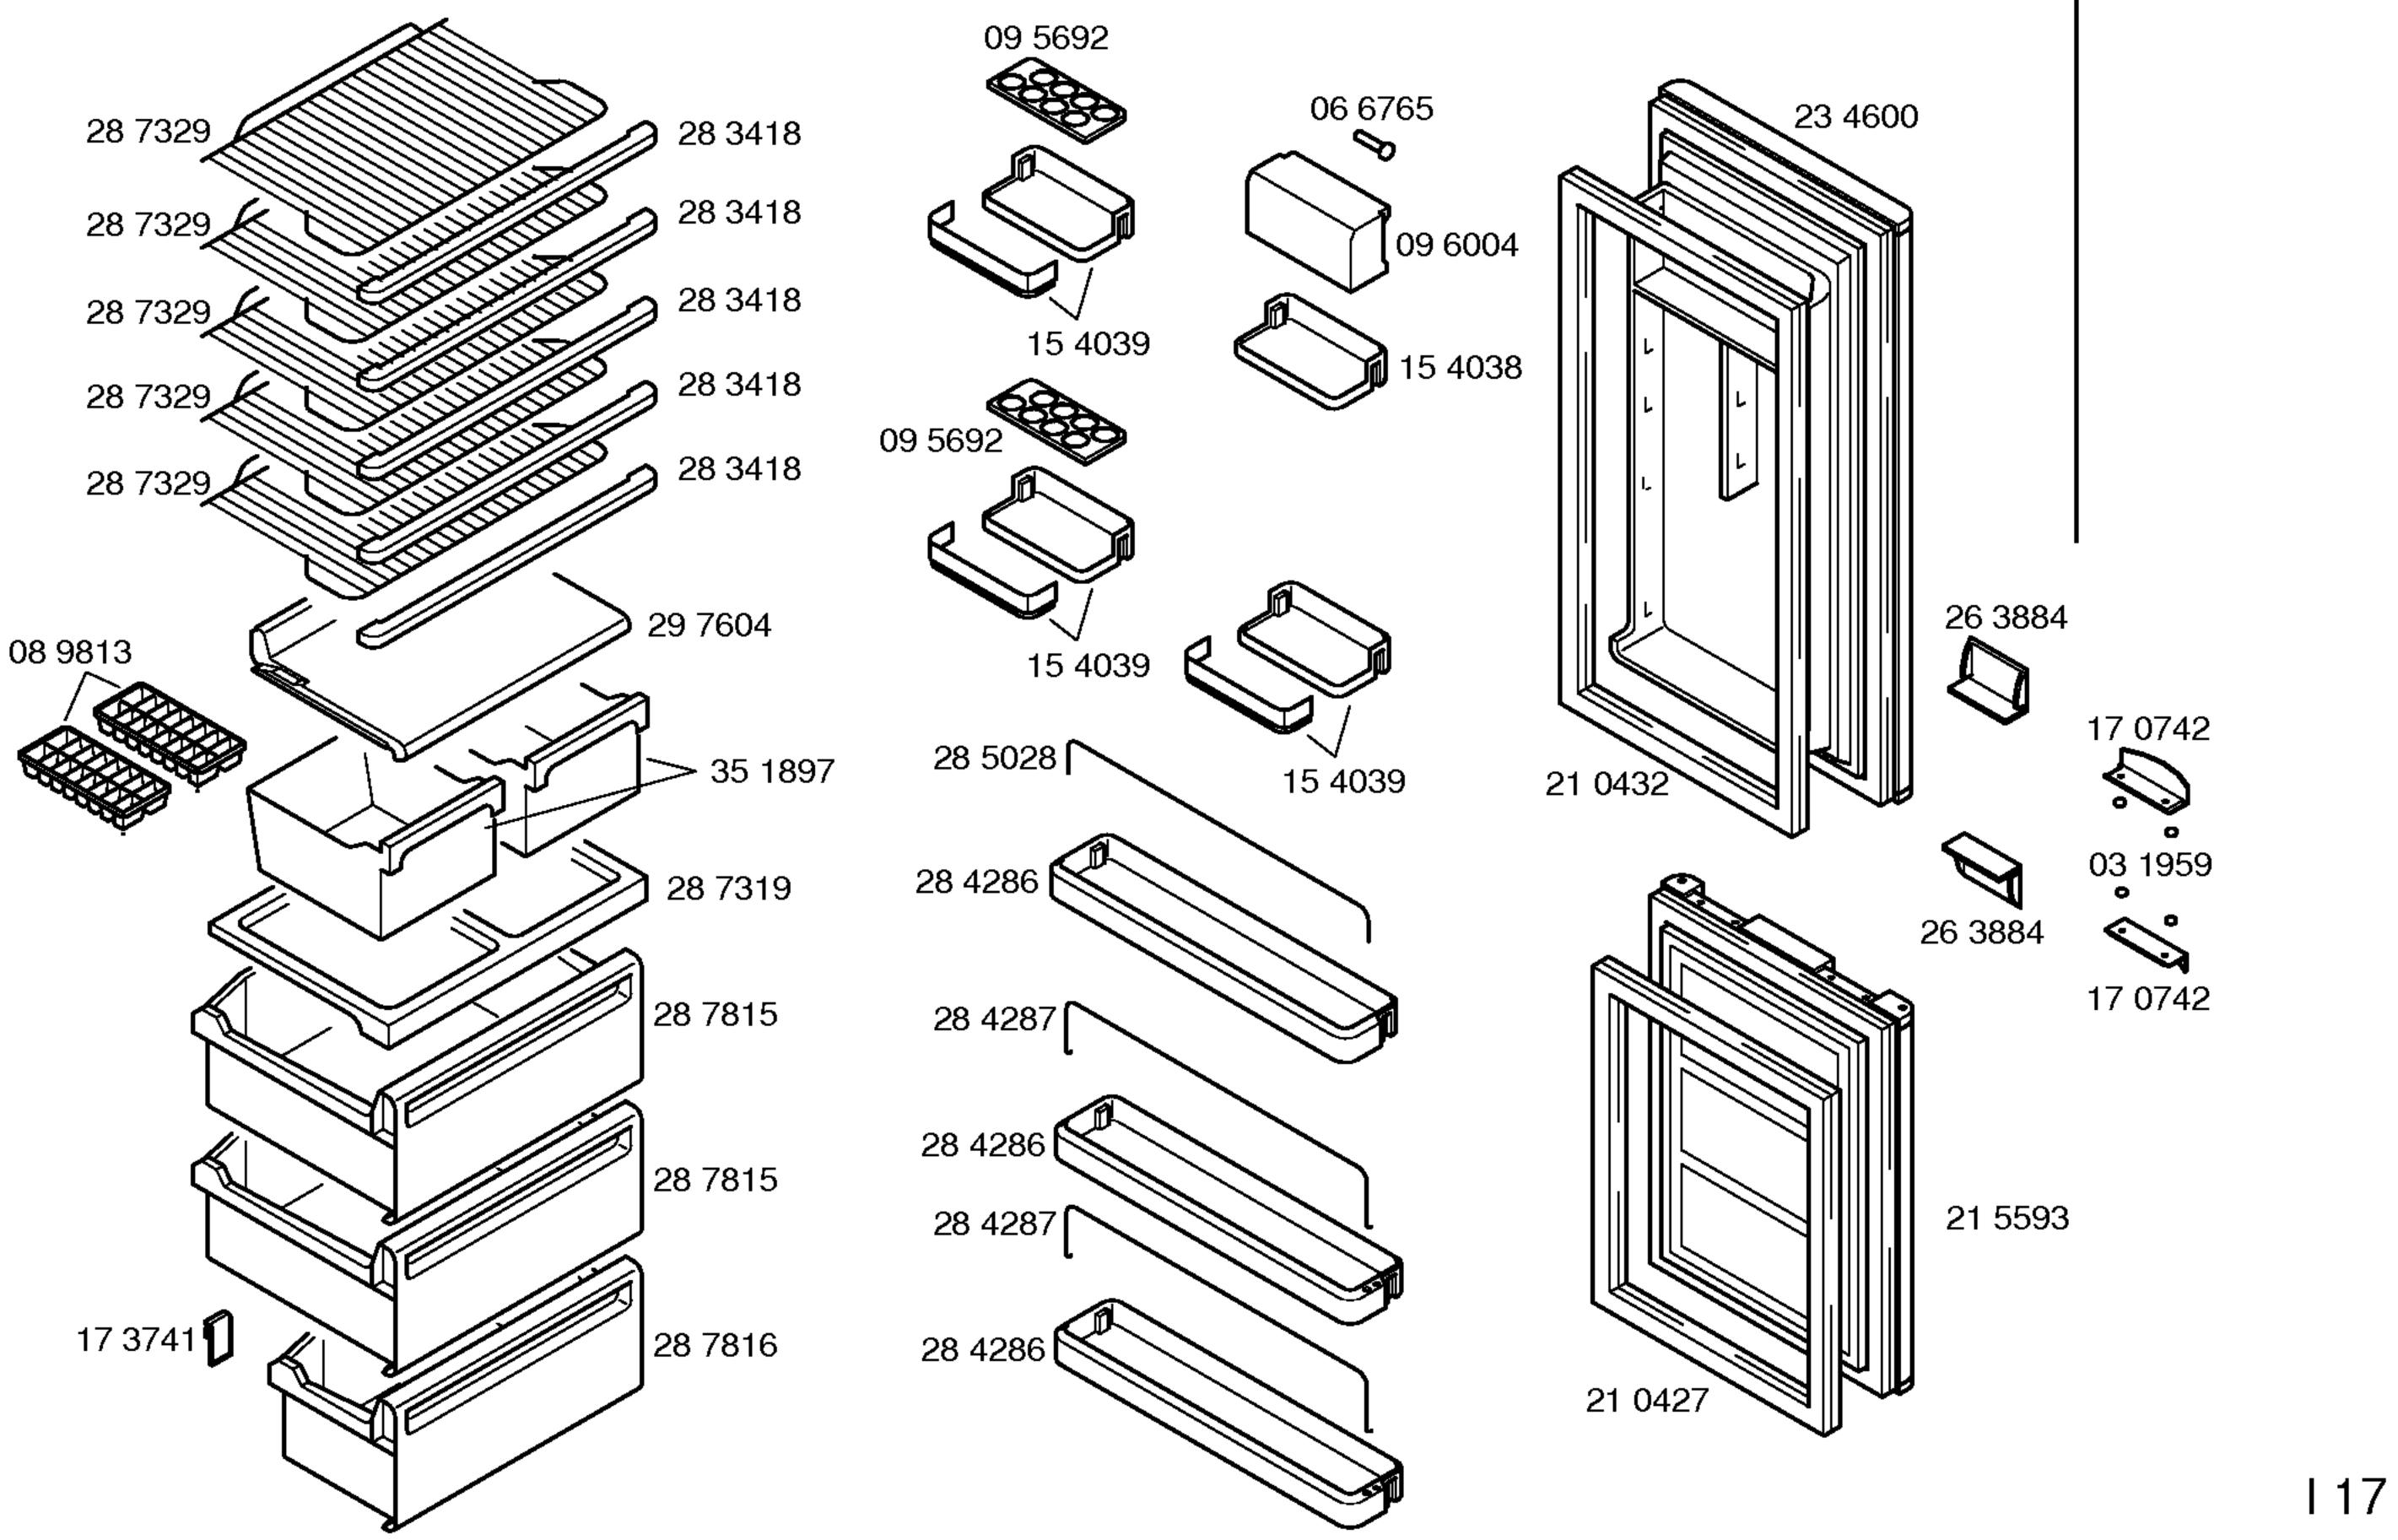



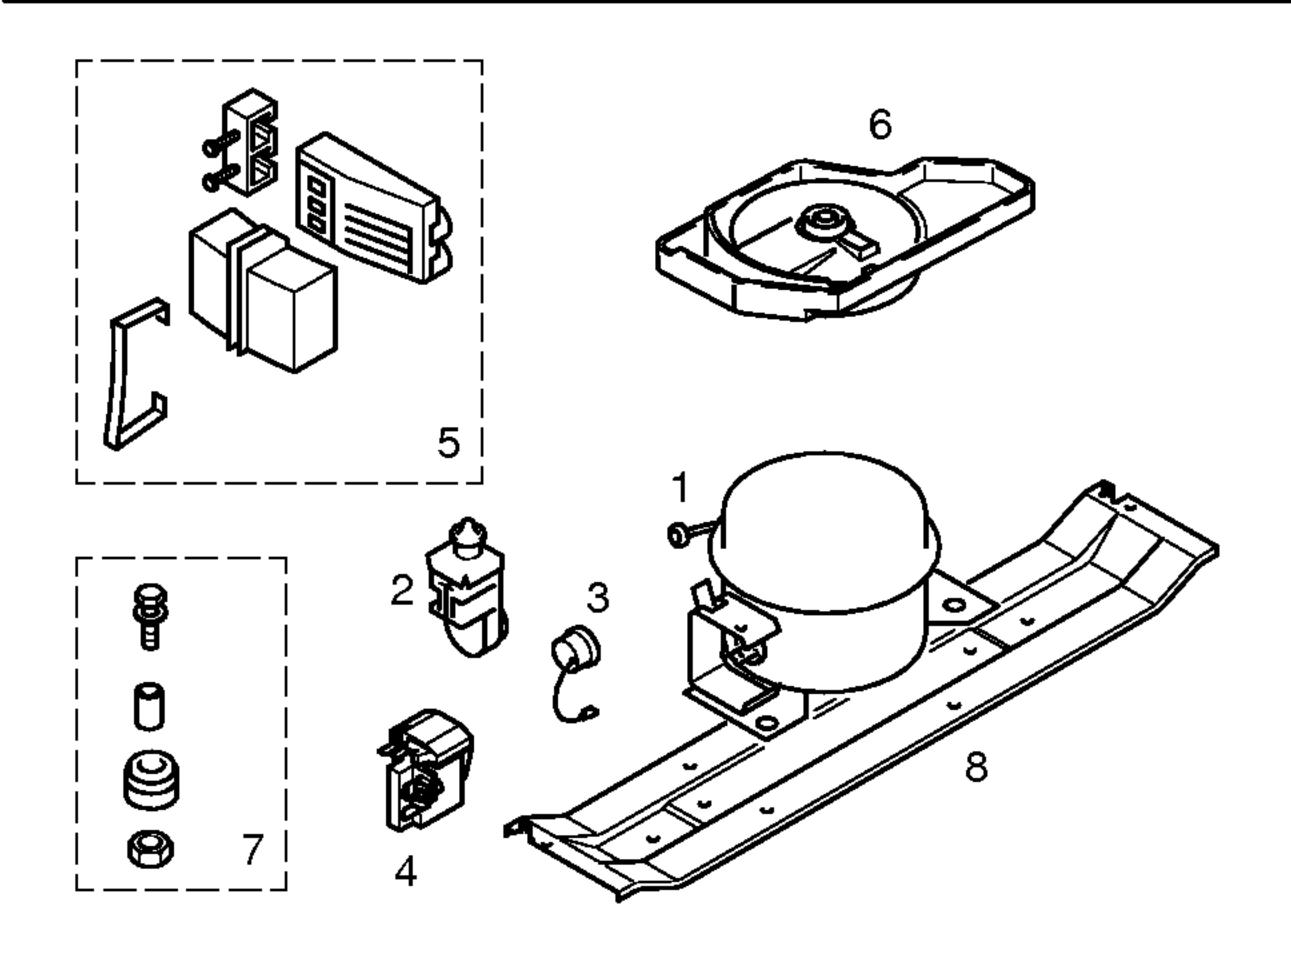

6FG9663/13-V01

6FG9663/14-V02

	V01,V02	V03	***	
Pos.	Matsushita	Aspera	Gold Star	
	SD65E80	BPK1072Y	ND69NAEG	
1	14 2003	14 2000	14 2001	
2		15 4315		
3		17 3748		
4	16 5229		17 1011	
5				
6	09 5320	26 4123		
7	05 0166	05 0166	05 0166	
8	28 8253	28 8253	28 8253	
9				
10				
11				
12				
13				

	V01,V02	V03	***	
Verdichter/Compressor/Compresseur/Compresor	Matsushita	Aspera	Gold Star	
Typ/Type/Tipo	SD65E80	BPK1072Y	ND69NAEG	
Förderleistung/Delivery/Debit/Aspiración I/h				
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A	5,76	0,47		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	22,50	33,10		
Hi/aux.	31,80	38,20		
Temp.Reyler/Thermostat/Termostato	Ranco		Ranco	
Typ/Type/Tipo	K59-L6050		K54–L2007	
Reglerstellung/Position/Conexión	MIN. MAX.		MIN. MAX.	
Schaltwerte/Switching values/ein/conex.ºC	+6º		-14º -22º	
Valeurs de commutation/Desconexaus"/descon.	–11º –28º		–20º –28º	
(abtaven' od)alarm'			–10º –18º	
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	77	79	83	
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia Ohm				
Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia Ohm				
Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para				
ventilador refrigerador				

<sup>\*</sup> Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características