


RT9821R/01-V01
RT9822R/01-V02
RT9823R/01-V03


RT9829R/01-V04
RT9821R/07-V05
RT9822R/07-V06

RT9823R/07-V07
RT9829R/07-V08

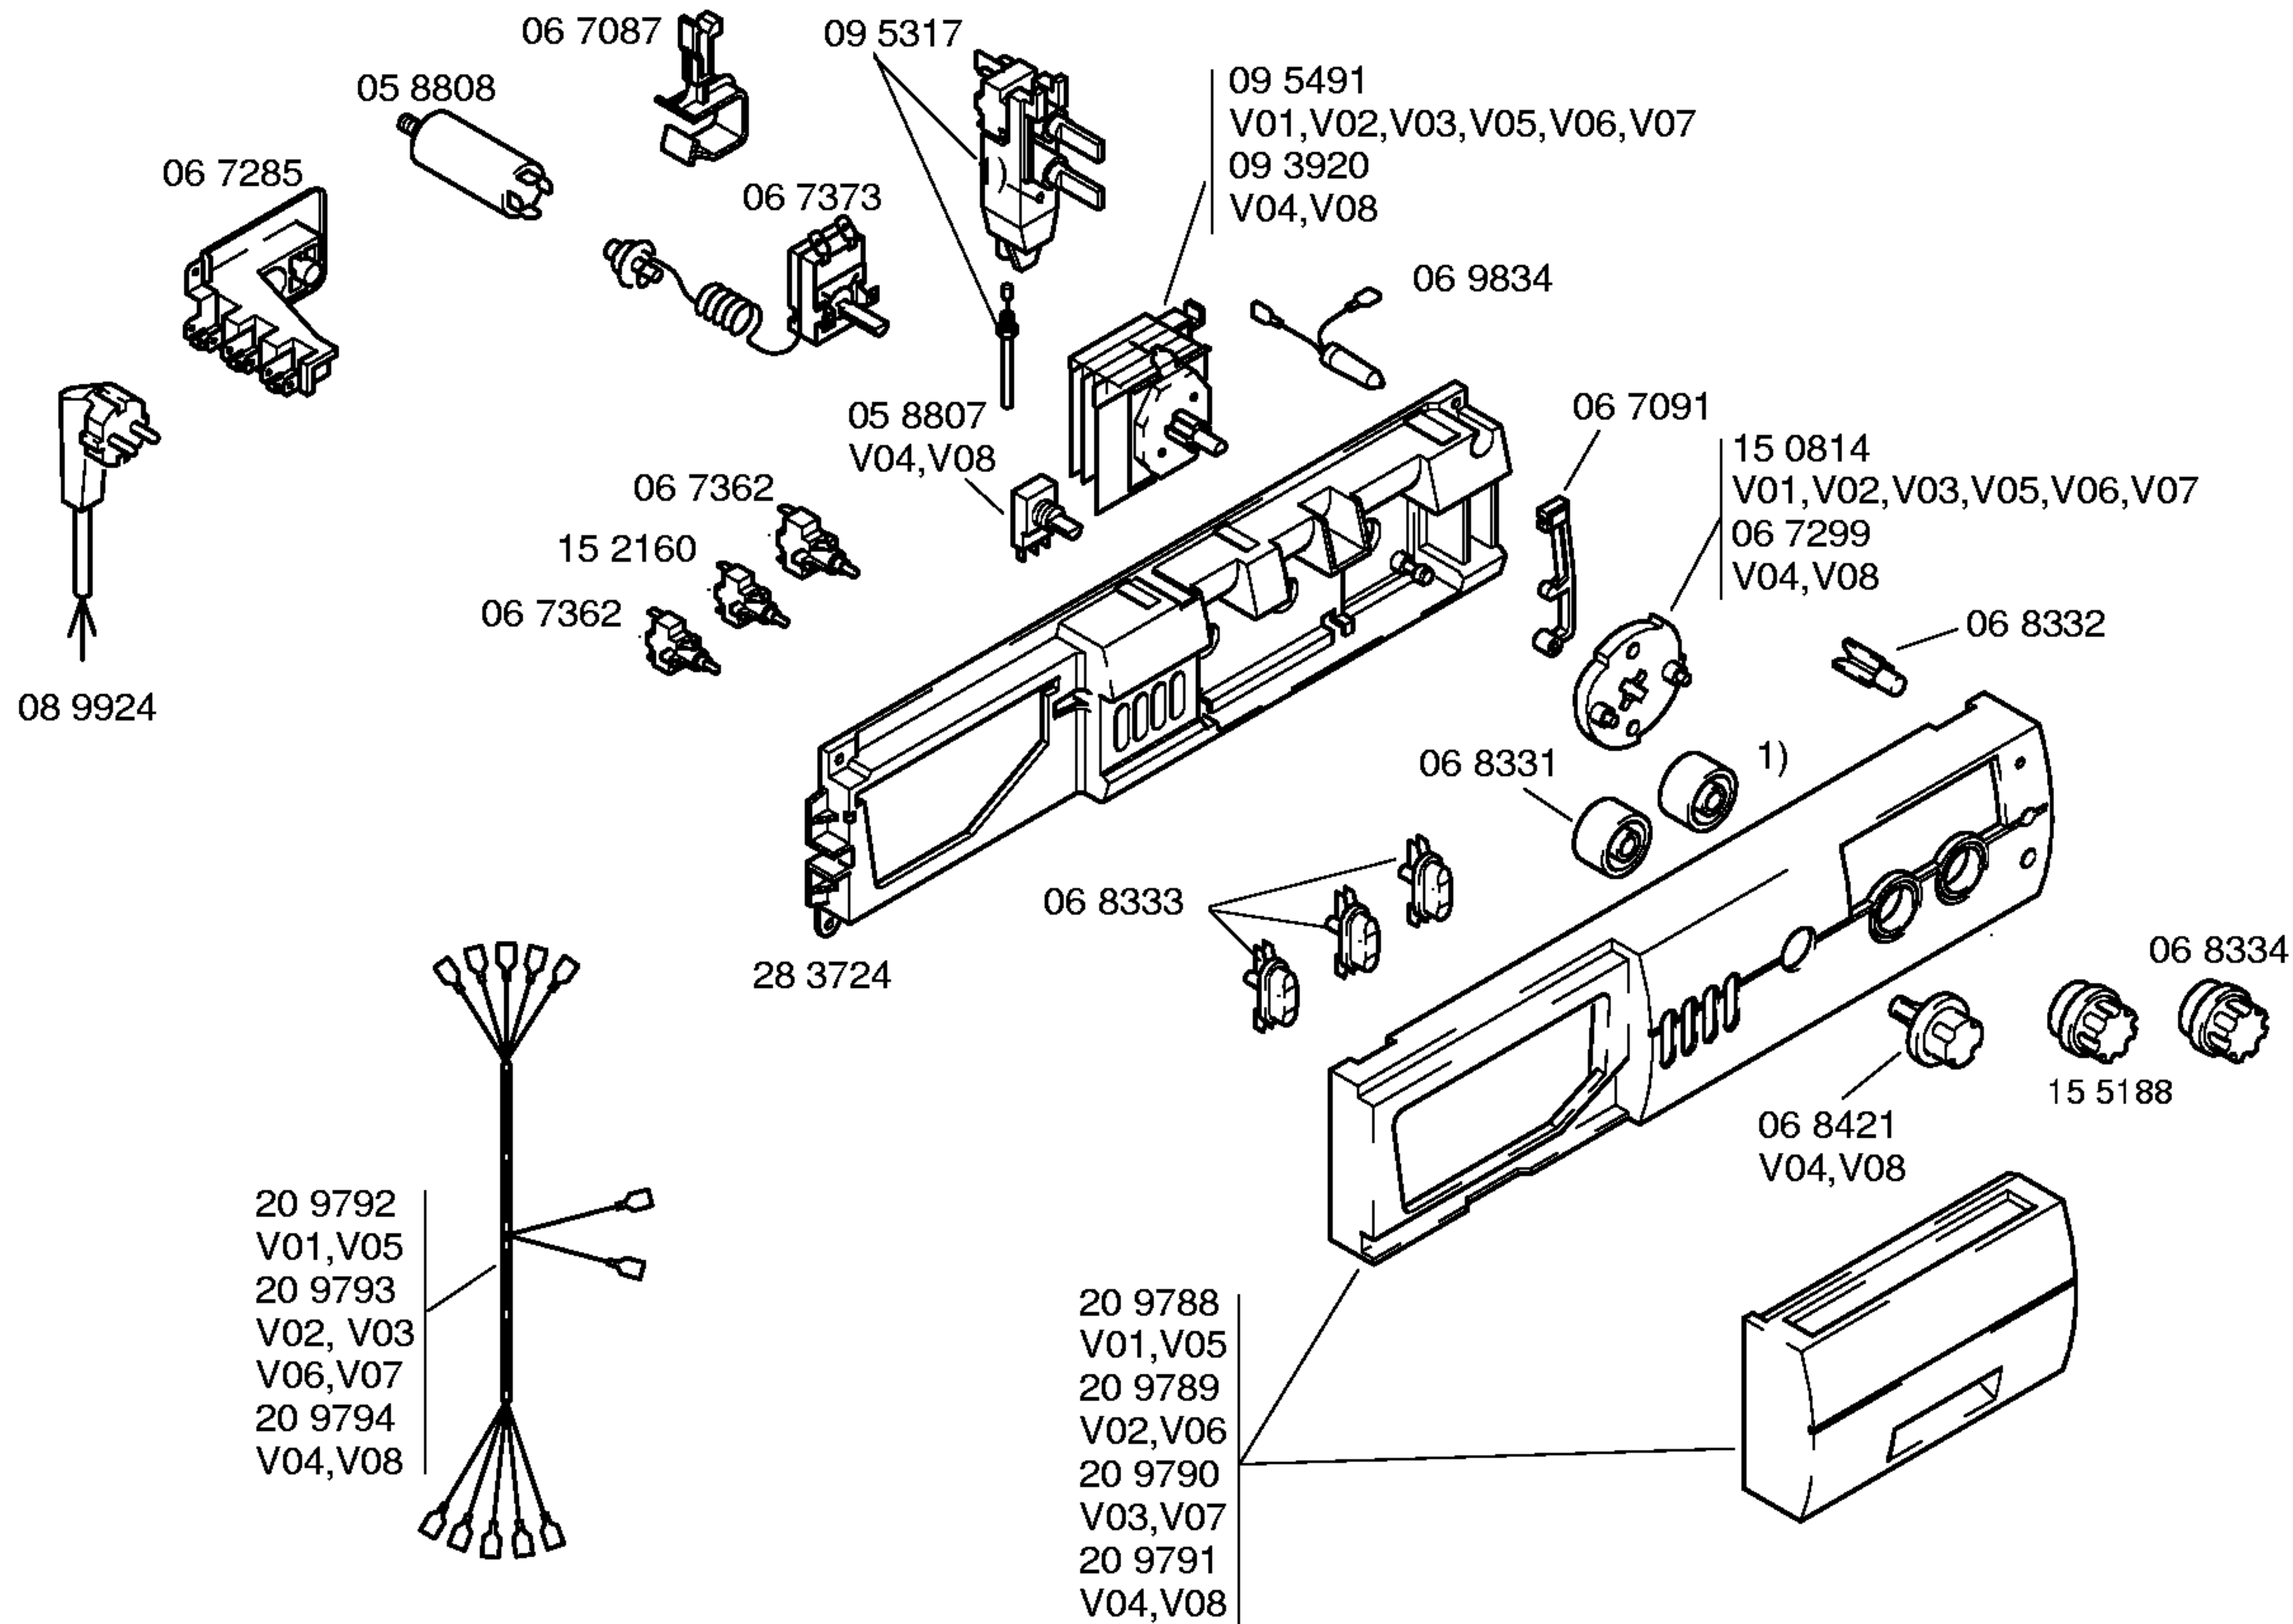


Libro de instrucciones
51 7577
(E)

- 1) 15 2639
V01,V02,V03,
V05,V06,V07
15 2640
V04,V08

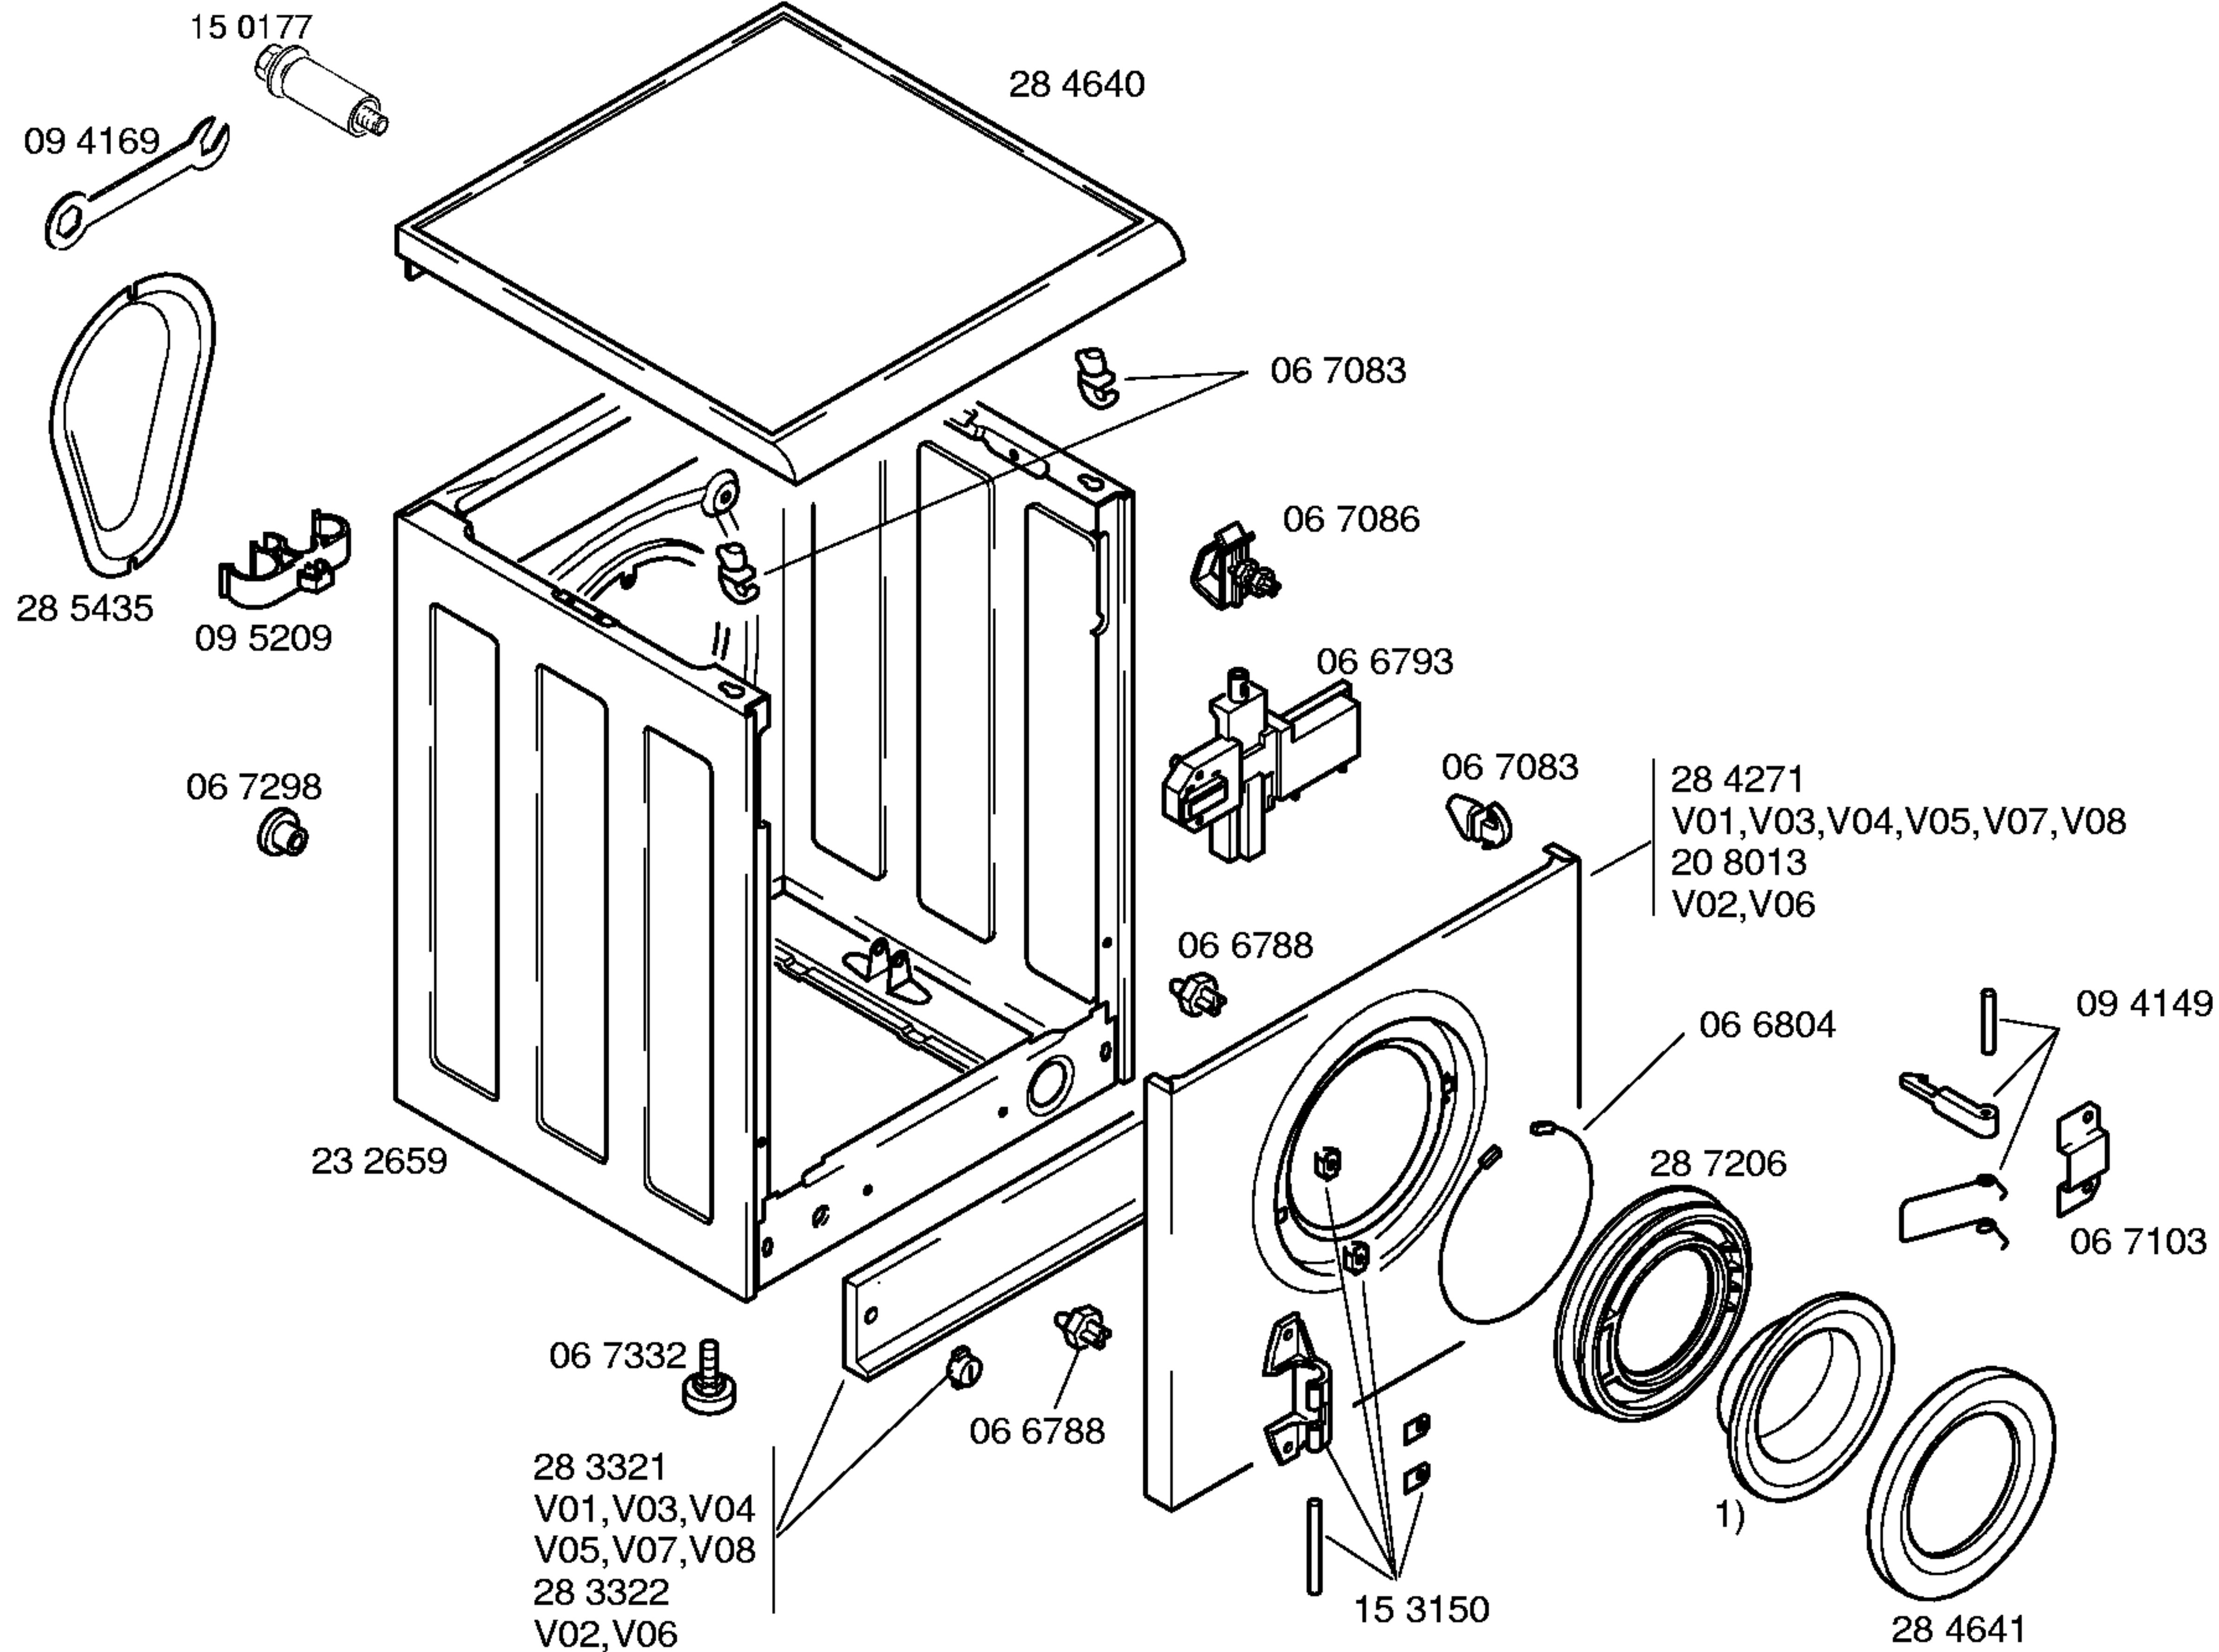


1) 28 3713
V02,V06
28 6994
V01,V03,V04,
V05,V07,V08

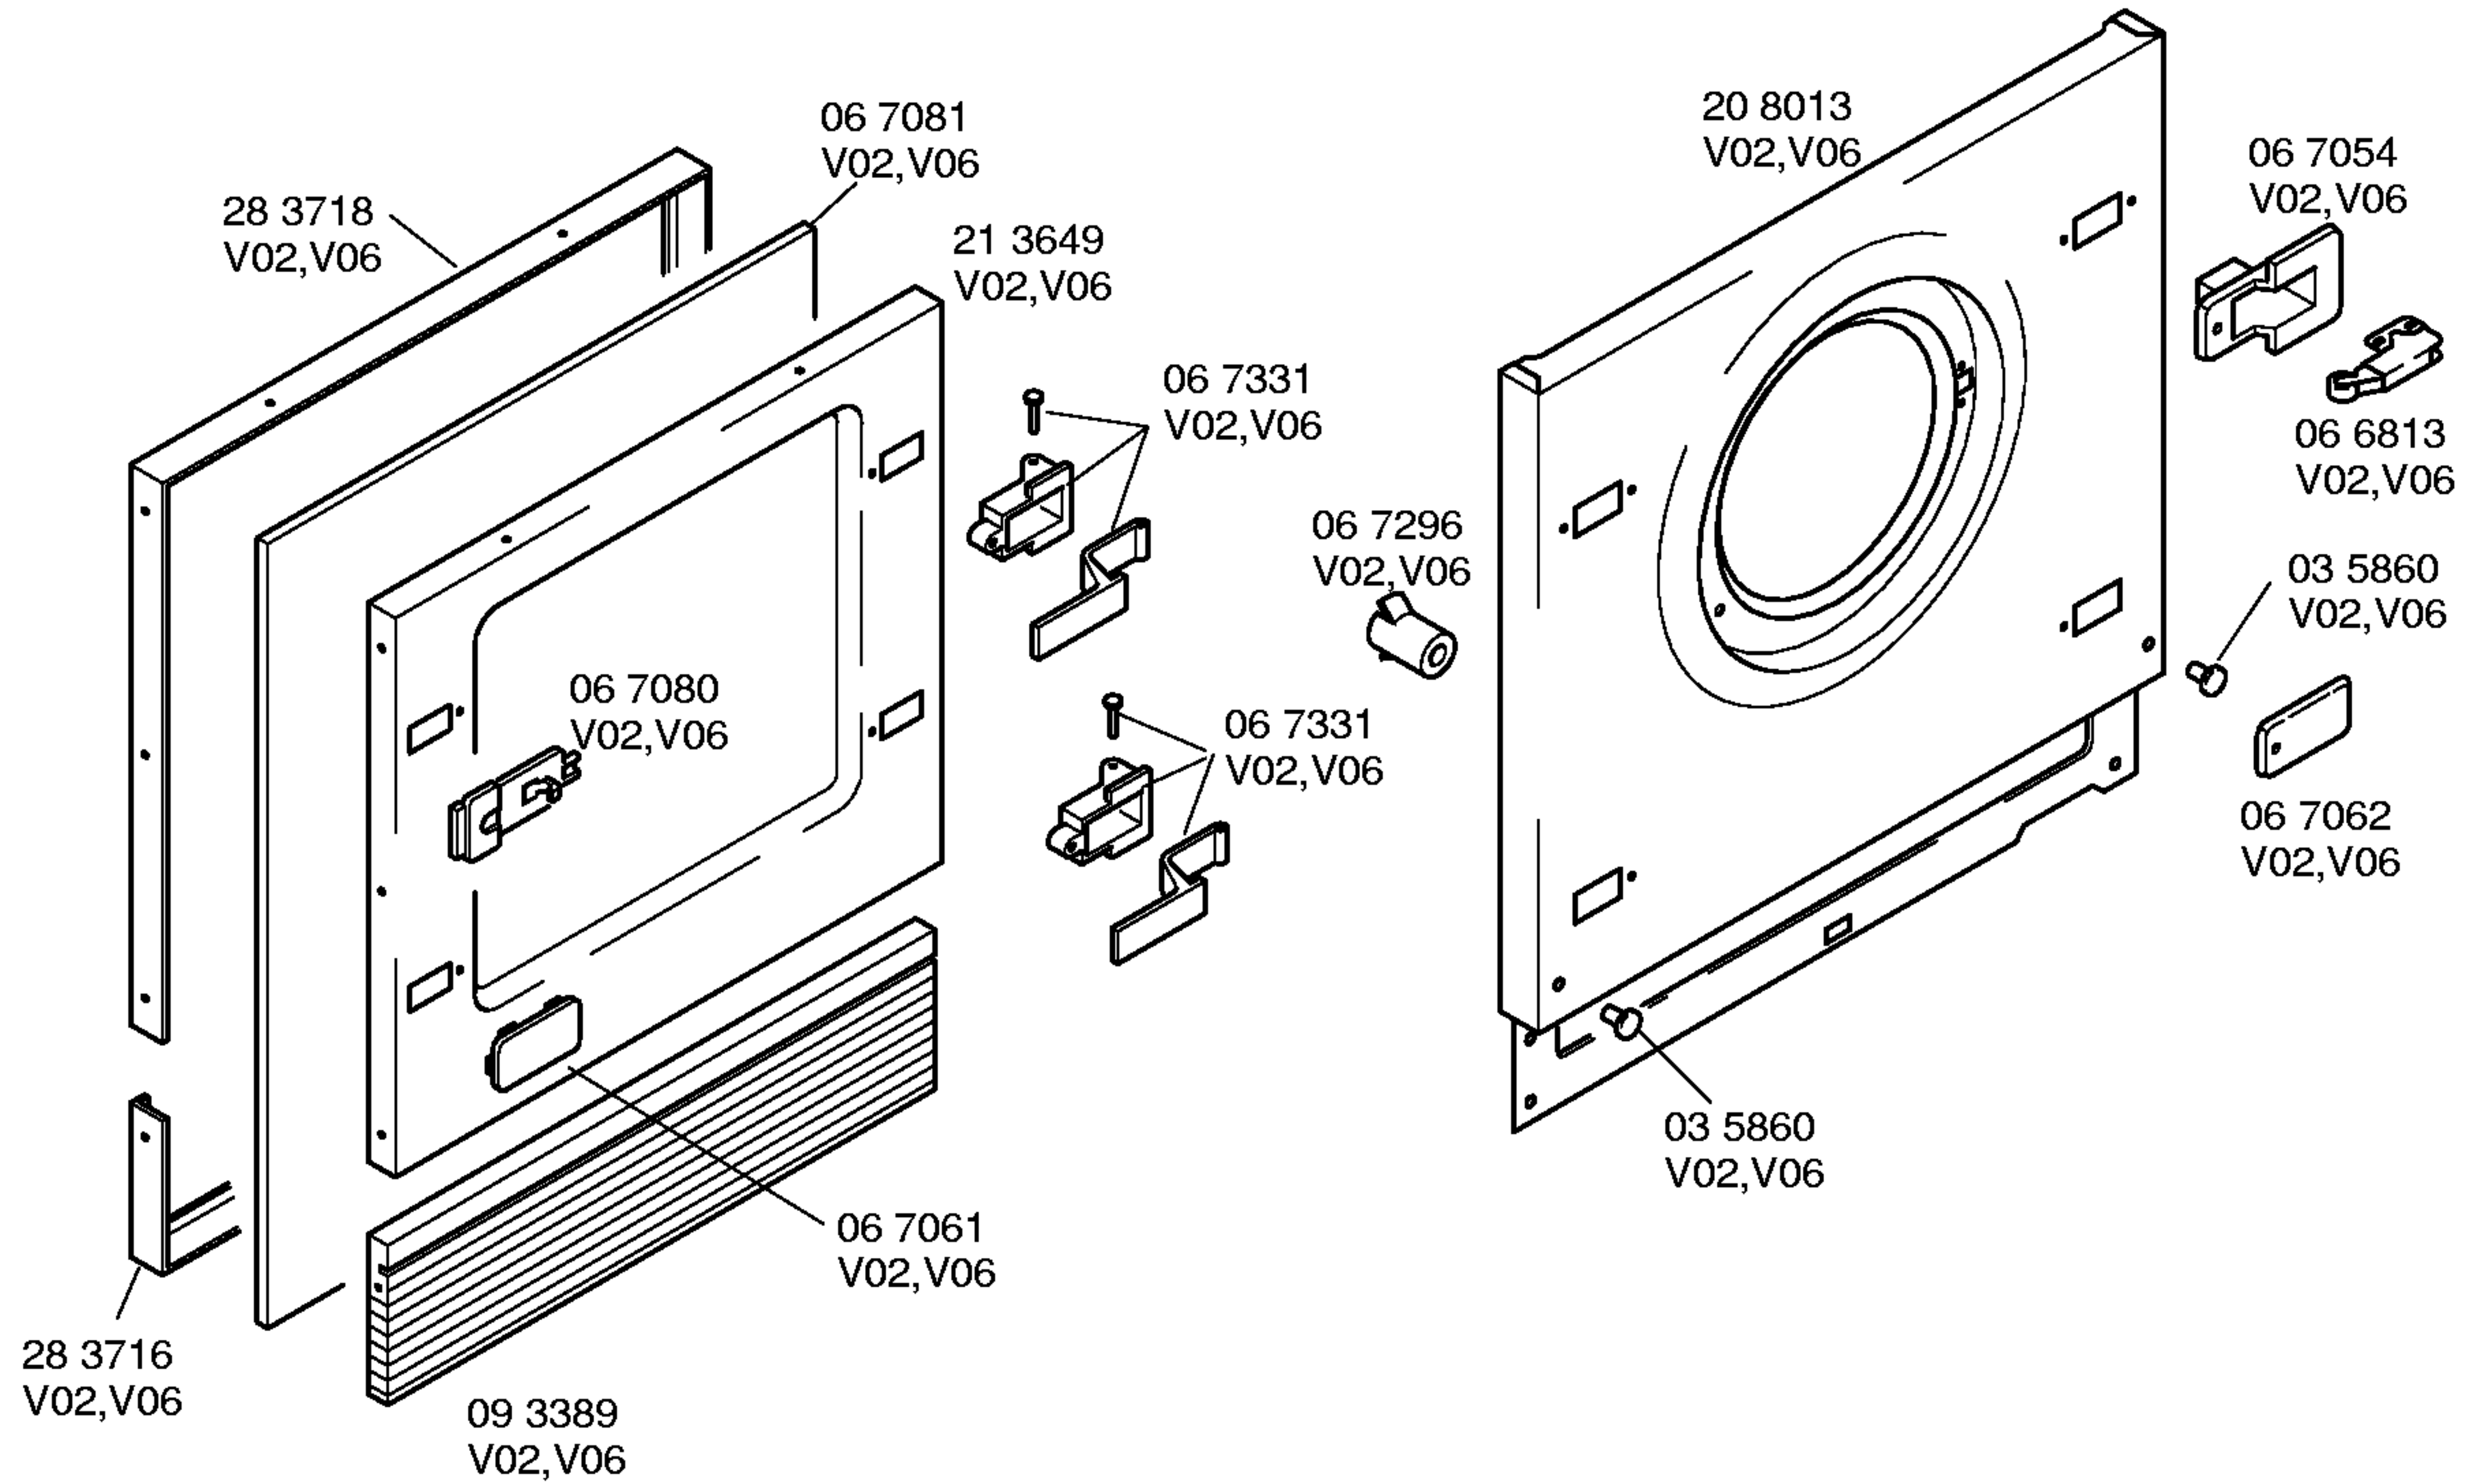

RT9821R/01-V01
RT9822R/01-V02
RT9823R/01-V03

RT9829R/01-V04
RT9821R/07-V05
RT9822R/07-V06

RT9823R/07-V07
RT9829R/07-V08

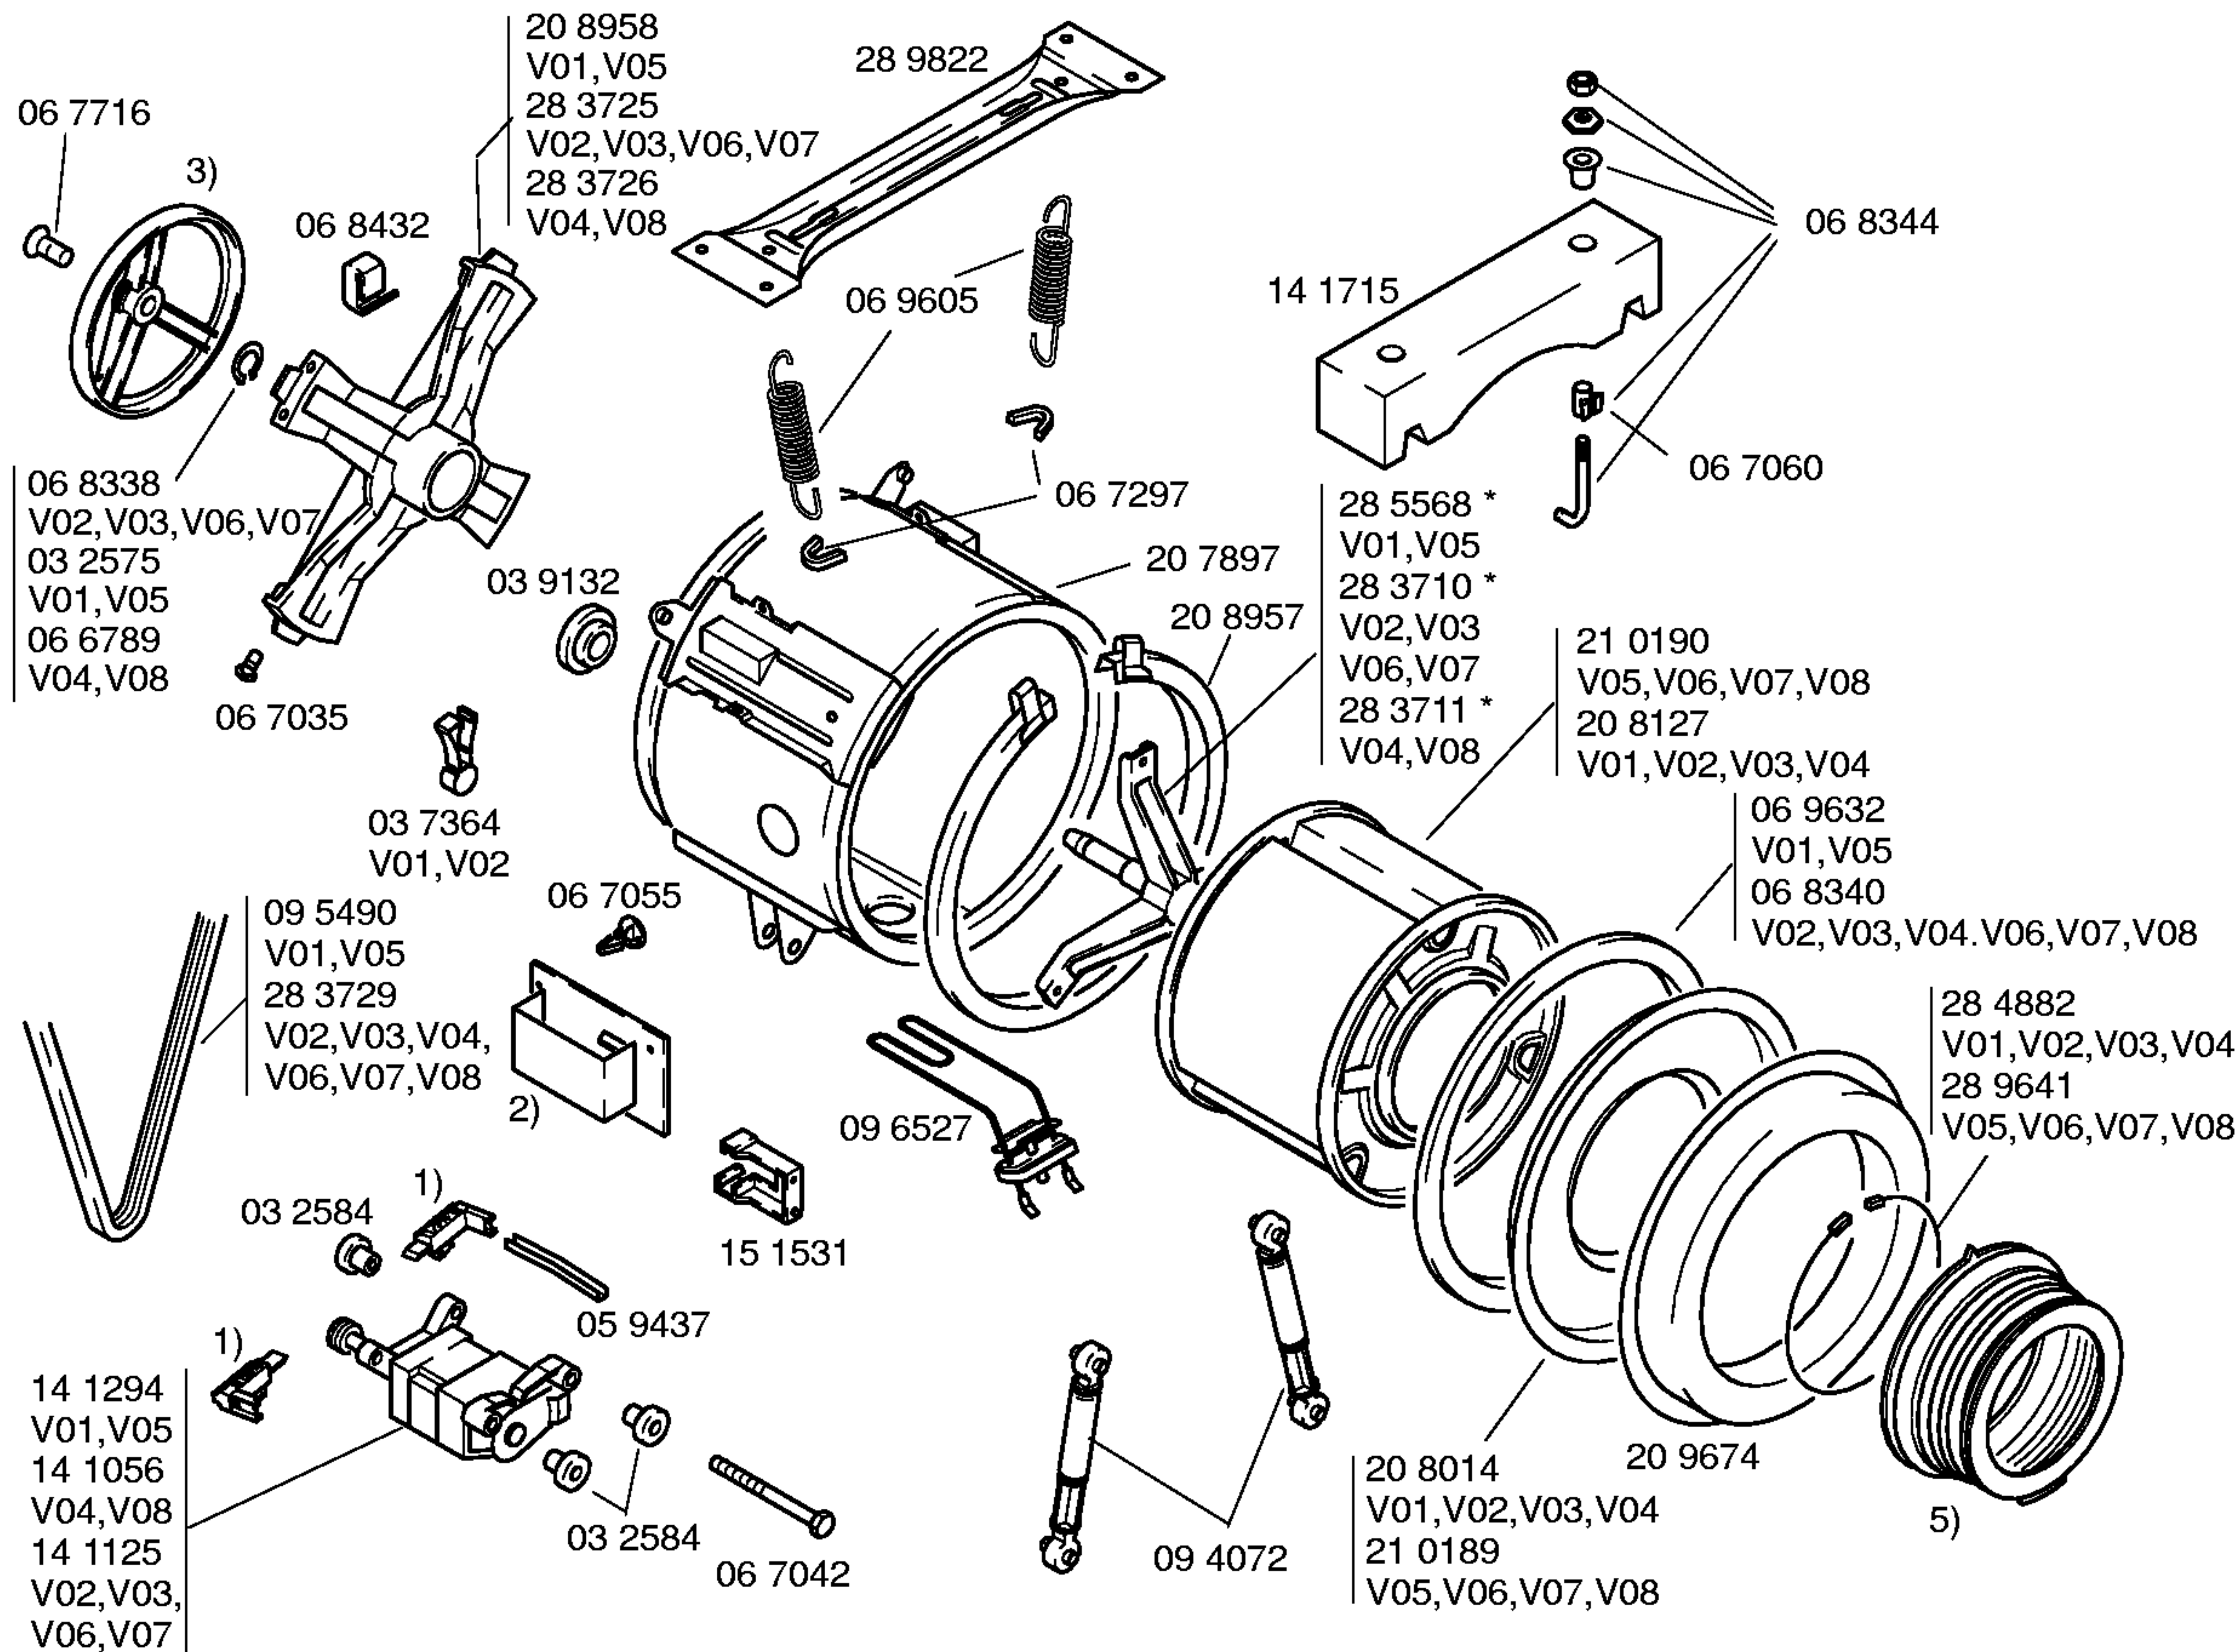


- 1) 15 4070
Ceset
15 4071
Sole
 - 2) 28 6984
V04,V08
09 5492
V01,V05
09 5249
V02,V03,V06,V07
 - 3) 14 1213
V01,V05
09 3390
V02,V03,V06,V07
09 3391
V04,V08
 - 5) 28 3935
V01,V03
28 3721
V04
28 7674
V02
28 9640
V05,V07,V08
28 9843
V06
- * Conjunto tornilleria
05 9132

RT9821R/01-V01
RT9822R/01-V02
RT9823R/01-V03

RT9829R/01-V04
RT9821R/07-V05
RT9822R/07-V06

RT9823R/07-V07
RT9829R/07-V08

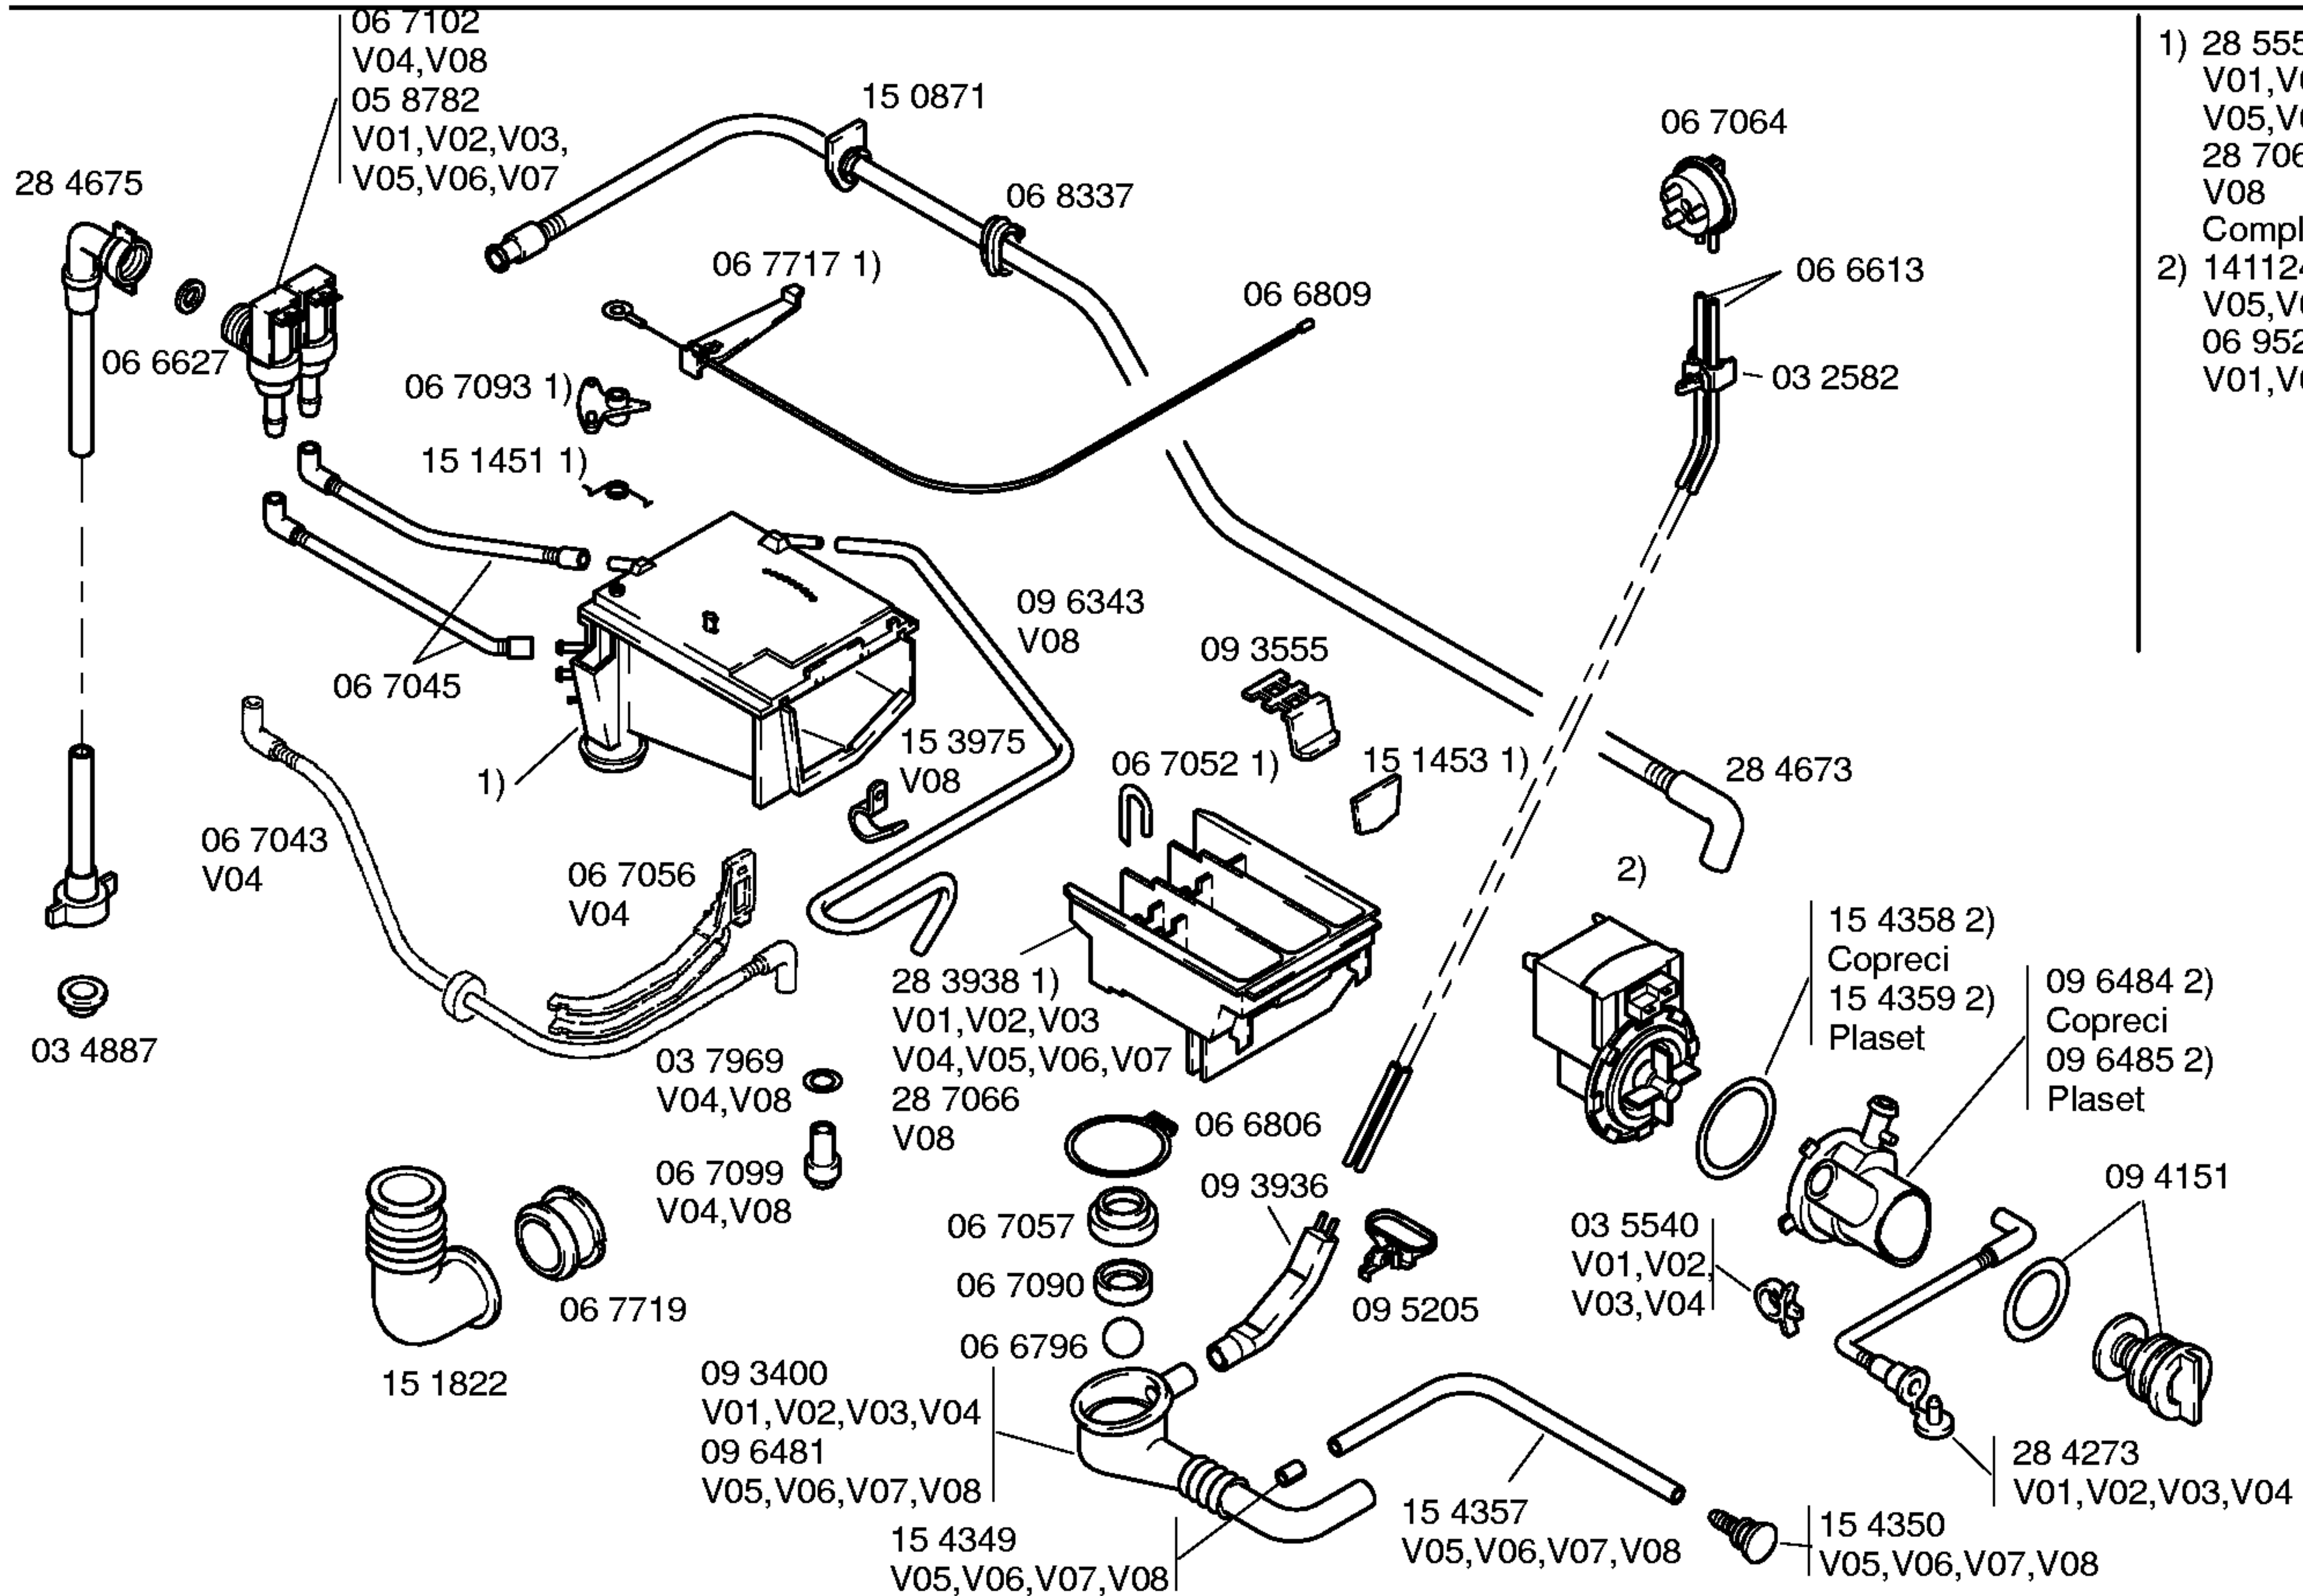

- 1) 28 5558
V01,V02,V03,V04,
V05,V06,V07
28 7065
V08
Completa
- 2) 141124
V05,V06,V07,V08
06 9521
V01,V02,V03,V04