

SO XSTREAM FULL HD



Portable Media Player
HDMI Full HD

Quickstart Guide

Packaging Content



1



2



(for UK only)

3



4



5



6



7

(GB) 1- So XStream Full HD 2- Remote Control 3- A/C Adapter 4- Audio/Video cable
5- YPbPr cable 6- Quick Start Guide 7- Batteries

(F) 1- So XStream Full HD 2- Télécommande 3- Cable d'alimentation 4- Cable Audio/Video
5- Cable YPbPr 6- Guide d'installation 7- Piles

(E) 1- So XStream Full HD 2- Mandó a distancia 3- Adaptador de alimentació 4- Cable Audio/Video
5- Cable YPbPr 6- Quick Start Guide 7- Piles

(D) 1- So XStream Full HD 2- Fernbedienung 3- Ernährungsadapte 4- Audio/Video Kabel
5- YPbPr Kabel 6- Quick Start Guide 7- Stapel

(NL) 1- So XStream Full HD 2- Afstandbediening 3- Voedingsadapter 4- Audio/Video kabel
5- YPbPr kabel 6- Quick Start Guide 7- Batterijen

(I) 1- So XStream Full HD 2- Telecomando 3- Adattatore di alimentazione 4- Cavo Audio/Video
5- Cavo YPbPr 6- Quick Start Guide 7- Batterie


(P) 1- So XStream Full HD 2- Telecomando 3- Adaptador de alimentação 4- Cabo Audio/Video
5- Cabo YPbPr 6- Quick Start Guide 7- Batteries

(DK) 1- So XStream Full HD 2- Fjernbetjening 3- Strømforsyning 4- Audio/Video kabel
5- YPbPr kabel 6- Quick Start Guide 7- Batterier


Front panel:





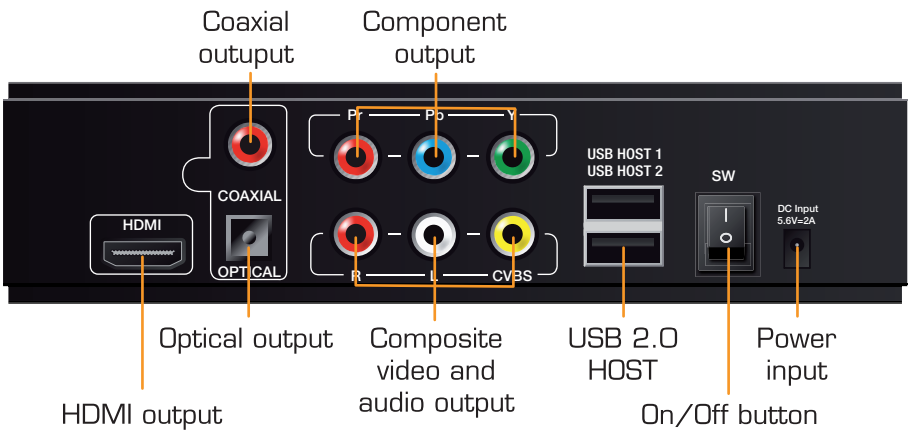



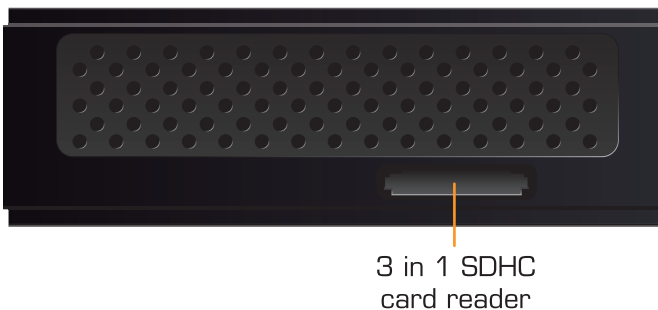







Back panel:









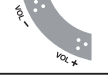








Side panel:



Remote control's functions:

Button	Function
 Power	Turns the device On / Off
 Mute	Plays / Mutes the sound
 Tv Out	Selects TV Video output 480i, 480p, 720p, 1080i by NTSC TV Type 576i, 576p, 720p, 1080i by PAL TV Type
 Keypad	Choose a media file
 Zoom	Zoom in/out selected photo
 Audio	Change R / L audio Channels
 Title	Show Playlist for ISO files or video_TS files
 Subtitle	Subtitle On or Off
 Display	a. When playing music and movie files, press "Display" to show "Previous chapter", "Next chapter". Press once more for "Off" b. Press "Display" to show copy, paste, delete, rename, new folder, properties, cancel functions.
 Menu	Go to Menu
 Navigation button	Select item up, down, left or right
 OK	Press "OK" to confirm
	Increase or decrease the volume
	Page up / down



 Play/pause	Begin playback / confirm selection / pause playback
 REV	Rewind
 FWD	Fast forward
 STOP/ RETURN	Stop playing, Return to previous step
 Rotate	Rotate selected photo
 COPY	One-key copy the files to the target destination between external memories devices.
 Slideshow	1. Press the button to directly play the pictures and music in the hard disk's music and picture root directory menu. 2. a) Press the "slideshow" and "OK" or "Play/Pause" button to play pictures and background music in the root directory file menu b) Press the "slideshow" button to select the background music, then press "OK" to play the pictures from the File menu.
 Set up	Enter the OSD Setup menu
 Movie	Press the button to enter the Movie menu. All movie files are shown in the directory structure
 Music	Press the button to enter the Music menu. All music files are shown in the directory structure
 Picture	Press the button to enter the Picture menu. All picture files are shown in the directory structure
 File	Press the button to enter File menu. All the Files are shown in the directory structure
 GO TO	Time search
 16:9/4:3	Choose the video mode : Screen mode, Subtitle mode, movie mode, wide screen mode, keep ratio mode.
 DEVICE	Press to switch between the USB host and the card reader.



Change the language

- 1) Turn on the So XStream Full HD 2) Main menu



- 3) Press SETUP  button on the remote control

- 4) Go on "Language".



- 5) Choose your language.



- 6) Press SETUP  to finish and exit.

Outputs / Sorties


Audio/Video :

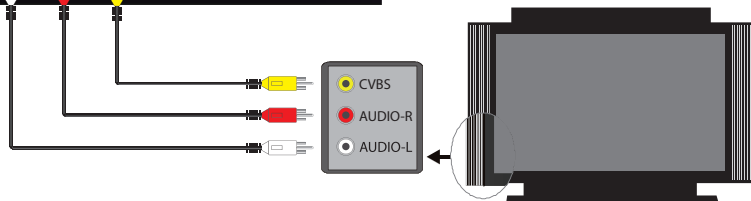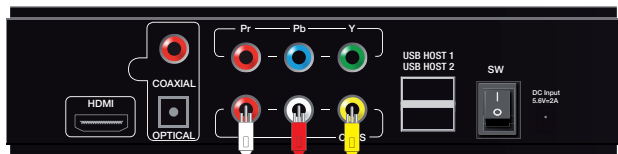


TV

Outputs / Sorties

Audio/Video :

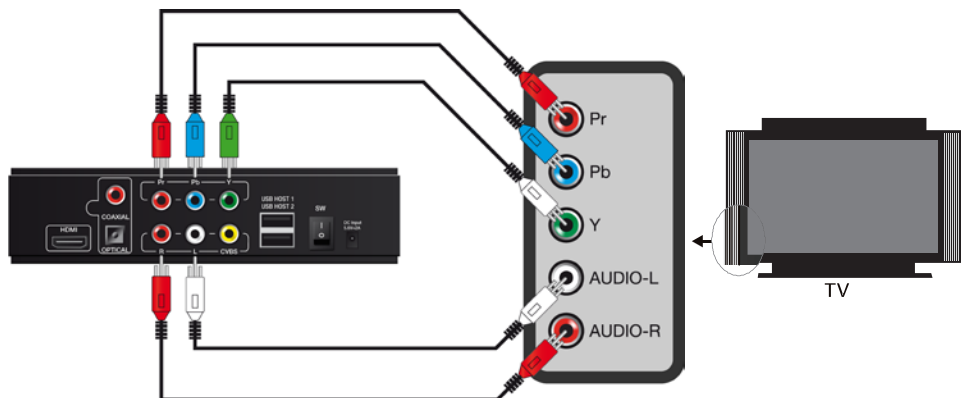

HDMI (cable not included):

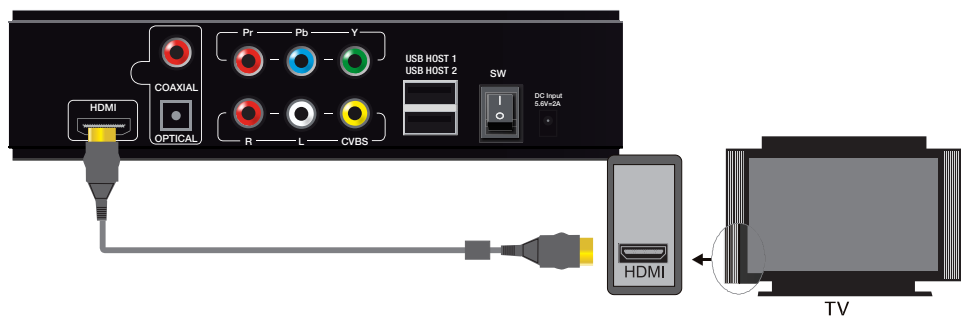

Connect the So XStream Full HD



Change video mode :

Press : TV OUT



To see data's from:

Memory Flash Card:

Plug your Memory Flash Card to the So XStream Full HD.
Press " ● DEVICE " to switch between the USB host and the cardreader on the main menu.





USB External HDD, USB drive, MP3:

Plug your USB device (USB keys, HDD) to the So XStream Full HD.
Press " ● DEVICE " to switch between the cardreader and the USB host on the main menu.





Warranty

 Activez votre garantie en ligne sur www.dane-elec.com
 Formulaire à remplir si vous ne possédez pas de connexion internet.
 Activate your warrantee on-line at www.dane-elec.com
 If you don't have any internet connexion, please fill this form in.

 Activa su garantía en la web: www.dane-elec.com.
 Formularioa de rellenar si no tiene conexión al Internet./
 Garantie-Registrierung online auf www.dane-elec.com.
 Füllen Sie bitte dieses Formular aus, sollten Sie keinen Zugang zum Internet haben.

Nom / Last Name	Apellido / Name
Prénom / First Name	Nombre / Vorname
Adresse / Address	Dirección / Adresse
Code Postal / Zip Code	Código Postal / Postleitzahl
Ville / City	Ciudad / Stadt
Etat / State	Población / Land
Pays / Country	Pais / Bundesland
Adresse email	Email / E-mail Adresse
Date d'achat / Date of purchase	Fecha de compra / Purchasing Date
Produit / Product	Producto / Product
Numéro de série / Serial Number	Numero de serie / Serial Number

 Si può attivare online la garanzia su www.dane-elec.com.
 Modulo da compilare se non si ha una connessione a internet/
 Aktivér din garanti online på www.dane-elec.com.
 Udfyld venligst denne formular, hvis du ikke har internetadgang

 Ative em linha sua garantia em www.dane-elec.com
 preencher o ficheiro se não tiver uma conexão Internet./
 Activeer uw garantie online via de website www.dane-elec.com /
 Heeft u geen internetverbinding, vul dan onderstaand formulier in.

Cognome / Efternavn	nome de família / Achternaam
Nome / Fornavn	Name / Vorname
Indirizzo / Adresse	endereço / Adres
Cap / Postnummer	código postal / Postcode
Città / By	cidade / Woonplaats
Stato / Landsdel	região / Provincie
Nazione / Land	país/ Land
Indirizzo e-mail / E-mail adresse	endereço correio electrónico / E-mailadres
Data di acquisto/ Købsdato	data de compra / Aankoopdatum
Prodotto / Produkt	produto / Produkt
Numero di serie / Serienummer	número de série / Seriennummer

Warranty



Activez votre garantie en ligne sur le site Dane-elec.com afin d'en bénéficier immédiatement. Ces spécifications et caractéristiques sont fournies à titre indicatif, Dane-Elec se réserve le droit de les modifier sans préavis. La garantie ne couvre pas la perte de données.

(*): 1 (un) GB = approximativement 1 milliards de bytes, la capacité réelle varie en fonction du contenu, la capacité formatée est moindre.



Activate your warranty on-line on www.dane-elec.com site in order to immediately benefit from your warranty. These specifications and characteristics are supplied for your information. Dane-Elec reserves the right to modify this information without prior notice. The warranty does not cover loss of data.

(*): 1 (one) GB = approximately 1 billion bytes, which is the true capacity in terms of content; the formatted capacity is less.



Activeer uw garantie online op de website Dane-elec.com om onmiddellijk van uw garantie te genieten. De garantie dekt geen verlies van gegevens. Deze specificaties en eigenschappen worden indicatief meegeleverd, Dane-Elec behoudt zich het recht voor deze zonder voorafgaande kennisgeving te wijzigen. De garantie dekt geen verlies van gegevens.

(*): 1 (één) G = ongeveer 1 miljard bytes, de werkelijke capaciteit varieert naargelang de inhoud, de geformatteerde capaciteit is minder.



Det er muligt at aktivere din garanti online på Dane-elec.com web-stedet, for omgående at have ret til garantibetingelserne. Garantien dækker ikke tab af data. De ovenstående specifikationer og karakteristikk er bør udelukkende anses som vejledende. Dane-Elec forbeholder sig retten til at ændre dem uden varsel. Garantien dækker ikke tab af data.

(*): 1 (en) GB = cirka en milliard byte, den effektive kapacitet afhænger af indholdet. Den formaterede kapacitet er mindre.



Attiva la tua garanzia sul sito on-line di Dane-elec.com per beneficiarne immediatamente. La garanzia non copre la perdita di dati. Queste specifiche e caratteristiche sono fornite a titolo indicativo, Dane-Elec si riserva il diritto di modificarle senza preavviso. La garanzia non copre la perdita di dati.

(*): 1 (un) GB = approssimativamente 1 miliardo di bytes, la capacità reale varia secondo il contenuto, la capacità formattata è inferiore.



Active la garantía en línea en el sitio web Dane-elec.com para beneficiarse de ella inmediatamente. La garantía no cubre la pérdida de datos. Estas especificaciones y características se ofrecen a título indicativo, Dane-Elec se reserva el derecho a modificarlas sin previo aviso.

La garantía no cubre la pérdida de datos.
(*): 1 (un) GB = aproximadamente 1000.000.000 de bytes. La capacidad real varía en función del contenido; la capacidad formateada es menor.



Aktivieren Sie Ihre Garantie online auf der Webseite Dane-elec.com, damit Ihre Garantie sofort wirksam ist. Für den Verlust von Daten wird keine Haftung übernommen. Diese Spezifikationen und Charakteristika dienen nur zur Information; Dane-Elec behält sich das Recht vor, diese ohne Vorankündigung zu ändern.

(*): 1 (ein) GB = ungefähr 1 Milliarde Bytes, die tatsächliche Kapazität unterscheidet sich je nach Inhalten; die formatierte Kapazität ist geringer.



Activar a garantia Online no sitio Dane-elec.com por forma a beneficiar da garantia imediatamente. A garantia não cobre a perda de danos. Estas especificações e características são fornecidas a título indicativo, Dane-Elec reserva-se o direito de efectuar modificações sem aviso prévio.

A garantia não cobre a perda de danos.
(*): 1 (um) GB = aproximadamente 1 milhar de bytes, a capacidade real varia em função do conteúdo, a capacidade formatada é menor

Dane-Elec

So by Dane-Elec Warranty
159 Avenue de Gallieni – BP33
93171 Bagnolet Cedex
France

Copyright© 2010 Dane-Elec Memory. All rights reserved, Dane-Elec, So XStream Full HD and logo Dane-Elec and So XStream Full HD are either registered trademarks or trademarks of Dane-Elec Memory in Europe, USA or other countries. Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft® Corporation in the United States and/or other countries. Mac, Mac OS, Firewire are trademarks of Apple® Computer, Inc. registered in United States and countries. certain other product names, brand names and company names may be trademarks or designations of their respective owners. Photos produced for reference only. Technical specifications described are given for indicatives purposes.

www.danedigital.com
www.dane-elec.com