



DE'LONGHI EU BAR14CD 0132103049

Pos.	Spare part code	Description
001	535703	DOOR
002	5332111100	TANK
003	552356	KNOB
004	535701	COVER
005	535714	STOPPER
006	5532101800	BODY
007	708999	CUP PLATE
008	535705	CUP PLATE
010	535928	FOOT
012	621970	RING
016	5332107900	MEASURING SPOON
017	534381	PRESSING DEVICE
018	7332126700	SUMP
019	736620	VALVE
020	622189	NUT
021	535923	TUBE
022	621962	CONNECTION
023	511816	FUSE
024	736587	TAP
025	512271	THERMOSTAT 125°
026	5232100600	THERMOSTAT 105°
027	690050	BOILER UPPER
028	621963	GASKET
029	512770	SWITCH
030	535735	SPACER
031	512441	SWITCH
032	535929	LENS
033	513116	WARNING LIGHT

DE'LONGHI EU BAR14CD 0132103049

Pos.	Spare part code	Description
034	533216	GASKET
035	512159	HEATING Element
036	534632	FILTER
037	708847	TUBE
038	535708	FROTHER
039	685202	BOILER LOWER
040	533218	GASKET
041	7032101500	SUPPORT
042	512502	PUMP
043	5332107600	TUBE
044	534848	SUPPORT
045	535733	JOINT
046	6132101600	SPRING
047	611761	DIFFUSER
048	621964	DOWEL
049	621967	NOSE
050	621968	NUT
051	534710	GASKET
052	534714	LEVER
053	535129	VALVE
054	5532108700	FROTH DISPENSER
055	6032102400	FILTER
056	5332123100	RING NUT

Spare parts list extract from the site on 08-03-2010