


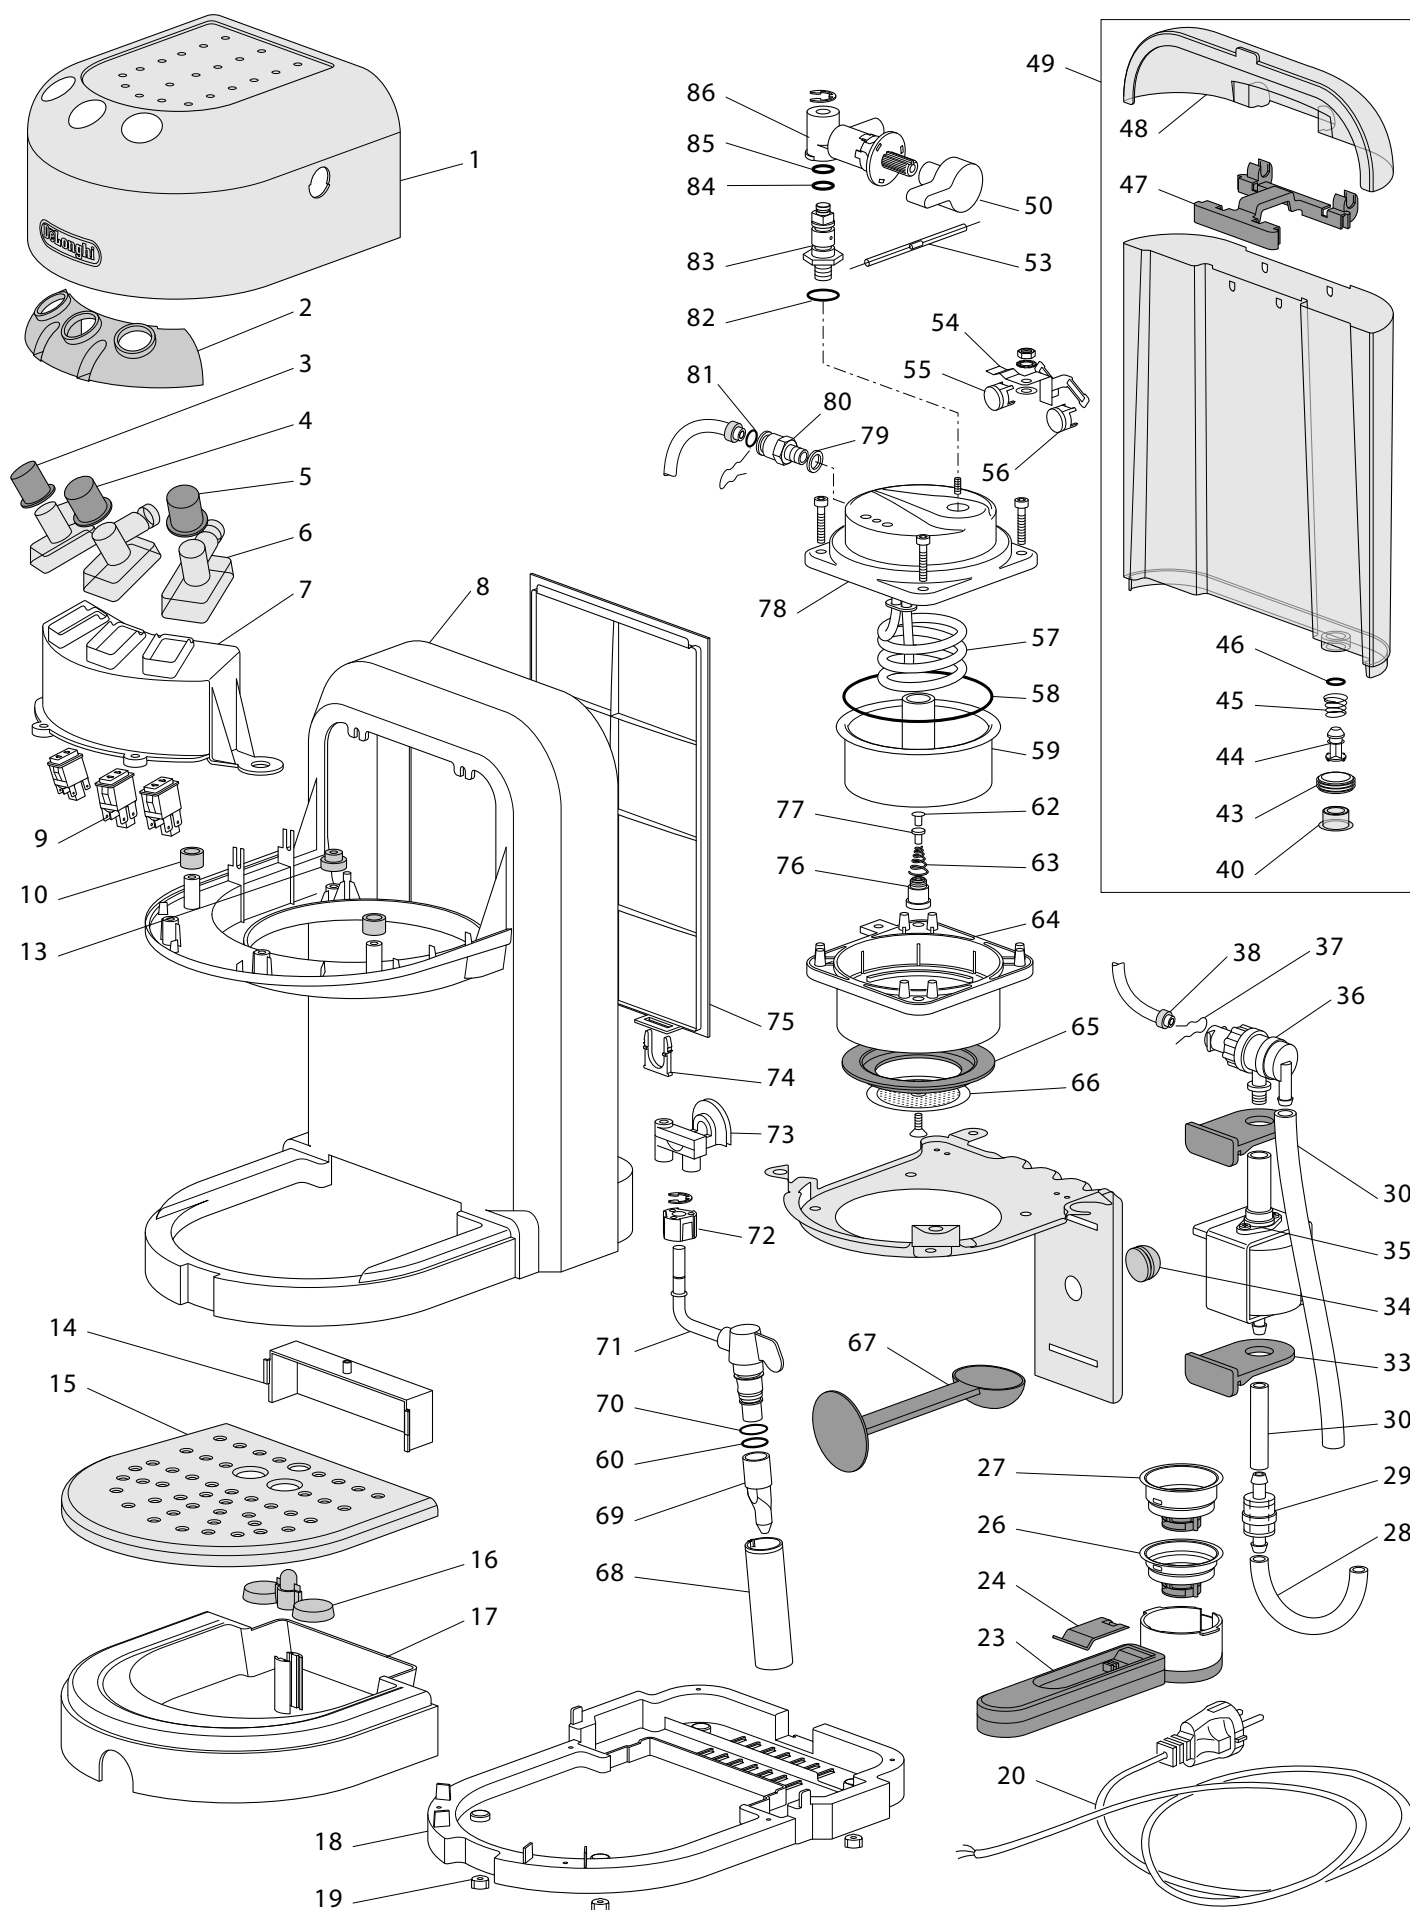

DE'LONGHI INT/RU/SKA EC270 0132103079

Pos.	Spare part code	Description
001	7013210021	COVER
002	5313210231	PROTECTION
003	5913210081	PUSH BUTTON LEFT
004	5913210071	PUSH BUTTON
005	5913210061	PUSH BUTTON RIGHT
006	5313210241	SUPPORT
007	5313210171	SWITCH HOLDER
008	5913210101	BODY
009	5132100700	SWITCH
010	5313210331	SPACER
013	5313210341	SPACER
014	5313210271	DUCT
015	7013210011	CUP PLATE
016	5332266600	FLOAT
017	5313210261	BLACK TRAY
018	5313210131	BOTTOM
019	532233	RUBBER PAD
020	5013272679	POWER SUPPLY CORD
023	7313277869	FILTER HOLDER
024	5313210161	LEVER
026	7332173700	FILTER
027	7332173800	FILTER
028	5332125200	TUBE
029	VT205651	FILTER
030	5332110600	TUBE L=220
033	534848	SUPPORT
034	534213	FOOT
035	512502	PUMP

DE'LONGHI INT/RU/SKA EC270 0132103079

Pos.	Spare part code	Description
036	7332128100	VALVE
037	6132101300	SPRING
038	5532112000	TUBE
040	5332159400	BUSH
043	5332108700	GASKET
044	5332109000	PISTON
045	6132100800	SPRING
046	5332173500	O-RING
047	5313210121	HINGE UPPER
048	5313210111	COVER
049	7313277899	TANK
050	7313277889	KNOB
053	511816	FUSE
054	607529	BRACKET
055	5232101300	THERMOSTAT 125°
056	5232100600	THERMOSTAT 105°
057	5132109900	HEATING Element
058	533216	GASKET
059	7313270749	BOILER LOWER
060	535693	GASKET
062	5332148400	VALVE
063	6132101600	SPRING
064	7313270759	SUPPORT
065	5332140900	GASKET
066	6032107100	DIFFUSER
067	5313210051	MEASURING SPOON
068	5532154000	FROTHER
069	5332169300	TUBE LOWER

DE'LONGHI INT/RU/SKA EC270 0132103079

Pos.	Spare part code	Description
070	5313217751	O-RING
071	5513210071	FROTHER
072	535733	JOINT
073	531533	TUBE RETAINER
074	5313210091	STOP
075	5313210071	REAR PANEL
076	7032103900	DOWEL
077	621986	RING
078	6032103100	BOILER UPPER
079	9850081500	WASHER
080	7032103600	CONNECTION
081	5313217701	O-RING
082	534710	GASKET
083	7313278179	VALVE
084	5513270199	O-RING
085	5332144800	O-RING
086	7313277939	TAP

Spare parts list extract from the site on 06-04-2010