





Pos.	Code	Description
01	5120610011	SWITCH
02	7320670089	SPRING MICROSWITCH
03	5320610521	SUPPORT MICROSWITCH
04	5120610031	SWITCH
05	5320610501	GASKET
06	5320610511	GASKET
07	5320610831	SUPPORT
08	6220610021	COVER
09	5220610021	TCO 113°
10	5320610561	COVER
11	5320610211	SUPPORT BASE
13	5320610221	WIRE CLAMP
14	5320610641	RUBBER PAD
15	5220610051	FILTER PCB
16	5220610001	PCB
17	5320610491	SWITCH HOLDER
18	6120610091	SPRING
19	6120610071	SPRING
20	5320610391	POTENTIOMETER GEAR
21	5320610551	SUPPORT TCO
22	5320610481	GASKET
23	5320610441	PUSH BUTTON PANEL SX
24	5920610041	PUSH BUTTON GREEN
25	5920610031	PUSH BUTTON BLUE
26	5920610021	ORANGE PUSH BUTTON
27	5920610071	CONTROL PANEL
28	5920610061	GLASS
29	5320610191	BODY UPPER
30	5920610091	PUSH BUTTON PANEL DX
31	5320610461	LED DIFFUSER
32	7320670109	START/STOP BUTTON
33	5320610341	KNOB

## DE'LONGHI "INT" KCP815.R CHICCO

## KCP815.R CHICCO

Pos.	Code	Description
34	5320610381	KNOB GEAR
35	6120610081	SPRING
36	5320610401	SUPPORT GEARS
37	5320610591	FILM
38	6120610101	SPRING
39	6220610061	PULLER LOWER
40	6120610051	SHAFT
41	5120610041	MOTOR
43	5320610541	PULLEY
44	9824500006	SEGER
45	5320610531	SUPPORT
46	6220610031	BUSH
47	5320610601	BELT
49	5020670149	POWER SUPPLY CORD
50	7320670159	BLADE ASSY
51	KW677621	SPATULA
54	5320610661	SHOVEL
55	5920070269	GLASS
56	5520610031	PULLER UPPER
57	<del>IT0265</del>	SEE TECHNICAL NOTE
58	5320610171	BASKET
59	5520610011	GASKET
60	7320670139	STOPPER
61	7320670149	COVER ASSEMBLY