


Spare Part List

Pos	12NC	Description
025 2	4812 460 79187	Trim lower
040 0	4801 211 00261	Hinge 2glass light 6M
047 0	4812 417 19137	Hinge run.mech.
110 0	4812 412 79412	Door handle
110 1	4812 466 68858	Rubber door handle
110 2	4812 462 48451	Rubber door handle
121 3	4812 460 98095	Deflector
130 0	4812 417 28106	Door lock
141 0	4801 211 03727	Oven glass cpl.
142 0	4812 450 59786	Inner glass
143 1	4812 404 49841	Support glass
191 0	4812 466 88874	Gasket door
201 0	4812 442 69504	Panel rear
204 0	4812 442 69782	Side panel enameled catalytic
245 0	4812 458 19334	Oven shelf
246 0	4812 418 38128	Baking tray
247 0	4812 418 38138	Fat pan
261 0	4812 458 19304	Inset grid left
261 1	4812 458 19303	Inset grid right
301 0	4812 452 40365	Panel control
332 0	4801 211 00151	Push button Ampere
334 0	4812 412 79401	knob
350 0	4801 211 00276	Display Ampere
440 0	4812 361 18604	Motor fan
441 0	4812 361 18527	Air cooling fan
443 0	4819 515 48065	Fan 6-blades
451 0	4812 259 98406	Heating element forced-air 230 V
452 0	4801 211 00983	Heating element grill
456 0	4801 211 00591	Heating element lower 20.41222.000
490 1	4812 290 68255	Clamp cable
490 2	4812 316 18036	Cover cable
491 0	4812 290 68329	Connection block
521 0	4812 214 58615	Power unit
521 1	4812 214 58616	Switch Ampere encoder
554 0	4801 211 00475	Thermostat oven assembly
557 0	4812 282 28209	Thermostat
557 1	4812 282 28329	Temper.limiter 3-way
620 0	4801 211 00986	Switch,oven MF8
651 0	4819 134 88153	Oven lamp 25W 230V
652 0	4819 255 18237	Holder lamp rear
656 0	4812 450 28007	Lamp screen rear
914 0	4812 505 18421	Nut M4
915 0	4819 505 18145	Nut
930 0	4812 404 18649	Clamp fixation thermostat
932 0	4819 492 68714	Spring
993 0	4812 310 39061	Spacer

Exploded View

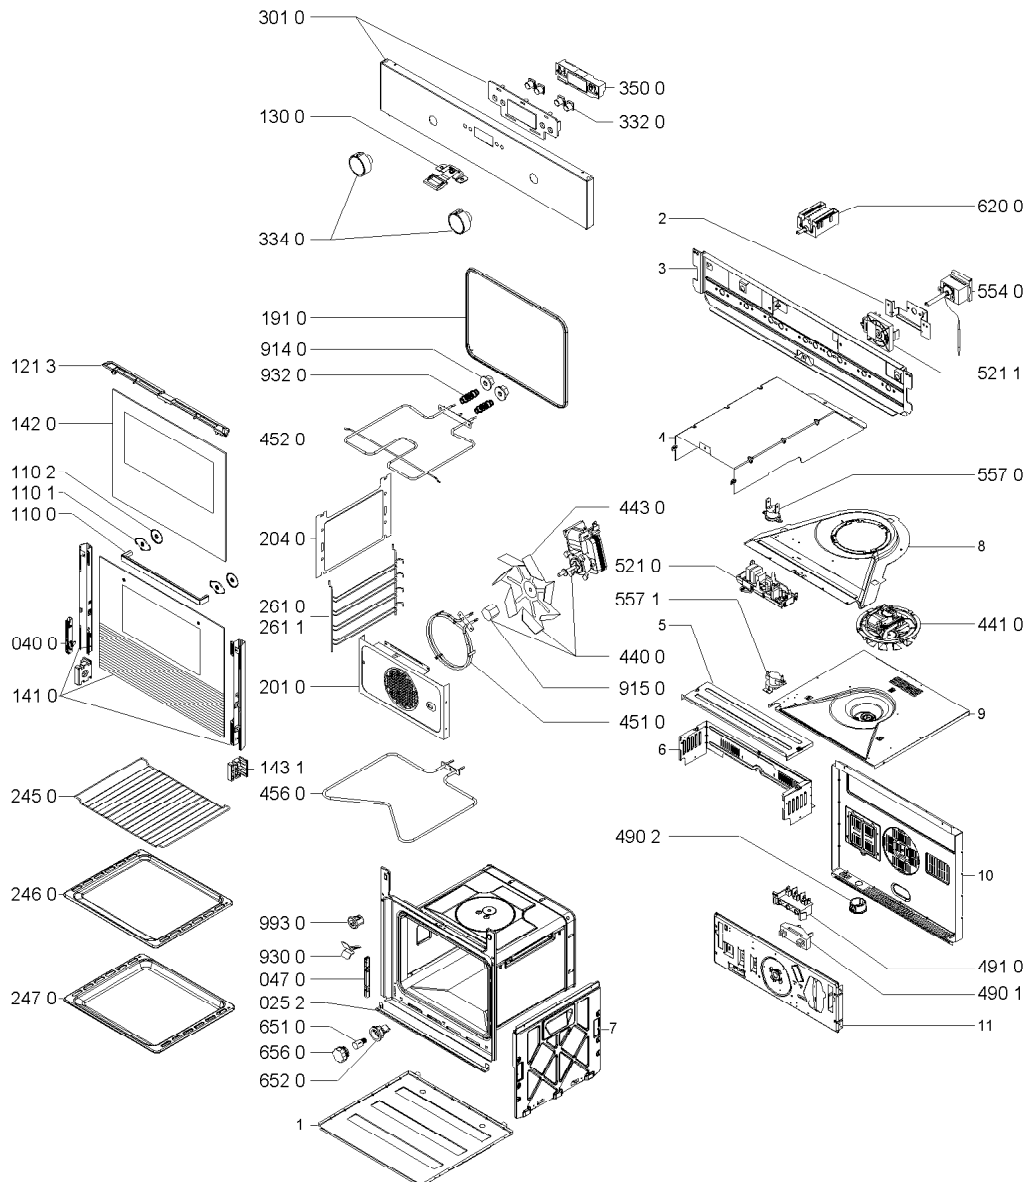

0000 006 02761