


Exploded View & Replacement Parts List

1. Indoor Unit

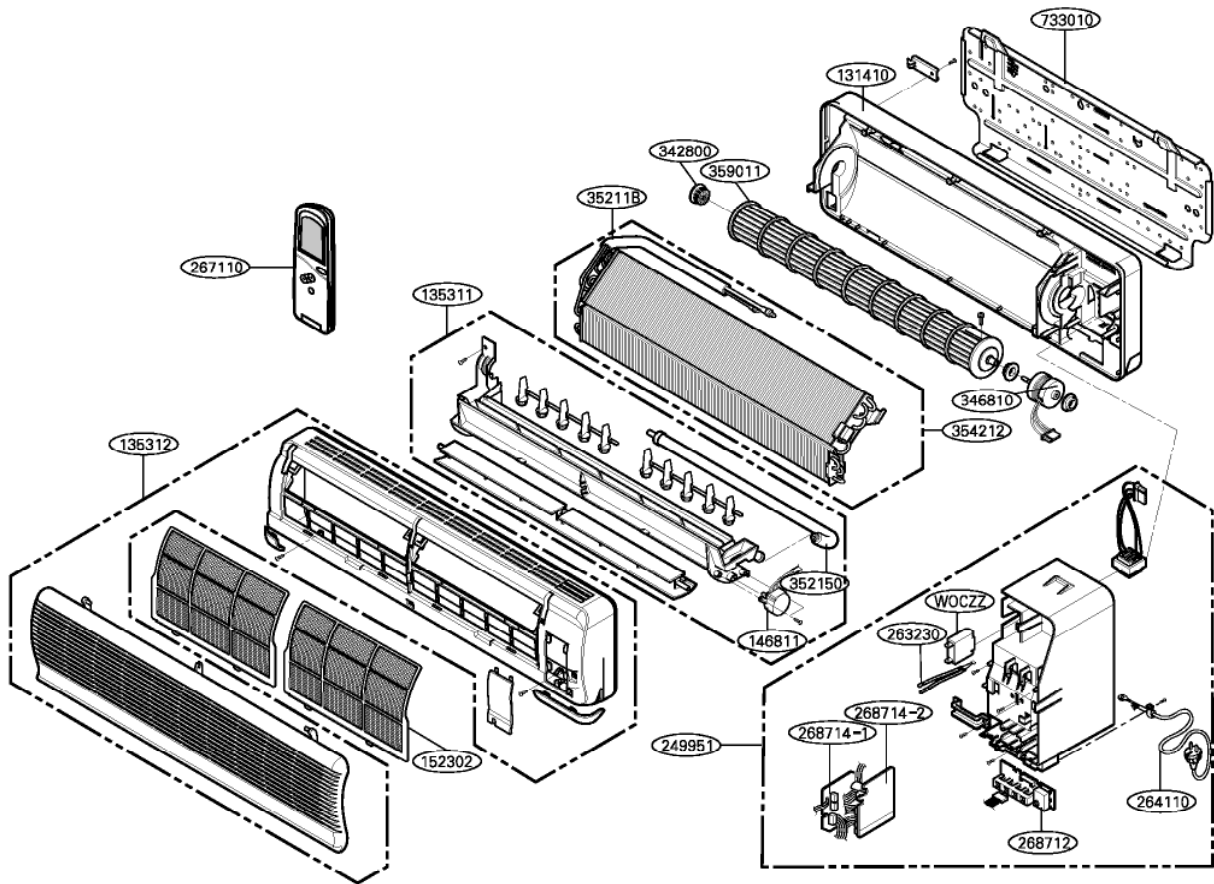


Parts List

LOCATION NO	PART NO	DESCRIPTION	REMARKS
131410	2H02440G	CHASSIS ASSY	R
135311	1H00866P	GRILLE ASSY,D ISCHARGE(INDOOR)	R
135312	1H00867K	GRILLE ASSY,FRONT	R
135314	1H00830K	GRILLE ASSY,NLET	R
146811	4681AR2727A	MOTOR ASSY,STEP	R
152302	2H02422A	FILTER(MECH),A/C	R
249951	4781AR1216F	CONTROL BOX ASSY,INDOOR	R
263230	3Q35099E	THERMISTOR ASSY	R
264110	2H01580T	POWER CORD ASSY	R
267110	6711AR1172C	REMOTE CONTROLLER ASSY	R
268712	6047AQ3014A	PWB(PCB) ASSY,DISPLAY	R
268714-1	6871AQ2156B	PWB(PCB) ASSY	R
268714-2	6871AQ2157B	PWB(PCB) ASSY	R
342800	3H02821B	BEARING	R
346810	2H02441E	MOTOR ASSY,AC	R
35211B	2H02449A	TUBE ASSY,TUBING	R
352150	5251AR1222D	HOSE ASSY,DRAIN	R
354212	2H02442A	EVAPORATOR ASSY	R
359011	2H02426A	FAN ASSY,CROSS FLOW	R
733010	1H00843A	PLATE ASSY,INSTALL	R
W0CZZ	3H00672A	CAPACITOR	R

Exploded View & Replacement Parts List

2. Outdoor Unit

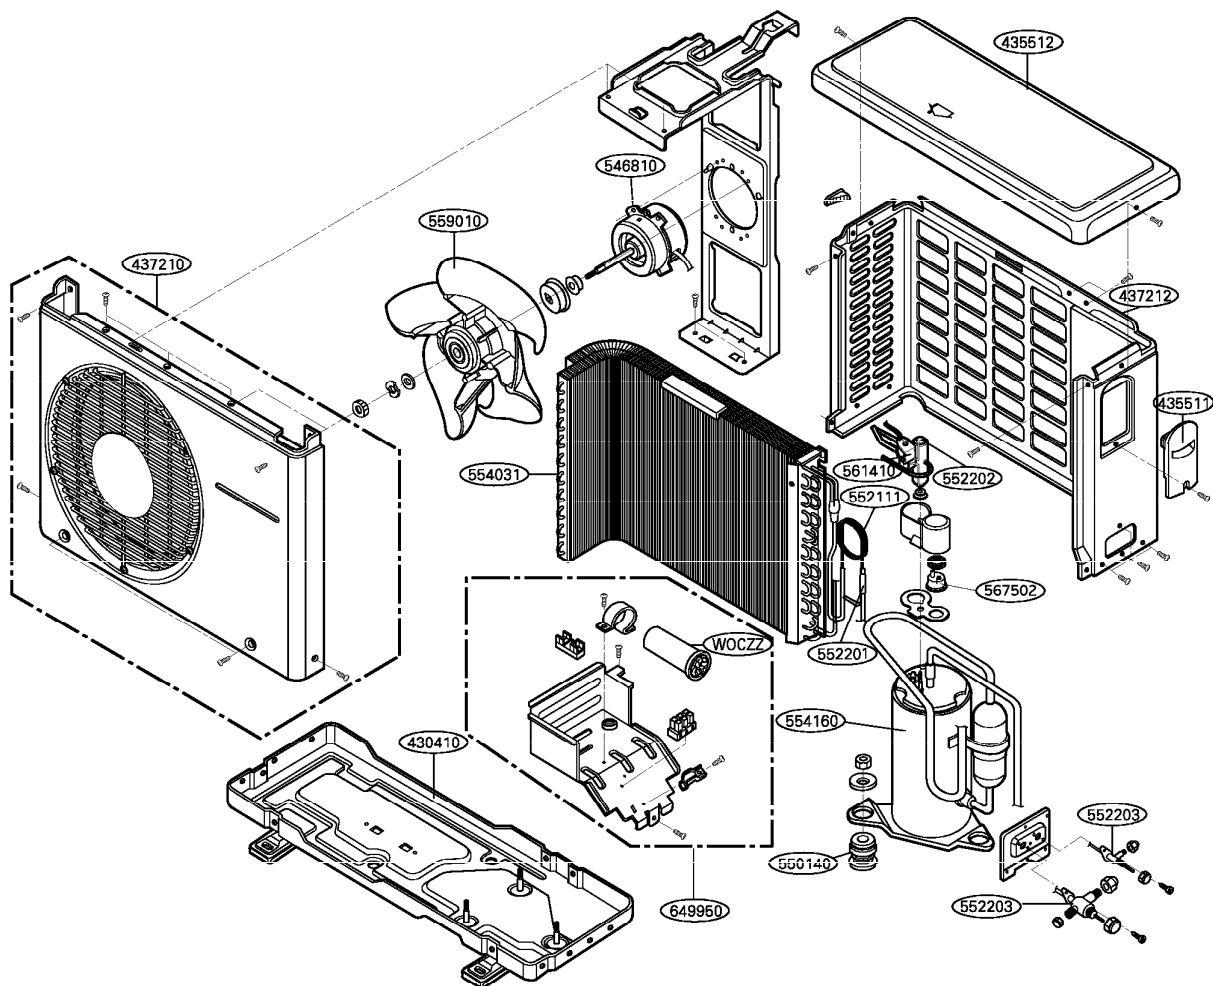

Parts List

LOCATION NO	PART NO	DESCRIPTION	REMARKS
430410	2H02435B	BASE ASSY,OUTDOOR	R
435511	2H02448D	COVER ASSY,CONTROL(OUTDOOR)	R
435512	3H03714B	COVER ASSY,TOP(OUTDOOR)	R
437210	2H02424M	PANEL ASSY,FRONT SUB	R
437212	1H00836B	PANEL,REAR	R
546810	1H00853D	MOTOR ASSY,AC	R
550140	4H00982E	ISOLATOR,COMP	R
552111	5425AR2049F	TUBE ASSY,CAPILLARY	R
552203	2H01890H	VALVE,SERVICE	R
552203	2H02479B	VALVE,SERVICE	R
554031	5403AR2046A	CONDENSER ASSY,BENT	R
554160	5417AR2256A	COMPRESSOR	R
559010	1H00643C	FAN ASSY,AXIAL	R
567502	6750-CL005A	O.I.P	R
649950	4781AR2098A	CONTROL BOX ASSY,OUTDOOR	R
W0CZZ	2H01451P	CAPACITOR	R