



Gebrauchsanweisung 52 4023 (ES)



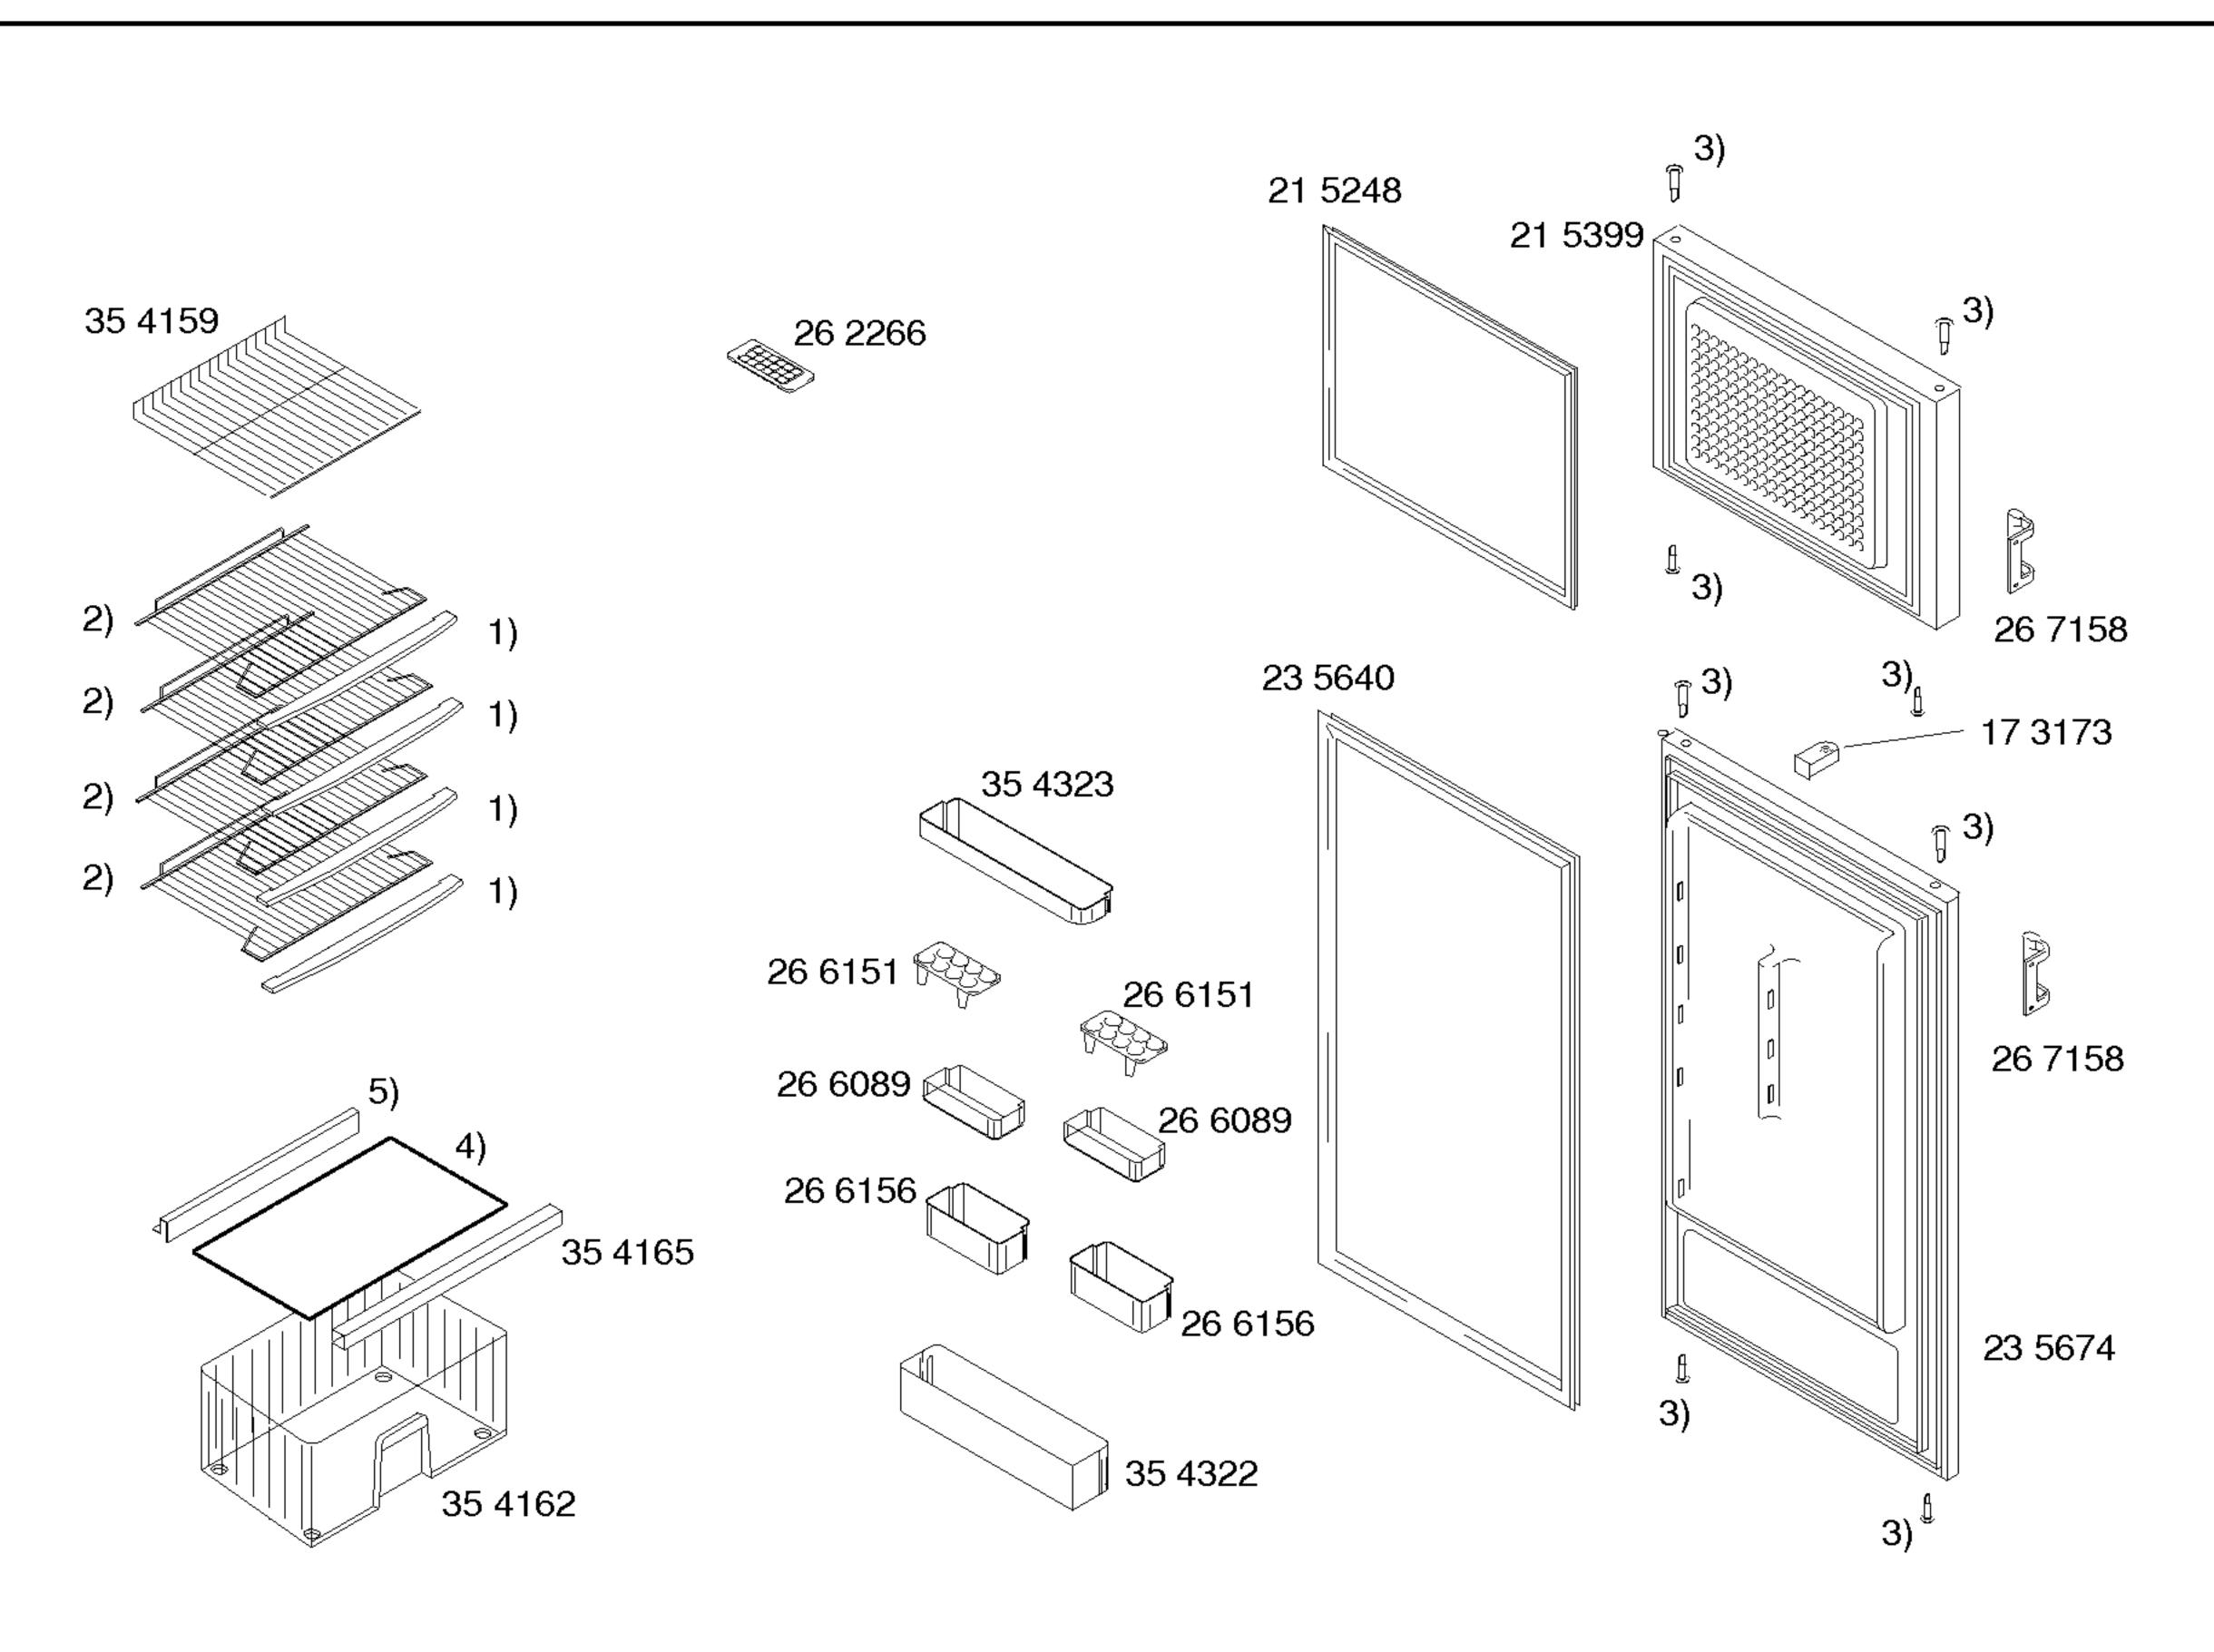

- 1) 35 4164
- 2) 35 4166
- 3) 17 3172
- 4) 35 4167 V01 35 7912 V02,V03
- 5) 35 4161 V01 35 4113 V02,V03



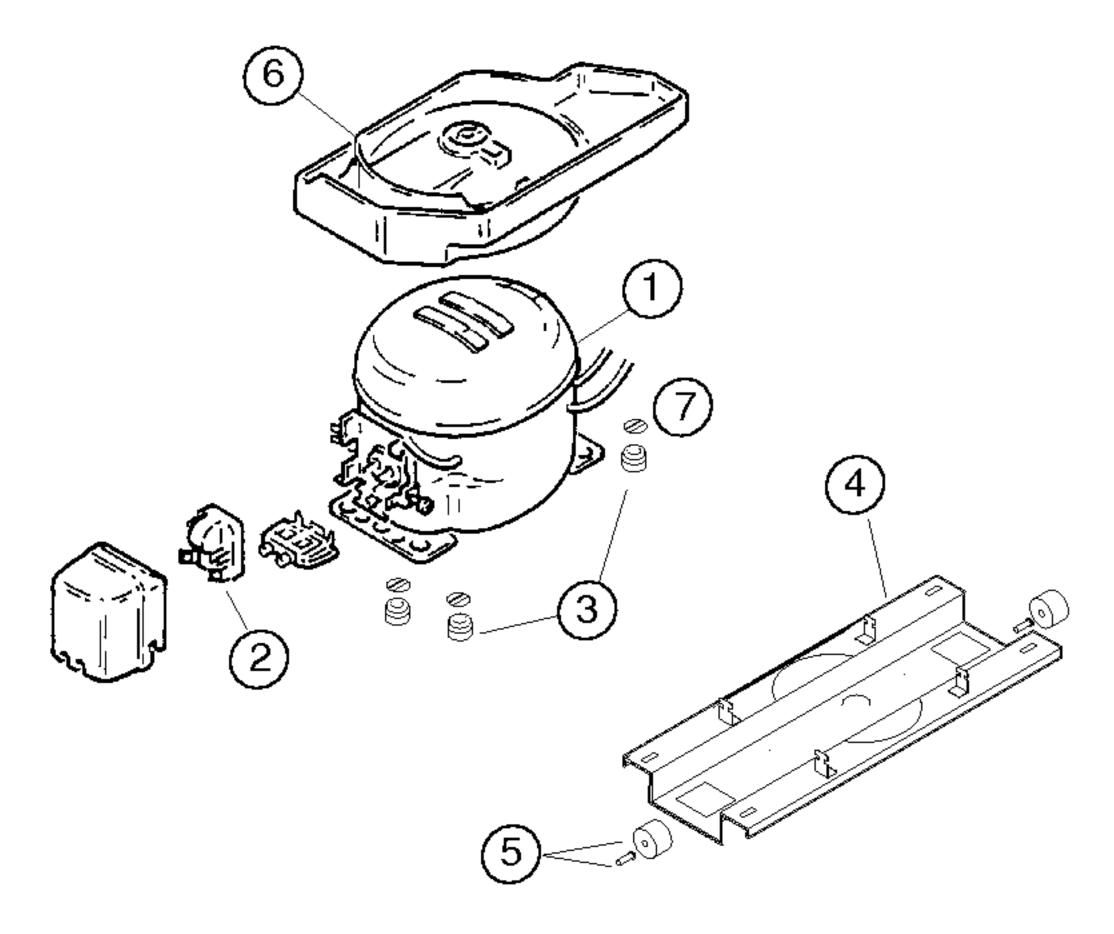

	Danfoss	
Pos.	NLE13K	
1	14 1877	
2	16 5570	
3	16 3427	
4	35 4158	
5	17 1318	
6	26 5327	
7	17 1519	
8		
9		
10		
11		
12		

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BILGILER				
Verdichter/Compressor/Kompresör	Danfoss			
Typ/Type/Tip	NLE13K			
Förderleistung/Delivery/Verim/h				
Anlaufstromm/Starting current/Giris akimi A	10.7			
Widerstand/Resistance/Rezistans Ha/ Ω	12.9			
Hi/aux.	18			
Tomp Boyler/Thermostat/Termostat	K59/P1777			
Temp.Reyler/Thermostat/Termostat	NO9/F1///			
Typ/Type/Tip  Reglerstellung/Regition/Termostet, pezievenu				
Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleriein/acma ºC	1,25,25			
	+3.5 +3.5 -31 -20			
Valeurs de commutation/Termostat degeriaus"/kapama	-31 -20			
(abtaven' od)alarm'				
Fülmenge/Fill. quantily/ Dolum miktari R600 g	*			
Anschlusswert/Comm. load/Giris gucu V	v *			
Heizung/Heater/Rezistans				
Widerstand/Resistance/Direnc Ω				
Leistung/Power/Guc W				
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans Ω				
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans				
Spannung/Voltage/Gerilim \	<u>/                                    </u>			
Temp.Reyler/Thermostat/Termostat				

<sup>\*</sup> Siehe Typenschild/Mamul etiketine bakiniz