




Libro de instrucciones
51 9303
(es,pt)

1) 06 4317

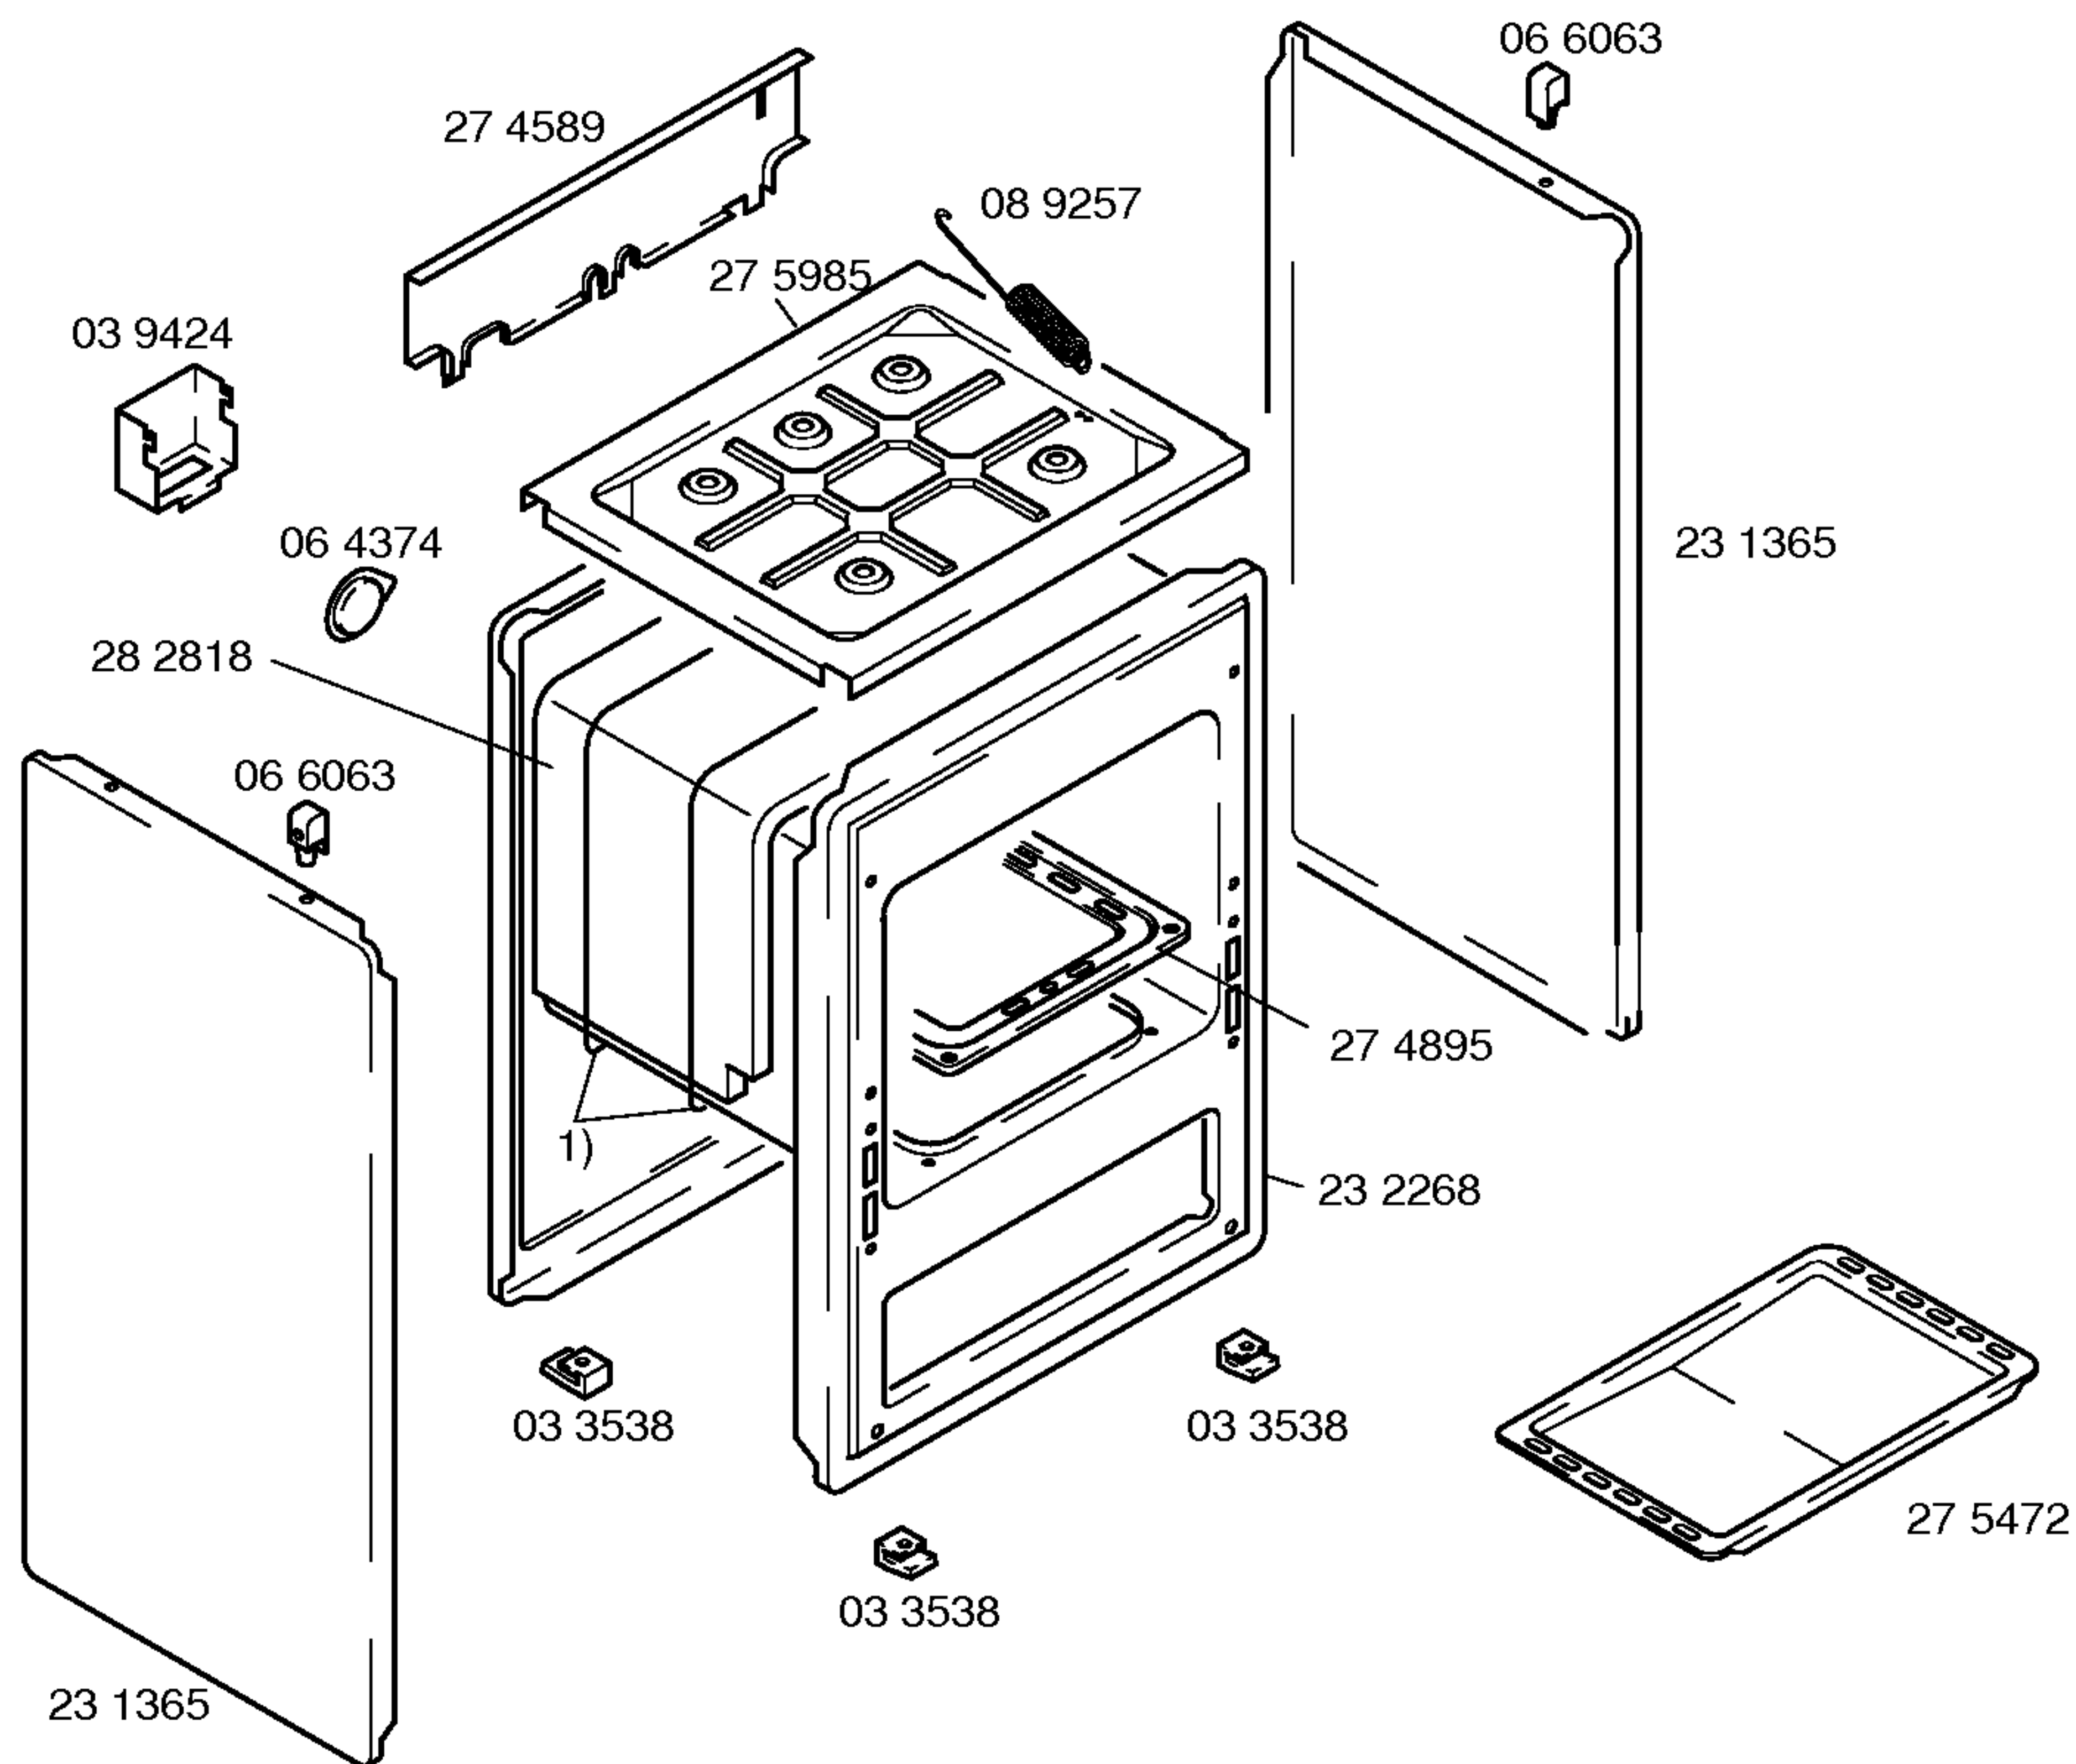

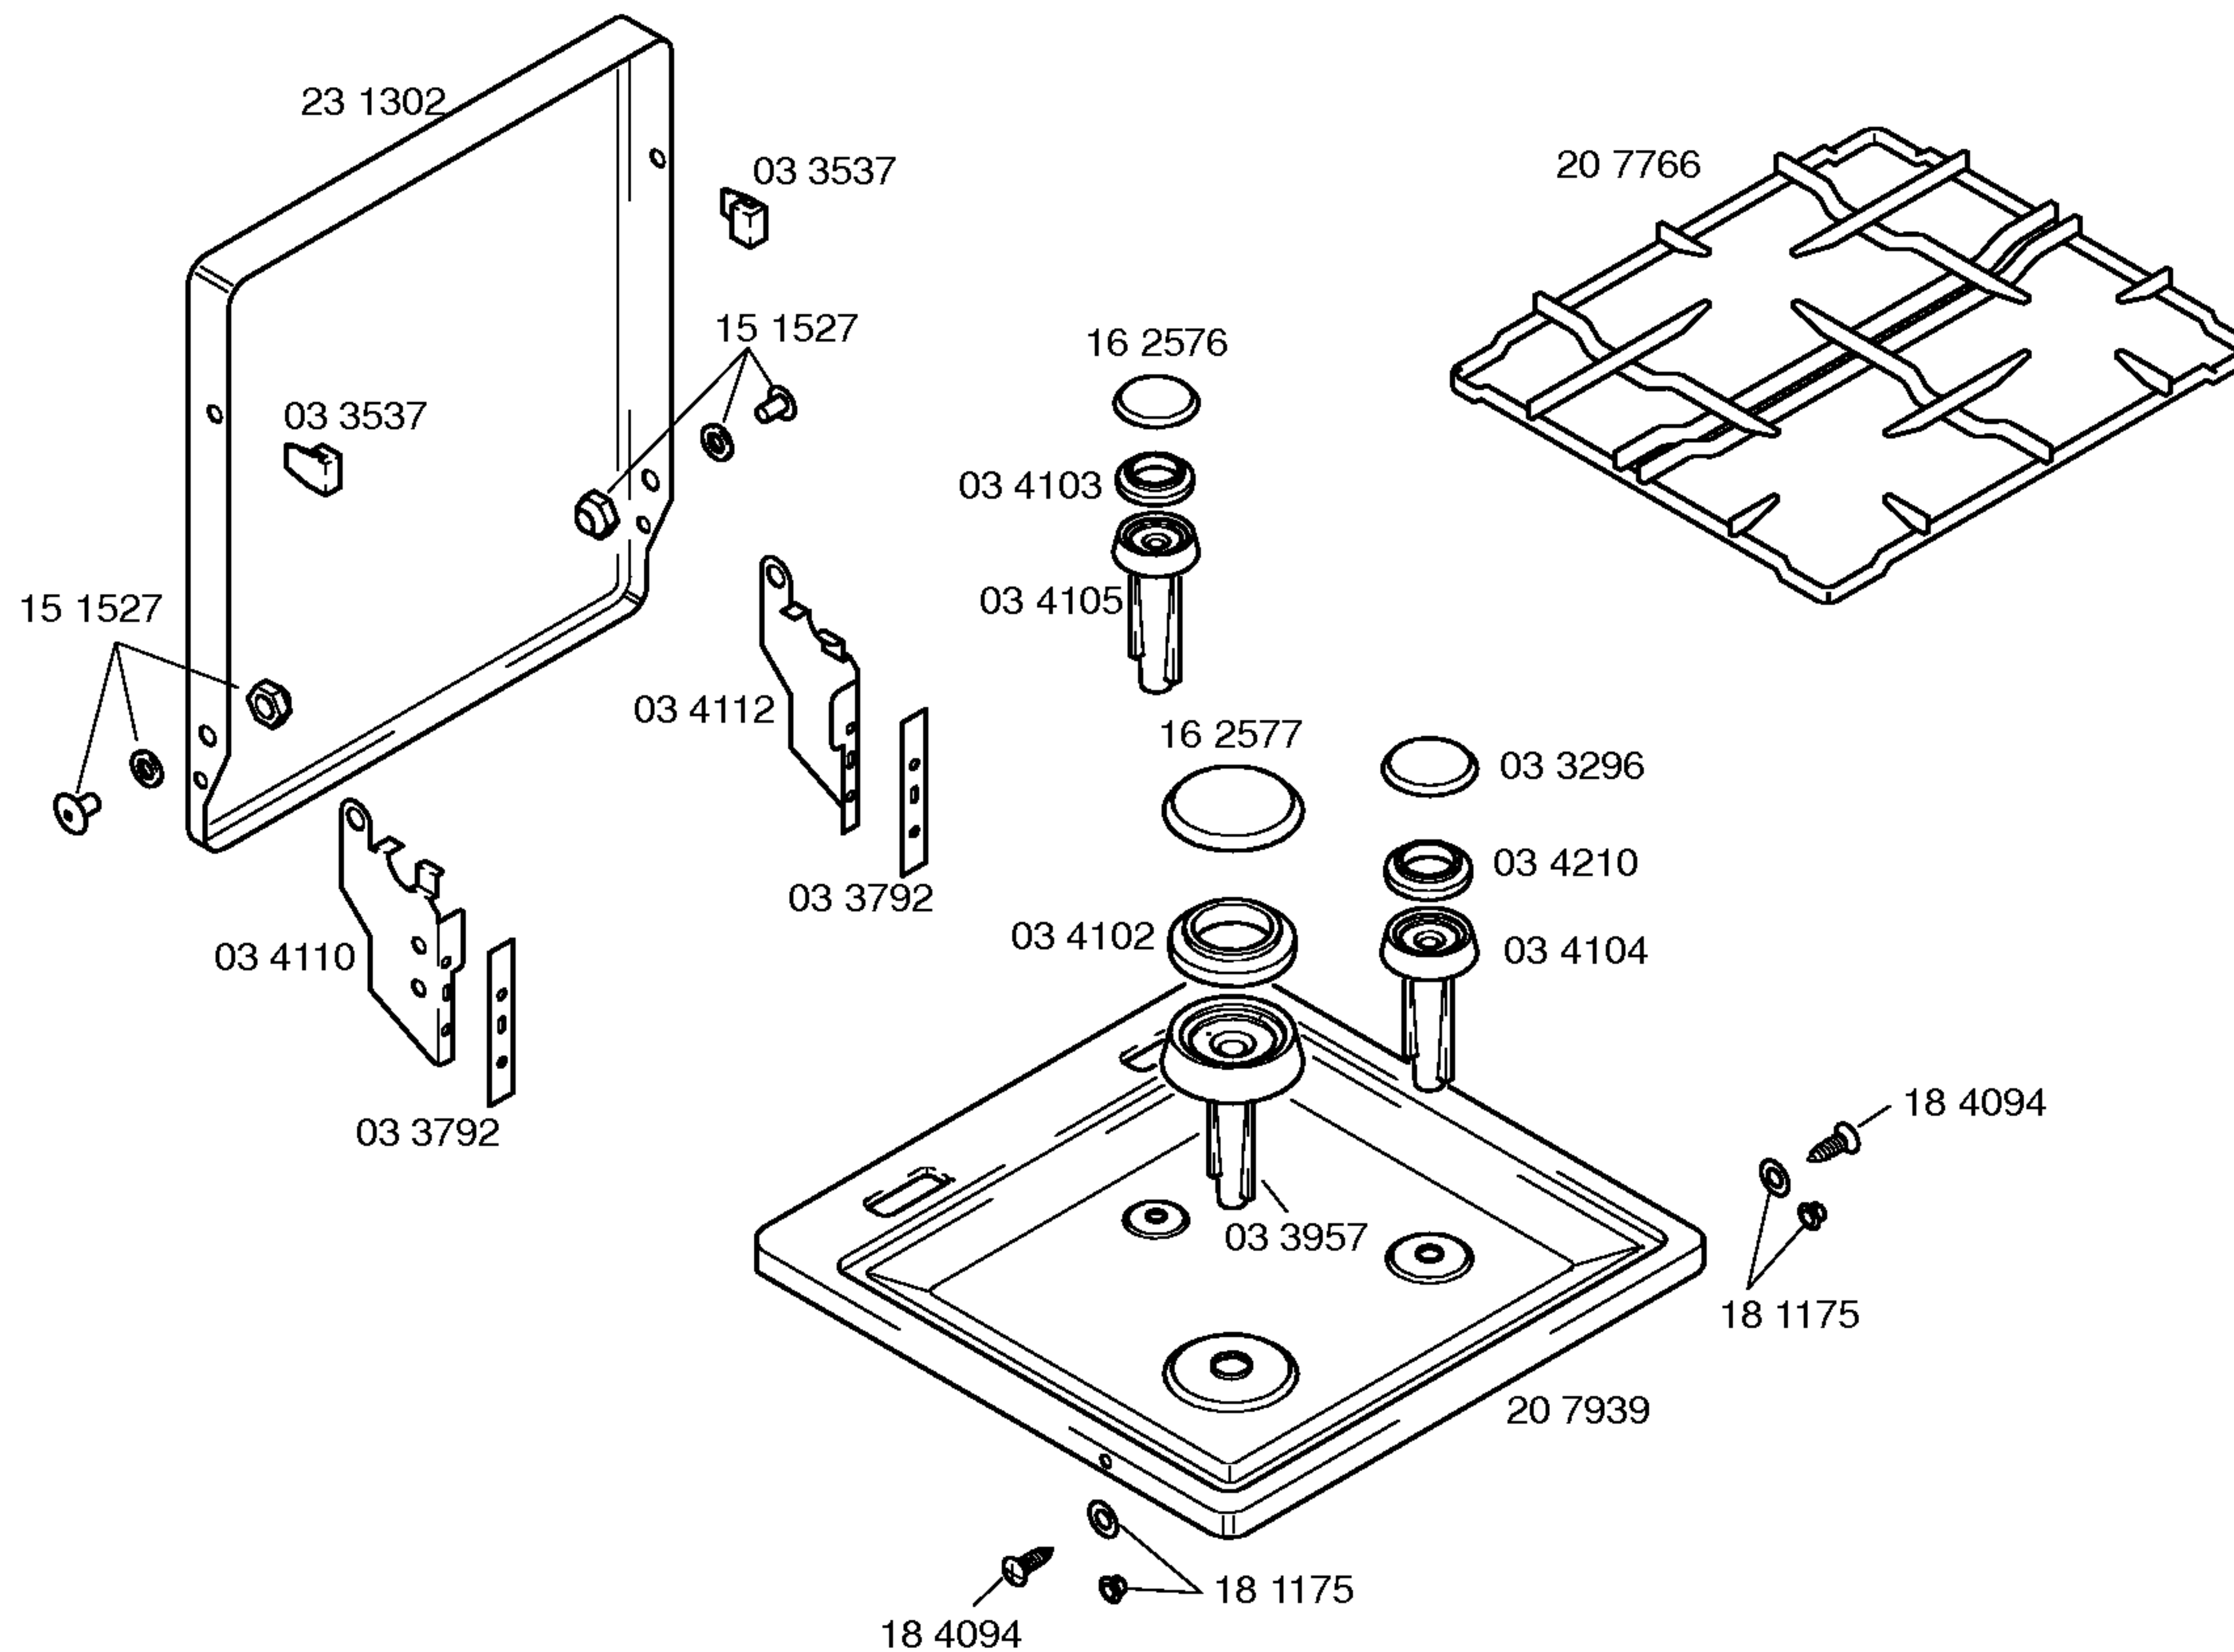

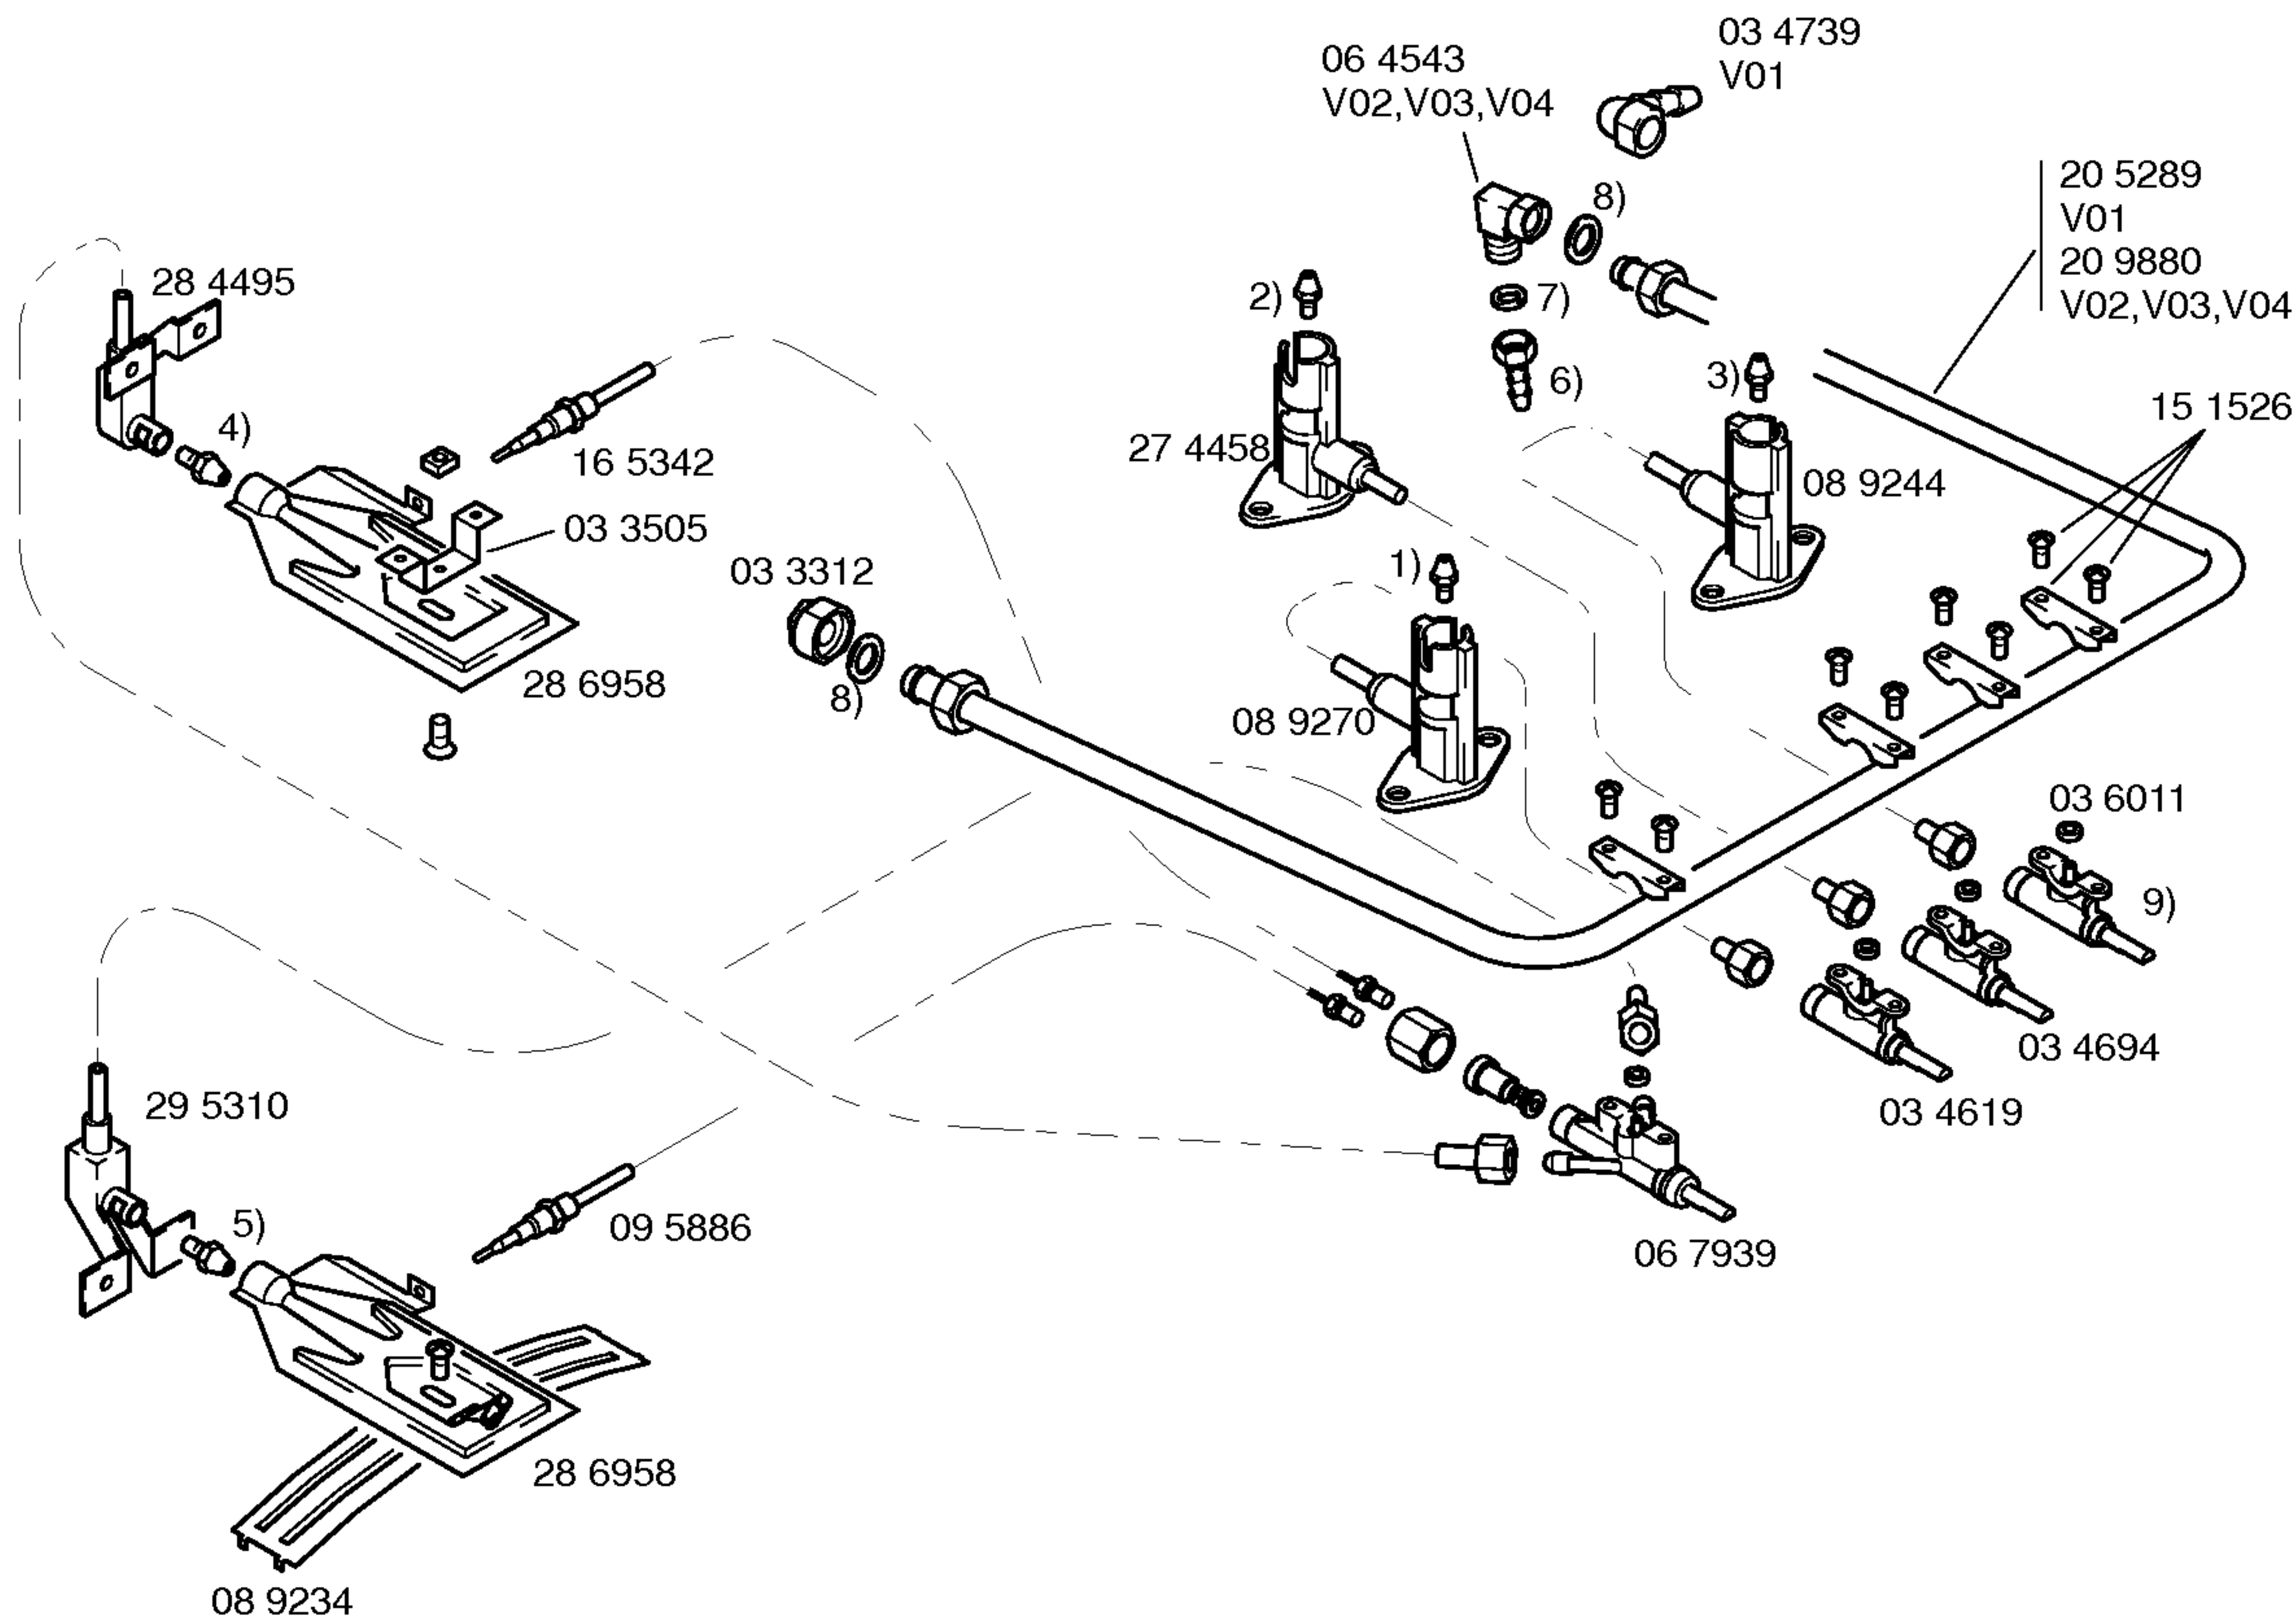

- 1) 03 4224
- 2) 03 4232
- 3) 03 4231
- 4) 03 4220
- 5) 03 4222
- 6) 15 2683 V02,V03,V04
- 7) 03 4308 V02,V03,V04
- 8) 03 3793
- 9) 15 2684

Cjtos transformación:
Gas Butano
15 3164
Gas Natural
15 3165
Gas Ciudad
15 3166