



Libro de instrucciones 51 7537 (E)

- 1) Inyector 3Kw. 15 1691 G30 15 1686 G20
- 2) 16 2794
- 3) Inyector 1,7 Kw. 15 1692 G30 15 1689 G20
- 4) 15 1675 V01,V03,Gas 15 1676 V02,V04,Gas 06 8989 V01,V03,Electric. 06 9428 V02.V04, Electric.