

Gebrauchsanweisung
51 6717
(D,GB,F,NL,I,E,GR)

Zubehör:

Grillpfanne
Z1220X0

Alu-Backblech
Z1320X0


Rost
Z1420X0


Bratenblech
Z1510X0



Teleskopschiene
Z1721X0

Brot-Backstein
Z1010X0

Reinigungsset
06 5937

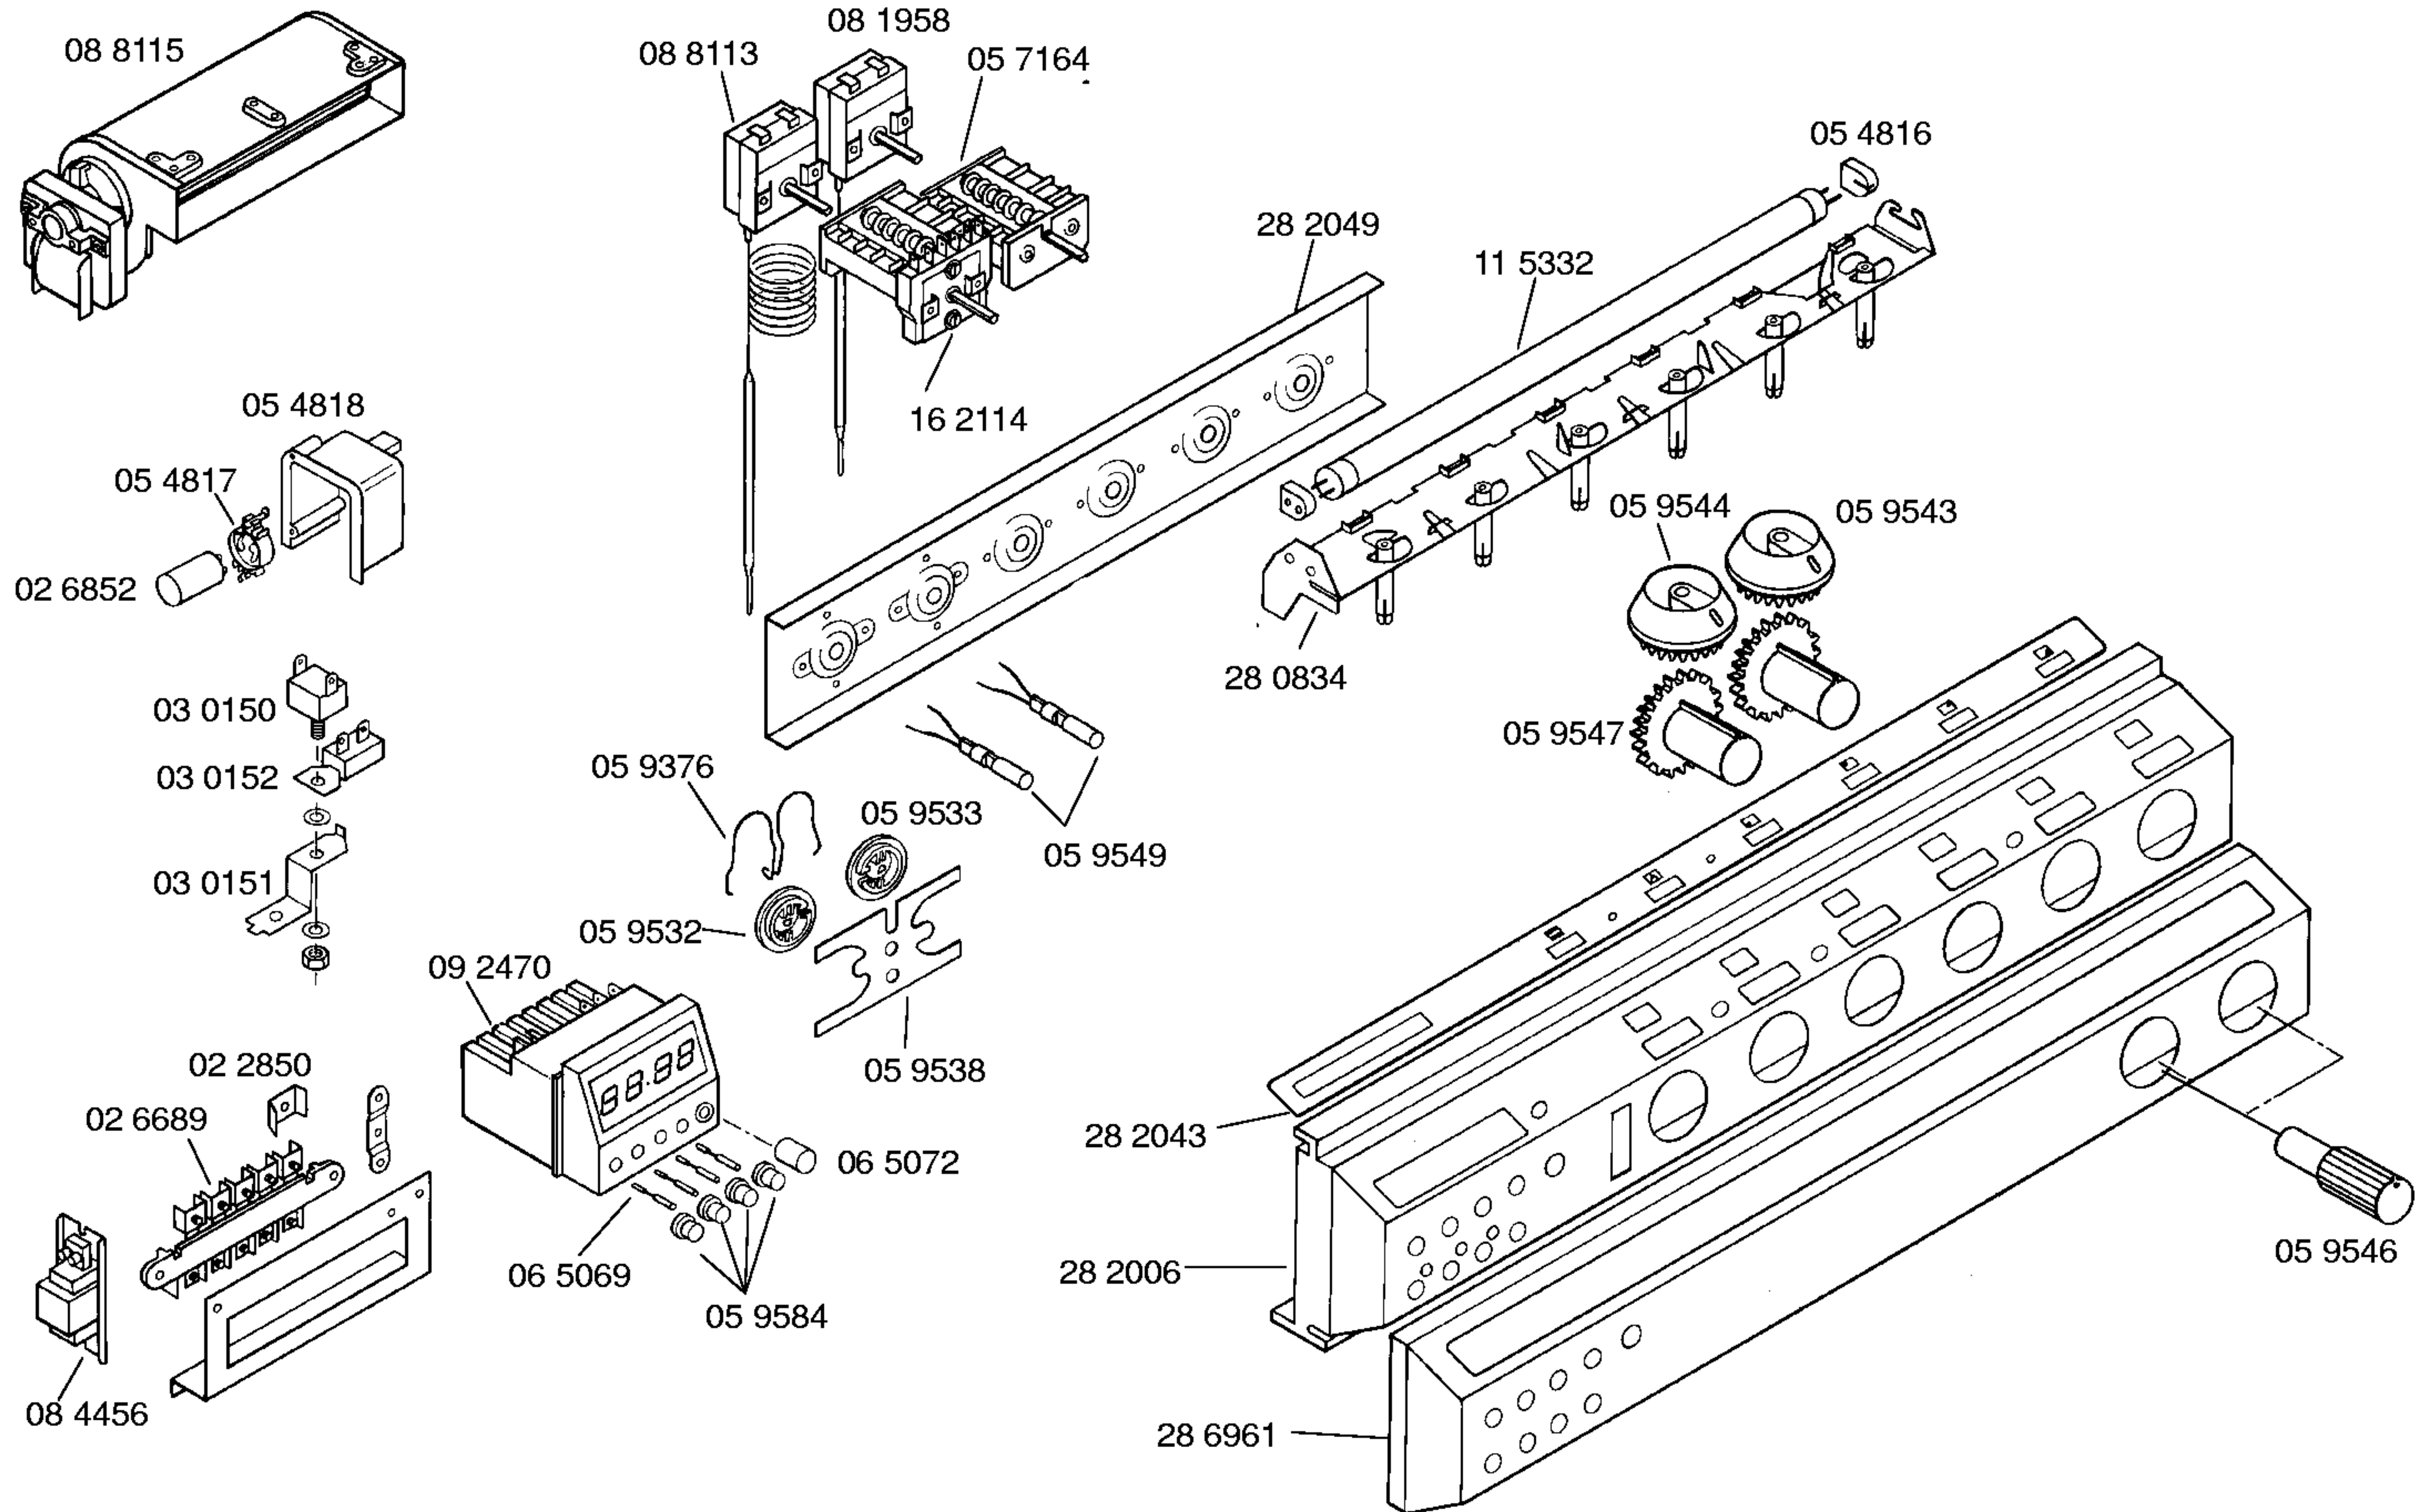

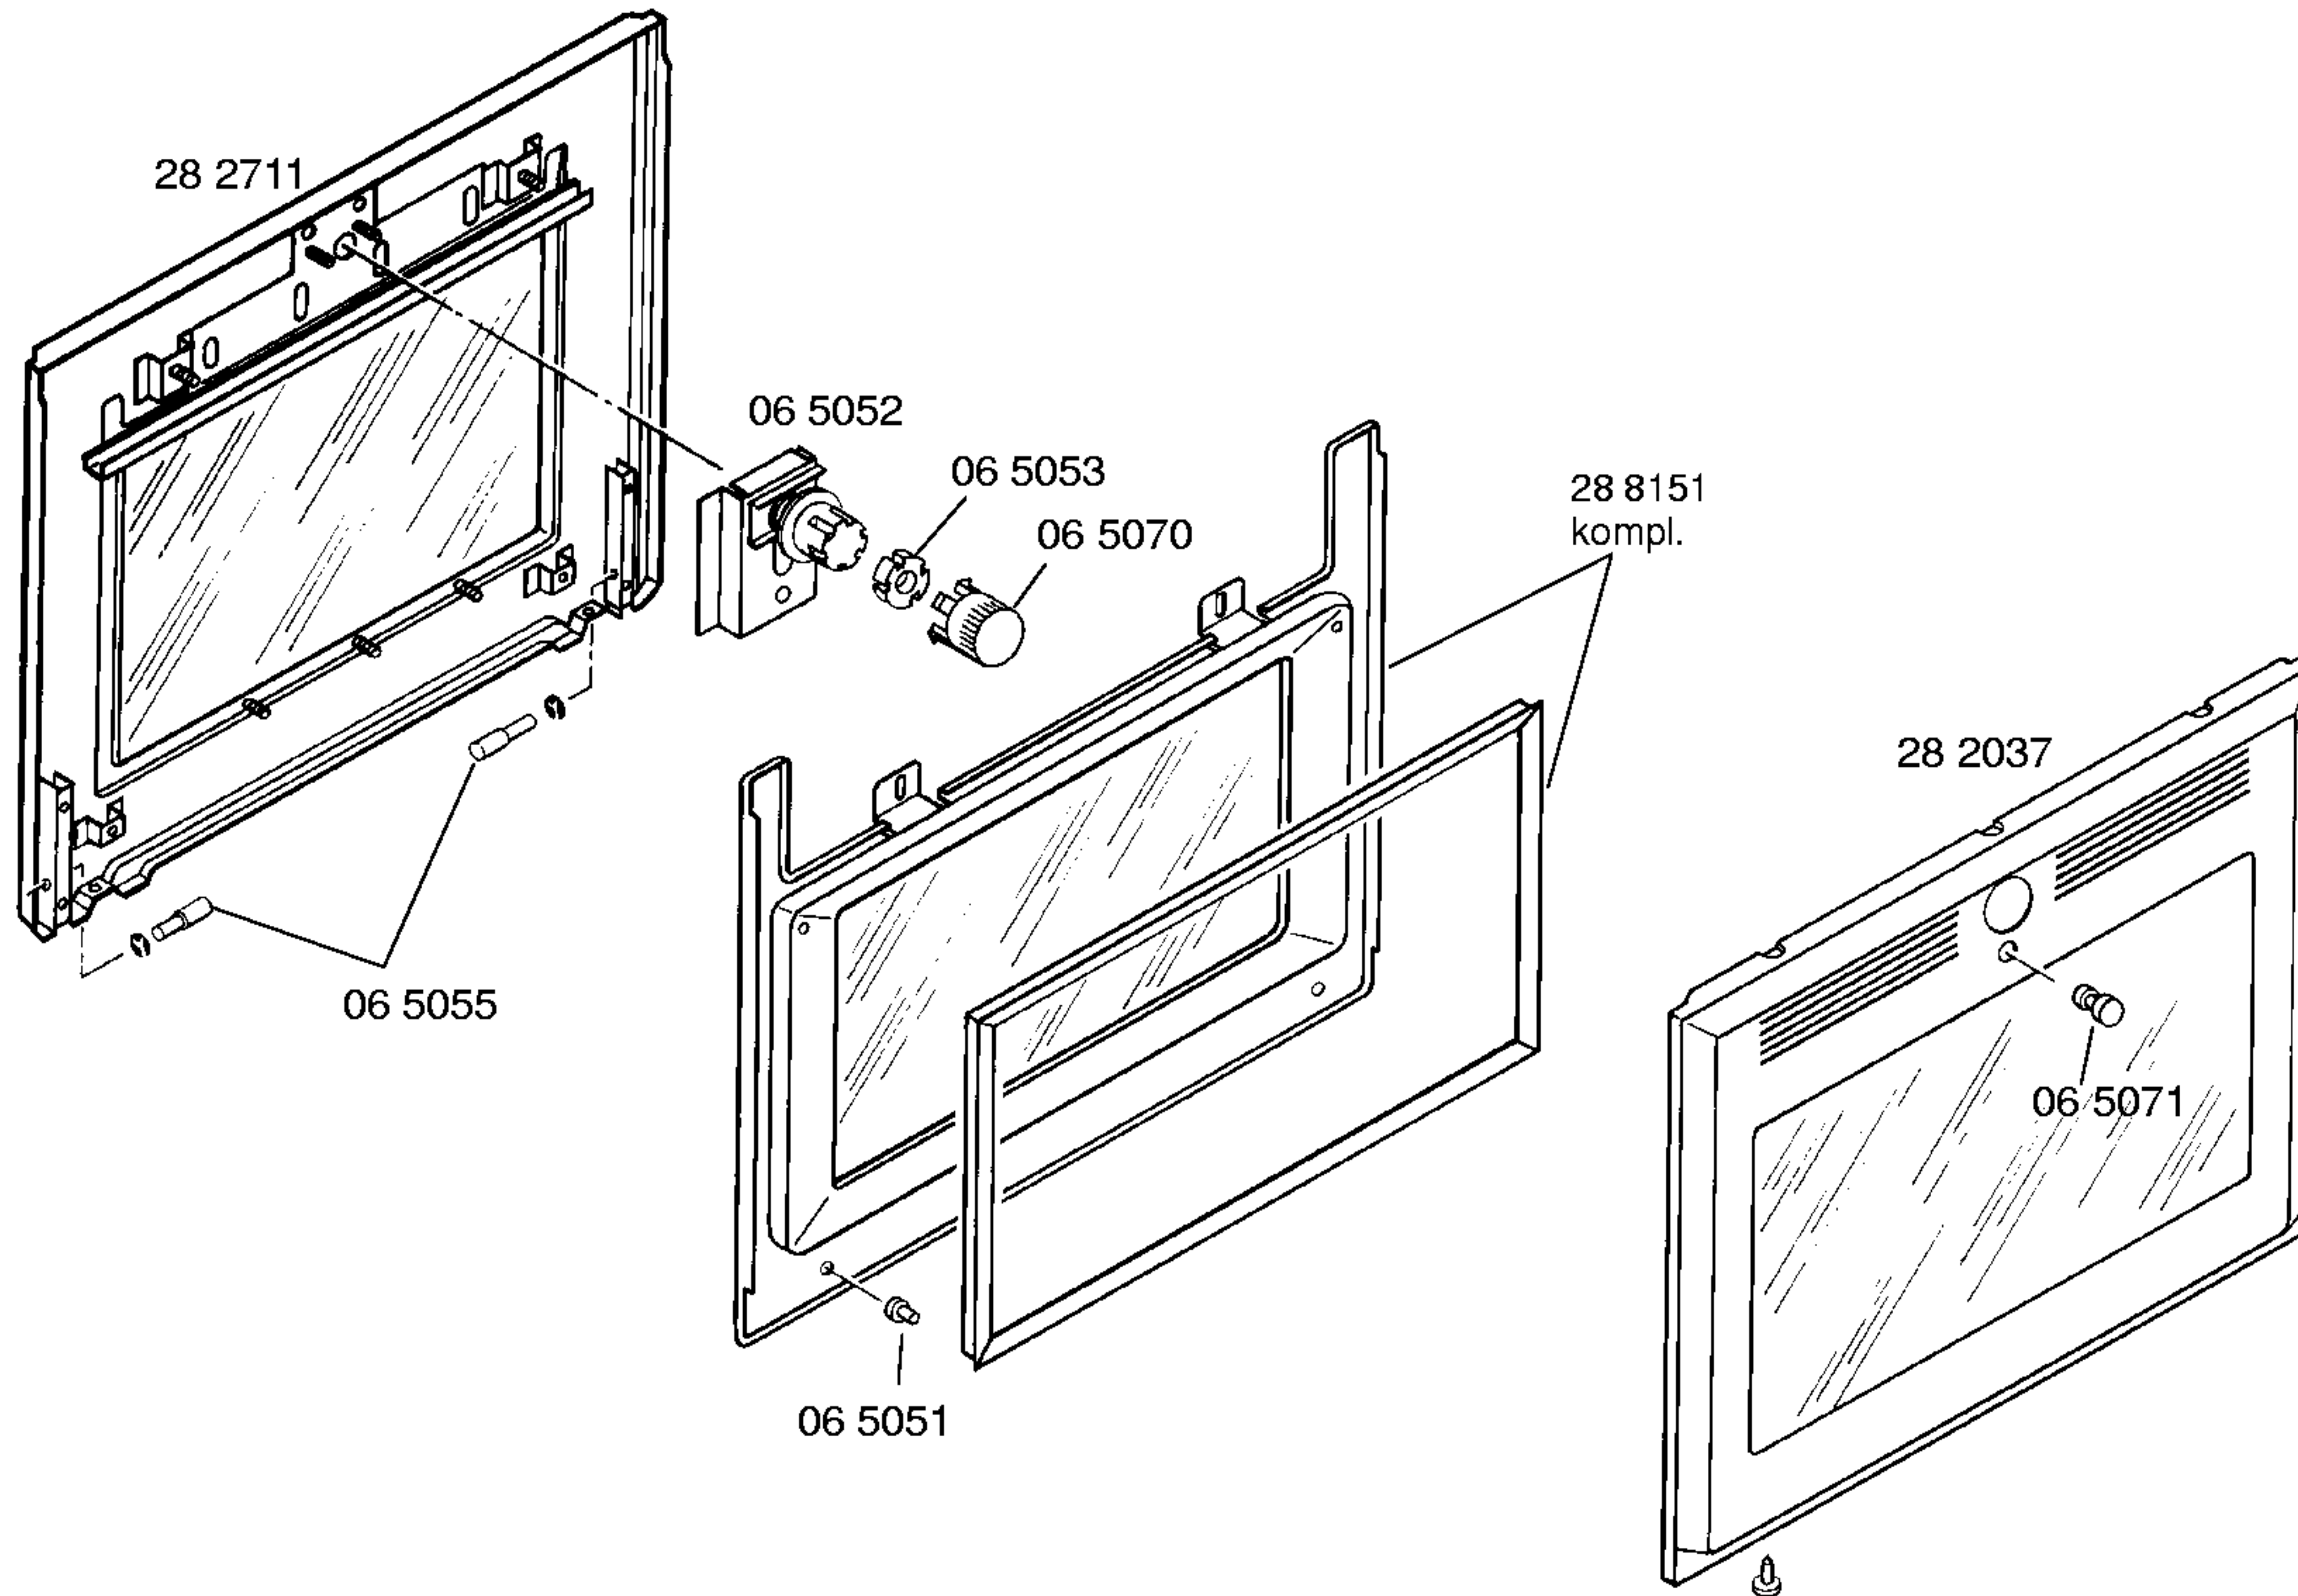

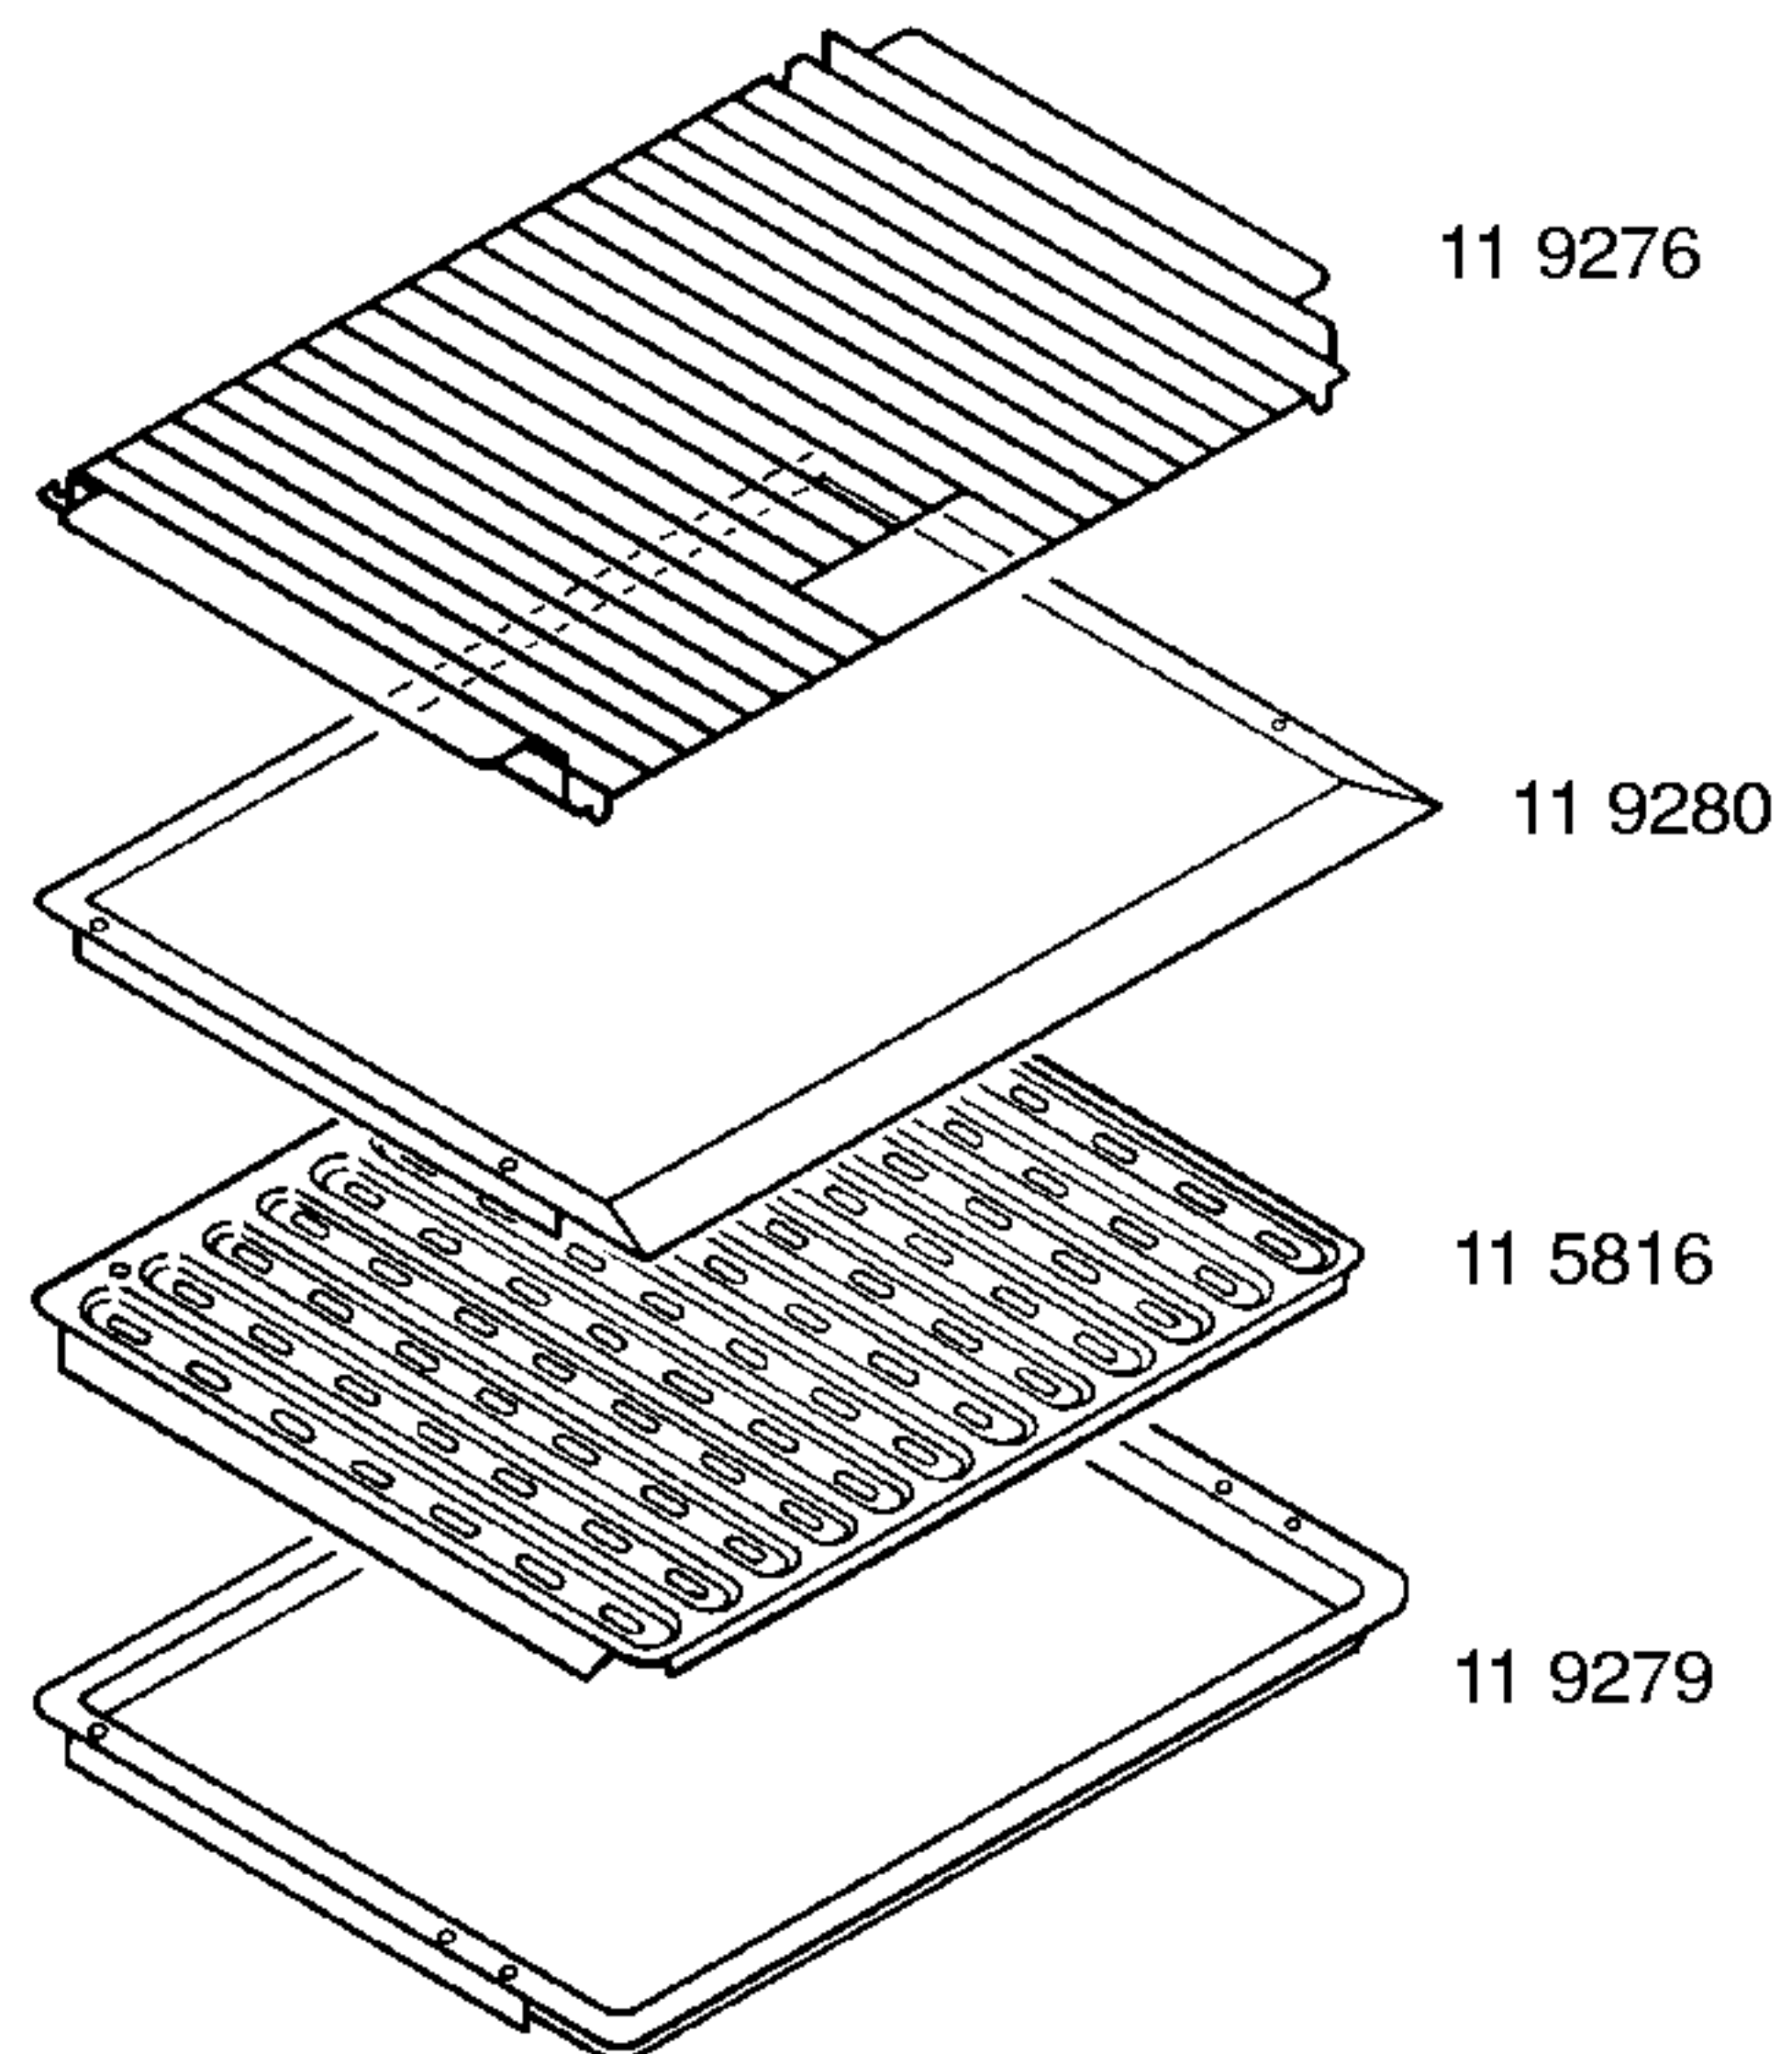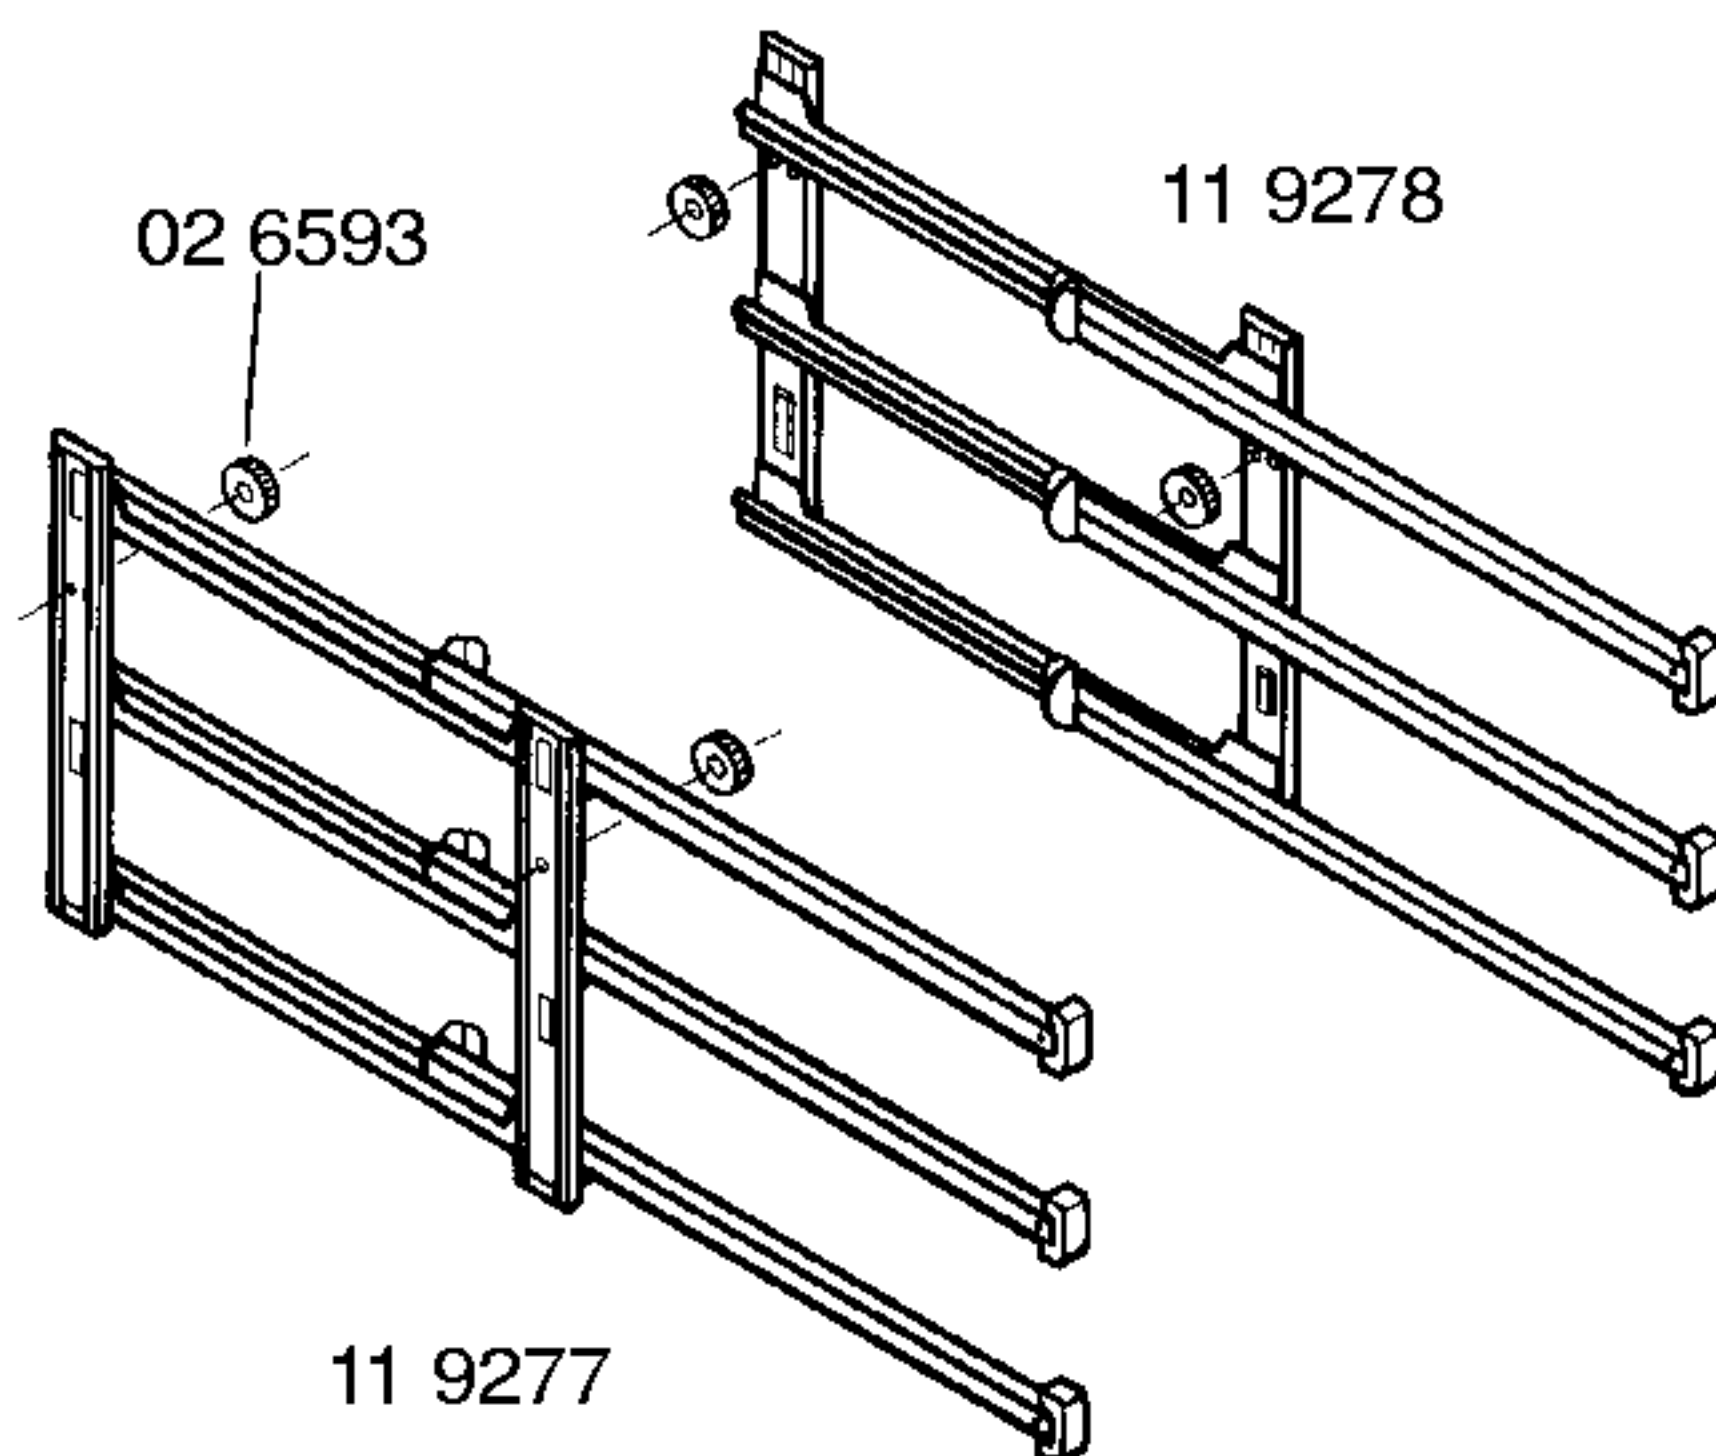

1) 08 4701
kompl.

